

ASSEMBLY INSTRUCTIONS


78" RECTANGULAR DINING TABLE

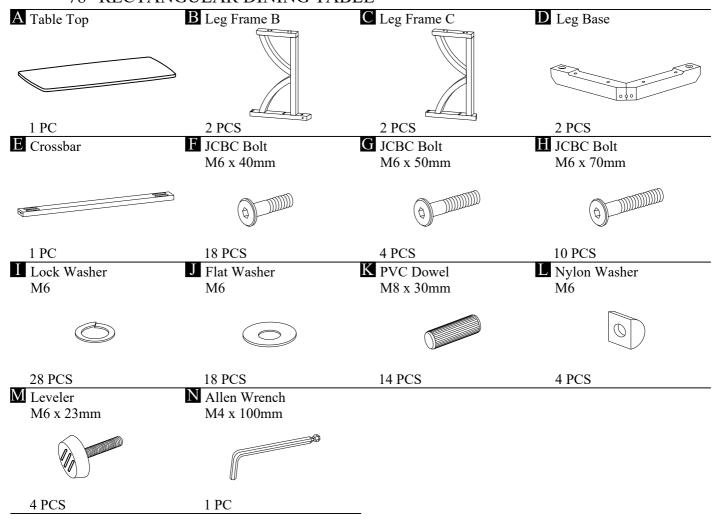

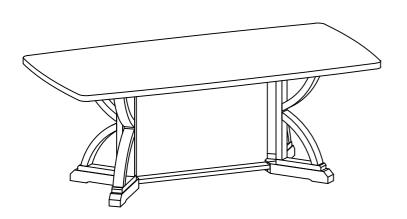


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


I Insert PVC Dowel (K) into the pre-drilled holes of the Leg Frame (B), the Leg Frame (C) and the Crossbar (E).

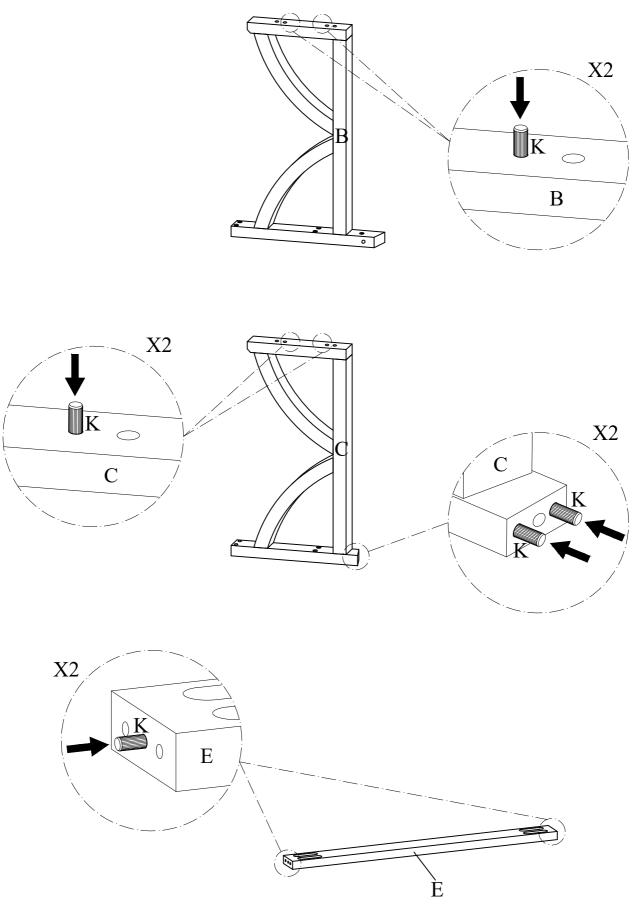


2 Use PVC Dowel (K) as a guide to align and attach the Leg Frame (B) to the Leg Frame (C) using JCBC Bolt (H) and Lock Washer (I) with the Allen Wrench (N).

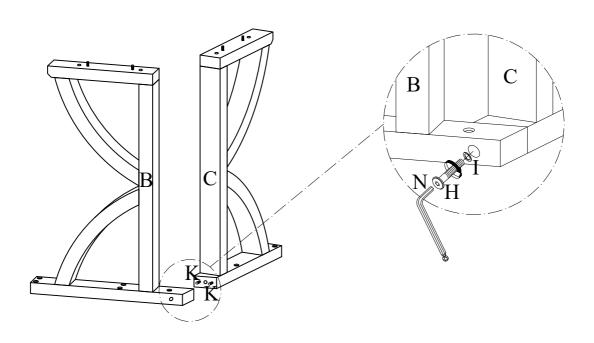


3 Use PVC Dowel (K) as a guide to align and attach the Leg Base (D) to the Leg Frame (B & C) using JCBC Bolt (H) and Lock Washer (I) with the Allen Wrench (N).

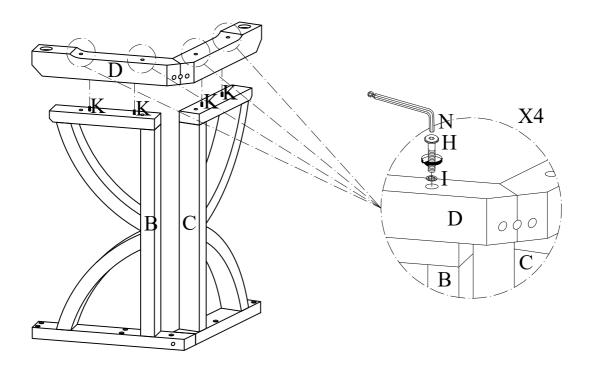


4 Use PVC Dowel (K) as a guide to align and attach the Crossbar (E) to the Leg Base (D) using JCBC Bolt (G) and Nylon Washer (L) with the Allen Wrench (N).

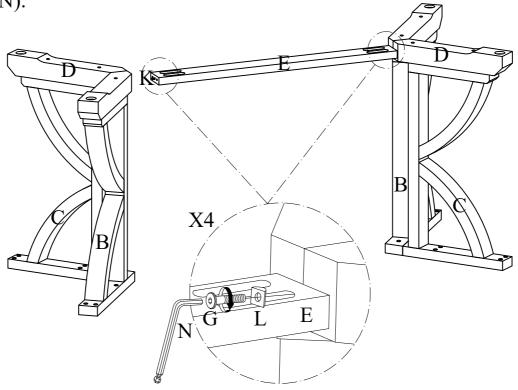


5 Place the Table Top (A) upside down on an even surface. Align and attach the Leg Frame (B & C) to the Table Top (A) using JCBC Bolt (F) and Lock Washer (I) and Flat Washer (J) with the Allen Wrench (N).

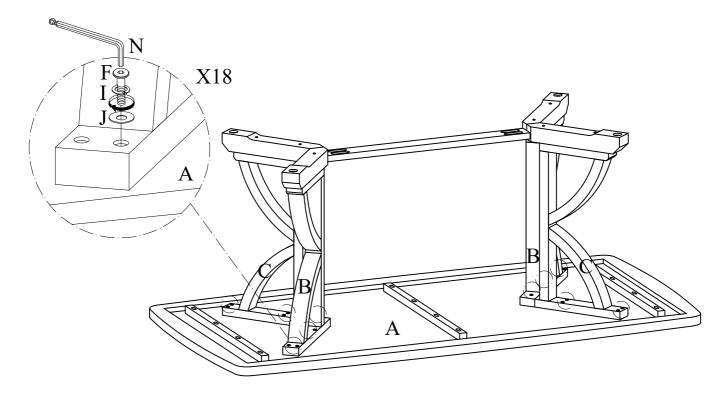

6 Screw the Leveler (M) into each hole of the Leg Base (D).

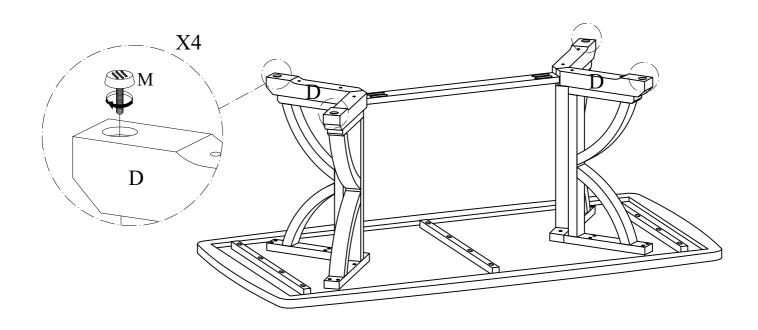

7 Stand the table on an even surface and check for balance. If the table wobbles slightly, please adjust the Leveler (M).

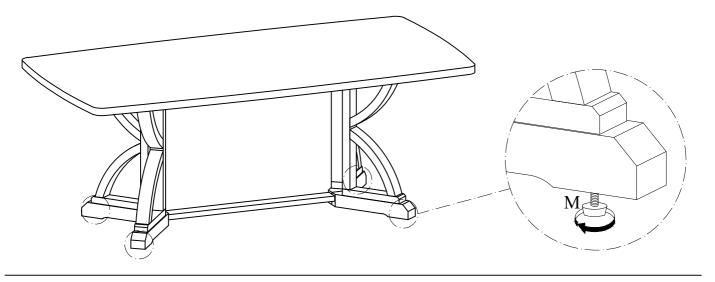

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.