



T-Q-WR96 HOOKUP GUIDE

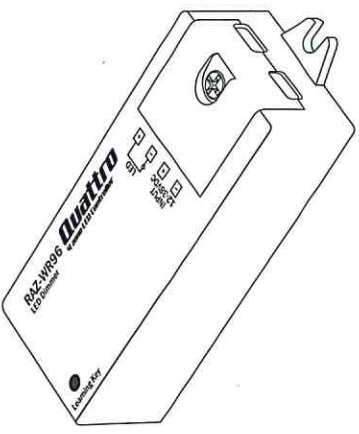

T-Q-WR96 LED Receiver
Input Voltage 120VAC
Current 1.8A
Output Voltage 12-36VDC
1X(A)
1W(6-28)W



T-Q-4Z-WC-RF LED Dimmer Wall Switch
Operating Voltage 3VDC
Operating Frequency 434 MHz/868 MHz

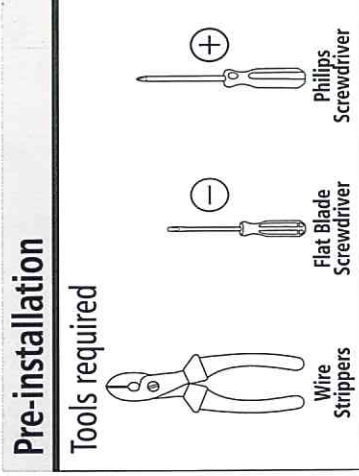

Pre-installation

Tools required

- Wire Strippers
- Flat Blade Screwdriver
- Phillips Screwdriver

Important: Read all instructions prior to installation

Wireless Quattro 4 Zone Dimmer

- 12-36Vdc LED Wall+Mini Remote Control
- Parts Included
- 1 - 4 Zone Wall Dimmer Control (or use as mini touchpad remote)
- 1 - CR2032 Long Life Battery
- 1 - Installation Instructions

Wall Buttons

Button Actions:	On/Off/Dimming Functions
Left 6 Right Buttons	Single push of left zone button turns lights on in paired zone(s). All Zones
Left 6 Right Buttons	Single push of right zone button turns lights off in paired zone(s). All Zones
Note	Remote needs to be in range of receivers. Average range is 100'. Range will decrease as battery power gets low.

Pairing Instructions:
After you have wired all the receivers according to your project requirements, do the following:
1. If you use multiple receivers, you have two choices: (1) Have all the receivers in the same zone, like zone 1 for example, or (2) have each receiver(s) in a different zone, like Zone 1, 2, 3 or 4.
2. In order for each receiver to know what Zone it belongs to, you will need to "pair" it to the zone you wish to use. In order to do this, you need to power up the unit with the LED lights hooked to it. To "pair" the receiver to the pairing and press the "Learning" button on the receiver. Press the "Learning" button on the receiver immediately after that you will need to quickly press and release the ON or OFF button on the RAZ-Q4RF control for the zone you wish to use. Once you do that, the lights will blink once. Now your Remote and Receiver are paired.
3. Do the same for any other receivers if you use them.
NOTE: Reset the receiver by pressing and holding the "Learning" button until the lights blink 2 times. You can now pair it to a different zone.

#RAZ-Q4RF Wireless Wall Control Installation




1. Install the Long Life CR2032 battery in the touchpad. (Can be used as a handheld remote)
2. Securely attach the touchpad to the mounting plate.
3. Install the touchpad mounting plate assembly into the desired electrical box location. The #T-Q-4Z-WC-RF can be gaged with other switches.
4. Attach your coverplate (not included) and you're ready to pair your receiver to your touchpad.




Safety

DO NOT expose the remote or controller to direct or indirect moisture


Set-Up Instructions

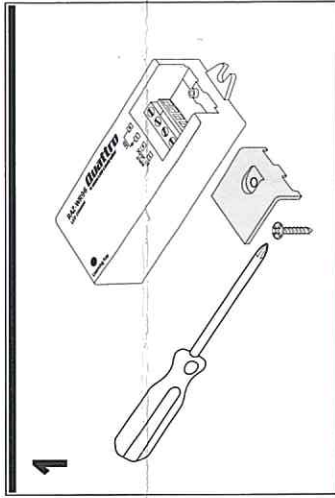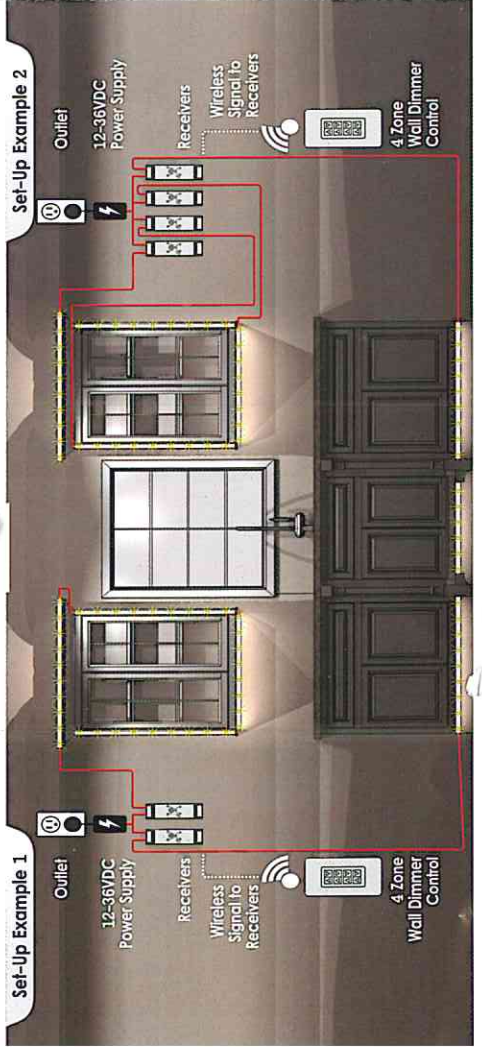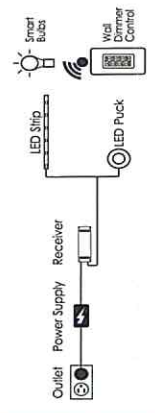


1. Remove cover with Phillips screwdriver.

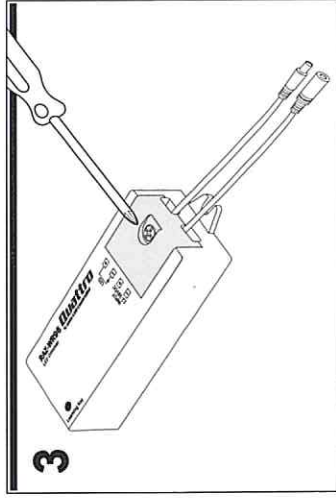

3. Attach cover with Phillips screwdriver.

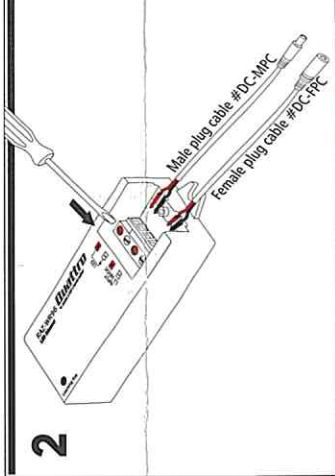


2. Loosen the 4 flat head terminal screws using the flat blade screwdriver. Connect the male and female plug cables, or connection wire. Titen 4 screws. (+ Red wire) (- Black wire)

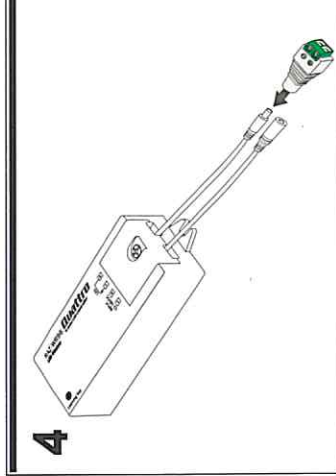


4. Attach the female barrel connector to the male


T-Q-WR96 HOOKUP GUIDE

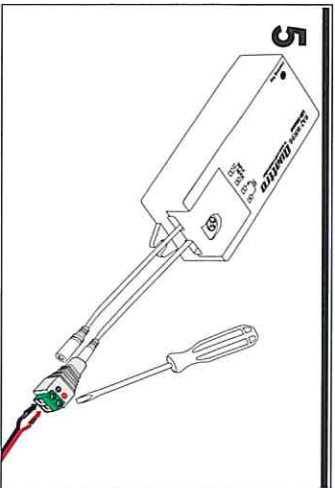


5. Cut the connection wire to desired length and route to LED strip location. Strip wire back 3/16" and insert into the Female barrel connector terminals. (Red to + and Black to -) Tighten screws down with Phillips screwdriver

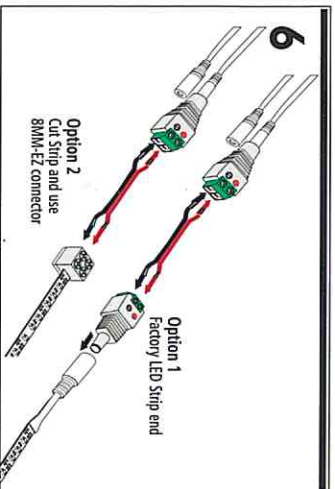


5. Route wire from receiver barrel plug to LED strip. Connect to strip using Option 1 or Option 2. (See the 8MM-EZ guide for detailed cutting and connecting instructions)

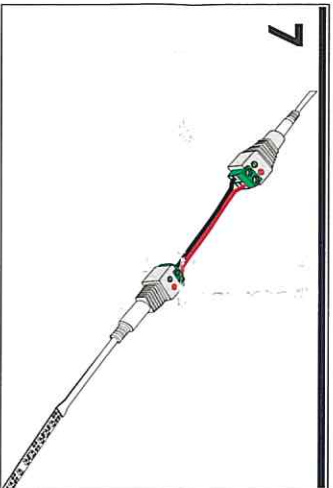

7. Verify that all connections polarity are correct (Red to + and Black to -)

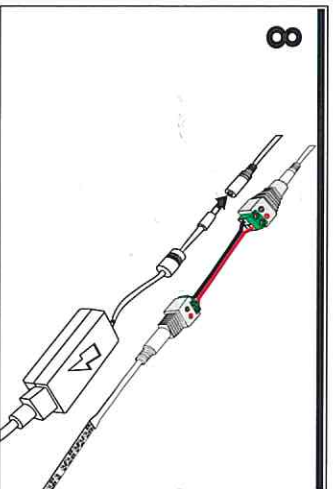

8. Connect the male end of the power supply to the Female plug cable.

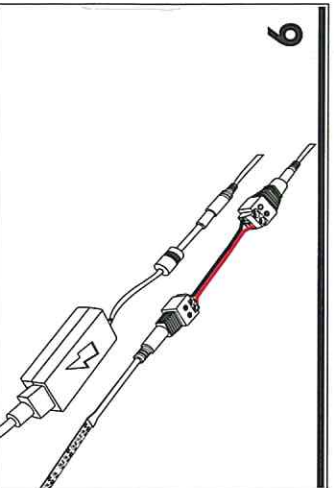


9. Plug in the power supply and proceed to the pairing instructions


PAIRING INSTRUCTIONS




After you have wired all the receivers according to your project requirements, do the following:

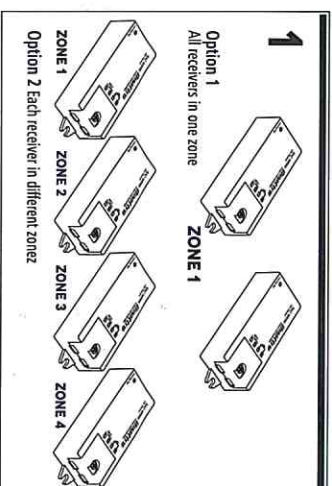


1. If you use multiple receivers, you have two choices:
 (1) have all the receivers in the same zone, like zone 1, or
 (2) have each receiver in a different zone, like zone 1, 2, 3 or 4.

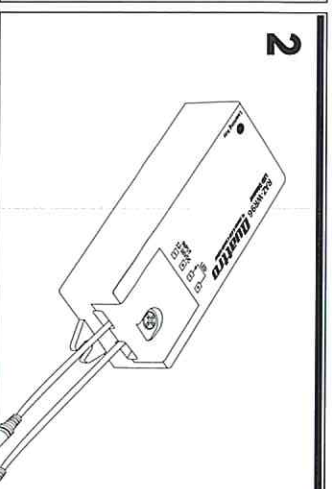


2. In order for each receiver to know what Zone it belongs to, you will need to "pair" it to the zone you wish to use. In order to do this, you need to power up the unit with the LED lights hooked to it.

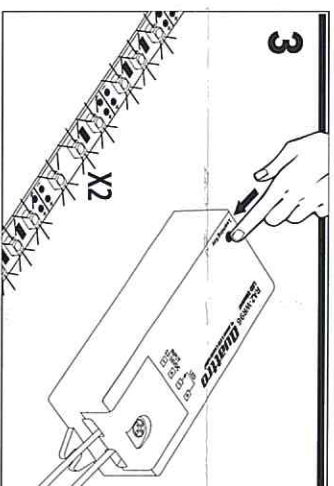

3. Reset the receiver by pressing and holding the "Learning" button until the lights blink 2 times.

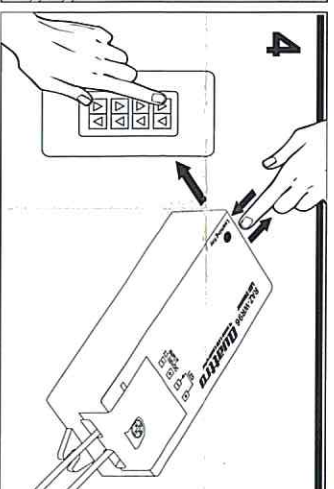

4. To "pair" you need to quickly and firmly press and release the "Learning" button on the receiver and immediately after that, you will need to quickly press and release the ON or OFF button on the T-Q-4Z-WC-RF control for the zone you want to use.

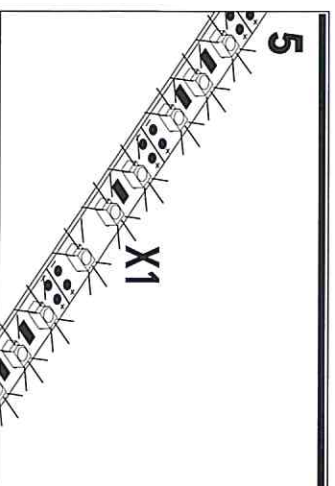

5. Once you do that, the lights will blink once. Now your Remote and Receiver are paired.