

Flow Turbine Replacement INSTALLATION INSTRUCTIONS

**For Use With Rinnai Tankless
Water Heater Models:**

- RE199i
- RE180i

- RE199e
- RE180e


 
⚠ WARNING Failure to correctly assemble the components according to these instructions may result in electric shock, injury, or death.

CAUTION Use only in water heater models RE199i, RE180i, RE199e or RE180e. Incorrect application could cause severe burns or a water leak.

Items Inside Product Box

Before installation, please make sure all parts are located inside the product box.

Item #	Item	Qty
1	Water Flow Turbine	1

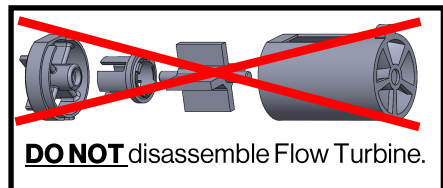

TOOLS/MATERIALS REQUIRED

- Phillips head screwdriver
- Small flat head screwdriver

Instructions

1. Turn off and disconnect 120 V power supply.
2. Turn off water supply.
3. Turn off gas supply.
4. Remove front panel.
5. Remove retainer from bypass servo valve.
6. Pull water flow turbine from the bypass servo.
7. Align water flow turbine key with mating surface in the bypass servo.
8. With the key aligned, press the retainer to secure water flow turbine.
9. After reinstalled, check the water leakage and operation correctly.

