

 
ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0403

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.

Hardware Package (included):

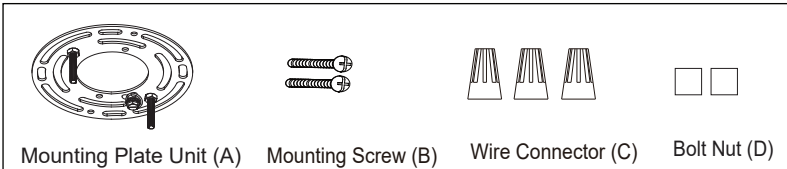



Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the bolt nuts (D), take out the mounting plate unit (A) from the canopy kit, then attach the mounting plate unit (A) to the outlet box by using two mounting screws (B).
2. Rod Connections:
 - a. Thread the fixture wire from the fixture through the lower rod, then secure the lower rod onto fixture using the threaded pipe.
 - b. Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
 - c. Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.

  Note: Length adjustable from 19-1/4" to 38-1/4". Use fewer rods if shorter length is desired.
3. Thread the fixture wire through the canopy kit, then secure the rod assembly to the set threaded pipe of the canopy kit.
4. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with green ground screw, then depending on local code, connect it to the house ground wire with the wire connector (C).Carefully put all of the wires back into the outlet box.
5. Attach the canopy kit to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).
6. Put the top glass shade, metal ring and bottom glass shade together as shown in the picture, then carefully attach it onto the glass holder, and secure it with the socket ring.

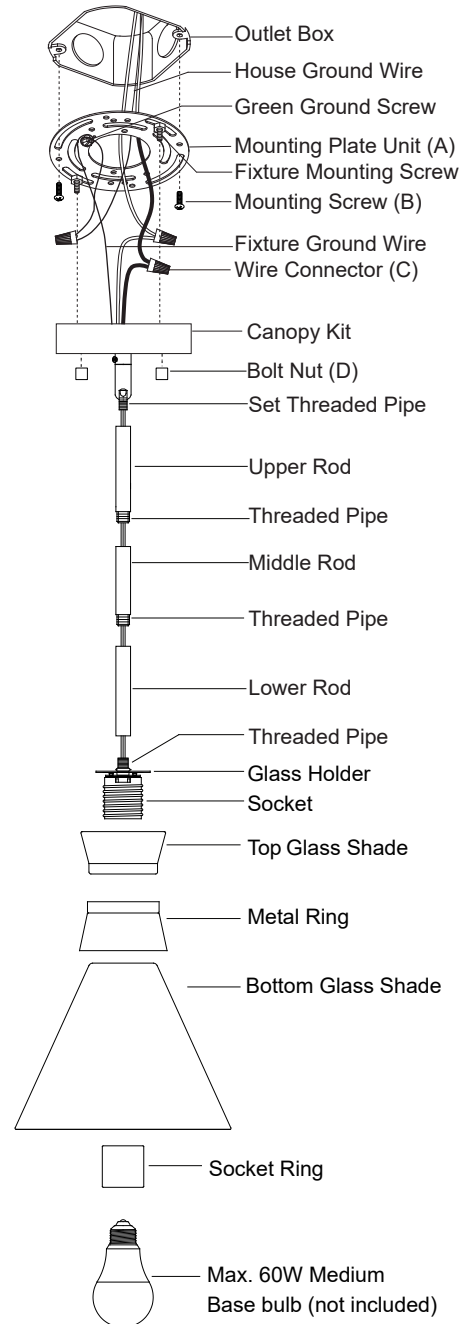

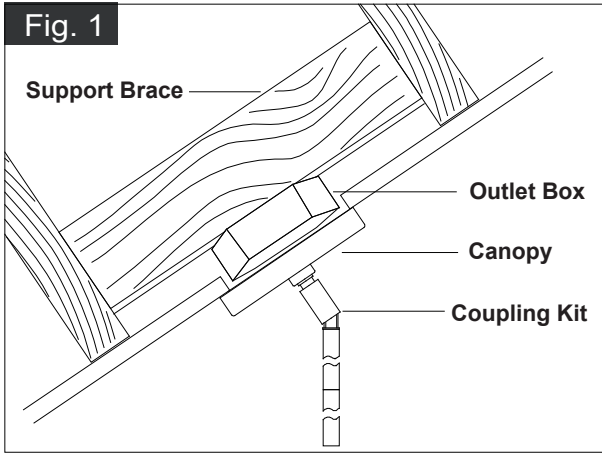


7. Install 1 X 60W Max. medium base bulb (not included). See relamping label at socket area or packaging for maximum wattage allowed.
8. Angled mounting recommended for a vaulted or angled ceiling. (See Fig.1)

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

<p>Mounting Plate Unit (A)</p>	<p>Mounting Screw (B)</p>	<p>Wire Connector (C)</p>	<p>Bolt Nut (D)</p>	<p>→ Assembly Kit 6721MM (1 SET)</p>	<p>Bottom Glass Shade 10433CG</p>	<p>9-1/2" Rod 3396RD</p>	<p>Top Glass Shade 10431CG</p>
--------------------------------	---------------------------	---------------------------	---------------------	--	---------------------------------------	------------------------------	------------------------------------

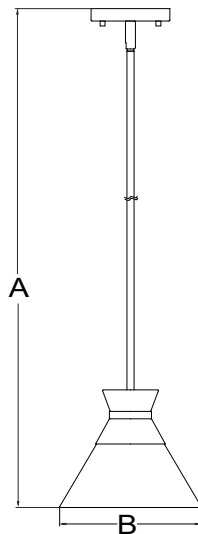 

A: 19-1/4" ~38-1/4"

B: 8-1/2"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235