



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3535

gameroom@escaladesports.com

Or write to:

Mailing Address: (Correspondence Only)

Escalade Sports

PO Box 889

Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports

817 Maxwell Ave.

Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

Your Model Number: **AL6069F**

Date Code: **2-AL6069 - -WJ**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

All Rights Reserved.

© 2022 Escalade Sports

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS AMERICAN LEGEND 3-IN-1 SWIVEL TABLE WITH UNDER-GLOW LED LIGHTS

Tools Required: Allen Wrench (included), Furniture Polish and Soft Cloth,
Phillips Screw Driver, Carpenters Level, (8 pcs AA Batteries not included)

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your game table.

1. Start all bolts by hand before tightening.
2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
3. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
4. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

NOTICE :

**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO CAPABLE
ADULTS ARE REQUIRED TO ASSEMBLE THIS GAME TABLE.**



 
! WARNING

**PINCH HAZARD! KEEP HANDS CLEAR
WHEN CABINET IS IN MOTION
PINCH POINTS! ROTATE
TABLE ONLY WITH ADULT SUPERVISION**

HARDWARE IDENTIFIER


(To Scale)

#18




1-1/4" Phillips Washer
Round Head Screw
(20 pcs)

#19

 


3/4" Phillips Flat
Countersunk Head Screw
(16 pcs)

#20

 


1-3/4" Phillips Flat
Countersunk Head Screw
(82 pcs)

#21

 


1/2" Phillips Round
Head Screw
(8 pcs)

#22

 

5/16" * 1-1/2"
Allen Head Bolt
(16 pcs)


#23

 

20mm
Hex Bolt (Pivot bolt)
(2 pcs)


#24

 (Not to Scale)

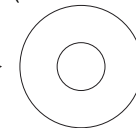

20mm
Flat Washer
(4 pcs)

#25

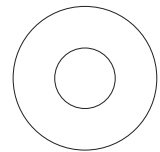 

5/16" * 19mm
Flat Washer
(16 pcs)


#28



 (Not to Scale)

For Pivot Bolts
Wrench
(1 pc)

#43



3/4" Phillips Round
Round Head Screw
(8 pcs)


#45



 (Not to Scale)

20mm Plastic Washer
(2 pcs)


#47



(Not to Scale)


Allen Wrench
(1 pc)

#52

 


1-3/4" Phillips Washer
Round Head Screw
(12 pcs)

#53

 

1/4" * 1"
Allen Head Bolt
(8 pcs)

#54

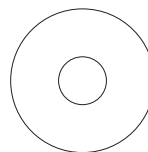 

1/4" * 19mm
Flat Washer
(8 pcs)

#55



1/2" * 9mm Lock Washer
(8 pcs)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
#56







13/32" * 7mm Lock Washer
(8 pcs)

PARTS IDENTIFIER

(Not to Scale)
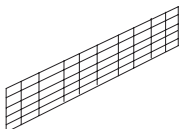
#1  Billiards -Cabinet 1 Piece	#2  Hockey - Playfield With Air Motor 1 Piece	#3  33-5/8" x 11-3/4" Leg Top End Panel 2 Pieces	#4  18-5/8" x 5-3/4" Puck Catcher Miter Cut Box 2 Pieces	#5  Latch/Lock 4 Pieces
#6  33-5/8" x 4-1/4" Leg End Panel Support Board 2 Pieces	#7  33-5/8" x 5" Leg Ball Storage Board 2 Pieces	#8 (Packed in Hardware Kit)  Steel L-Bracket 4 Pieces	#9  28-5/8" x 15-1/4" Right Mitre Cut Leg 2 Pieces	#10  28-5/8" x 15-1/4" Left Mitre Cut Leg 2 Pieces
#11  28-1/4" x 4-3/16" Leg slip in panel 4 Pieces	#12  5" x 5" Leg Base Board 4 Pieces	#13-R  6" x 2-7/8" Outside Apron-End Board 4 Pieces	#14-R Used together  74" x 3-1/2" Outside Lower Apron With LED Strip + Battery Box (2 Pieces)	#15  42-1/2" x 5" Top Leg End Panel 2 Pieces
#16  Table Tennis End Playfield 2 Pieces	#17  Table Tennis Middle Playfield 1 Piece	#26  Leg Leveler 4 Pieces	#27  Wood Glue 1 Piece	#29  23-3/4" x 1-7/8" Anti Sag Table Tennis Playfield Support Board 2 Pieces
#30  Billiard Balls 1 Set	#31  2 PC Cue Stick 2 Pieces	#32  Triangle 1 Piece	#33  Cue Tip Chalk 2 Pieces	#34  Pool Playfield Brush 1 Piece
#35  Hockey Striker With Felt Attached 2 Pieces	#36  Hockey Striker Felt Pad Factory Attached 2 Pieces	#37  Hockey Puck 2 Pieces	#38  Table Tennis Net post 2 Pieces	#39  Table Tennis Net 1 Piece
#40  Table Tennis Paddle 2 Pieces	#41  Table Tennis Ball 2 Pieces	#42  Plastic Rub Strip 4 Pieces	#44  End Panel Inner Cushion 4 Pieces	
    
#46  Table Tennis Playfield Cushion 12 Pieces	#48  Stick on Cord Holder 1 Piece	#49 39-3/8" x 3"  TT playfield holder board 2 Pieces	#50 39-3/8" x 2"  TT playfield holder support board 2 Pieces	#51 7-3/8" x 3"  TT holder connector Block 4 Pieces
--	--	---	---	--

Used together

Step 1 NOTE: READ + STUDY ALL ASSEMBLY TEXT, DIAGRAMS AND DIAGRAM NOTES.

IMPORTANT NOTE: BEFORE INSTALLING PLAYFIELD SCREWS - PLEASE BE SURE ALL PARTS HAVE BEEN REMOVED FROM INNER CABINET AND AIR MOTOR CORD IS BROUGHT THROUGH THE HOLE IN SIDE PANEL.



Remove all components from the carton. Note: Parts are packed inside the table cabinet. Remove the Hockey Table Playfield (#2). Inside the table cabinet you will find all the parts needed to assemble your table. Remove all parts.

IMPORTANT, be sure to feed the plug end from the fan motor through the hole in the side apron.

 
With the help of another adult, carefully reinstall the hockey table playfield (#2) onto the main cabinet and attach using Screws (#18). Attach the plastic Rub Strips (#42) to the ends of the Cabinet with Screws (#43).

Tighten, but do not strip out Screws #18 and #43.

IMPORTANT: Press Air Hockey Playfield Down Tight While Installing each (#18) Screw



**Carefully stand the air hockey playfield on edge while removing parts.
Do not lay playfield down onto the air motor.**

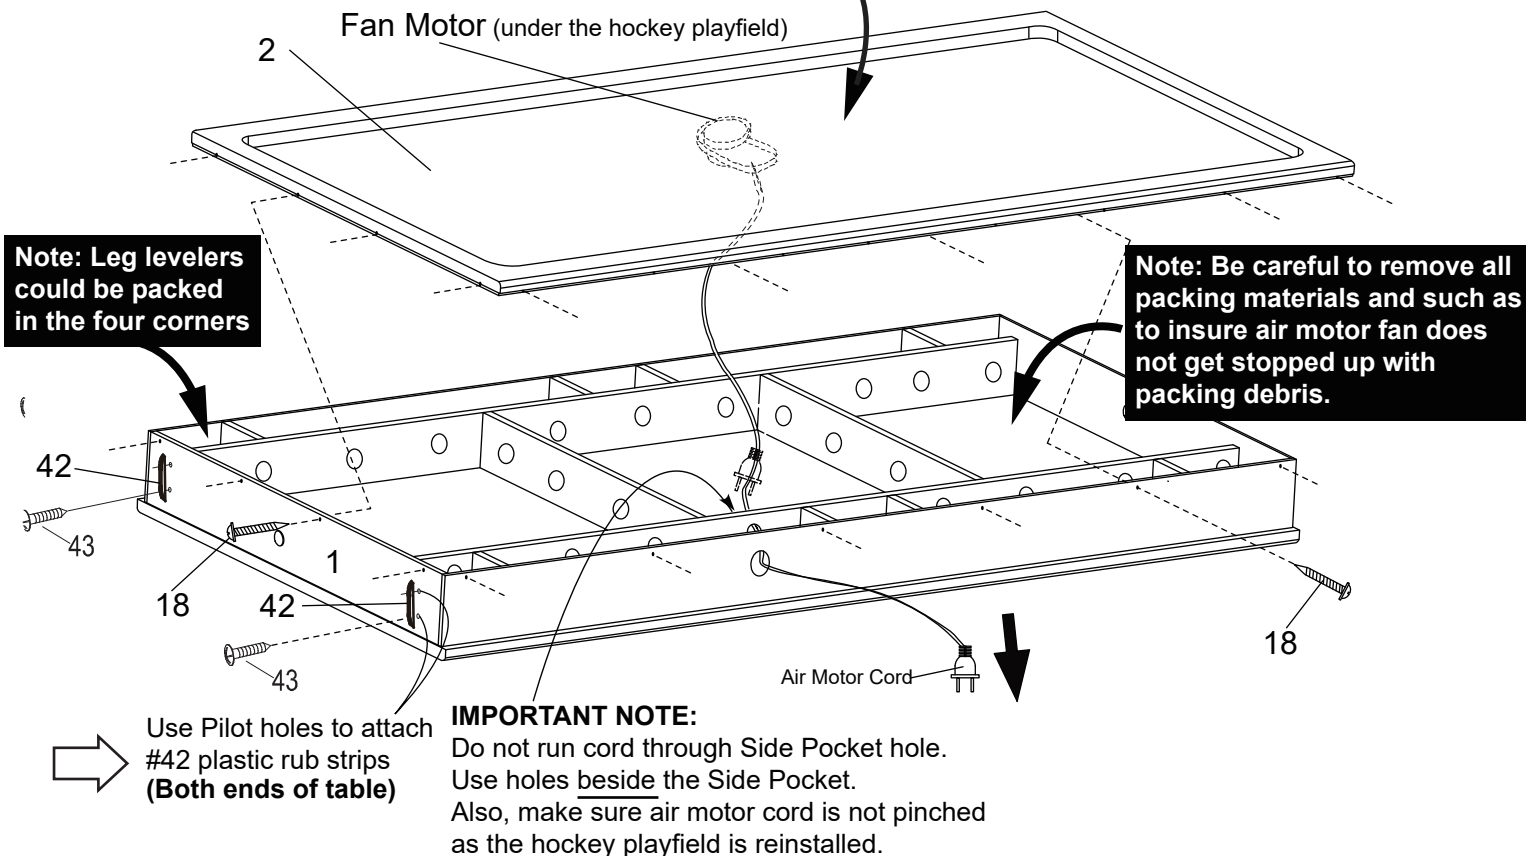


Step 2

IMPORTANT NOTE: Please study and orientate all parts exactly per each diagram for correct assembly!

FIG:2A


 
Remove backing and stick the end panel inner cushions (#44) to the each of the end panels (#3).

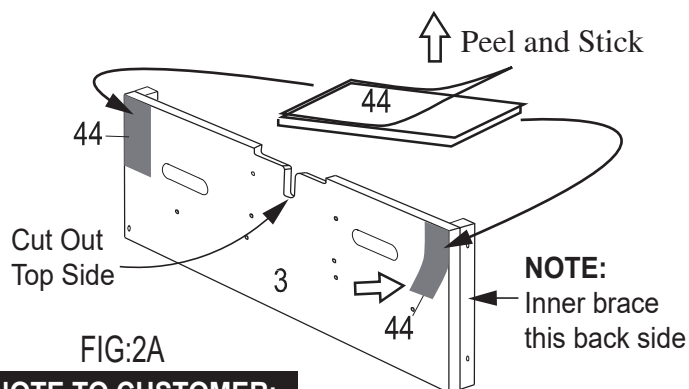

NOTE TO CUSTOMER:
The purpose of the (#44) end panel inner cushions is to offer a more stable playfield during play

FIG:2A

  Attach 2 Latch/locks (#5) into the Leg Top End Panel (#3) pre-cut holes with Screws (#19). Carefully fold and attach the puck catcher box (#4) with Screws (#20) using the predrilled holes. Add a small amount of wood glue into miter grooves before folding. Repeat this step for the other end panel. Tighten, but do not strip screws (#20 & #19).

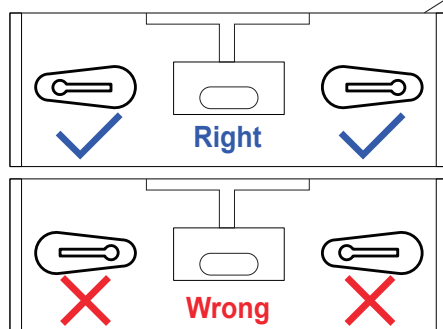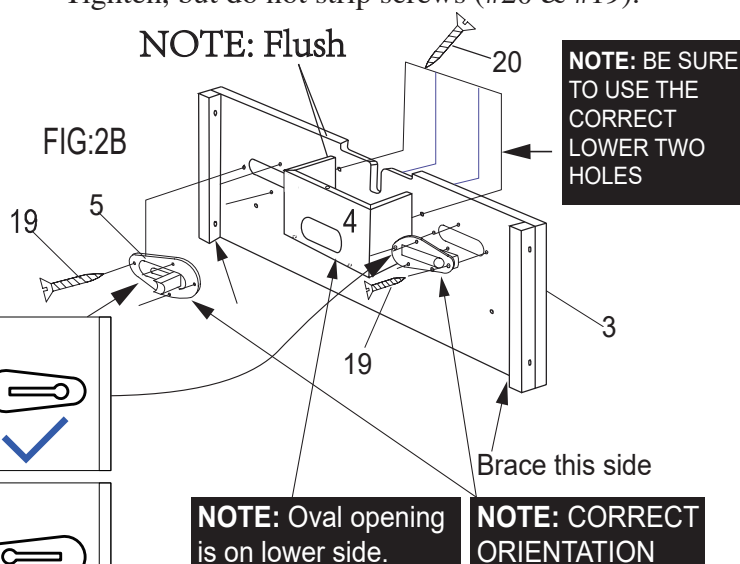

CRITICAL: Latch locks(#19) must be orientated exactly the same as diagram.

Step 3

FIG:3A

Screw the end panel support board (#6) to the leg top end panel (#3) using screws (#20) into predrilled holes. Tighten, but do not strip screws (#20).


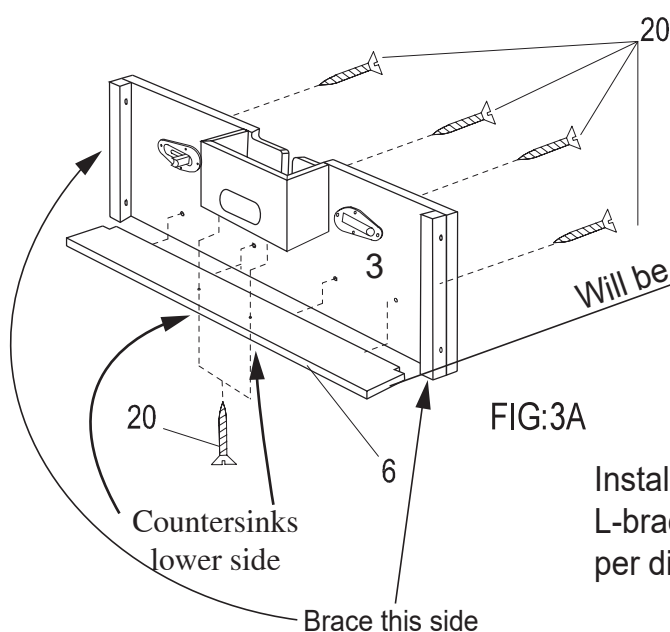 


FIG:3B

 Screw the Steel Brackets (#8) onto the bottom of the Ball Storage Board (#7) using the pilot holes and Screws (#21). Now attach the Ball Storage Board (#7) to the leg pedestal using the predrilled holes and Screws (#20). Tighten, but do not strip screws (#20) and (#21). Repeat these steps for the other end panel (#3).

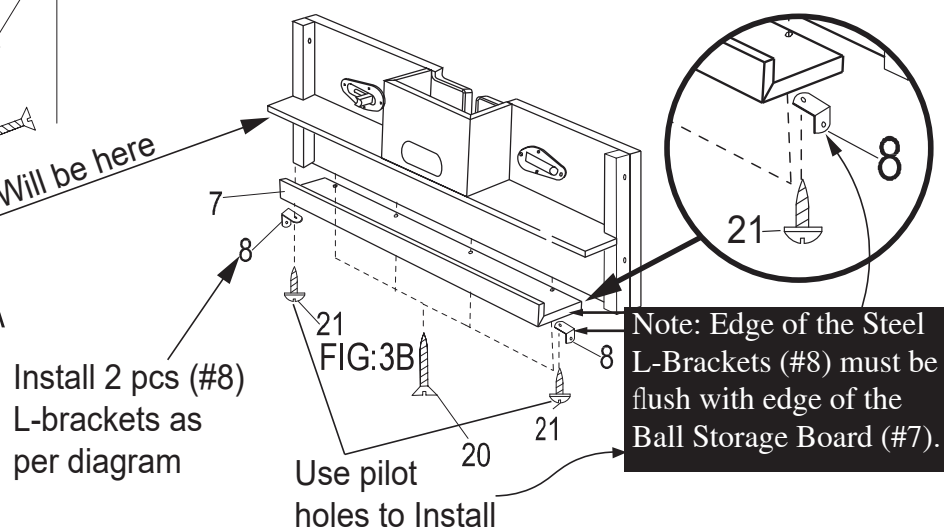

Step 4

NOTE: Be sure mitered grooves are free of any dust or debris before folding.

NOTE: Handle each leg with care

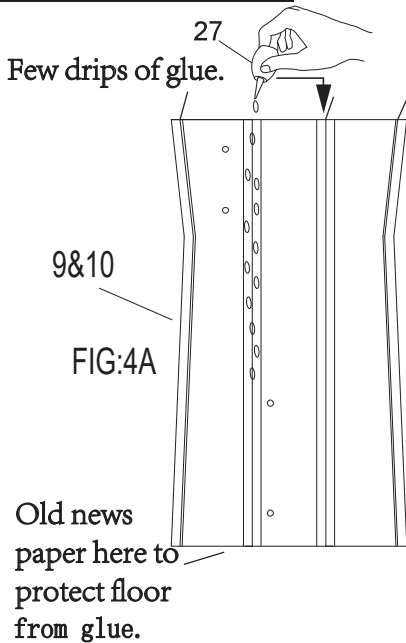 


FIG:4A

Assemble the legs (#9). Run a thin bead of glue (#27) into the mitered grooves on the inside edges of the leg (#9). And carefully fold leg.

FIG:4B

Carefully slide leg Panel (#11) into grooves in the leg (#9). Make flush, leg + leg panel, at the top of the leg.

FIG:4C

 
Attach leg base (#12) to the bottom end of the leg using screws (#20). Screw leg leveler (#26) into leg base (#12). Repeat this step for all 4 legs, 2 pcs of (#9) & 2 pcs of (#10).

IMPORTANT : Holes are close to edge of leg.

NOTE: Be sure to orientate all parts as per diagram


Step 5

With help from a second adult. Attach the leg pedestal (#3) to the legs (#9) & (#10) Align the bolt holes on each side of the leg pedestal (#3) to each leg (#9 & #10) using Bolts(#22) with washers (#25) and tighten using Allen key(#47). Now attach the steel brackets(#8) using screws (#21). Repeat procedure for the other end panel.

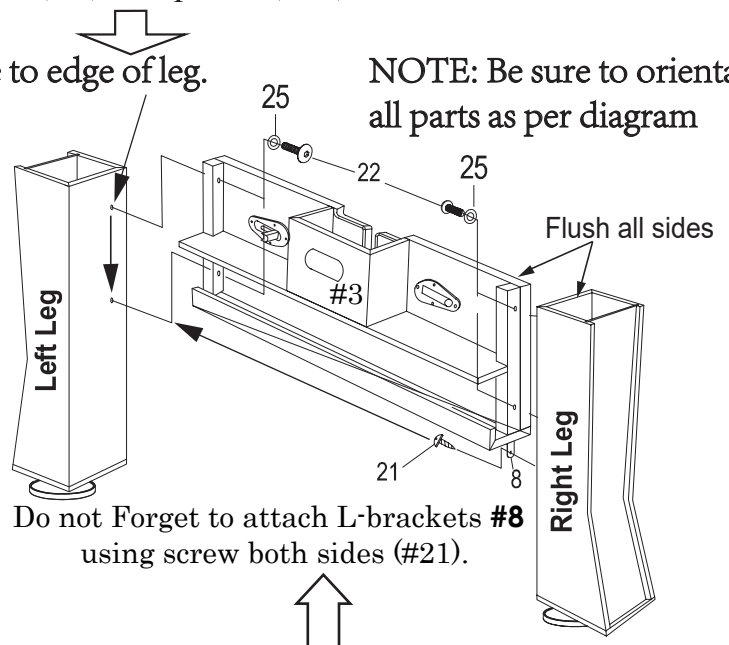

Step 6

 
Assemble outside lower aprons 2 pcs (#14-R) by screwing the apron end boards (#13-R) to each end of the outside lower apron (#14-R) with screws (#20). Do not strip screws.

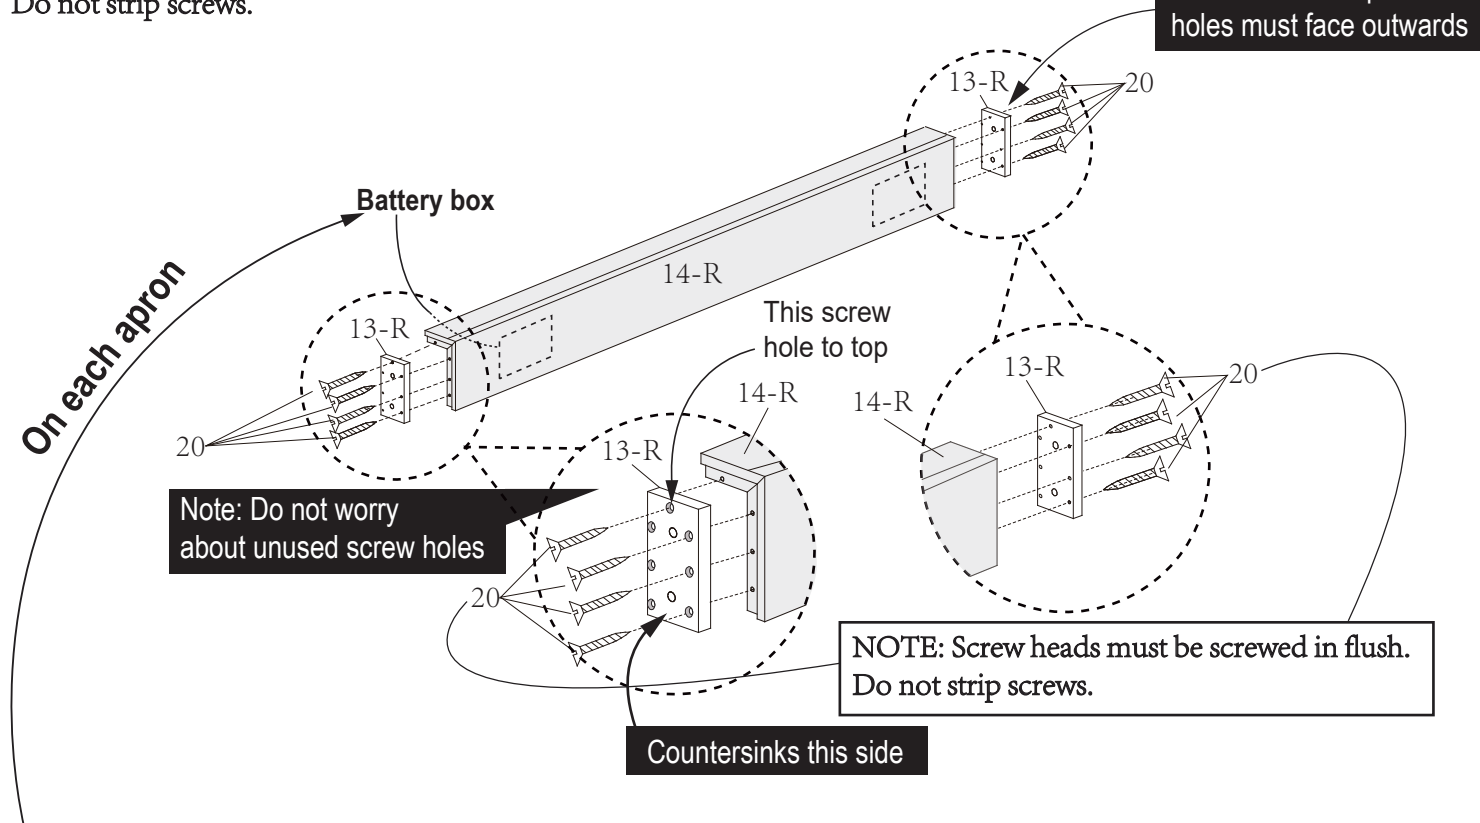


Step 7

Remove the screw using a small phillips screwdriver and open the battery box, Insert (4) AA batteries (not included) in the order of polarity as shown on the inside of the battery box. Then close using the same screwdriver. Turn on the power by pushing the on/off switch on the battery box to the "ON" position. (If the game will not be used for a long period of the time, we recommend that the batteries be removed)

 
See "FIRST TIME BATTERY INSTALLATION AND NOTICE", before installing batteries, located on **page 16**.

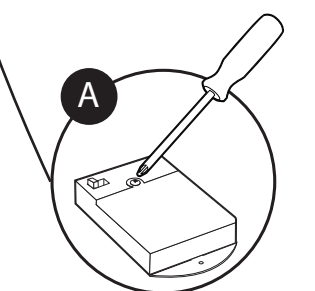

Unscrew and remove cover.

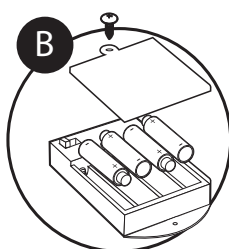 

 - Insert 4 AA Batteries
(Batteries not included).
Make sure polarity is correct

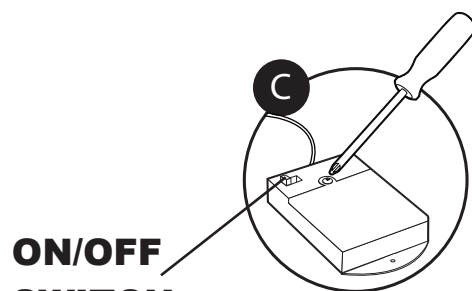

**ON/OFF
SWITCH**

- Return cover and insert Screw.

 
Should LED light strip not come on when the switch is on:

Check the battery box to light strip connection and correct battery polarity (+-) inside the battery box. And lastly, make sure batteries are good.

Step 8

With the help of another adult, attach the outside lower aprons(14-R) (flat side up) to the assembled leg pedestals by aligning the holes in the outside lower aprons (14-R) with the holes in the legs using bolts(#22) with washers(#25). Tighten bolts tight, Using the #47 Allen Wrench

WITH THE HELP OF ANOTHER ADULT

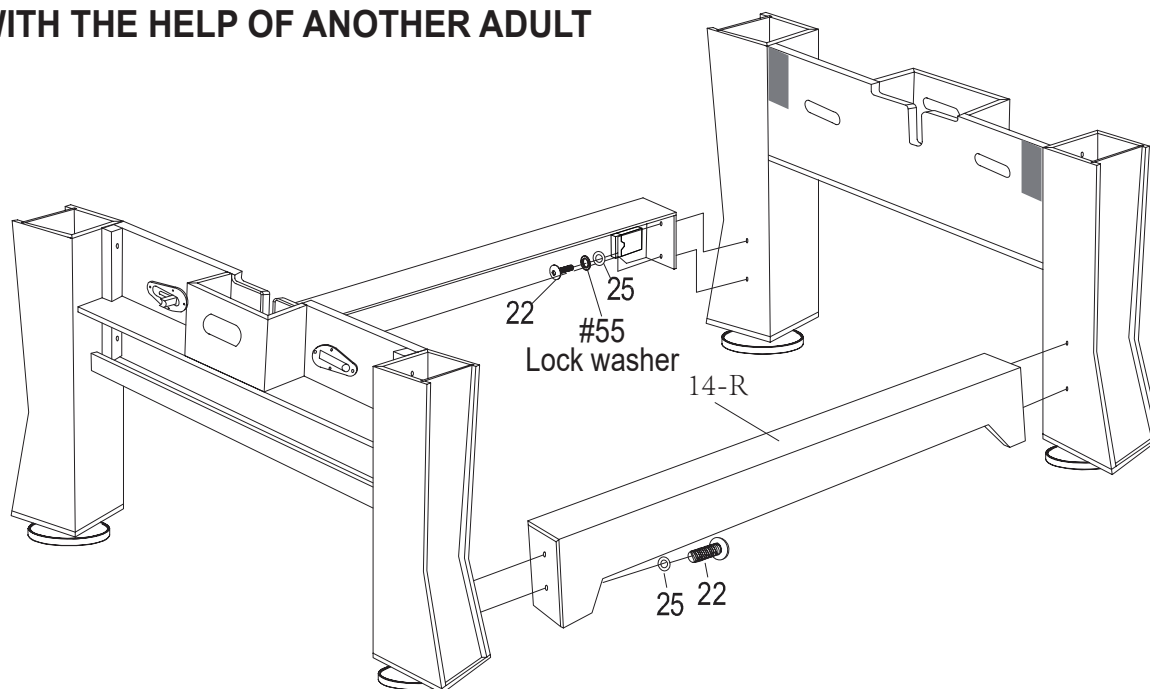


Note: When this assembly is complete, it would be best to place it where it will set in your room.

Keep in mind an A/C outlet for the air hockey air motor cord.

Step 9

Assemble TT playfield holder board **#49** and TT holder support board **#50** using screws **#20**.

 
Attach TT holder connectors **#51** using screw **#52**. Assemble 2 identical assemblies
Do not strip out screws.

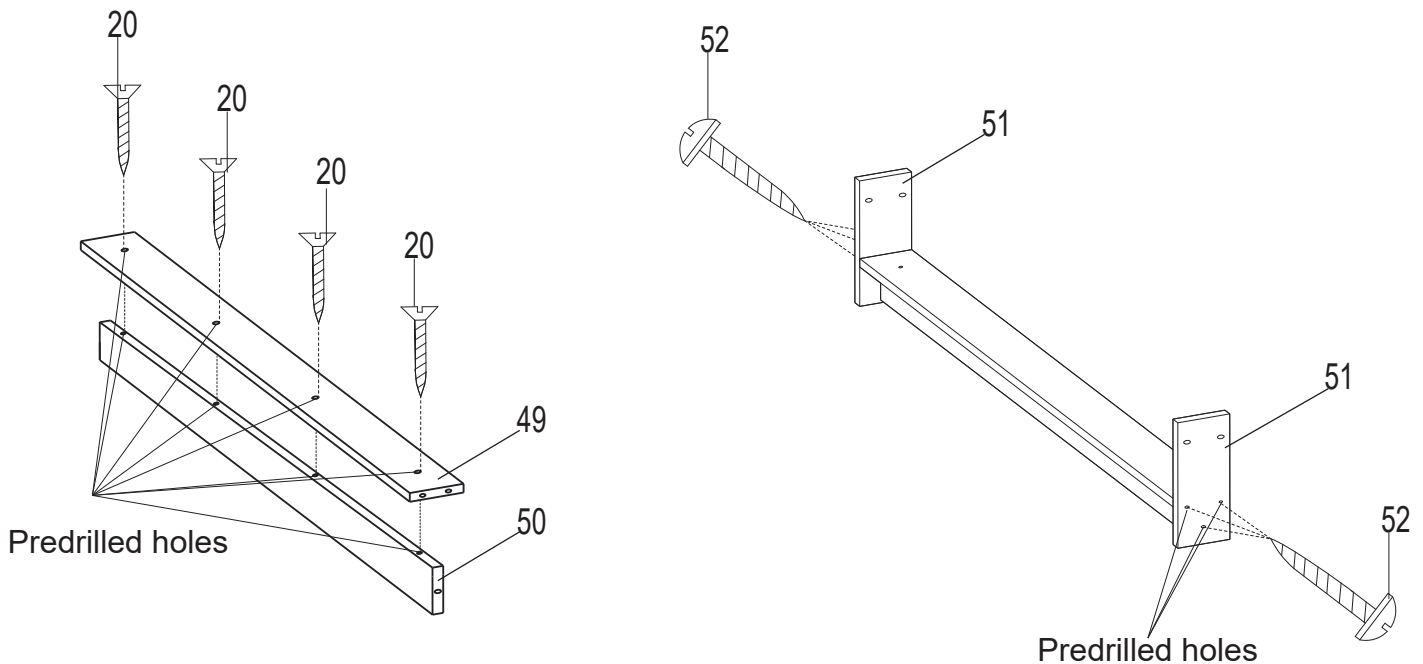

Step 10

WITH THE HELP OF A SECOND ADULT:

 Attach the TT playfield holders to the frame by threading the **#53** bolts with **#54** washers and **#56** lock washer tighten tight. Using the **#47** Allen Wrench.

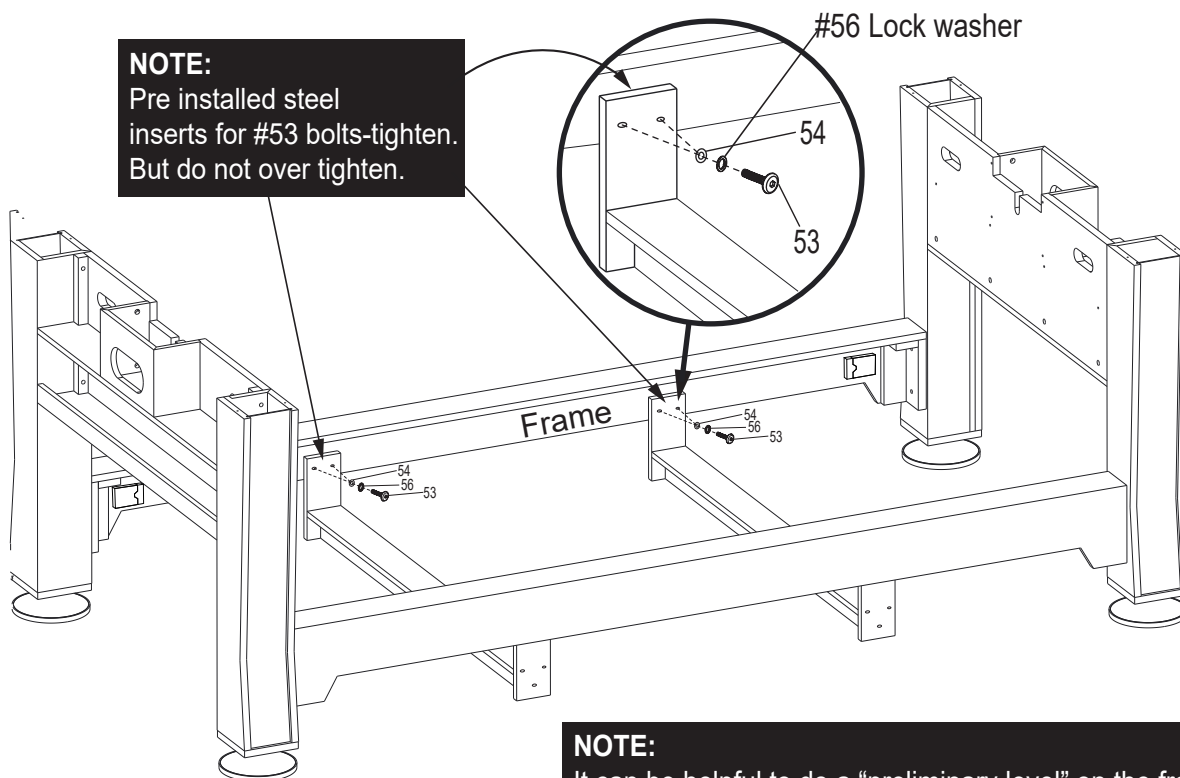

NOTE:

It can be helpful to do a "preliminary level" on the frame now. Use the leg levelers as required.

Step 11

 
Preparing the pool / air hockey main cabinet for placement into the frame.

The factory installed threaded inserts in the main cabinet inside of each end (#1) cannot be removed, First, slide 2 pcs 20mm washers (#24) and plastic washer (#45) onto the 20mm hex bolt (#23) as seen below. Second, install pivot bolts (#23) into the metal threaded inserts in the ends of the main cabinet.

Screw the bolt into the steel insert leaving approx 1-1/2 of the hex bolt exposed when the bolt is secured into the steel threaded insert.


Placing the pool / air hockey cabinet to the base frame: **NOTE: USE CAUTION NOT TO PINCH FINGERS.** You are now ready to place the main cabinet (#1) onto the base frame. With the help of 4 to 5 other adults, have two adults on each side of the table top, and the others on the ends to help guide the hex bolts (#23) into the slots on the leg pedestals. Once in place, make sure the head of the hex bolts (#23) and the 20mm washer (#24) are sticking out past the leg panel. Make sure the plastic washer (#45) is against the main cabinet (#1) as it will act as the spacer for the table to rotate freely. To secure the table top to the leg panel use the wrench (#28) provided. Tighten each of the 20mm hex bolts (#23) on each end of the leg panel, snug tighten only. This will lock the table top to the base frame, and still allow the table top to rotate freely. When rotation is complete, engage all 4 latch/locks.

CAREFULLY LIFT THE MAIN CABINET FROM EACH SIDE (NOT ENDS) TO PLACE THE INTO THE END PEDISTAL LEGS 4 TO 5 CAPABLE ADULTS REQUIRED!

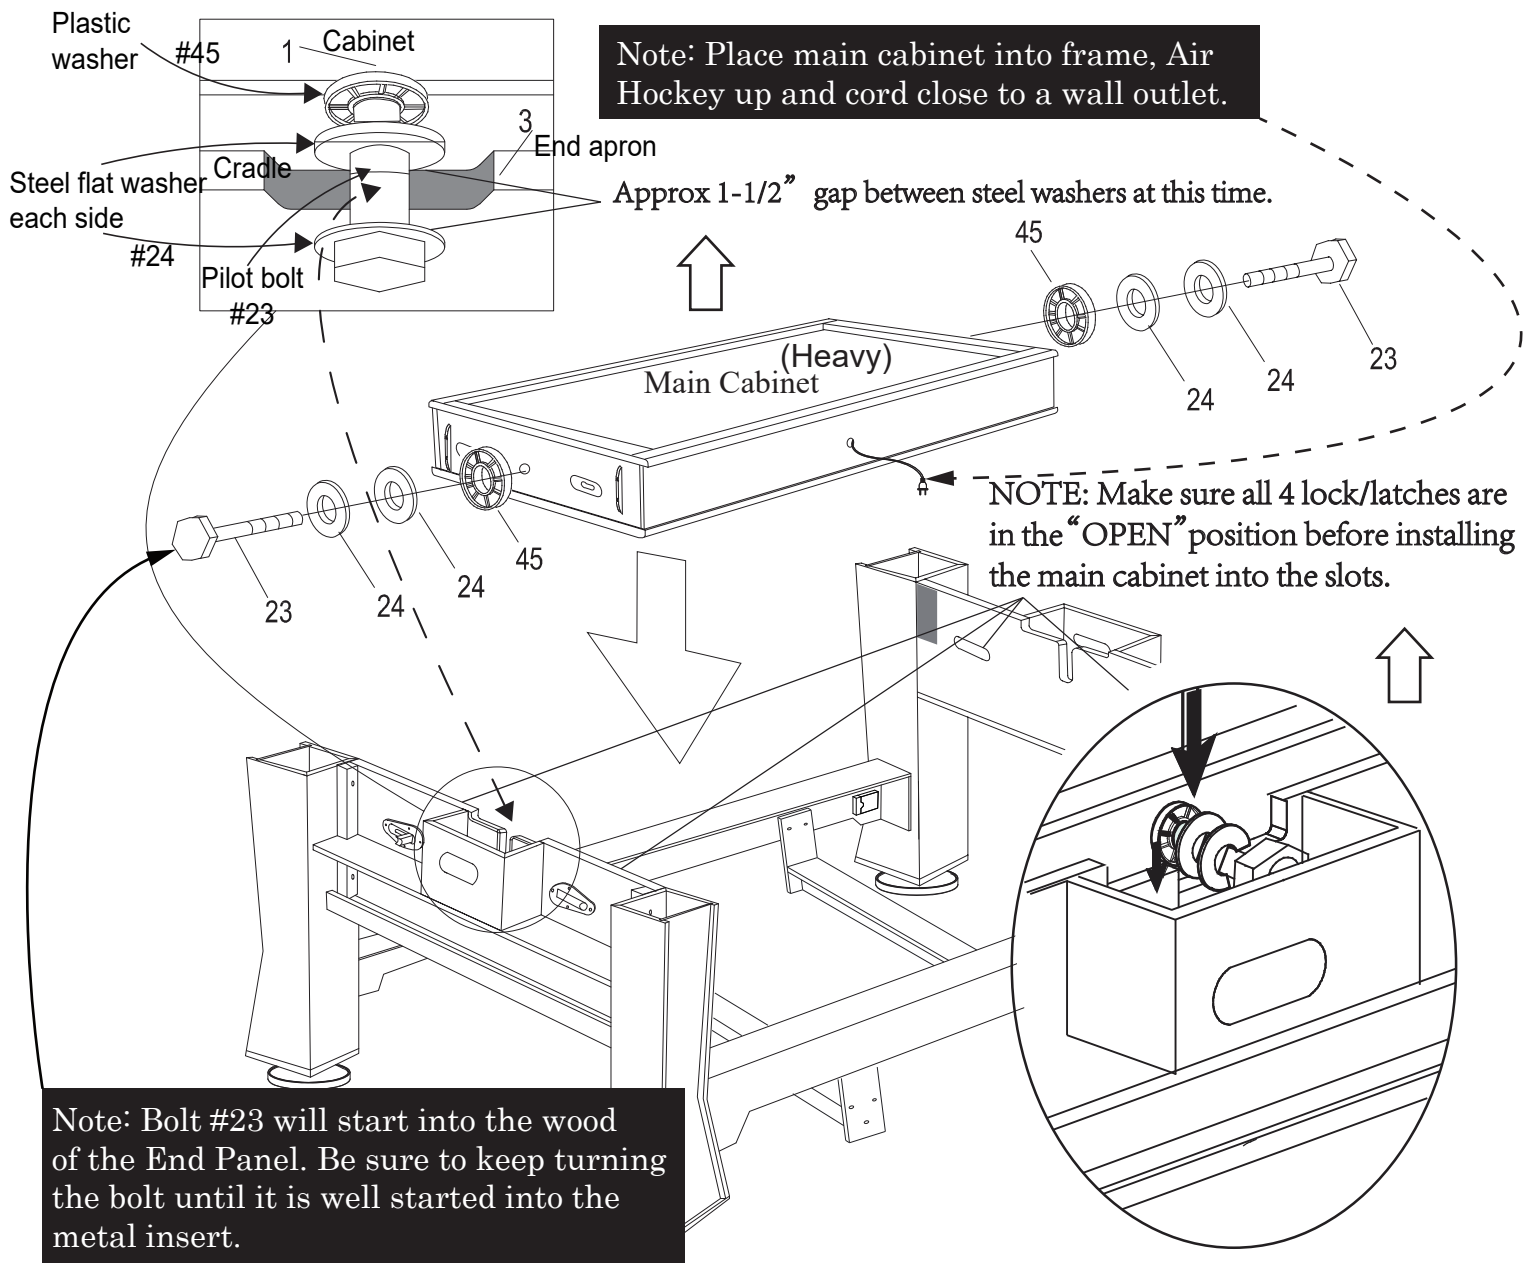


Step 12

 Attach the top end panels(#15) to the assembled leg pedestals(#3) by aligning the holes in the end panel (#15) with the predrilled holes in the top of the leg pedestal,(#3) with screws (#20). Do not strip screws. Peel the backing off the Cord Clip (#48) and attach to a side of the table.

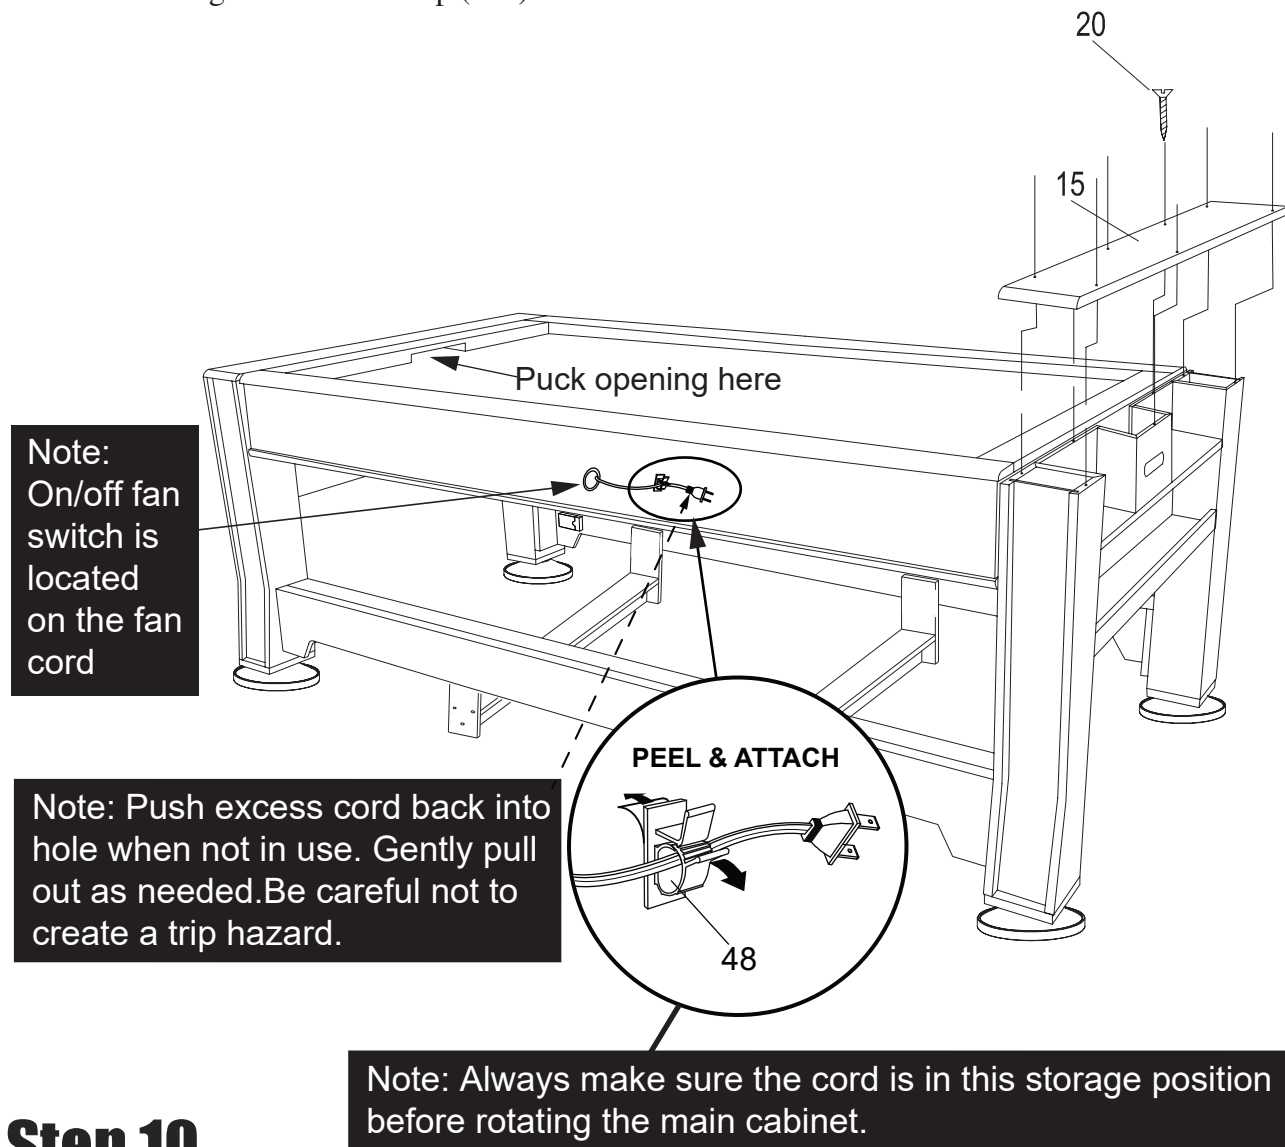

Step 10

 Assemble the hockey striker (#35) by attaching the hockey felt (#36). Remove the protective paper and adhere the hockey felt (#36) to the striker (#35).

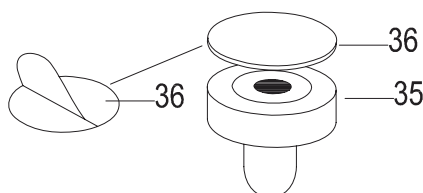

Note: #36 Hockey striker felt could be installed by factory

Step 13

 
Place the 2 pcs anti sag tennis top playfield -supports(#29) onto the center of the hockey table playfield. Place the table tennis playfield (#17) and table tennis playfields (#16) on the cabinet top.

Attach the Net Posts (#38) to the Middle Board (#17), slide the table tennis net (#39) onto the Net Posts (#38).

WARNING: Table Tennis tops must be removed before rotating main cabinet!

Trouble Shooting:

If the pool table side is not level, first try to level by using the leg levelers on each leg. Most of the time the table can be easily leveled using this method. If the tennis top surface needs adjustments, shims may be used on the #29 cross supports to bring up the low spots.

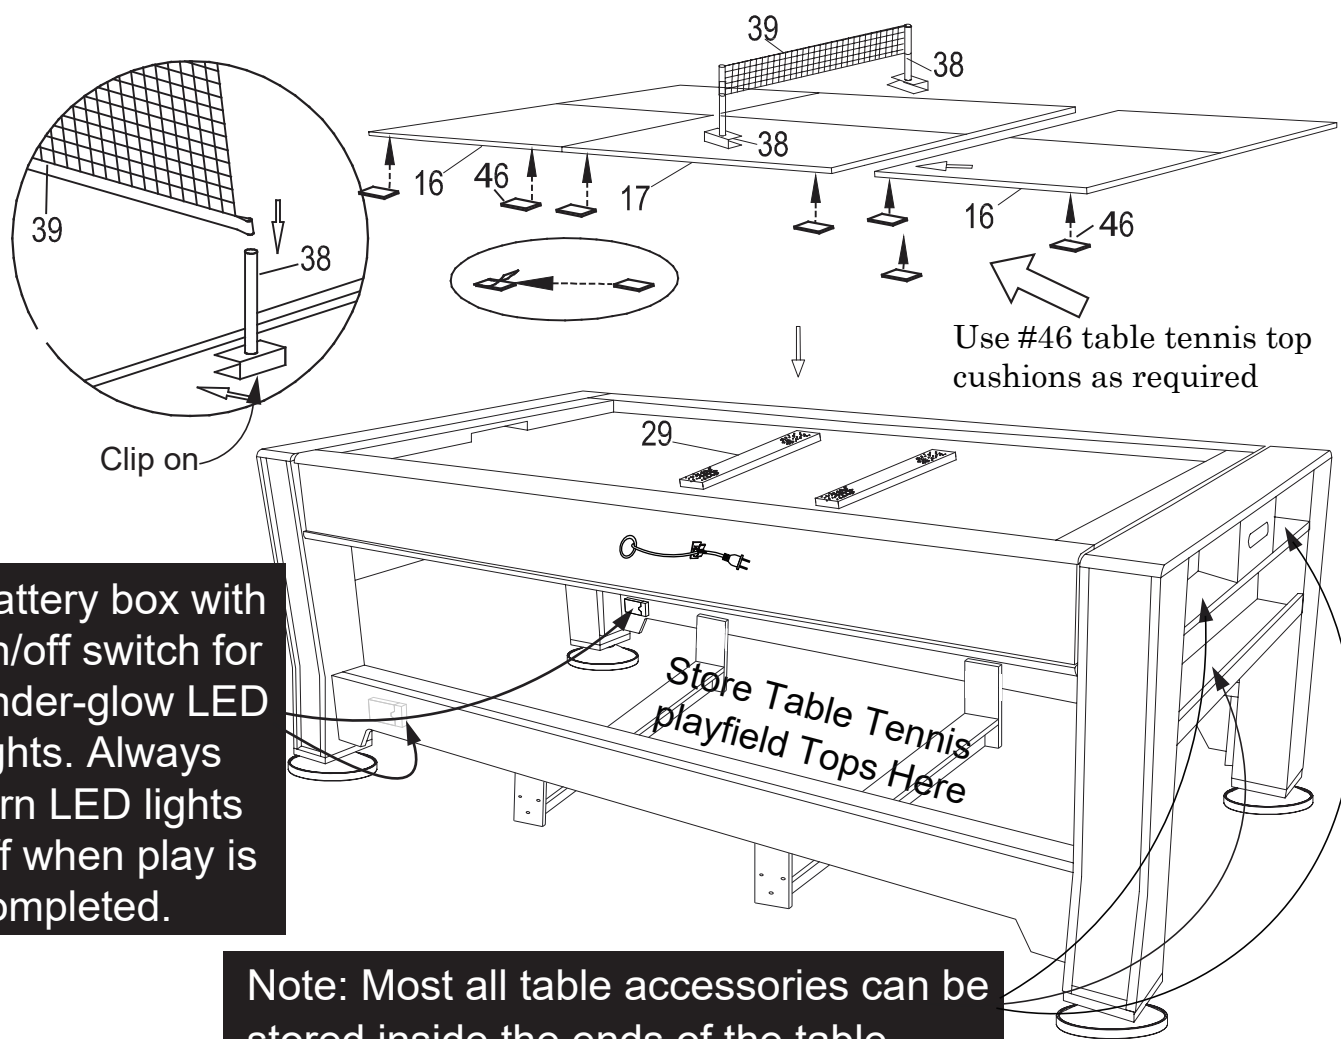

Note: Always make sure all (4) latch/locks are correctly locked in place during the leveling process and during any play.

Lastly, using a carpenter's level and (4) leg levelers - level the table for best play.

Notice:

NOTE: Remove all billiard balls from the playfield pockets before rotating the billiards table.

BILLIARDS:

After the break, regardless of whether any balls were pocketed on the break, the table is Open, with the choice of stripes or solids determined by the next legally pocketed ball.

In the course of play, a player must call each shot in advance, by indicating the ball to be made and the pocket into which it will be made. It is not necessary to indicate details such as cushions, banks, caroms, etc. Failure to make the shot as called results in a loss of turn. If the shot is made as called, then any other balls pocketed remain pocketed. However, if the called shot is not made and any other balls are pocketed, then the shooter's ball(s) that were pocketed would be spotted and any of the opponent's balls would remain pocketed.

In order to execute a Legal Shot, the first ball hit must be one of the balls in the shooter's group (stripes or solids) and the object ball must be pocketed or the cue ball or any object ball must come into contact with a rail. (Note: It is legal for the shooter to bank the cue ball off a rail before hitting the object ball.) A player who legally pockets a ball continues play until missing or committing a Foul. Once a player's ball group (stripes or solids) is pocketed, the player may play the 8 ball. Again, the player must clearly indicate the intended pocket, even if it appears obvious. A player who legally pockets all of his ball group and the 8 ball is the winner.

FOULS

1. Failure to execute a legal shot as defined above.
2. A scratch shot (shooting the cue ball into a pocket or off the table)
3. Moving or touching any ball by means other than legal play.
4. Shooting an intentional jump shot over another ball by scooping the cue stick under the cue ball.
A jump shot executed by striking the cue ball above center is legal.
5. Using the 8 ball first in a combination shot when the table is not open.

HOCKEY: Plug in and turn on air motor to play. Turn off and unplug when not playing.

- 1) This game is designed to be played with two (2) players, one at each end.
- 2) Play begins when the puck is placed on the playing surface. Players must hit the puck with the hand-held pushers and attempt to shoot into the opponent's goal.
- 3) One point is given when a puck is shot into the opponent's goal.
- 4) Winning: the winning goal is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period.

Never allow cord to become a trip hazard.
Always unplg + store the air motor cord before rotating main cabinet.

Notice:

TABLE TENNIS:

In singles, the server first makes a good service and then the receiver makes a good return. Thereafter, server and receiver alternately each make a good return. In doubles, the server first makes a good service and the receiver returns the ball. Then the partner of the server makes a good return, followed by the partner of the receiver returning the ball. Thereafter, each player alternately in that sequence makes a good return.

Serving

After hitting it, the ball must first touch the server's own court and pass directly over the net or around the net assembly, then touching the receiver's court. In doubles, the ball must first touch the server's right half-court or center line, pass over the net, and then touch the receiver's right half-court or center line. If, in attempting to serve, a player fails to strike the ball while it is in play, he loses a point. Return After the ball is served or returned in play, it is struck so that it passes directly over the net and its assembly and touches the opponent's court. A returned ball which touches the net or its supports on the way over to the other side, is considered a good return. The ball is in play from the last moment at which it is stationary on the palm of the server's free hand before being projected in service until:

- a point is scored.
- it touches the same court twice consecutively.
- it has been volleyed.
- it touches a player, or anything he wears or carries, other than his racket or his racket hand below his wrist.
- it touches any object other than the net or its support (referred to above).
- it is struck by a player more than once consecutively.
- it touches, in a doubles service, the left half-court of the server or receiver.
- it is struck, in doubles, by a player out of sequence, except where there has been a genuine error in playing order.
- **Always remove and store the table tennis playfields before rotating the main cabinet.**

Congratulations! You have now assembled your Swivel Table. Please note the Care and Use instructions below to ensure many years of trouble free use of your Swivel Table.

CARE AND USE OF YOUR SWIVEL TABLE

1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
2. For long life and best play from your swivel table, apply spray furniture polish to clean cloth and wipe down the hockey playfield with air motor running to make the pucks slide faster before first play and frequently thereafter.
3. Use spray furniture polish to clean all exterior surfaces of your game table.
4. Use the Billiards Playfield brush provided to clean the cloth on the billiards table.
5. Use a carpenters level to properly level table using the leg levelers.
6. This product is intended for **INDOOR** use only.
7. **DO NOT** operate the air motor if the cord is damaged in any way.
8. **DO NOT** sit, climb or lean on the table.
9. **DO NOT** drag the table when moving it. This will damage the legs.
10. **DO NOT** set drinks on the table.
11. It is suggested that this table be placed close to a wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.
12. If possible, cover table with a pool table cover or sheet when not used to keep playfield clean preventing any dust build up.
13. Clean the table tennis playfield with a soft, slightly damp (water) cloth.
Do not use furniture polish.

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking, weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

KEY#	PART#	DESCRIPTION	QTY
1	AL6069WJ1	Cabinet- Billards	1
2	AL6069WJ2	Playfield-Hockey with air motor	1
3	AL6069WJ3	Leg Top End Panel	2
4	AL6069WJ4	Puck Catcher Box	2
5	AL6069WJ5	Latch/ Lock	4
6	AL6069WJ6	End Panel Support Board	2
7	AL6069WJ7	Ball Storage Board	2
8	AL6069WJ8	Steel L-Bracket	4
9	AL6069WJ9	Right Leg	2
10	AL6069WJ10	Left Leg	2
11	AL6069WJ11	Leg Panel	4
12	AL6069WJ12	Leg Base Board	4
13-R	AL6069WJ13R	Outside Apron- End Board	4
14-R	AL6069WJ14R	Outside Lower Apron with LED light strips+battery box	2
15	AL6069WJ15	Top End Panel	2
16	AL6069WJ16	Table Tennis End Playfield	2
17	AL6069WJ17	Table Tennis Middle Playfield	1
18	AL6069WJ18	1-1/4"Phillips Washer Head Screw	20
19	AL6069WJ19	3/4" Phillips Flat Head Screw	16
20	AL6069WJ20	1-3/4" Phillips Flat Head Screw	74
21	AL6069WJ21	1/2" Phillips Round Head Screw	8
22	AL6069WJ22	5/16" * 1-1/2"Allen Head Bolt	16
23	AL6069WJ23	20mm Hex Bolt (Pilot bolt)	2
24	AL6069WJ24	20mm Pivot Washer	4
25	AL6069WJ25	5/16"*19mm Washer	16
26	AL6069WJ26	Leg Leveler	4
27	AL6069WJ27	Wood Glue	1
28	AL6069WJ28	For Pivot Bolts Wrench	1
29	AL6069WJ29	Tennis Top- Support	2
30	AL6069WJ30	Billiard Balls	1
31	AL6069WJ31	Cue Stick	2
32	AL6069WJ32	Triangle	1
33	AL6069WJ33	Chalk	2
34	AL6069WJ34	Pool Playfield Brush	1
35	AL6069WJ35	Hockey Striker	2
36	AL6069WJ36	Hockey Striker Felt Pad	2
37	AL6069WJ37	Hockey Puck	2
38	AL6069WJ38	Table Tennis Net Post	2
39	AL6069WJ39	Table Tennis Net	1
40	AL6069WJ40	Table Tennis Paddle	2
41	AL6069WJ41	Table Tennis Ball	2
42	AL6069WJ42	Plastic Rub Strip	4
43	AL6069WJ43	3/4" Phillips Round Head Screw	8
44	AL6069WJ44	End Panel Inner Cushion	4
45	AL6069WJ45	20mm Plastic Washer	2
46	AL6069WJ46	Table Tennis Top Cushion	12
47	AL6069WJ47	Allen Wrench	1
48	AL6069WJ48	Cord Holder	1

KEY#	PART#	DESCRIPTION	QTY
49	AL6069WJ49	TT playfield holder board	2
50	AL6069WJ50	TT playfield holder support board	2
51	AL6069WJ51	TT holder connector Block	4
52	AL6069WJ52	1-3/4" Phillips Washer Head Screw	12
53	AL6069WJ53	1/4"*1" Allen key bolt	8
54	AL6069WJ54	1/4"*19mm Washer	8
55	AL6069WJ55	1/2"*9mm Lock Washer	8
56	AL6069WJ56	13/32"*7mm Lock Washer	8

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.