




BEST CHOICE
PRODUCTS

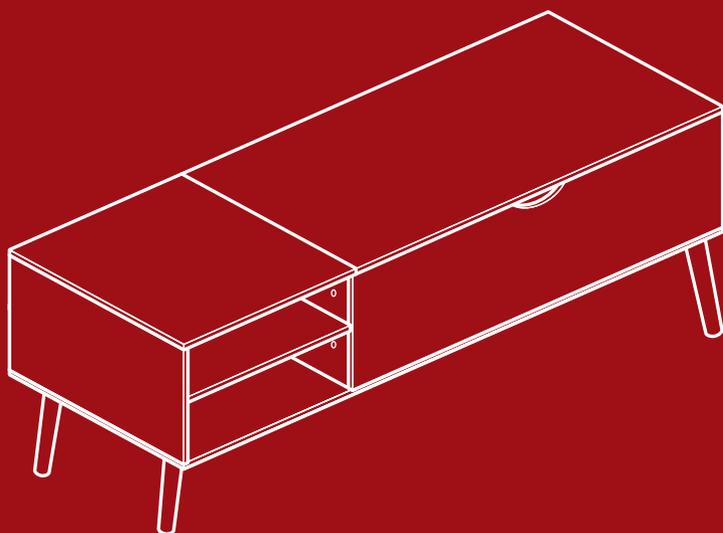

INSTRUCTION MANUAL

Lift Top Coffee Table



**BEST CHOICE
PRODUCTS**

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —



24 LBS
FIXED TABLE
CAPACITY



55 LBS (CLOSED)
MAIN TABLE
CAPACITY



33 LBS (OPEN)
MAIN TABLE
CAPACITY



2 PERSON
ASSEMBLY



UP TO 45 MIN.
ASSEMBLY

! NOTICE

Please retain these instructions for future reference.

- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Always lay components on a clean, soft-cushioned surface during assembly.
- Improper installation may cause damage to the product.
- Product is intended for indoor use only.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- To wipe down the furniture, use a damp cloth. Then, wipe it down once more with a dry cloth.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Be aware that extra hardware may be included.
- This product is intended for residential use only.

 
TOOLS REQUIRED



WRENCH
(PROVIDED)



PHILLIPS
SCREWDRIVER



DRILL
(RECOMENDED)

HARDWARE

1 M6 x 35mm
CAM BOLT



12 PCS

2 M12 x 10mm
CAM LOCK



12 PCS

3 M6 x 30mm
DOWEL



22 PCS

4 M4 x 35mm
SCREW



10 PCS

5 LEG
MOUNTING
PLATE



4 PCS

6 M4 x 14mm
SCREW



20 PCS

7 LEFT TABLE
HINGE







1 PC

8 RIGHT TABLE
HINGE












1 PC

HARDWARE

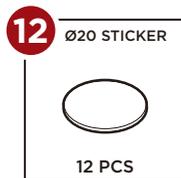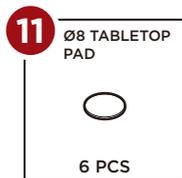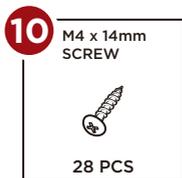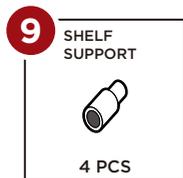

PARTS

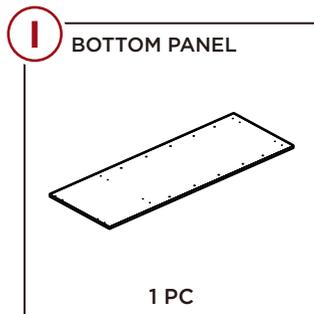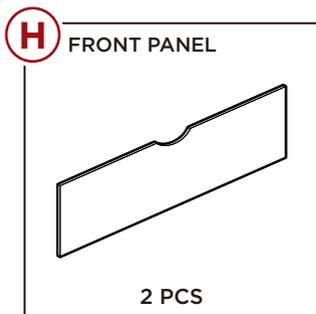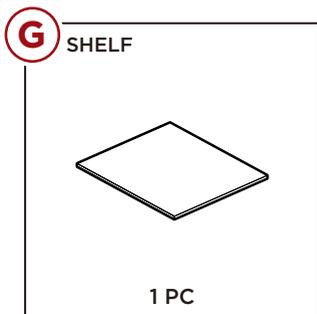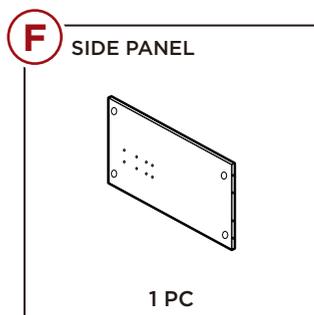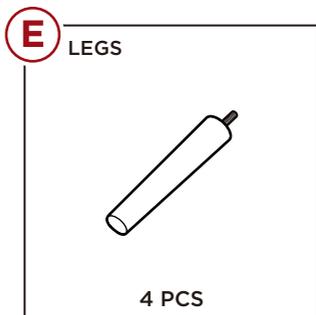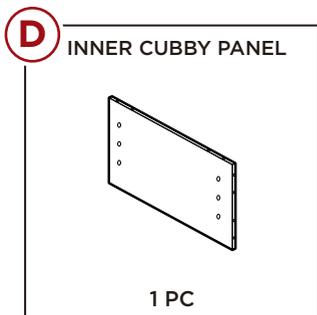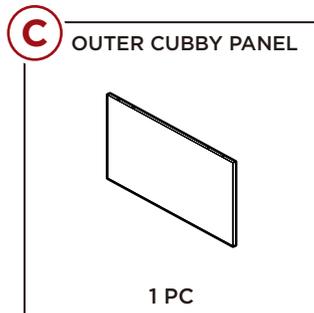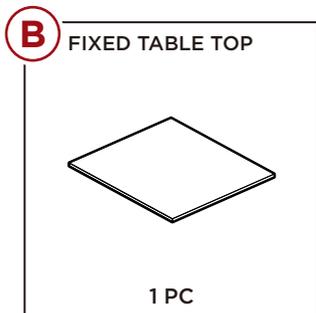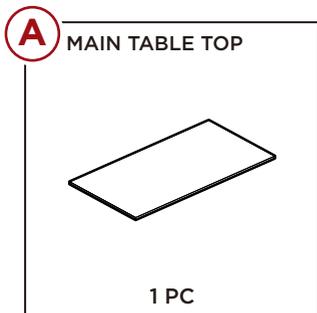


PRODUCT ASSEMBLY

1

Insert two **part 2 cam locks** into the **part D inner cubby panel** and **part F side panel**. Four locks total.

Locate the **part H front panel** and insert four **part 1 cam bolts**, and four **part 3 dowels**. Attach the **part D & F panels** to the **part H front panel**, then turn the cam locks to secure.

Once secured, place four **part 12 stickers** over the cam locks.

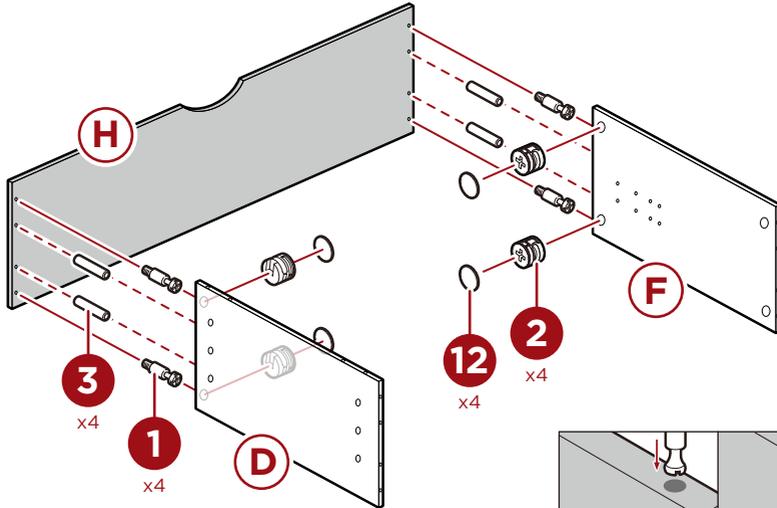



2

Locate another **part H front panel** and insert four **part 1 cam bolts**, and four **part 3 dowels**.

Insert the two **part 2 cam locks** into the **part D inner cubby panel** and **part F side panel**. Four locks total.

Attach the **part D & F panels** to the **part H front panel**, then turn the cam locks to secure.

Once secured, place four **part 12 stickers** over the cam locks.

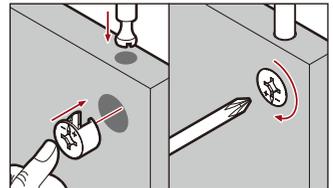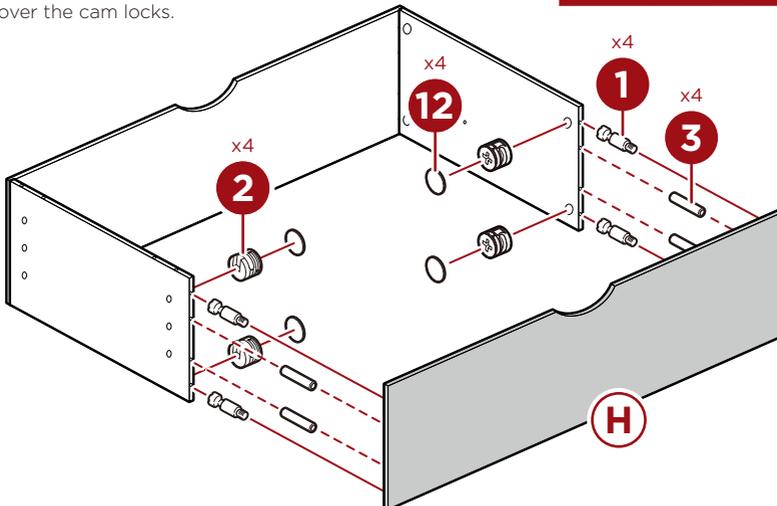


Use a screwdriver to turn the cam lock to secure the cam bolt.

PRODUCT ASSEMBLY

3

Flip the panel assembly upside down, then insert eight **part 3** dowels into the **part D, E, F,** and **H panels**, two dowels per panel.


Press the **part I bottom panel** onto the panel assembly, then secure with eight **part 4** screws.

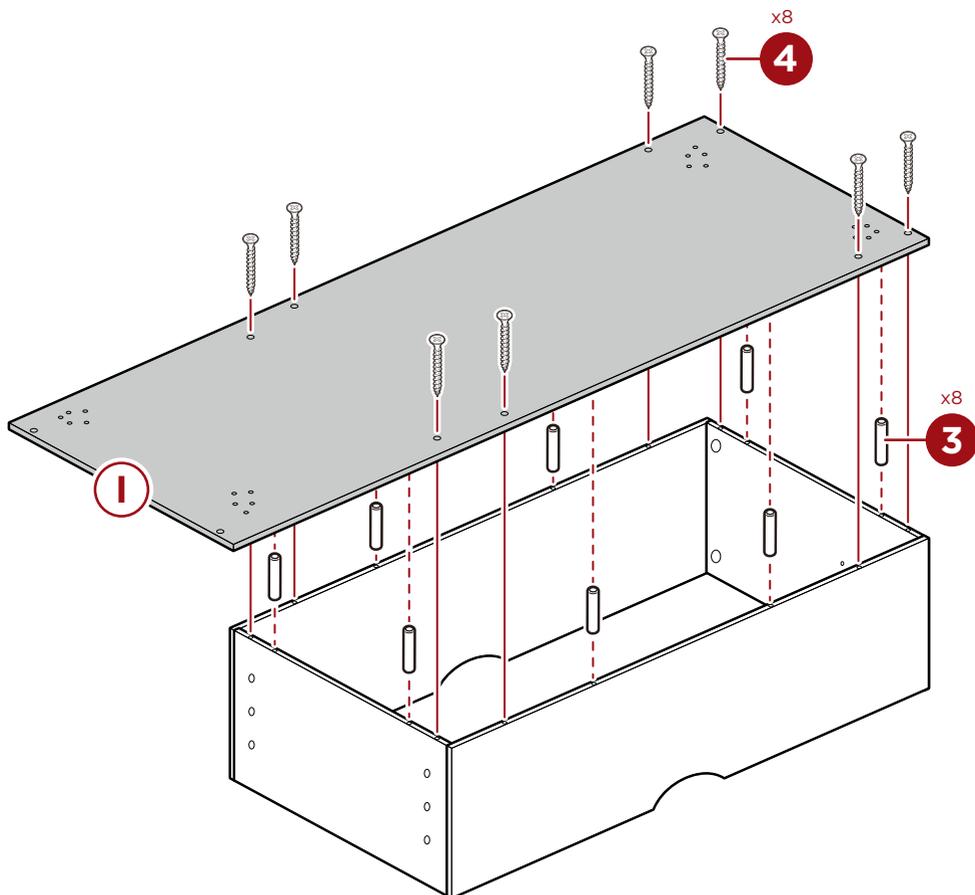

PRODUCT ASSEMBLY


4

Flip the panel assembly upright, then insert two **part 3 dowels** into the **part I bottom panel**. Attach the **part C outer cubby panel** to the **part I bottom panel**, then secure with two **part 4 screws**.

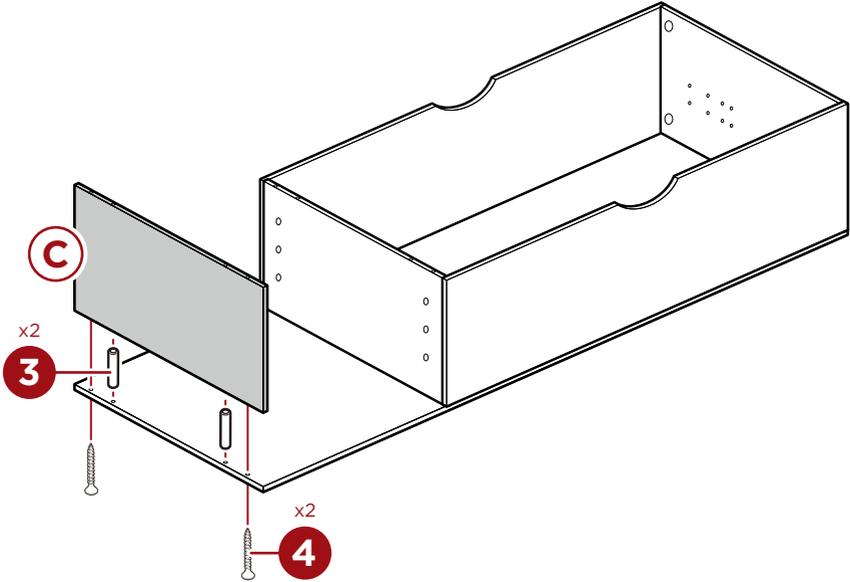

5


Flip the panel assembly upside down, then attach four **part 5 leg mounting plates** to the **part I bottom panel** with twenty **part 6 screws**.

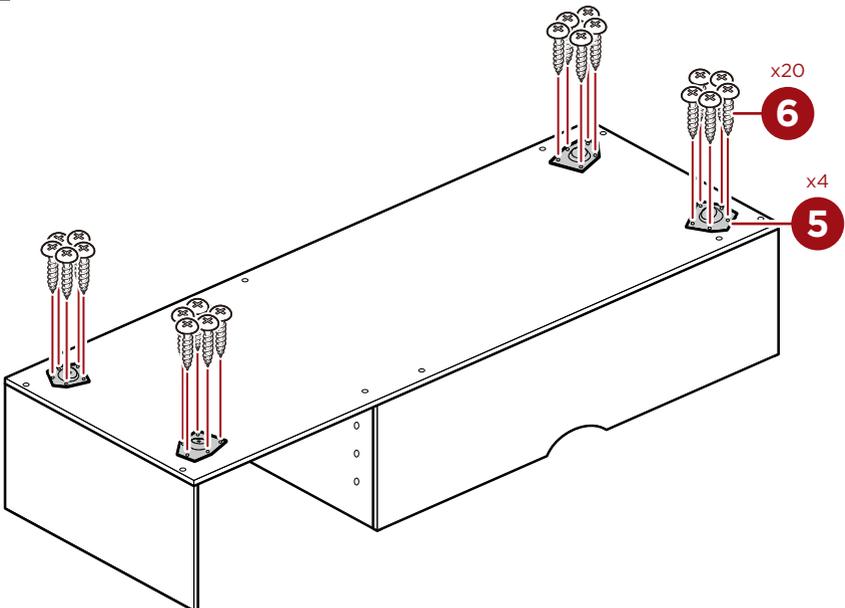

PRODUCT ASSEMBLY

6

Screw the four **part E** legs into the **part 5** mounting plate, twist until secure. Flip the assembly upright.

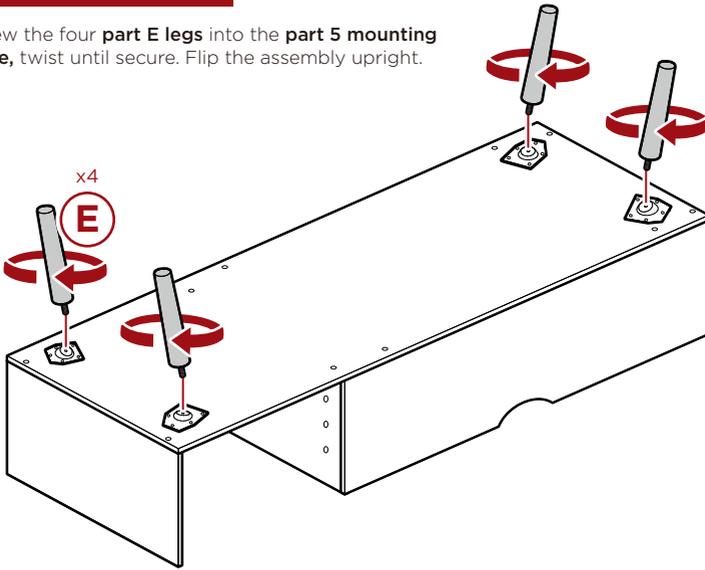


7

Insert four **part 2** cam locks into the **part C** and **D** cubby panels, two locks per panel.

Insert four **part 3** dowels into the **part C** and **D** cubby panels, two dowels per panel.

Insert four **part 1** cam bolts into the **part B** fixed tabletop, then attach the tabletop to the two cubby panels. Turn the cam locks to secure.

Once secured, place four **part 12** stickers over the cam locks. Place two **part 11** table top pads onto the **part F** side panel, then two more on each front panel, six pads total.

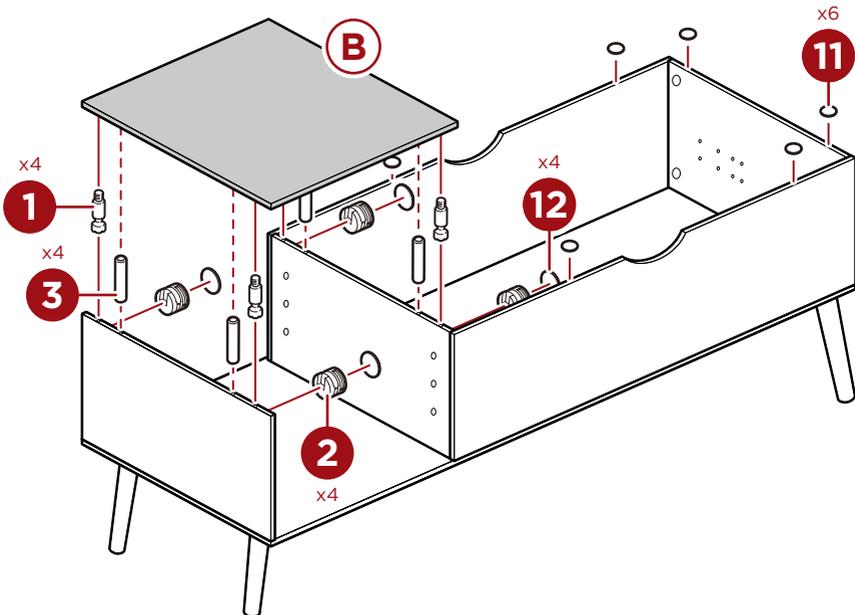



To prevent an excessive gap between the fixed and main table tops, please perform the following:




PRODUCT ASSEMBLY

8

Loosely attach the **part 7 & 8 table hinges** to the **part A main table top** with twelve **part 10 screws**.

Use the included wrench to remove the nuts from the **part 7 & 8 hinges**.

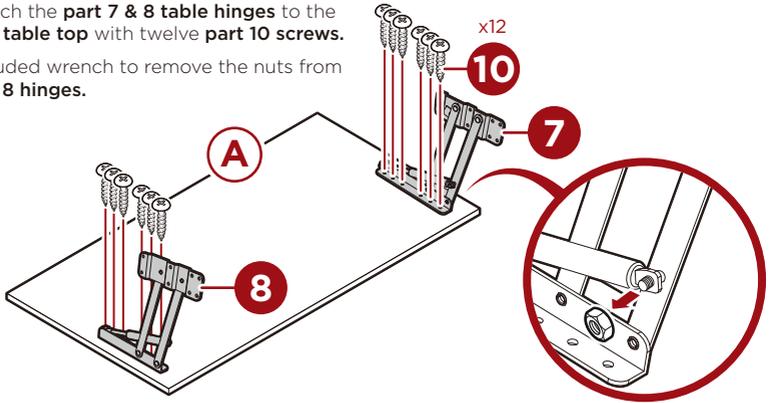


9

Flip the table top assembly upright, then insert the **part 7 & 8 hinges** into the table recess.

Attach the **part 7 left table hinge** to the **part F side panel** and the **part 8 right table hinge** to the **part D inner cubby panel** with sixteen **part 10 screws**, eight screws per hinge. Make sure the hinges are fully extended.

Gently push the **part A main table top** from side to side until it sits evenly beside the **part B fixed table top**. Lower the tabletop to and adjust as needed, then tighten the screws on the bottom of the table top to secure.


Reattach the removed nuts to the hinges.

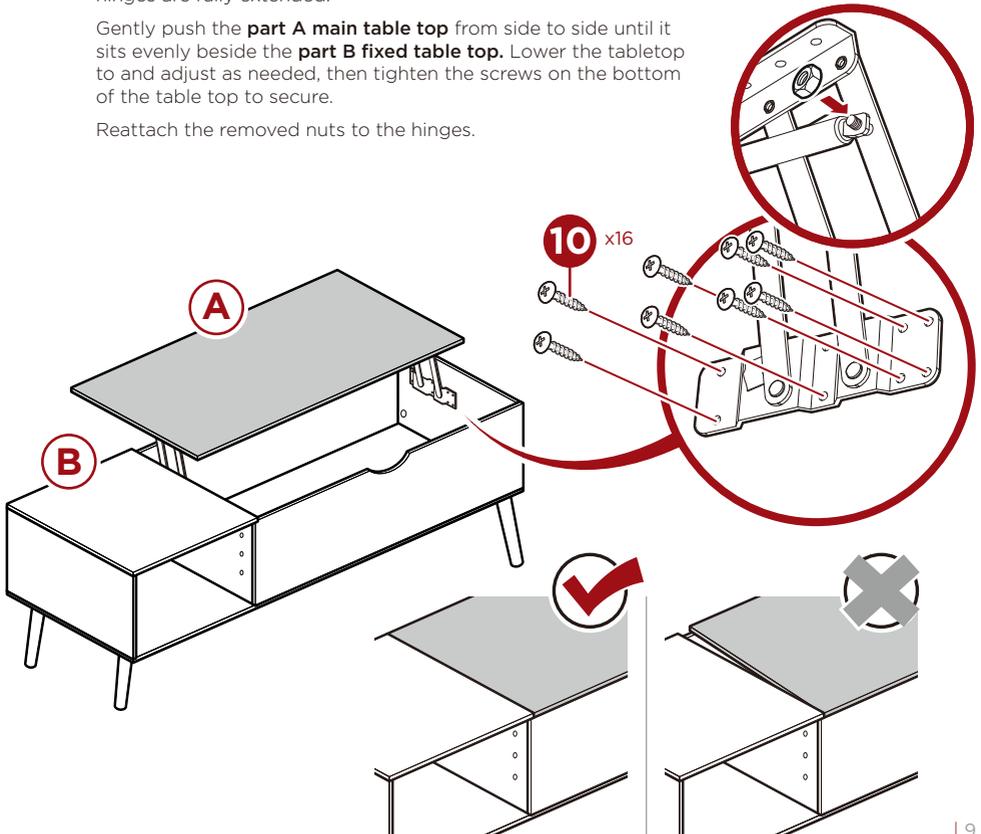

PRODUCT ASSEMBLY

10

Insert four **part 9 shelf supports** into the **part C & D cubby panels**. Two supports per panel.
Insert the **part G shelf**.

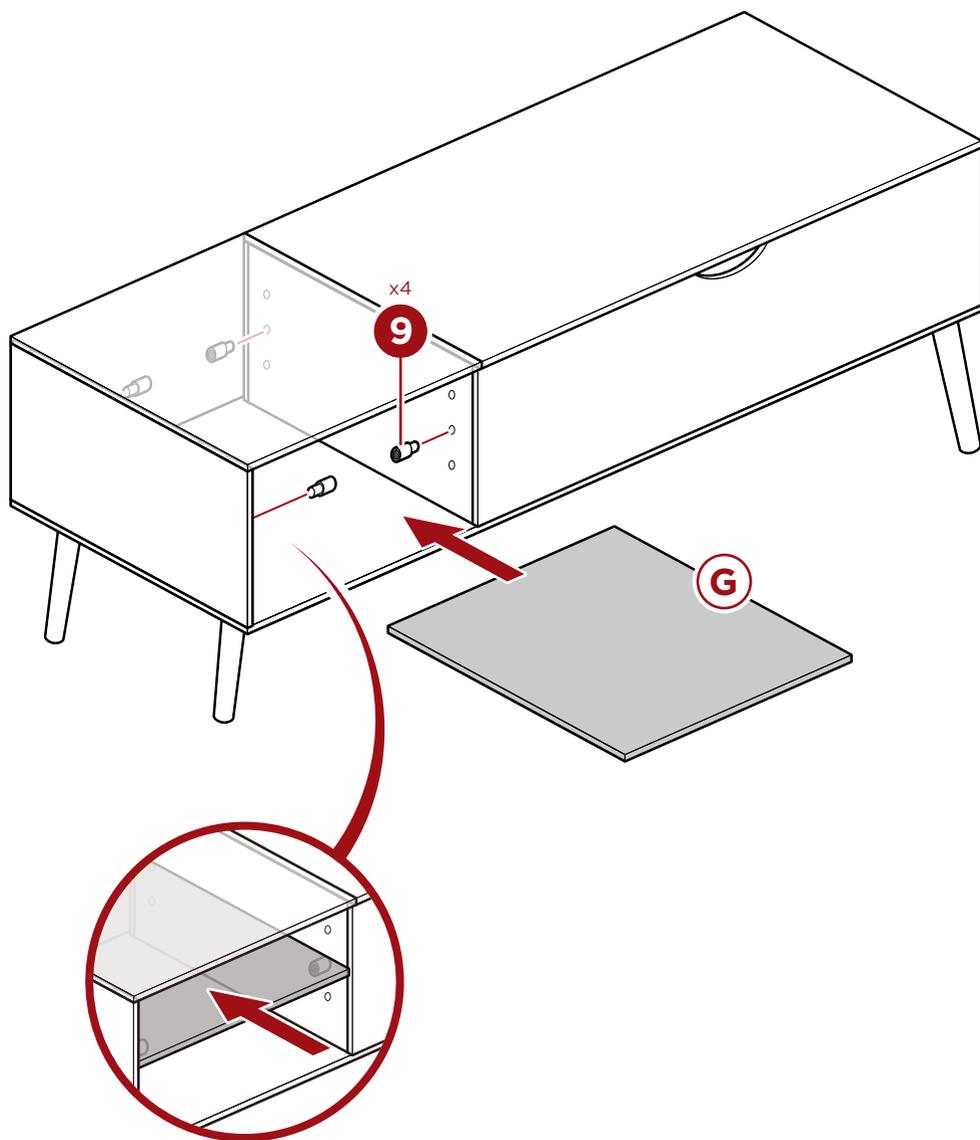

Earn points while you shop. Join today!

bestchoiceproducts
rewards

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.