 




BEST CHOICE
PRODUCTS

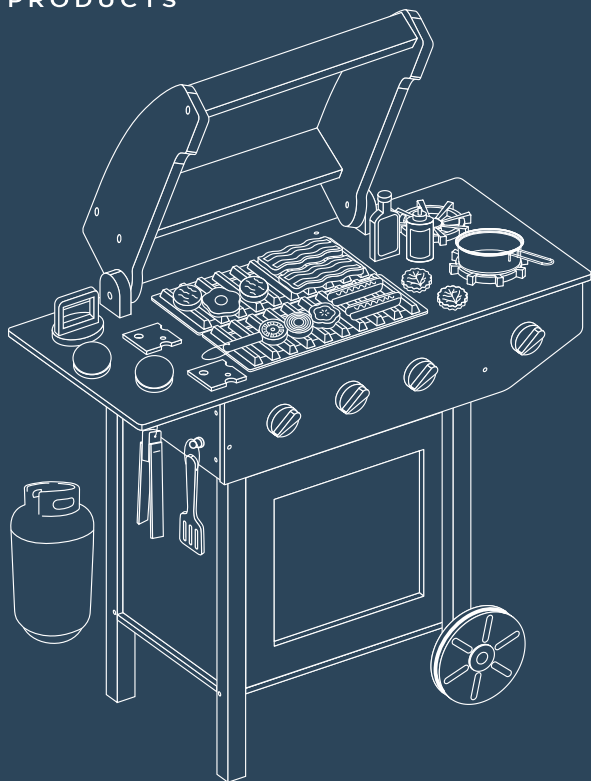

INSTRUCTION MANUAL

BBQ Grill Pretend Play Set
with Food Accessories

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.









ⓘ NOTICE | Please retain these instructions for future reference.











- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush, and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED









       
 
 
 
 
 
 
 
 
 
 
 
HARDWARE & ACCESSORIES

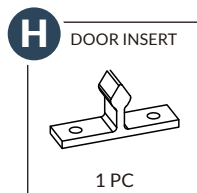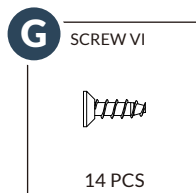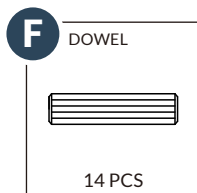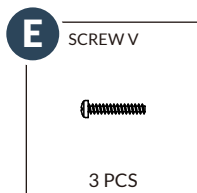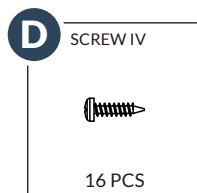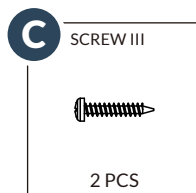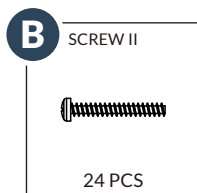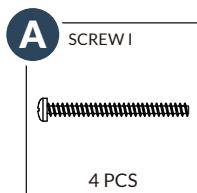


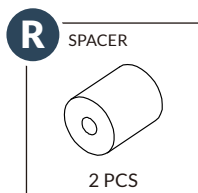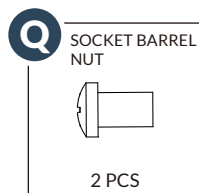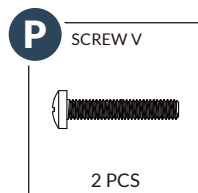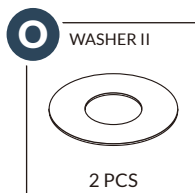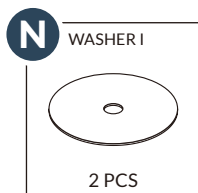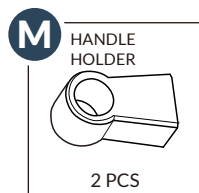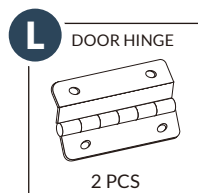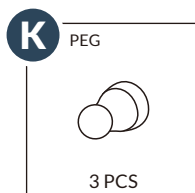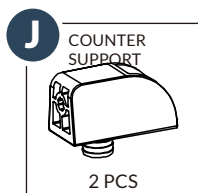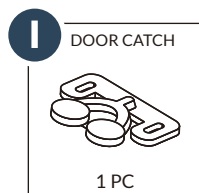

PARTS

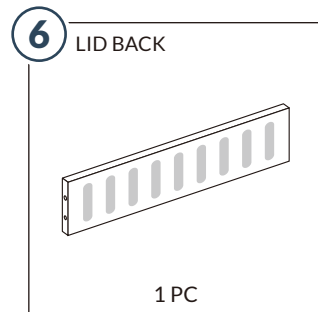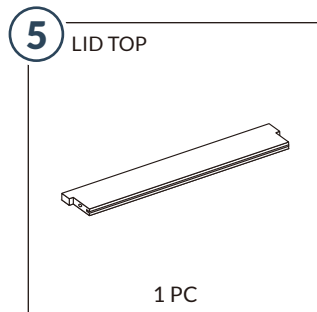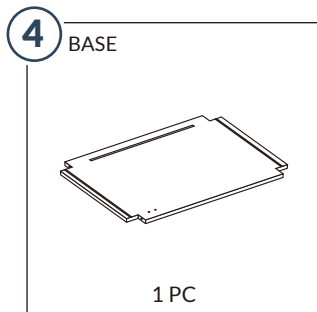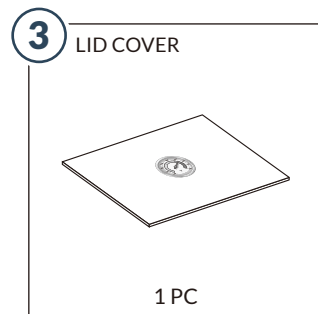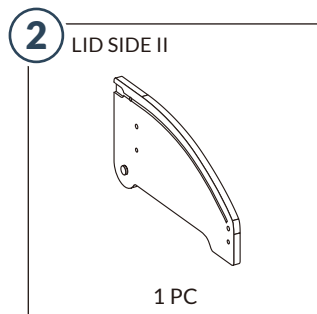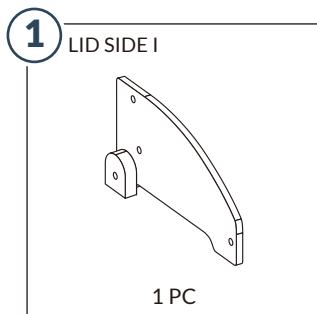      

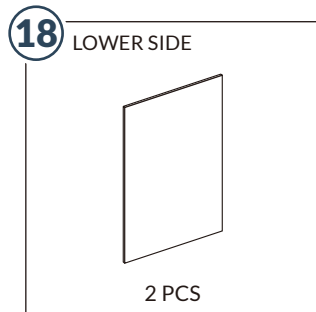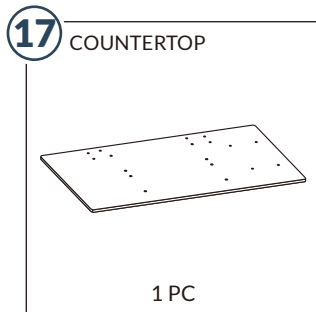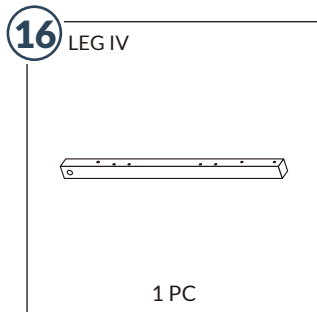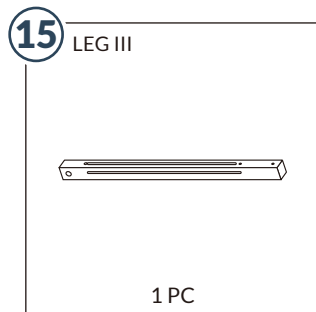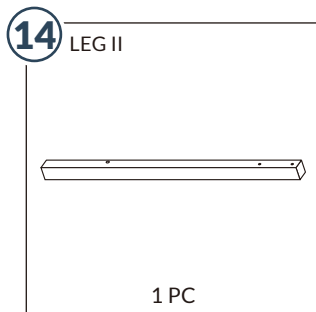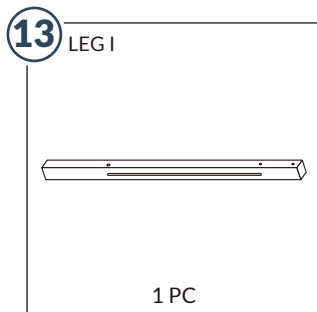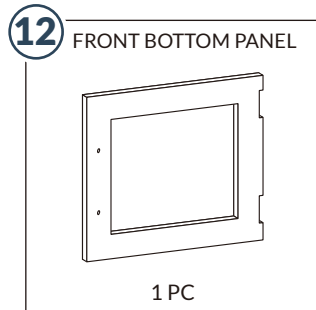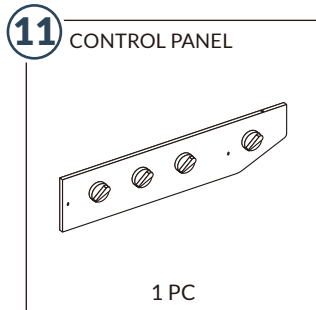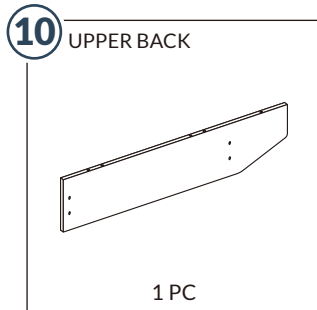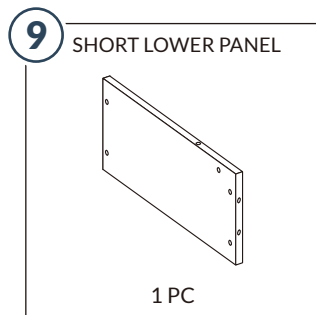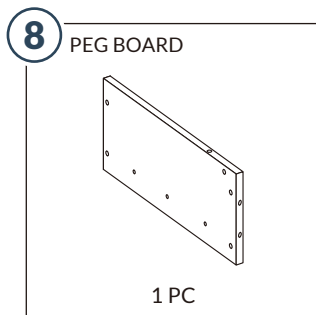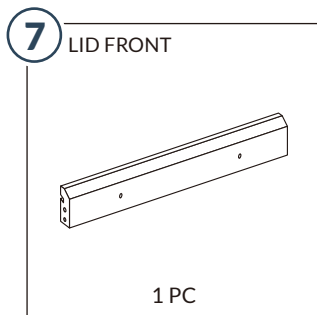            


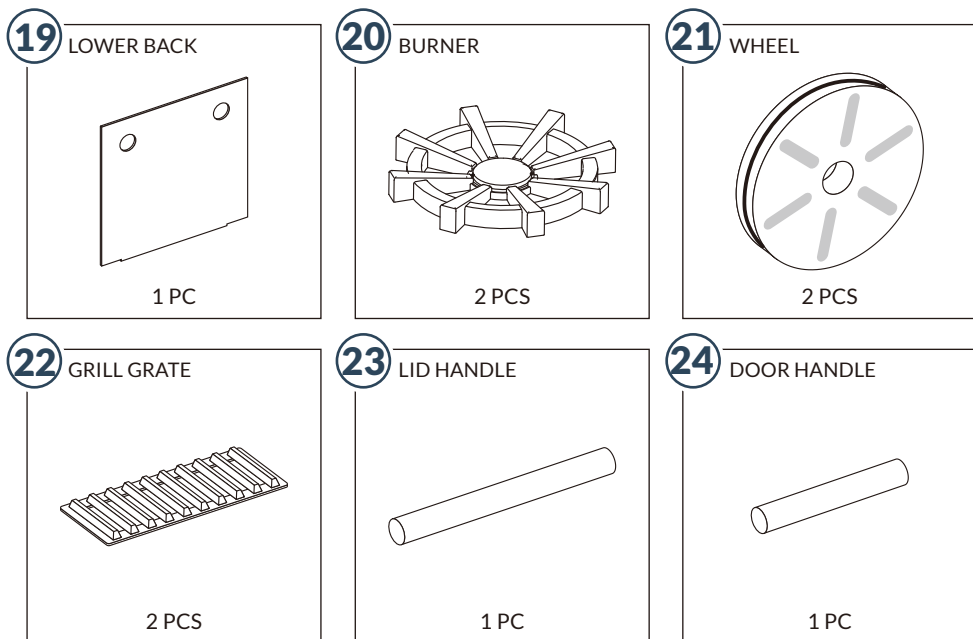 



PRODUCT ASSEMBLY

- 1** | Attach one **part I** door catch to the **part 4** base with two **part G** screws.

 Attach the **part 13** leg to the **part 4** base with one **part A** screws.

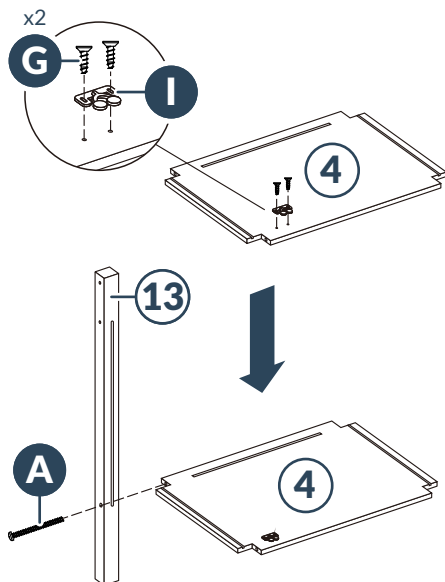

- 2** | Insert the **part 19** lower back into the **part 13** leg, then slide the back downward to connect to the **part 4** base.

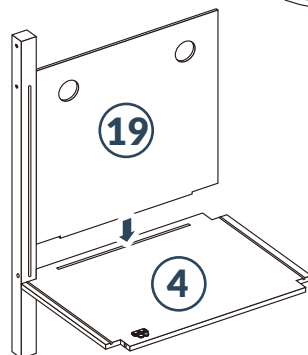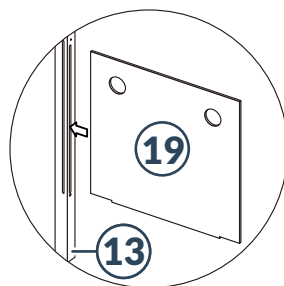  


PRODUCT ASSEMBLY

3

Attach the **part 21 wheel** to the **part 15 leg** with one **part N washer**, one **part R spacer**, and one **part O washer**.

 
Secure the wheel with one **part P screw** and one **part Q socket barrel nut**.

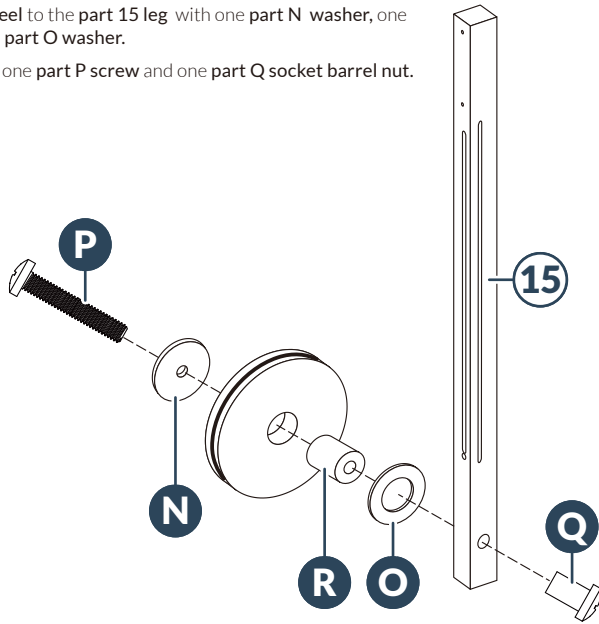


4

Attach the **part 21 wheel** to the **part 16 leg** with one **part N washer**, one **part R spacer**, and one **part O washer**.

 
Secure the wheel with one **part P screw** and one **part Q socket barrel nut**.

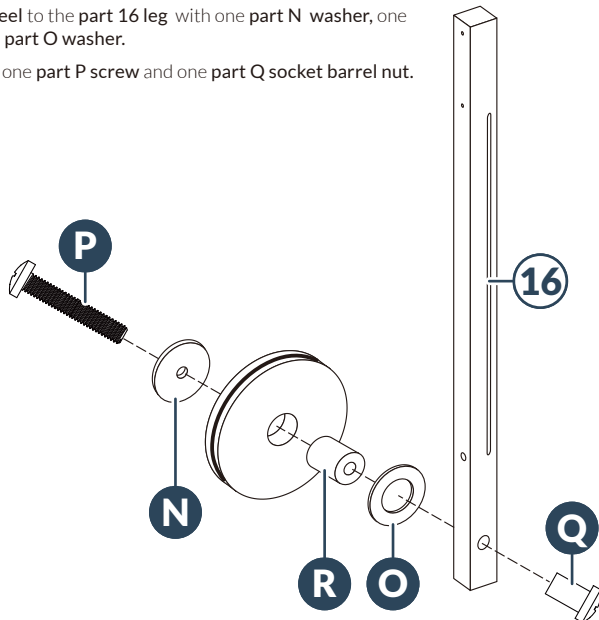


- 5** | Attach the **part 15 leg** to the base assembly with one **part A screw**.

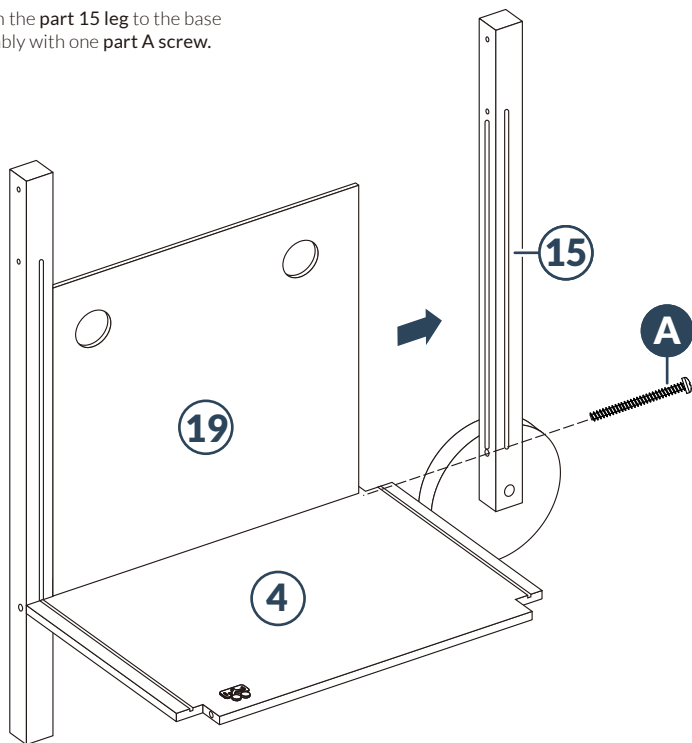 


- 6** | Insert two **part 18 lower sides** into the legs and base.

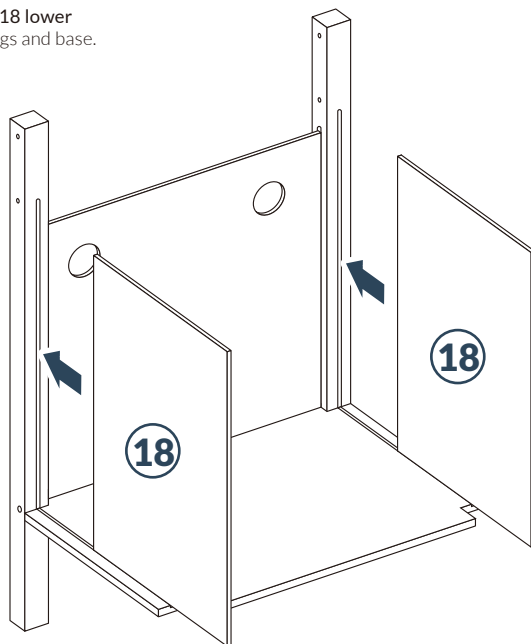 


- 7** | Attach **part 14 & 16 legs** with two **part A screws**, one screw per leg.

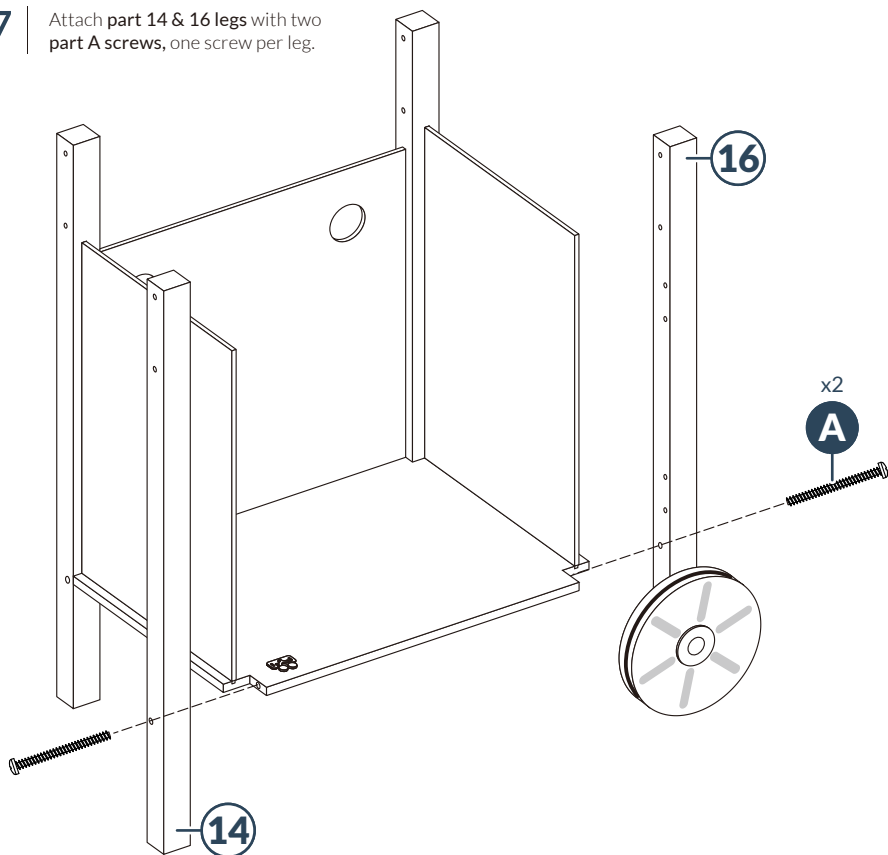 


- 8** | Attach three **part K pegs** to **part 8 peg board** with three **part E screws**.

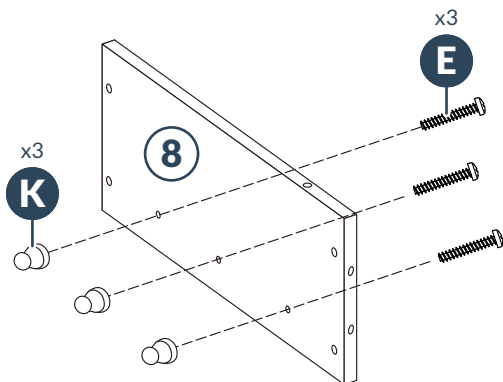 


- 9** | Attach the **part 8** peg board to the **part 13 & 14** legs with four **part B** screws, two screws per leg.

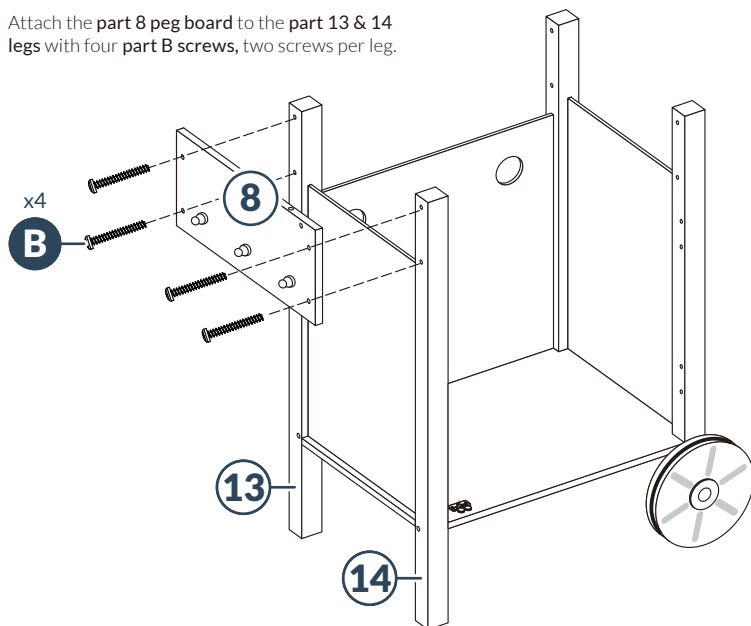 


- 10** | Attach the **part 9** upper side to the **part 15 & 16** legs with four **part B** screws, two screws per leg.

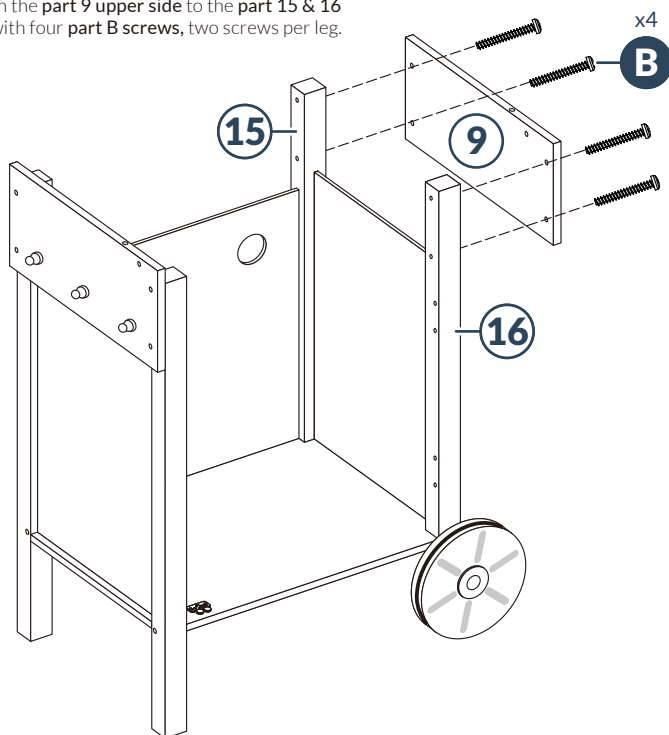 

- 11** | Insert two **part F** dowels to **part 8 & 9** upper sides, then attach the **part 11** control panel with two **part B** screws.

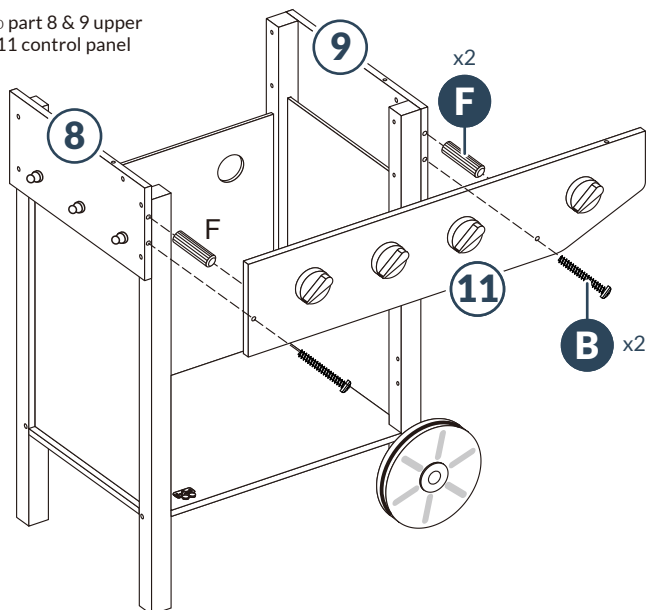 


- 12** | Insert two **part F** dowels to **part 8 & 9** upper sides, then attach the **part 10** upper back with two **part B** screws.

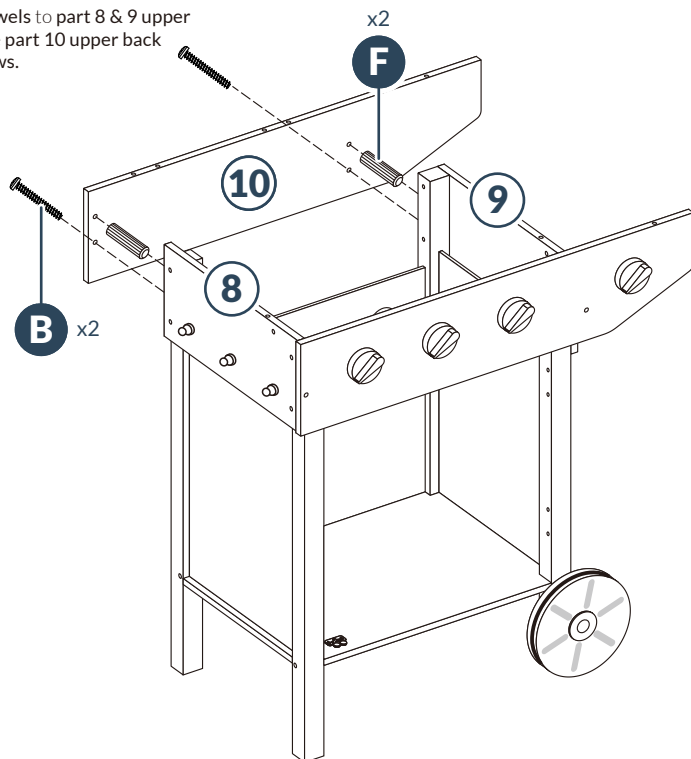 

13


Attach two **part M** handle holders to the **part 23** lid handle. Attach the handle assembly to the **part 7** lid front with two **part C** screws.

 Insert two **part F** dowels to the **part 1** lid side, then attach the **part 6** lid back and **part 7** lid front with two **part B** screws.

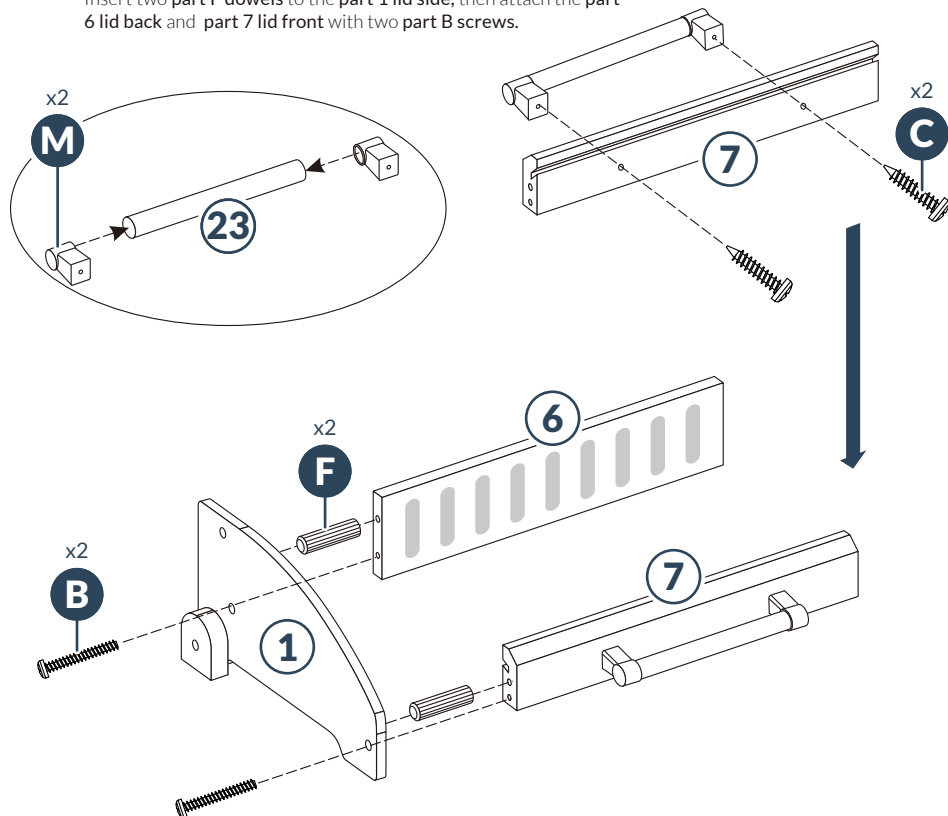


14

 
Insert two **part F** dowels to the **part 6** lid back and **part 7** lid front, then attach the **part 2** lid side with two **part B** screws.

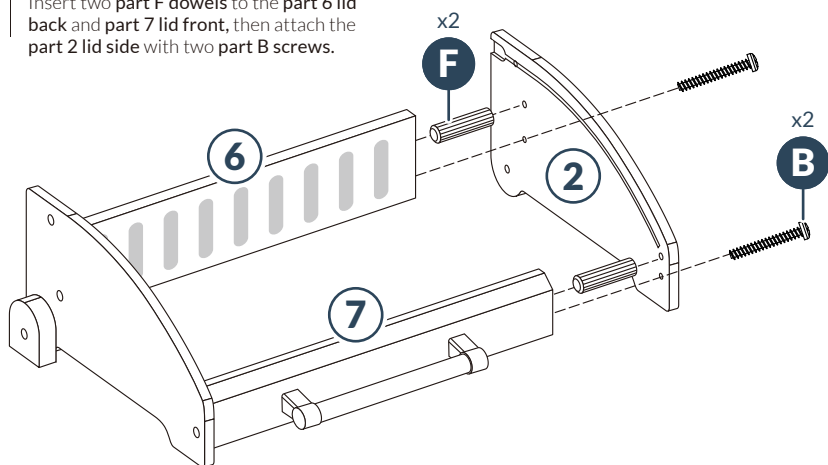

- 15** | Slide the **part 3 lid cover** into their designated grooves between the **part 1 & 2 lid sides**.

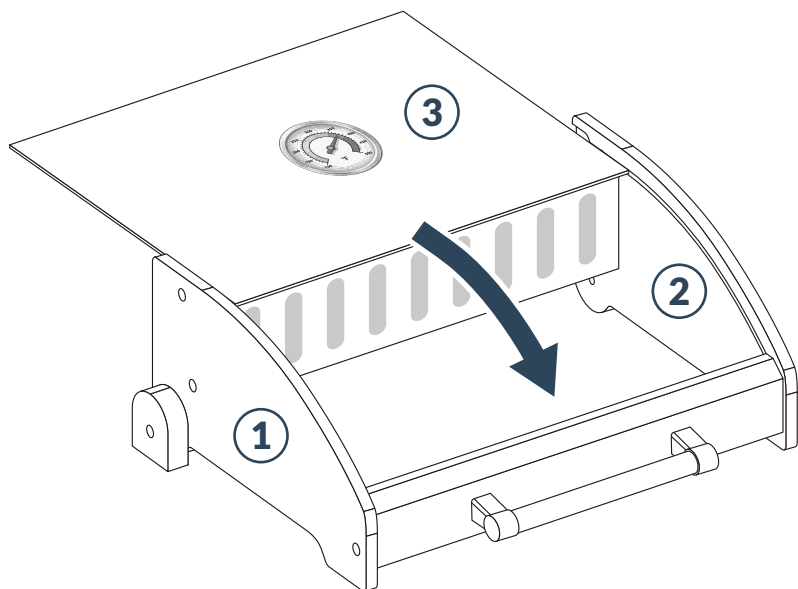 


- 16** | Slide the **part 5 lid top** into their designated grooves between the **part 1 & 2 lid sides**.

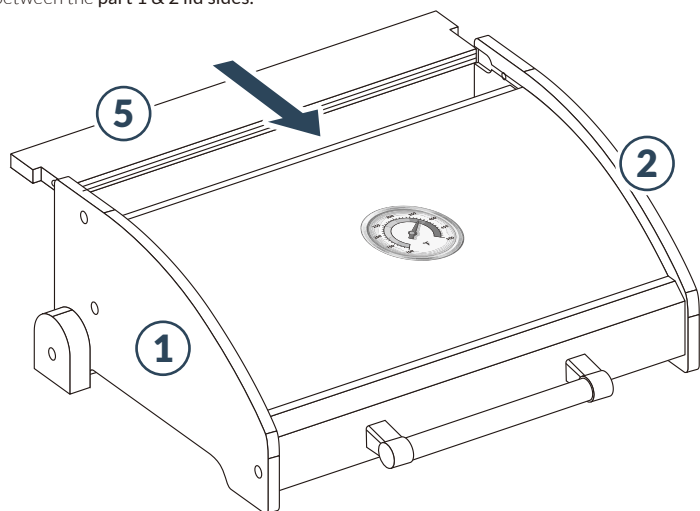 


17

 Secure **part 1 & 2 lid sides** with two **part B** screws, one screw per side.

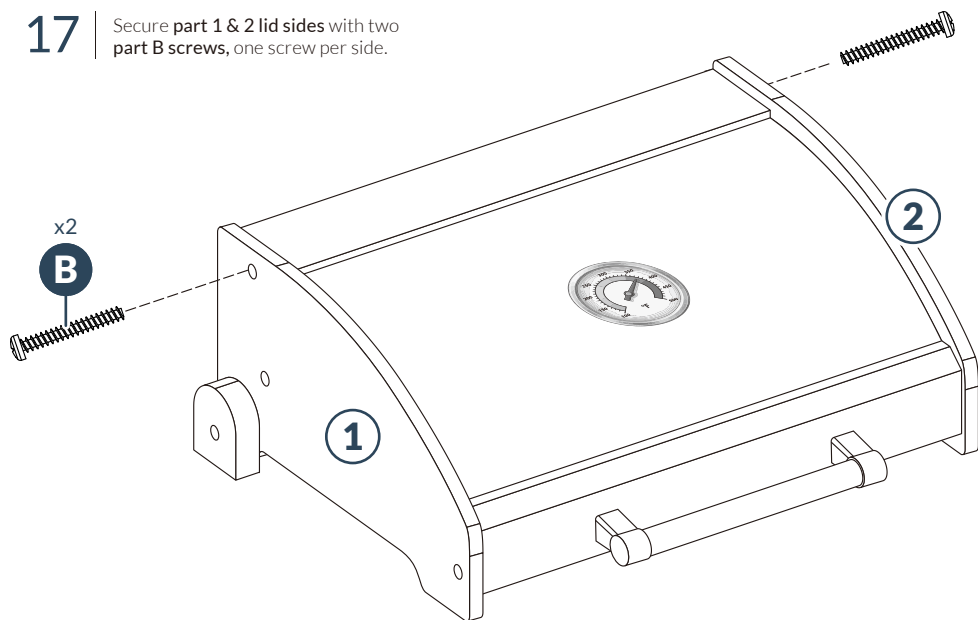


18

 Hammer two **part J** counter support into **part 17** countertop, then secure with two **part G** screws.

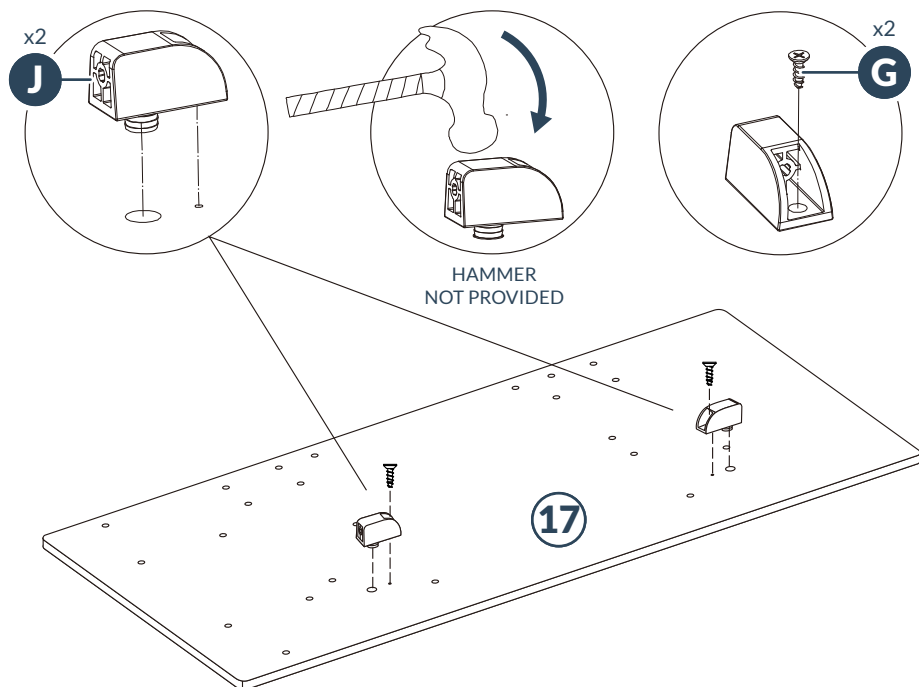


19

 Flip the **part 17 countertop** and attach two **part 22 grill grates** with eight **part D screws**, four screw per grate.

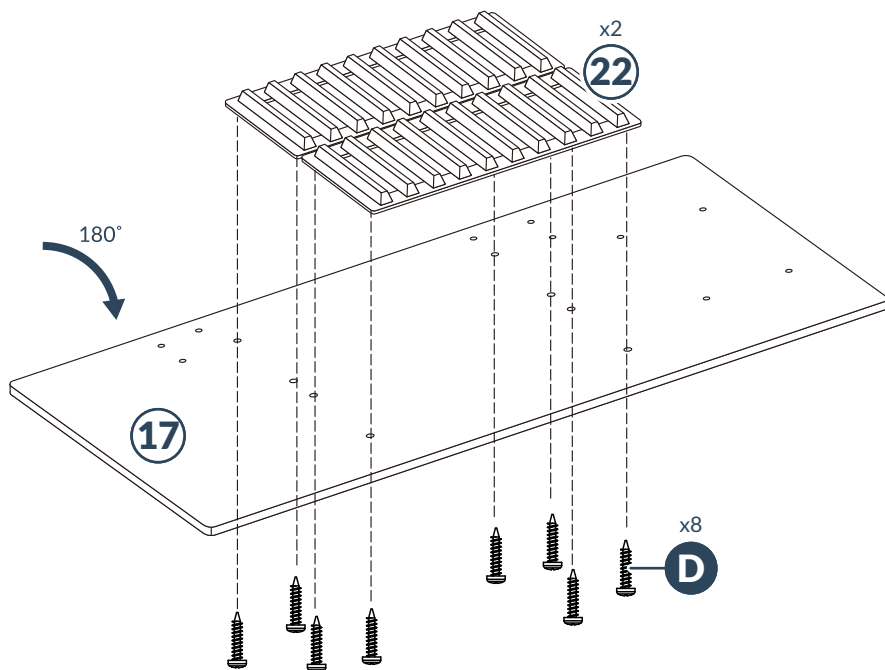


20

 Attach two **part 20 burners** to the **part 17 countertop** with four **part D screws**, two per burner.

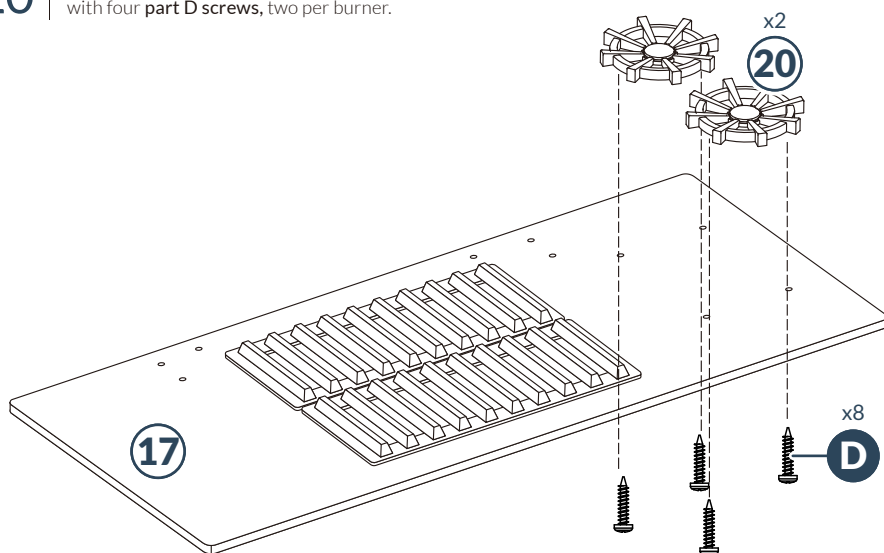

21

 Attach the lid assembly to the **part 17** countertop with four **part B** screws.

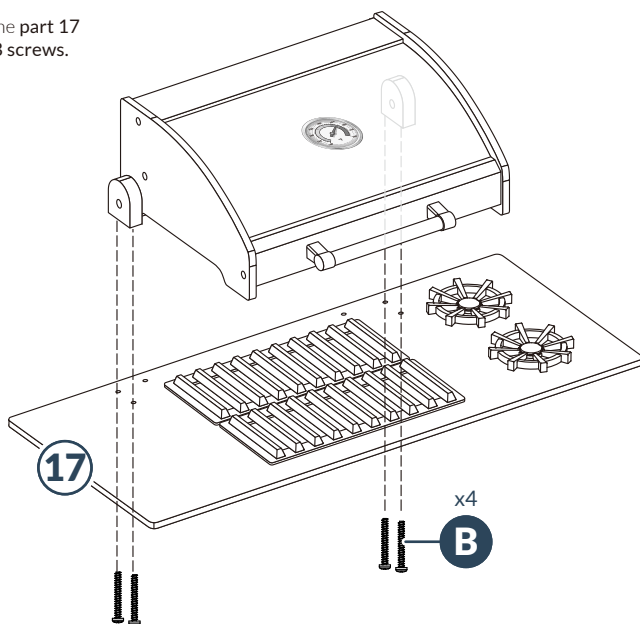


22

Attach two **part L** door hinges to the **part 12** door with four **part G** screws, two screws per hinge.

Attach one **part H** door insert to the **part 12** door with two **part G** screws.

 Attach the **part 24** door handle to the **part 12** door with two **part D** screws.

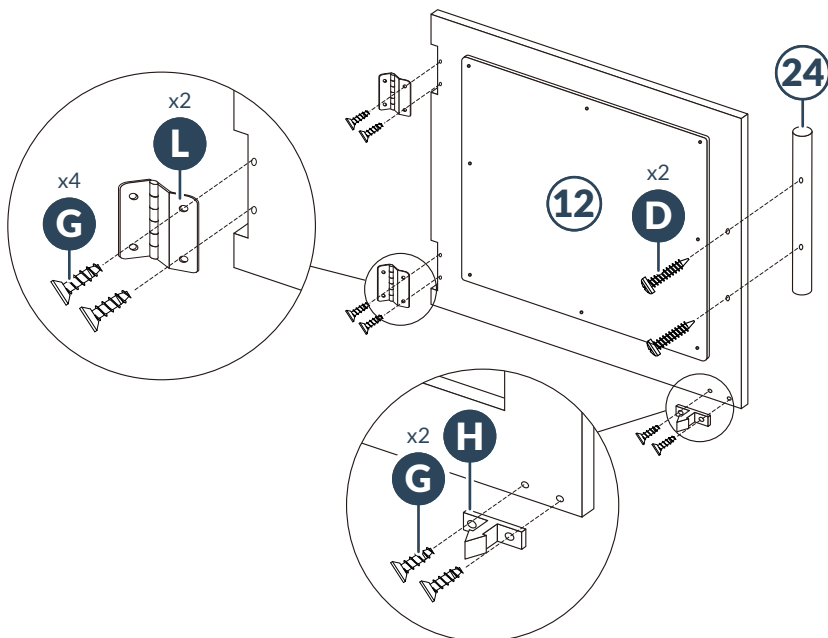


23

Insert one **part F** dowel each into the top of **part 8 & 9** upper sides and **part 11** control panel.


Insert three **part F** dowels into the top of **part 10** upper back.

Attach the **part 17** countertop to the lower cabinet assembly, then secure it with two **part C** screws.

 NOTE: Make sure to align the opening with the **part J** counter supports before securing the **part C** screws.

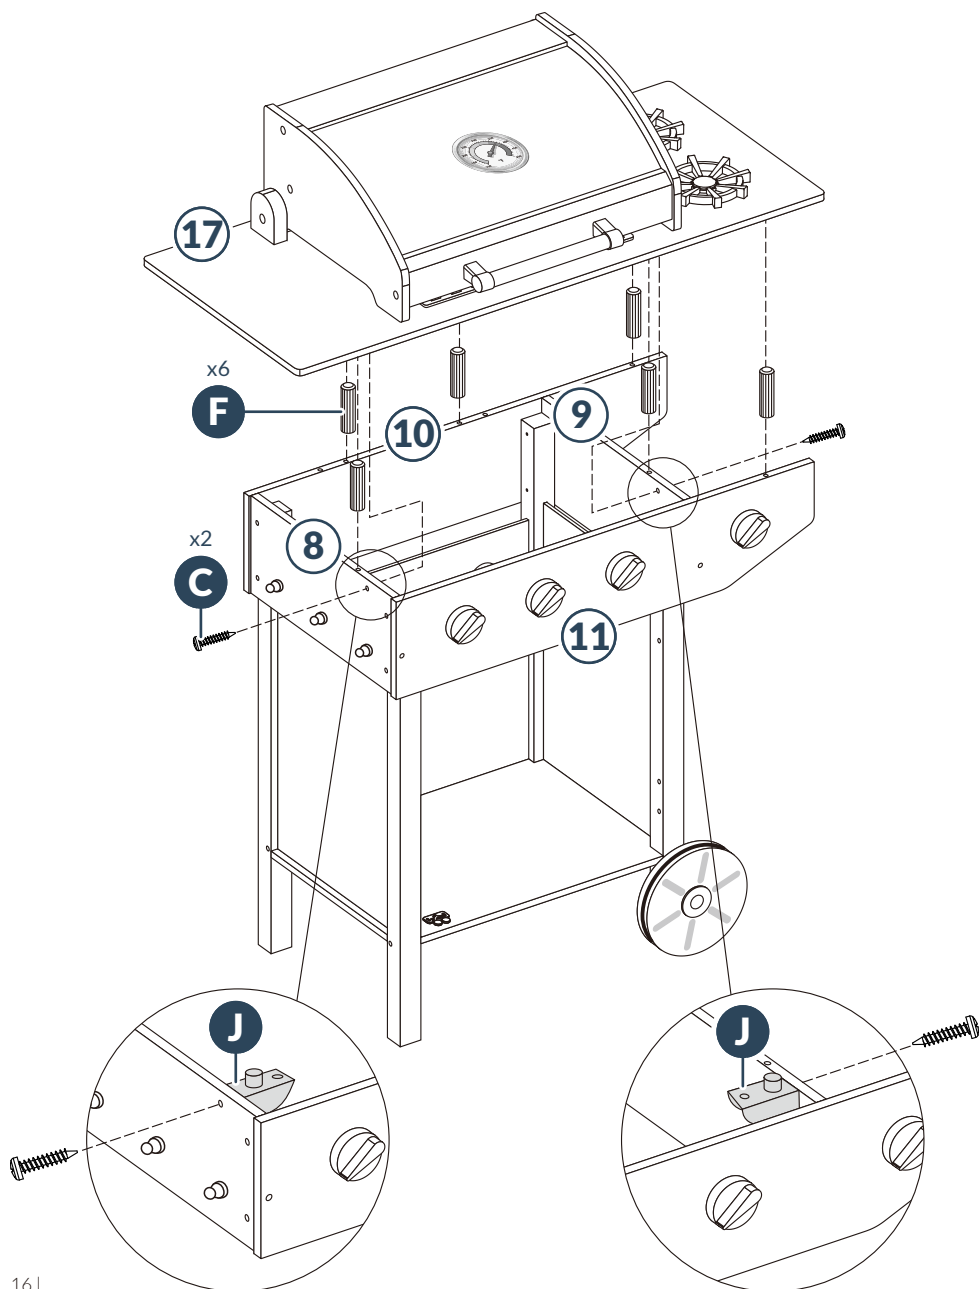



24 | Secure the **part 17** countertop
with two **part B** screws.

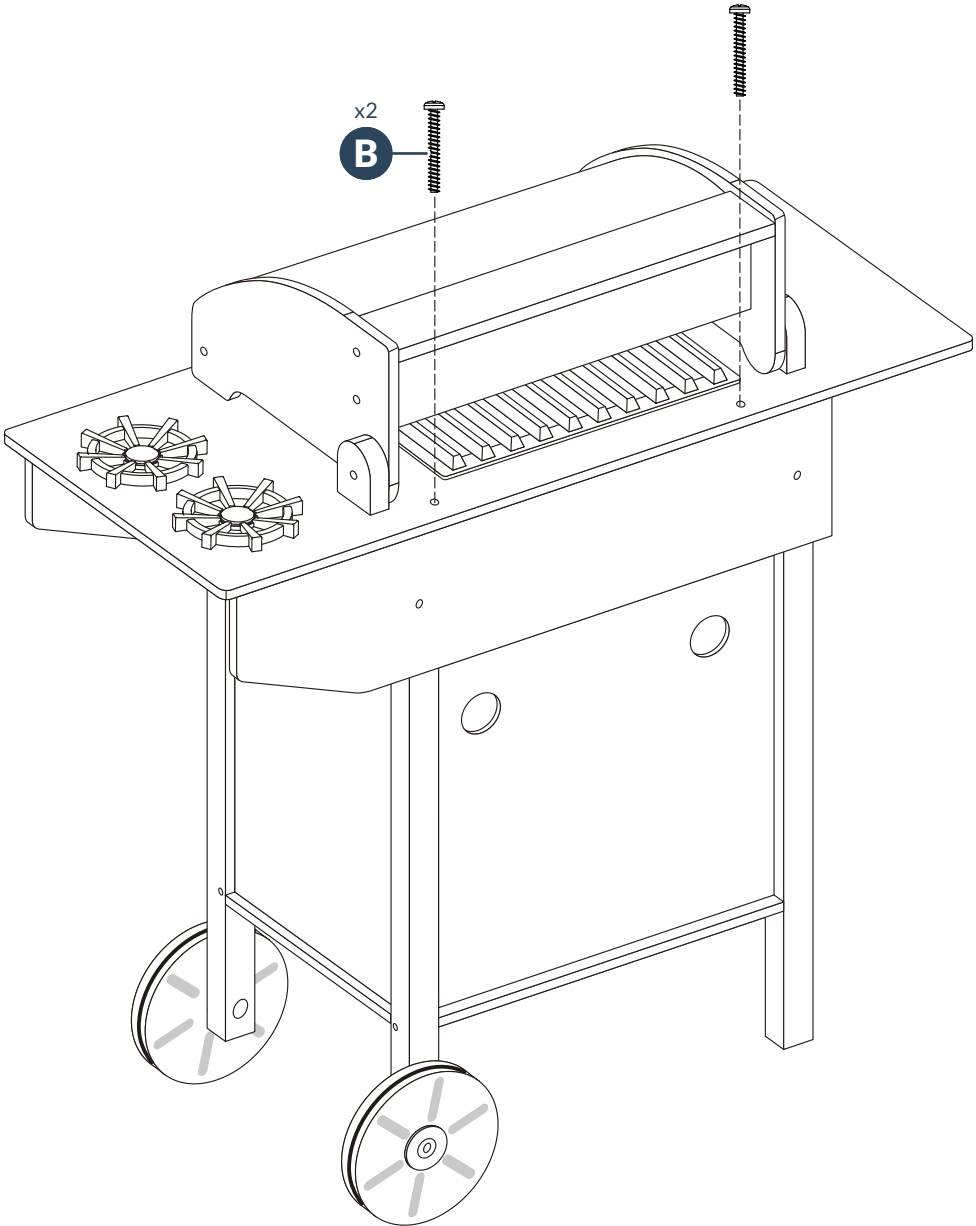 


25

  Attach the **part 12 door** to the **part 16 leg** by securing the **part L door hinges** with four **part G screws**, two screws per hinges.

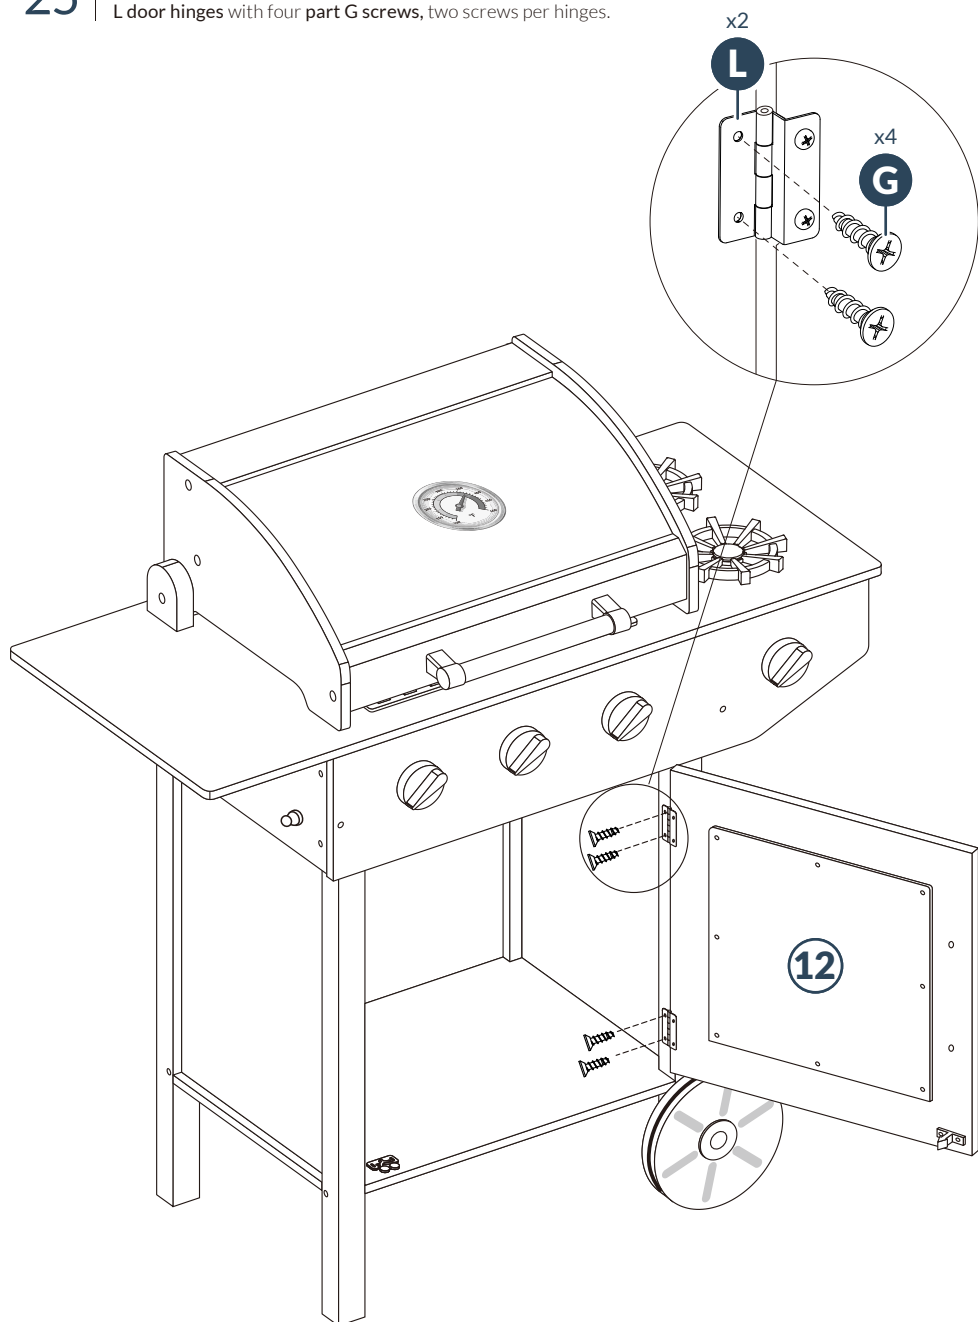

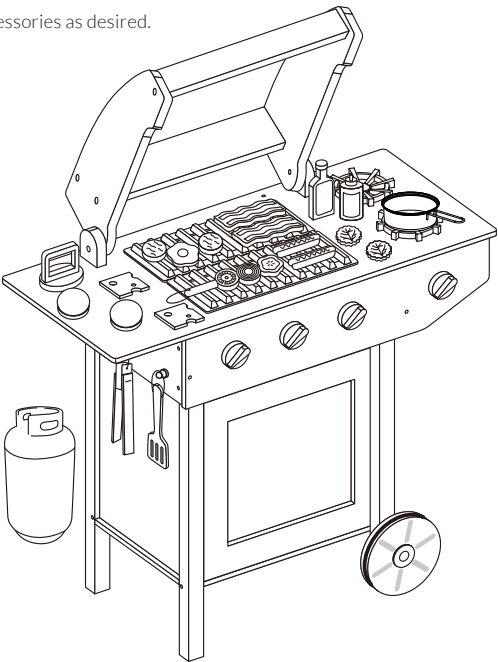

ACCESSORIES

 PROPANE TANK (1 PC) 	SAUCE PAN (1 PC) 	TONGS (1 PC) 	SKEWER (1 PC) 	SPATULA (1 PC) 	GRILL PRESS (1 PC) 
BURGER BUNS (2 PCS) 	BACON (2 PCS) 	HOT DOG (2 PCS) 	CHEESE (2 PCS) 	MUSTARD BOTTLE (1 PC) 	KETCHUP BOTTLE (1 PC) 
BURGER PATTY (2 PCS) 	LETTUCE (2 PCS) 	TOMATO (1 PC) 	ONION (1 PC) 	BELL PEPPER (1 PC) 	EGG (1 PC) 



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.