



bestchoiceproducts



INSTRUCTION MANUAL

Eames Style Kids
Table and Chair Set

TOOLS REQUIRED



SMALL/LARGE
ALLEN WRENCH
(2) (PROVIDED)



WRENCH
(PROVIDED)



300 LBS
CHAIR
CAPACITY



300 LBS
TABLE
CAPACITY



1 PERSON
ASSEMBLY



APPROXIMATELY
45 MIN.
ASSEMBLY

HARDWARE

1

M6 x 12mm
SCREW



8 PCS

2

M6 x 16mm
SCREW



4 PCS

3

M6 WASHER



12 PCS

4

SPRING WASHER



12 PCS

PARTS

A


SEAT



2 PCS

B


CHAIR LEGS

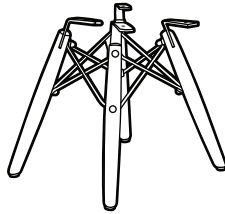

2 PCS

C


TABLE LEG

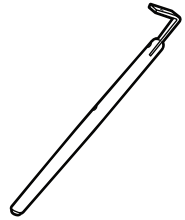

4 PCS

D

TABLE SUPPORT

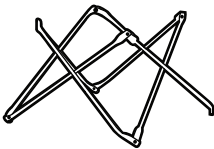

1 PC

E

TABLETOP




1 PC

PRODUCT ASSEMBLY

Please retain these instructions for future reference.

1


Attach part B chair legs to a part A seat with four part 1 screws, four part 3 washers, and four part 4 spring washers. Repeat to build another chair.

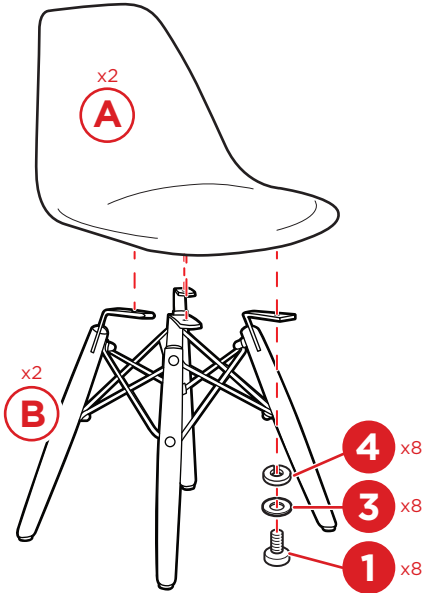

2

Remove the nuts and bolts from four part C table legs.


Note: Make sure the bracket remains in place.

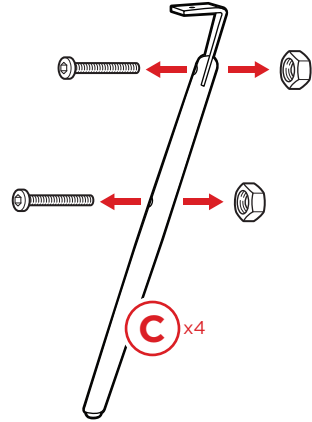

3


Attach the part D table support to the table legs by replacing the nuts and bolts.

Note: Insert the top bolt through the bracket and support.

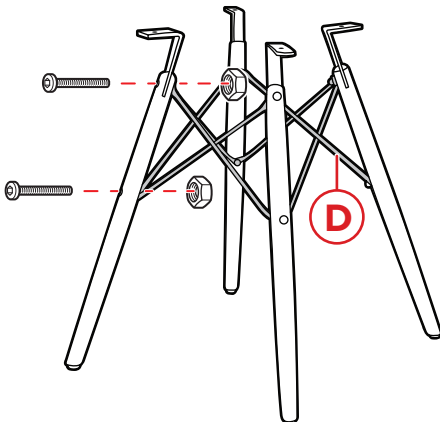

4

Attach the table legs to the part E tabletop with four part 2 screws, four part 3 washers, and four part 4 spring washers.

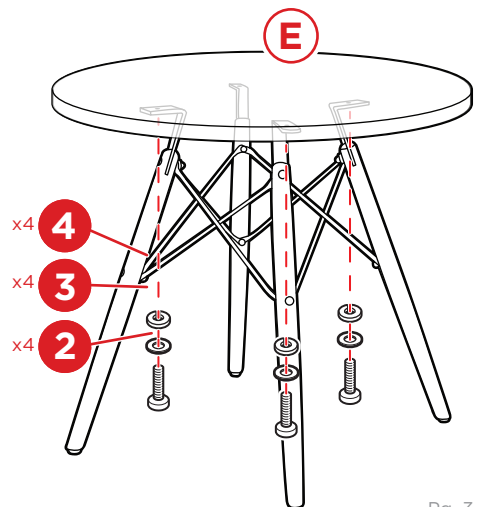

! NOTICE



- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@bestchoiceproducts.com



844.948.8400



LEARN MORE!

! WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.