

## USB 3.2 Gen 1 KVM Switch - DisplayPort - 8K 60Hz

### Product IDs

D86A2-2-PORT-8K-KVM

D86A2-4-PORT-8K-KVM

### Product Information

For the latest software, manuals, product information, technical specifications, and declarations of conformance, please visit:

[www.StarTech.com/D86A2-2-PORT-8K-KVM](http://www.StarTech.com/D86A2-2-PORT-8K-KVM)

[www.StarTech.com/D86A2-4-PORT-8K-KVM](http://www.StarTech.com/D86A2-4-PORT-8K-KVM)

### Hotkey Commands

Hotkey commands are keystroke sequences that initiate computer/device functions. Hotkey commands can be used to initiate KVM Switch functions. A hotkey command sequence must be initiated by the HK\_LCode, followed by 1-2 additional keystrokes. Successful hotkey command inputs result in a high-pitched beep. Unsuccessful hotkey command inputs result in a low-pitched beep.

#### Notes:

- All keystroke combinations must be entered in rapid succession.
- Press and release the indicated keys, unless otherwise specified.

### HK\_LCode

#### Option 1

- **Scroll Lock + Scroll Lock**

#### Option 2

- Hold left-side **Shift + Num Lock + Num Lock** + release **Shift**

#### Option 3.1 (Default - Left Side of the Keyboard)

- Left-side **Ctrl** + left-side **Ctrl**

#### Option 3.2 (Right side of the Keyboard)

To enable HK\_LCode for the right-side of the keyboard:

- **HK\_LCode** + hold left-side **Alt** + press right-side **Ctrl** + release **Alt**

To use HK\_LCode Option 1.2:

- Right-side **Ctrl** + right-side **Ctrl**

To revert back to Option 1.1 (Default):

- **HK\_LCode** + hold right-side **Alt** + press left-side **Ctrl** + release **Alt**

Hotkey Command	Function
<b>HK_LCode + 1 ~ 4</b>	<ul style="list-style-type: none"> <li>• Select PC 1 ~ PC 4</li> </ul>
<b>HK_LCode + F1</b>	<ul style="list-style-type: none"> <li>• Start Auto Scan</li> </ul>
<b>HK_LCode + F2</b>	<ul style="list-style-type: none"> <li>• Start Manual Scan -- Manually switch back and forth between PCs</li> <li>• Press the <b>Up Arrow</b> or <b>Down Arrow</b> key to select the next/previous PC</li> </ul>
<b>HK_LCode + F3</b>	<ul style="list-style-type: none"> <li>• Adjust Scan Rate -- KVM Switch generates one to four beeps that indicate the duration of the scan time: <ul style="list-style-type: none"> <li>• One beep = 3 seconds</li> <li>• Two beeps = 8 seconds</li> <li>• Three beeps = 15 seconds</li> <li>• Four beeps = 30 seconds</li> </ul> </li> </ul>
<b>HK_LCode + F5</b>	<ul style="list-style-type: none"> <li>• Enable/Disable the binding of PC (USB/Video) and Audio switching. (Enabled by Default)</li> <li>• <b>Enabled:</b> Audio will switch with the PC Ports USB and Video functions.</li> <li>• <b>Disabled:</b> Allows switching of PC Ports USB and Video functions, while Audio does not switch.</li> </ul>
<b>HK_LCode + A</b>	<ul style="list-style-type: none"> <li>• Force Audio to follow selected PC</li> </ul>