




BEST CHOICE
PRODUCTS

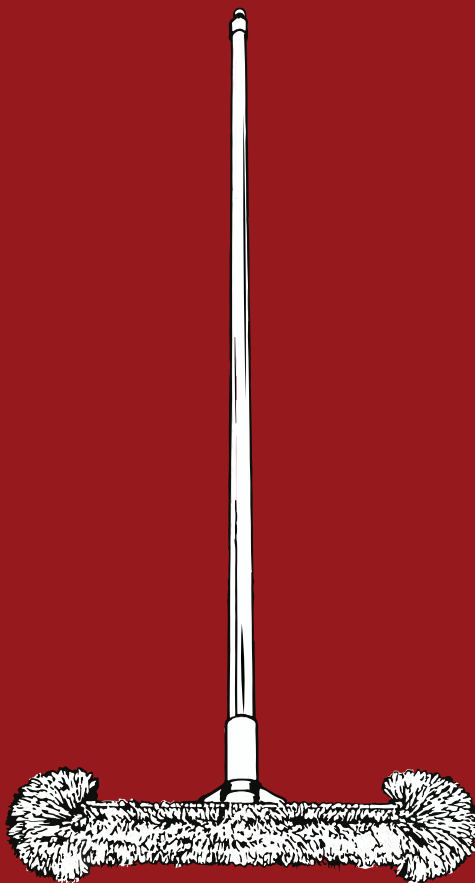

INSTRUCTION MANUAL

Pool Brush

Ver. 1

SKY11728 + SKY11760 + SKY11761

! NOTICE

Please retain these instructions for future reference.



1 PERSON
ASSEMBLY



UP TO 5 MIN.
ASSEMBLY


- Please make sure the installation is fully completed according to the instruction before you start using it.
- Before use, remove large debris (such as branches and stones) from the pool first, and then clean the dirt on the pool walls and bottom with the brush head.
- Preferably brush in one direction evenly, keeping the brush head at a 45° angle to the pool surface to minimize surface wear.
- After use, rinse the brush head with clean water to remove any remaining dirt and chemicals, and keep it dry.
- Do not pull or bend the bristles forcefully to prevent them from falling out or deforming.
- Do not store the pool brush exposed to direct sunlight for long periods. Keep it in a dry and well-ventilated place.
- Do not use the bristles to clean sharp metals, sand, stones or other hard objects to avoid impurities wearing down the bristles or scratching the pool surface.
- Adult supervision is required when children use it to avoid accidental injury.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

PARTS

SKY11728

A

SIDE BRUSH HEAD

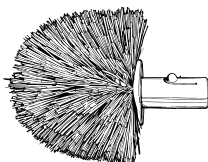

2 PC

B

BRUSH HEAD




1 PC

SKY11760

A

SIDE BRUSH HEAD

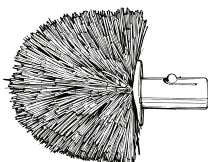

2 PC

B


BRUSH HEAD



1 PC





C

DETACHABLE POLE

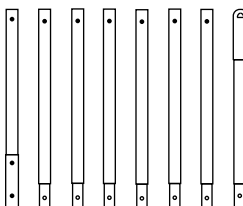

8 PC


SKY11761

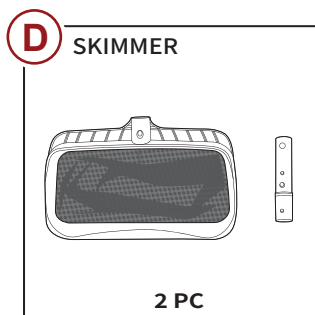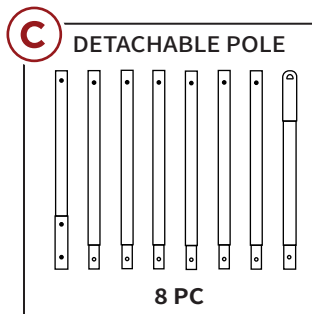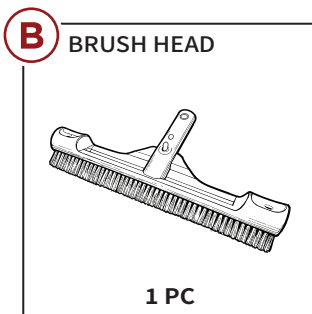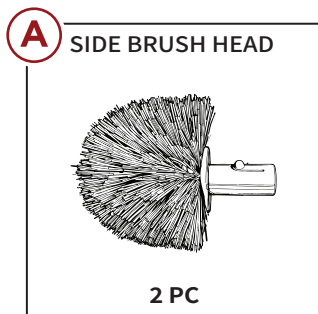

PRODUCT ASSEMBLY


1

Attach the **part A** side brush head to **part B** brush head.

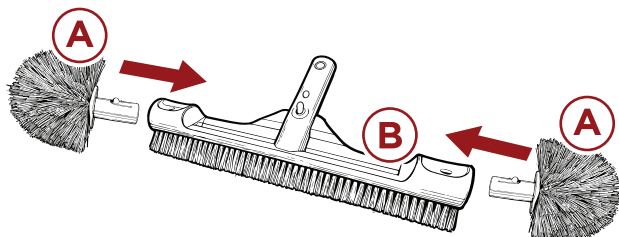


2

Attach the rest **part C detachable pole** one by one.

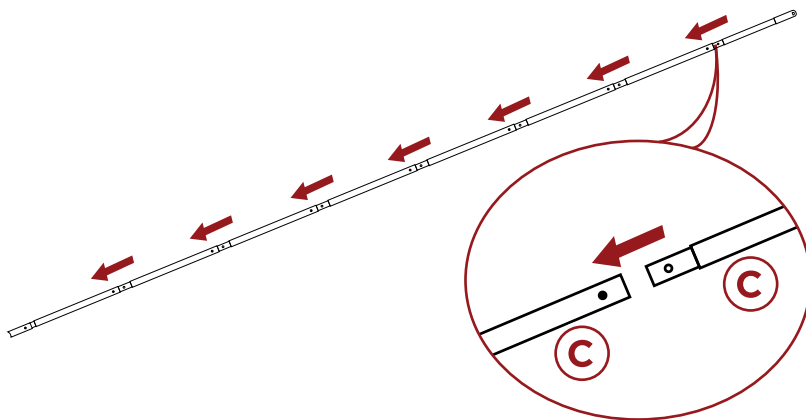**3**

Attach the **part B brush head / part D skimmer** to **Part C detachable pole**.

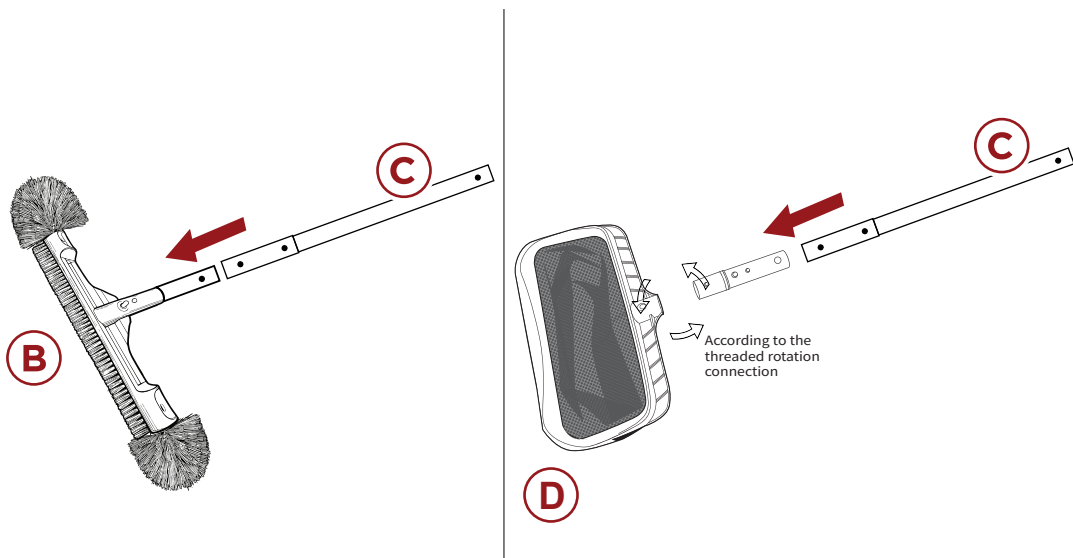



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.