


FLEXSTEEL®

Argo 1752-50P3 Power Recliner with Power Headrest & Lumbar

IMPORTANT NOTE


Read these instructions carefully, and familiarize yourself with each procedure before assembling the furniture. Check that you have all the component parts, and familiarize yourself with each part before proceeding.

Take all the fittings out of the plastic bags and separate them into groups. Ensure you have enough space to lay out all the parts before assembly. To prevent damage to the parts, we recommend that you assemble the units on a soft, level surface.

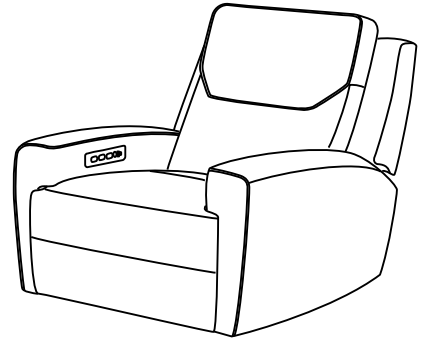


LIST OF PARTS


A. 1 x Back

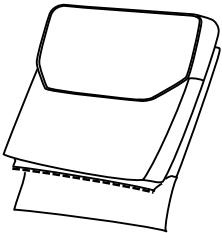


B1. 1 x Left Wing

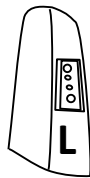


B2. 1 x Right Wing

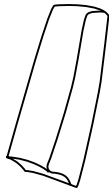

C. 1 x Seat

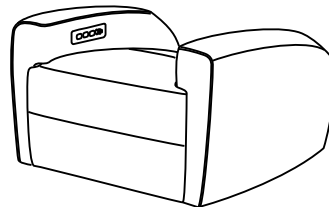


D. 1 x Transformer

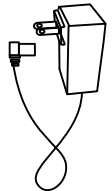


Assembly Instructions


STEP 1: Detach the Transformer (D) from the bottom of the Seat (C).

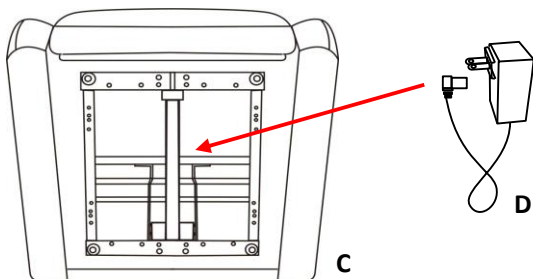

STEP 2: Detach the Left Wing (B1) and Right Wing (B2) from the back of the Seat (C).

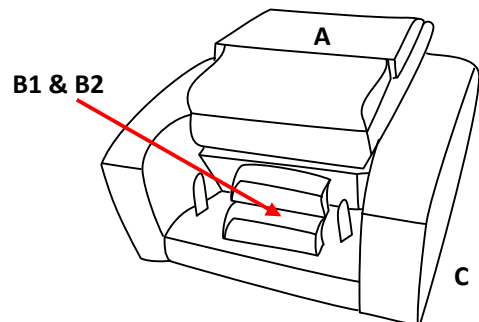


STEP 3: Attach the Back (A) to the Seat (C). Ensure the latches fit well.

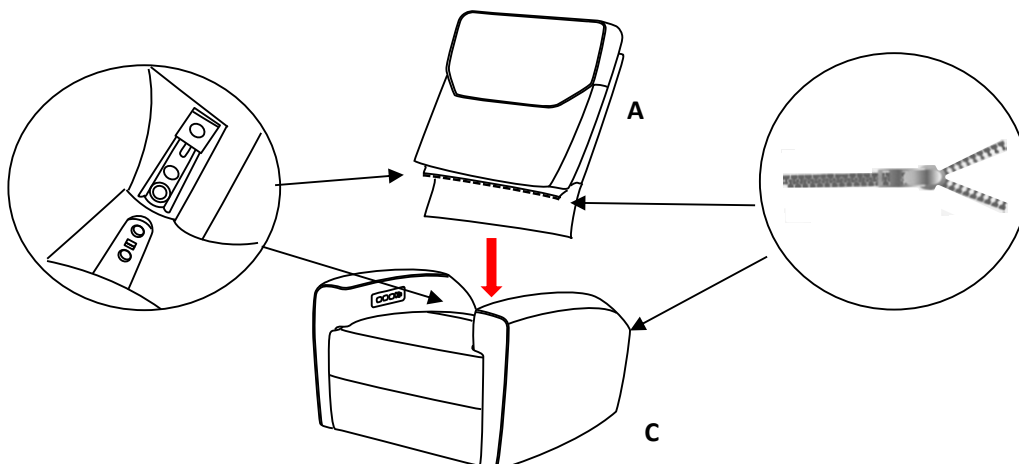

STEP 4: Zip the fabric on the bottom of the Back (A) with the back of the Seat (C).


Assembly Instructions

STEP 5: Attach the Left Wing (B1) to the left of the Back (A) and Right Wing (B2) to the right of the Back (A).

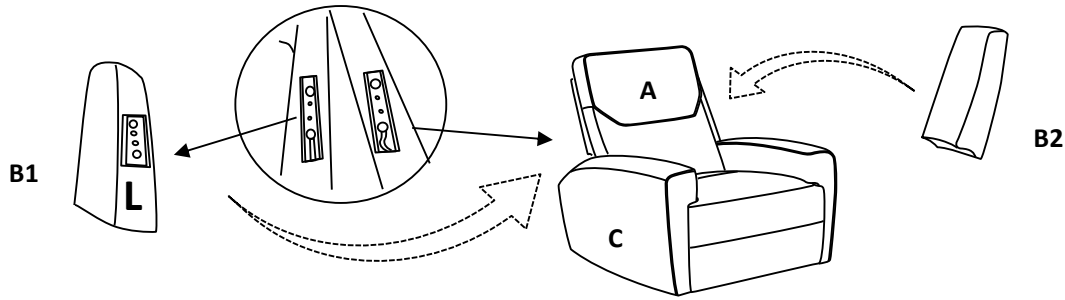


STEP 6: Flip up the back flap and connect the Headrest and Lumbar cables between the Back (A) and the Seat (C). The headrest cables are identified with yellow labels. The lumbar cables are identified with white labels. Make sure to close the clip lock to prevent the connection from coming loose.

STEP 7: Connect the Transformer (D) to the power port at the bottom rear of the Seat (C). Ensure the power switch is switched to the "ON" position.

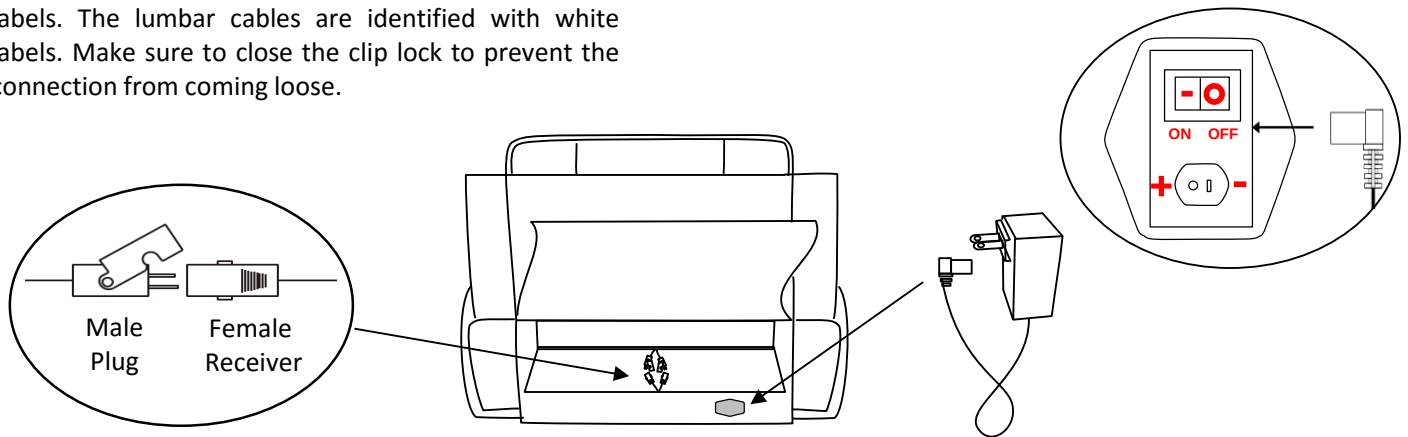


STEP 8: Fasten the back flap to the bottom of the furniture to complete assembly. Then plug the Transformer (D) into a nearby outlet. Ensure the power cord remains clear of the metal base.

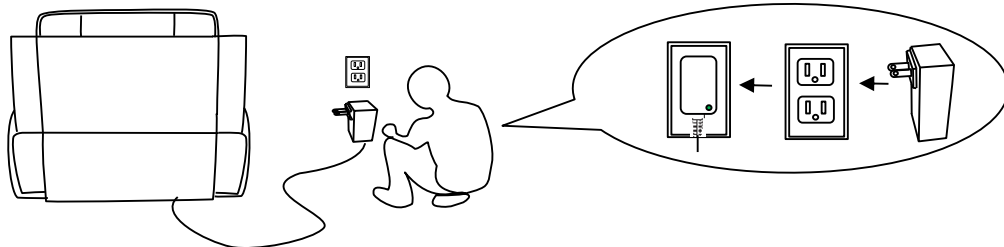

Disassembly Instructions

To take apart the chair: Unzip the zipper between the Back (A) and the Seat (C). Use a screwdriver to press outward on the black tab in the metal receivers on both sides of the chair back and lift the Back (A) up to release.

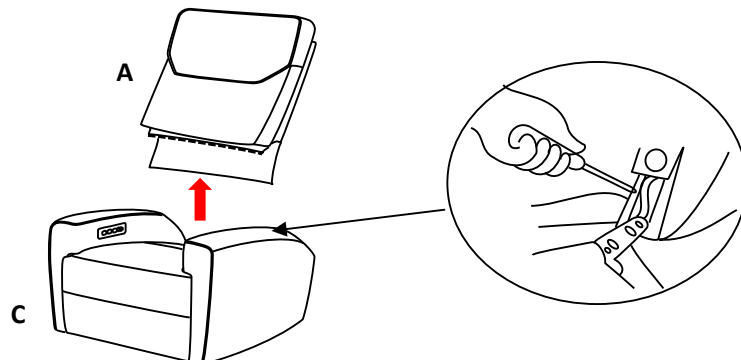

Care Instructions

- To avoid any risk of suffocation to children or pets, dispose of all plastic bags immediately.
- To ensure proper performance, occasionally check for loose screws and tighten as needed.
- If the reclining functions are not working properly, check for loose cable connections before contacting the retailer.