



COTND-21



COTND-21

INSTRUCTION MANUAL


Cotton Candy Machines

This manual contains important information regarding your Adcraft unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty.

WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet of the appropriate voltage
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only.

UNITS & FEATURES

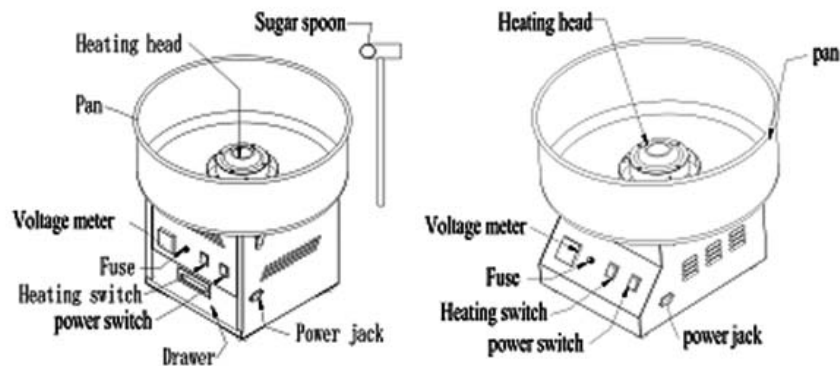

TO INSTALL:

1. Take unit out of the box and remove all packing material.
2. Place unit on a solid and level table that is the appropriate height for use.
3. Before first use, it is recommended to wash the stainless steel bowl and heating head with warm water to remove any residue from the packing materials.

TO USE

1. Install the bowl on top of the base using the four clamps located on the sides of the base. Make sure the bowl is not in contact with the heating head.
2. Connect the power cord (included) to the base and plug it into a grounded outlet of appropriate voltage.



3. Switch both the power and heat switches to the ON position. The switches will light up when on.
4. Pre-heat for 15 minutes before use.
5. Add the floss sugar (sold separately) directly into the well in the heating head using the provided floss scoop. Do not overfill.
6. Cotton candy will begin to spin around the bowl as the heater head continues to operate. As the cotton candy accumulates, it will build up and shoot out through the top of the spinner head.

NOTE: To prevent overheating of this unit, please allow it to cool down for at least 15 minutes after an hour of continuous use.

CLEANING & MAINTENANCE

NOTE: To maintain cleanliness and increase service life, this item should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock

1. Turn off all switches on the unit and unplug the unit to let cool down.
2. Allow the heating head to cool fully before cleaning.
3. Clean the base and stainless steel bowl with a wet towel only.


NOTE: Keeping the heating head clean is important for proper food safety and will help ensure a longer life for your unit.

NOTE: Using a Bubble Shield on top of your cotton candy unit while in use will help reduce airborne debris and loss of product. Bubble Shield (COT-21/C) is sold separately.

TROUBLESHOOTING:

Problem	Cause	Solution
Machine is not turning on	Not plugged in	Check the power cord and plug in
	Broken micro switch	Check the bowl and micro switch. If connected and still not working replace micro switch
Heating head is not working	Broken motor	Replace the motor
	Belt disconnected	Replace the belt
Machine isn't heating	Heating element broken	Replace the heating element
	Thermostat	Replace the thermostat

Wiring Diagram for the Cotton Candy Machines

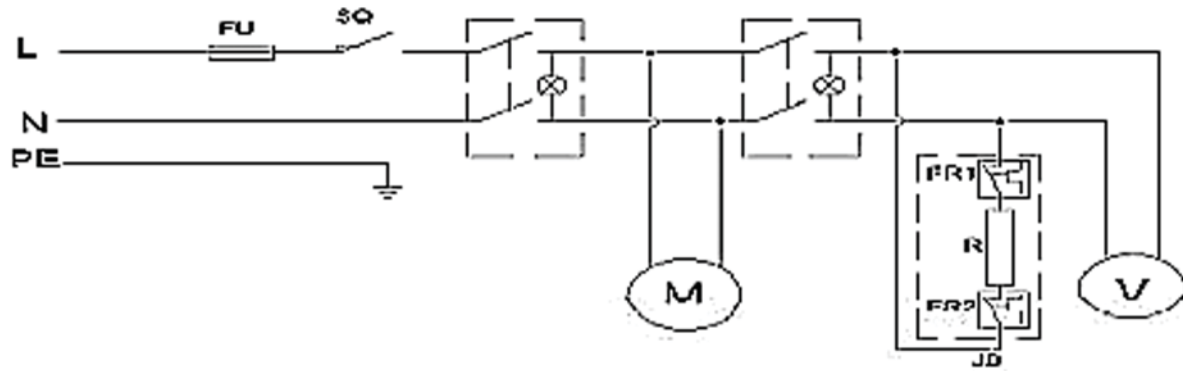

- FU - Fuse, 15A, 120V
- M - Motor, 80W/60Hz
- K1 - Power Switch
- SQ - Micro Switch
- JD - Heating Head
- R - Heating Piece - 120V, 1000W
- K2 - Heating Pipe Switch
- V - Voltage Meter
- FR1 - Temperature Controller
- FR2 - Thermostat