

LIFETIME LIMITED WARRANTY

Your Dynarex Product is warranted to be free of defect in materials and workmanship for the lifetime of the product for the original purchaser. This item was built to exacting standards and carefully inspected prior to shipment. This Limited Lifetime Warranty is an expression of our confidence in the materials and workmanship of our products and our assurance to the consumer of years of dependable service.

The Warranty shall not apply under the following conditions:

- Problems arising from normal wear
- Problems arising from failure to adhere to the product instructions
- Problems arising from misuse, negligence, accident or improper operation, maintenance or storage
- Problems arising from modifications or unauthorized repairs, parts or attachments
- Products where the serial number has been removed or defaced
- Problems with non-durable components, such as rubber accessories, casters, and grips, which are subject to normal wear and need periodic replacement

Dynarex shall not be liable for any consequential or incidental damages whatsoever. Dynarex shall repair or replace defective products at its option. The foregoing warranty is exclusive and in lieu of other express warranties, if any, including the implied warranties of merchantability and fitness of a particular purpose. The remedy for any violation of the implied warranty shall be limited to repair or replacement of the defective product pursuant to the terms contained herein.

If you have a question about your Dynarex device or this warranty, please contact an authorized Dynarex dealer.

Manufactured for: Dynarex Corporation
11 Dynarex Drive • Middletown, NY 10941
USA • www.dynarex.com

Symbol Glossary: dynarex.com/symbols.php

Made in China

R240226



dynarex[®]
we care like family[™]

Items 10160
10161
10162
10163
10170


TWO BUTTON FOLDING WALKER

Not made with natural rubber latex.



HEIGHT ADJUSTMENTS

- Stand with your arms hanging loosely at your sides.
- The walker hand grips should be at the height of your wrists.
- The walker should be adjusted with push buttons and holes on all four legs.
- Push the button with your thumb and adjust to the correct hole height.
- Repeat this adjustment for all four walker legs making sure that the walker is level.
- Make sure that each push button is locked in place after the height is adjusted.

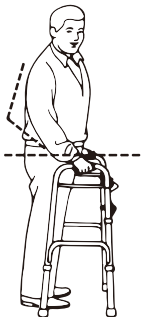

⚠ CAUTIONS/WARNINGS

1. Be aware of the following:
 - Electrical cords in way
 - Liquids on floor
 - Throw rugs
 - Toys or debris
 - Furniture
 - Doors and door steps
 - Gaps in floor
2. Wear shoes or slippers with rubber or other non-skid soles. **DO NOT** wear shoes with heels or leather soles.
3. Use Dynarex accessories only. Use of other manufacturers' accessories can result in improper fit and risk fall and/or injury.
4. Do not use on stairs or escalators.
5. Check the tips and wheels of your walker daily and replace them if they are worn.
6. Keep space between you and your walker, and keep your toes inside your walker. Stepping too close to the front or tips or wheels may make you lose your balance.

THREE-POINT GAIT

For Walking With Walker (Items 10160-10161)

Step 1

Align the middle of your foot with the back legs of the walker.



Step 2

Lift the walker up and place it comfortably in front of you, making sure all four legs end up on the floor.



Step 3

Carefully, walk forward one step at a time.

