

Petite Press

IMPORTANT SAFETY INSTRUCTIONS


When using an iron, basic precautions should always be followed, including the following:

Read all instructions before using

1. Only use an iron for its intended use.
2. To avoid the risk of electric shock, do not immerse the iron in water or other liquids.
3. Always turn the iron OFF before plugging or unplugging the iron from the electrical outlet. Never pull on the cord to disconnect the iron from the electrical outlet; instead, grasp the plug and pull on the plug to disconnect the iron.
4. Do not let the cord touch hot surfaces. Let the iron cool completely before putting the iron away. Coil the cord loosely around the iron when storing.
5. Always disconnect the iron from the electrical outlet when the iron is not in use.
6. Do not operate the iron with a damaged cord or in the event the iron has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the iron. Take it to a qualified serviceman for examination and repair. Incorrect assembly might result in a risk of electric shock when the iron is used after reassembly.
7. Close supervision is required for any appliance used by or near children. Do not leave the iron unattended while the iron is connected or on an ironing board.
8. Burns can occur from touching hot metal parts.
9. In the event the malfunction indicator goes on, the iron is not operating properly. Disconnect the iron from the electrical outlet and have the iron serviced by qualified service personnel.
10. To avoid a circuit overload, do not operate an iron on the same circuit with another high wattage appliance.
11. If an extension cord is absolutely necessary, a cord with an ampere rating equal to or greater than the maximum rating of the iron shall be used. A cord rated for less amperage can result in a risk of fire or electric shock due to overheating. Care shall be taken to arrange the cord so that it cannot be pulled or be tripped over.

Iron Parts

- A. Soleplate
- B. Stand
- C. Digital Control Pad
- D. Handle Position Knob

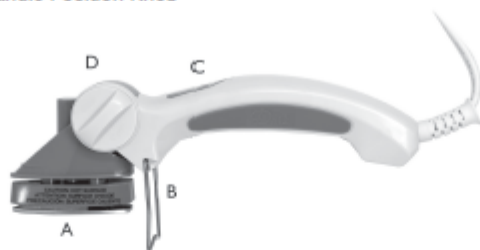

INSTRUCTIONS FOR USE

Read all instructions and safety precautions before using iron.

1. Before heating, adjust handle position by loosening right knob (D) on side of iron. Rotate handle up or down until desired position is achieved. Tighten knob to secure handle position.
2. Plug cord into outlet, then turn iron on by pressing the Off/On button located on digital pad (C) on top of handle.
3. Select desired temperature setting by pressing Up or Down button located on digital pad. Iron is fully heated when light stops blinking and beeping sound is heard.
4. Use attached stand (B) to rest hot iron when not in use.
5. Never leave iron unattended and follow all safety precautions.
6. Iron must be used and rested on a stable surface.
7. Iron must not be used if it has been dropped or if there are visible signs of damage.
8. Iron should cool completely before storing.

Warnings

1. High temperatures may damage some fabrics so begin with a lower temperature setting. Before pressing, test fabric swatch by gradually increasing temperature to determine proper setting.
2. Always use iron on flat ironing surface. Make sure stand is set in proper position.
3. Never leave iron unattended
4. Follow safety precautions.

6. Iron is not a toy and is not intended for use by children without proper adult supervision.

Temperature Settings:

Setting 1: Acetate, acrylic, modacrylic, nylon, polypropylene, spandex
Setting 2: Polyester, rayon, silk, triacetate, wool
Setting 3: Cotton
Setting 4: Linen

Cleaning Petite Press

- Occasionally the soleplate will need cleaning. Use a product specifically for iron cleaning such as Iron-Off™ by Dritz and follow manufacturer's instructions for proper use.
- Before using iron after a cleaning, test iron on scrap fabric to ensure no residual cleaning solution remains. This can stain some fabrics.
- Do not use water to clean any part of iron.

Limited Warranty

This Prym Consumer product is warranted against defects in material and workmanship for one year from date of purchase. During this time period and if the product is owned by the original purchaser, Prym Consumer will inspect the product and if proved to be defective, will repair or replace the product without charge. If a replacement product is sent, it will carry the remaining warranty of the original product. This warranty does not apply to any defect or damage as a result of the buyer's or user's misuse of the product or of any negligence.

If you believe your product is defective, send it along with your proof of purchase to Consumer Relations, Prym Consumer USA, PO Box 5028, Spartanburg, SC 29304. In addition to the product and receipt, please enclose a letter stating your specific problem along with a shipping address (no post office boxes) and a daytime phone number.