

# ASSEMBLY INSTRUCTIONS



# MODEL WDC2014 Shower tent

## SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

### **⚠ DANGER** CARBON MONOXIDE GAS WILL KILL YOU

Stoves, heaters, grills, lantern, candles, and other fuel-burning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:

- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a tent.
- DO NOT build fires inside or near a tent.
- DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

### **⚠ DANGER** PROTECT YOUR CHILDREN

- DO NOT leave children unattended inside a tent or in camp.
- DO NOT allow children to assemble a tent.
- DO NOT allow children to enter or exit a tent except through the door.
- DO NOT allow children to remain in a closed-up tent on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

### **⚠ WARNING** FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC

This tent is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

### CAMPING DO'S AND DON'TS

#### DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store tent on concrete floor.

#### DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

## CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

### EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.


Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

## REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an email to [contactus@wenzelco.com](mailto:contactus@wenzelco.com). Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:  
**Exxel Outdoors, LLC.**  
1 International Ct.  
Broomfield, CO 80021

KEY NO.	WDC2014 Shower tent		QTY REQ
	DESCRIPTION	PART NO.	
A	Upright Pole	WDC2014U	4
B	Center Hub	WDC2014CH	1
C	Shelf Pole	WDC2014SP	1
	Complete Frame	WDC2014ST	1
	Replacement Fly	WDC2014F	1
	Guy Rope	A1001	5
	Steel Stake	PINSTAKE	9

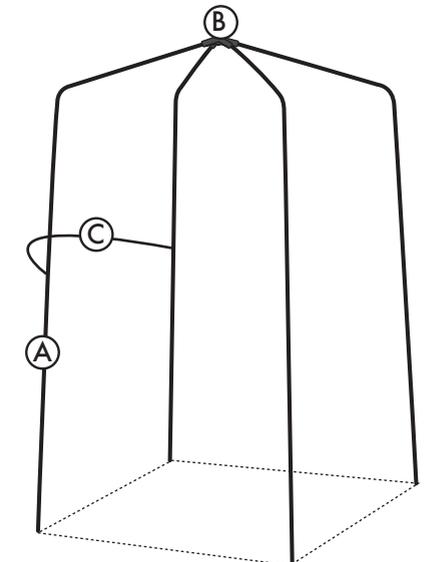

# ASSEMBLY INSTRUCTIONS




# MODEL WDC2014 Shower tent

**IMPORTANT:** WE ADVISE YOU TO ASSEMBLE THE SHOWER TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY.

**NOTE:** PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

TO PROLONG THE LIFE OF THE SHOWER TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR SET UP. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOOR TO ALLOW AIR TO ENTER THE SHOWER TENT.

TO IMPROVE THE WEATHER RESISTANCE OF YOUR SHOWER TENT, IT IS ADVISABLE TO USE SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE INSIDE SEAMS OF THE SHOWER TENT AND UNDERSIDE OF THE FLY. IF APPLIED TO THE OUTSIDE SEAMS, DISCOLORATION MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.

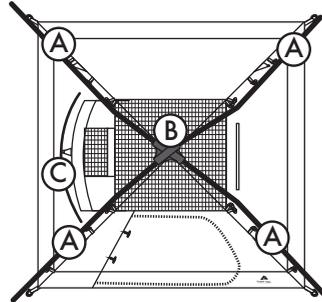


**STEP 1:** Select a smooth, level site and spread out your camp shower.





**STEP 2:** Stake the shower to the ground by inserting tent stakes through the aluminum rings at the four corners. Hammer stakes into the ground at a 45° angle to the tent, making sure the tent floor is pulled out even and tight.

**STEP 3:** Locate the center hub (B) and connect it to the hook at the top of the tent.

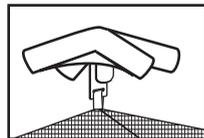


**STEP 4:** Locate and extend the four poles (A), by pulling out each wire-corded section and placing the jointed ends into the connected pole sections.

**STEP 5:** Insert the shorter end of each of the 4 poles into center hub with the poles lying flat on the ground.

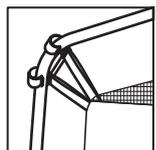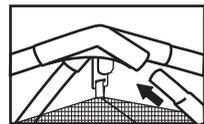


**STEP 6:** Locate the double clips at the four eave corners of the tent. Attach the clips to the corresponding poles at the pre-bends between the corner reinforcement bars.

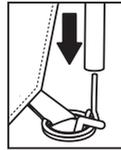


**STEP 7:** Starting at one corner of the tent, lift up on the pole while raising one corner of tent, and place the bottom of the pole onto the metal pin located on the ring at the base of the tent. Repeat step 7 at the three remaining corners.

 
**STEP 8:** Clip the plastic hooks on the tent walls to the steel poles.



 
**STEP 9:** Locate and extend the fiberglass shelf pole (C) by pulling out each section and placing pole ends into the metal ferrule connectors.



 **STEP 10:** Go inside the shower tent and place the 2 ends of the shelf pole into the 2 triangular pockets at the front corners of the shelf. Rotate the pole into place and fasten the Velcro around the pole to hold it in place.



**STEP 11:** A guy rope is needed to hold the shelf in place. Exit the tent and extend the guy rope attached to the outside of the shelf. Make a loop at the opposite end of the guy rope by using slider (as shown) and place loop over a tent stake. Adjust the slider to make guy rope snug and stake to the ground at a 45° angle.

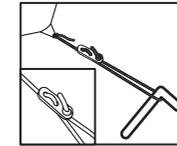

Tent should appear as shown.




**STEP 12:** Unfold fly and place it over tent. Attach the hooks on the fly corners to the metal rings on the main upright poles.



**STEP 13:** Secure the fly to the shower by wrapping the Velcro fasteners, located on underside of fly, around each pole.


**STEP 14:** There are guy ropes located at the four corners of the tent that provide additional stability. Extend the guy ropes and stake to the ground. Stakes have been included for this.

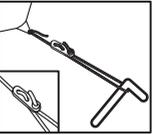


Assembled tent should appear as shown



 
**Towel Bar:** Locate towel bar webbing strip with clips at each end. Simply snap the clips to the two vertical steel poles just above the clips that are holding the tent. Be certain to position it on the right side of the shower where there is an opening where the fabric overlaps so you can reach the towel bar from the inside of the tent.



 **Solar Shower:** On the ceiling of the shower there is a large clip that can be used to hang a solar shower bag (sold separately).



**Toilet Paper Holder:** There is a covered pocket inside the tent designed to hold a roll of TP and keep it covered and dry when the tent is used for a shower and latrine.

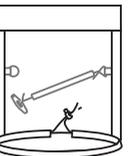

**NOTE:** To take down tent, follow steps above in the reverse order. Be sure to leave door and window unzipped. **Make sure tent is clean and dry before storing.** Place stakes into stake bag and poles into pole bag, which are provided. The tent should be folded into equal parts to distribute the bulk. Fold fly and lay on top of tent. Start a small tight roll, the width of your carry bag, at the end opposite the door. Roll tent around the pole bag toward door to allow air to escape. Once rolled, tie a string around tent to hold in place. Place tent and stake bag into carry bag.