 




BEST CHOICE
PRODUCTS

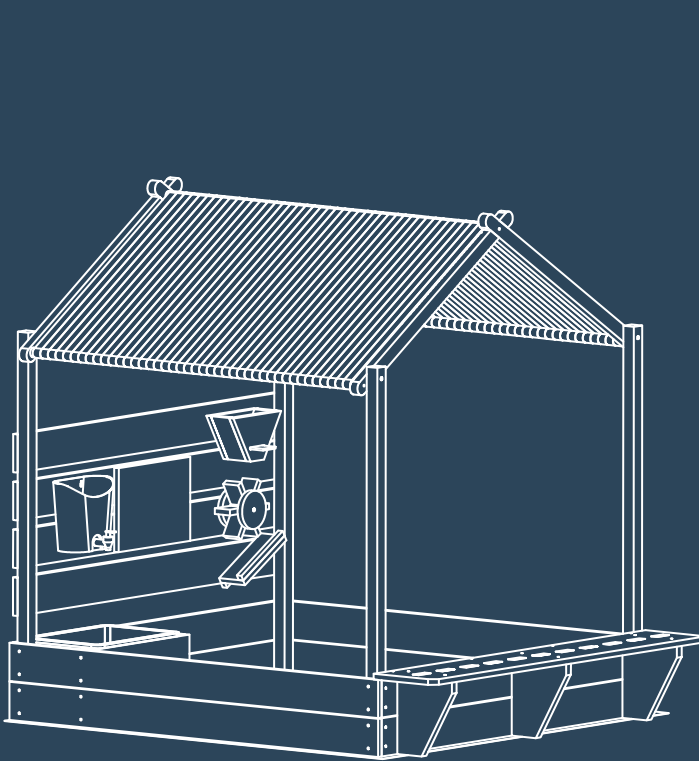

INSTRUCTION MANUAL

Deluxe Sandbox Playhouse

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.









ⓘ NOTICE | Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush, and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.













TOOLS REQUIRED















        HARDWARE

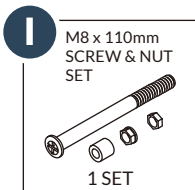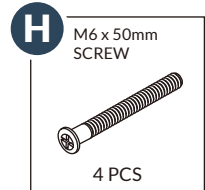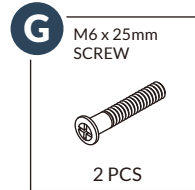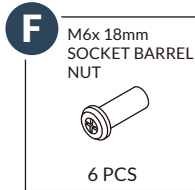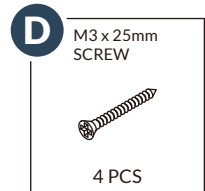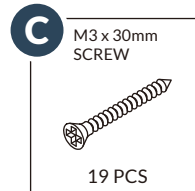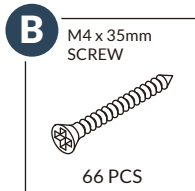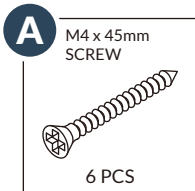


PARTS

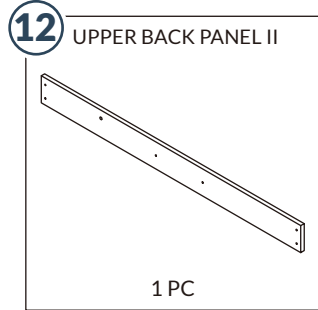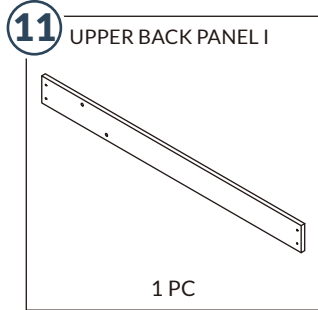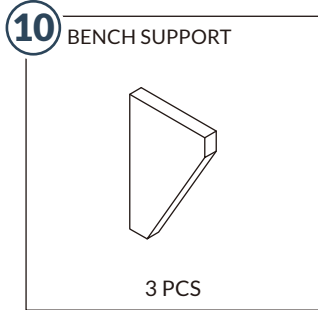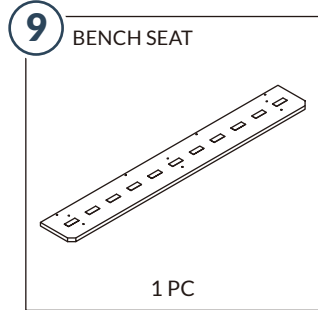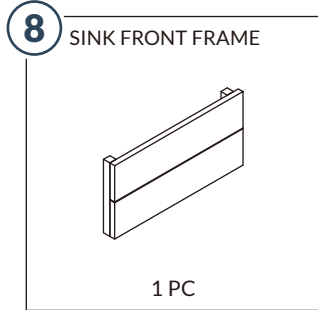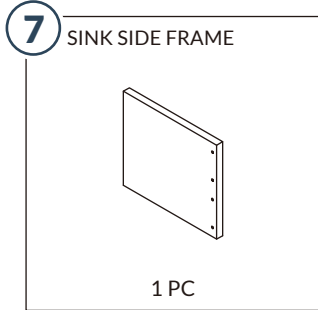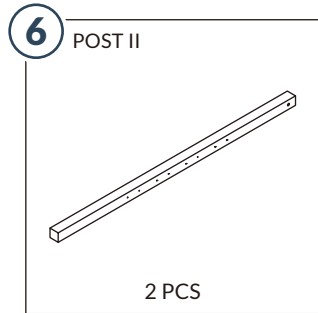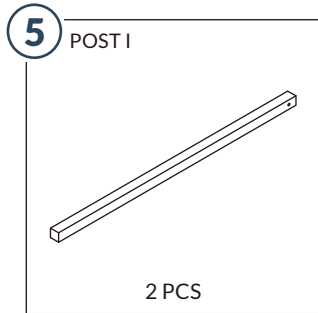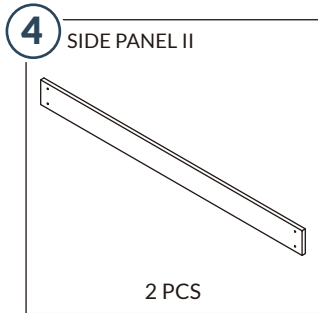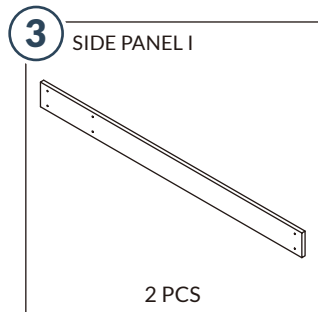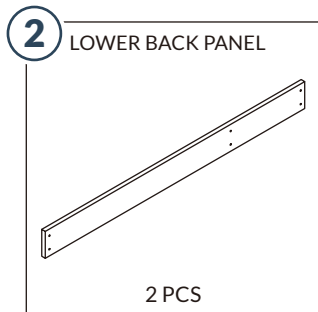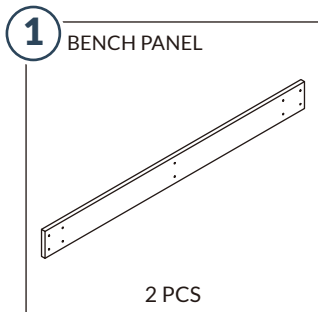            


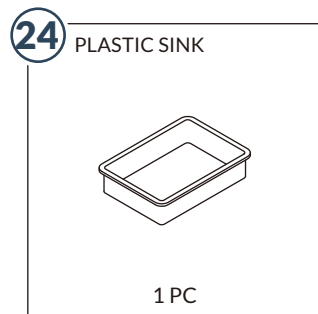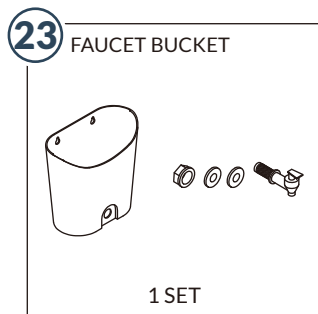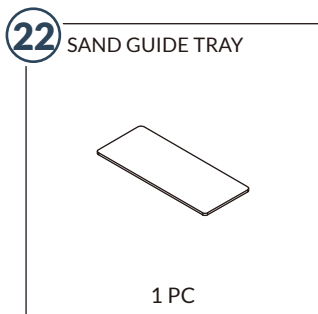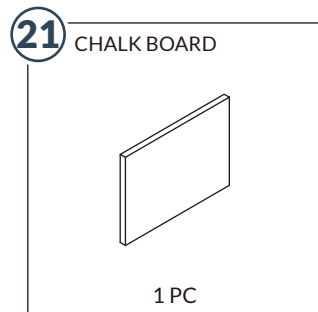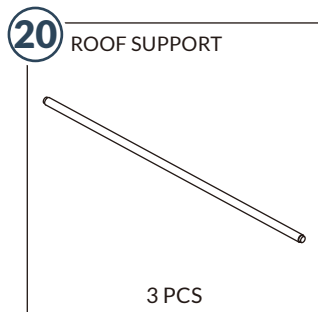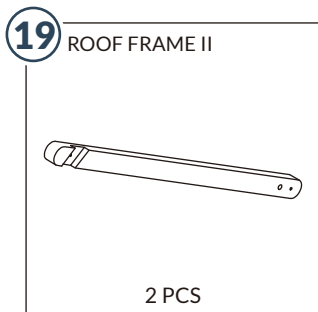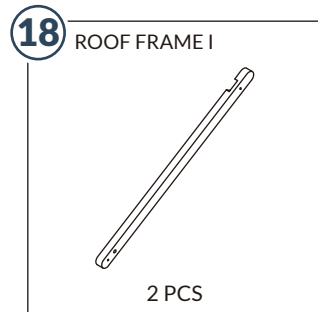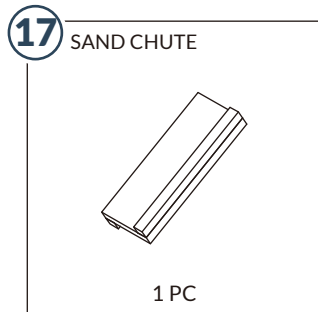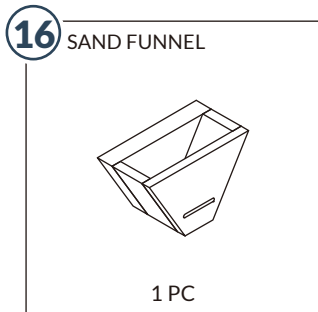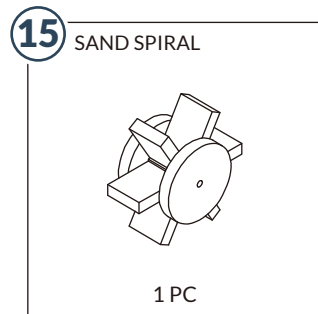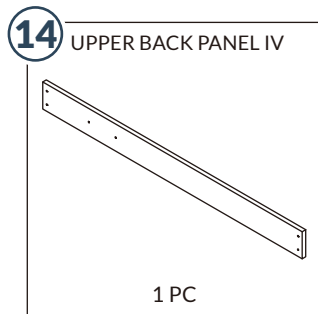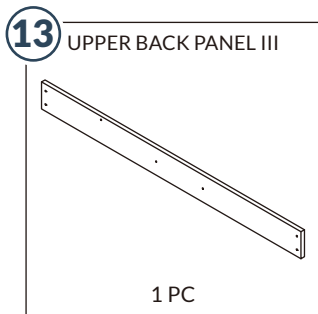            

25 ROOF

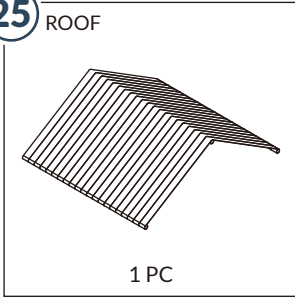 


26 SAND SCREEN

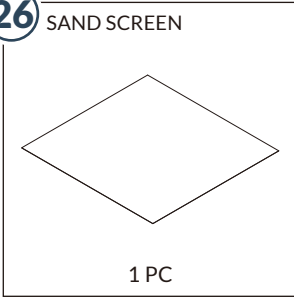 


PRODUCT ASSEMBLY

 
1 Attach two part 2 lower back panel to two part 6 post with eight part B screws.

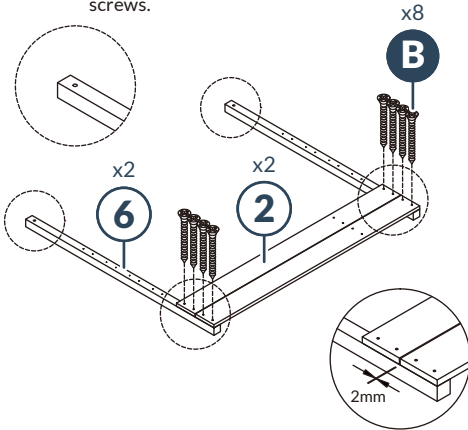

2 Attach two part 1 bench panels to two part 5 post with eight part B screws.

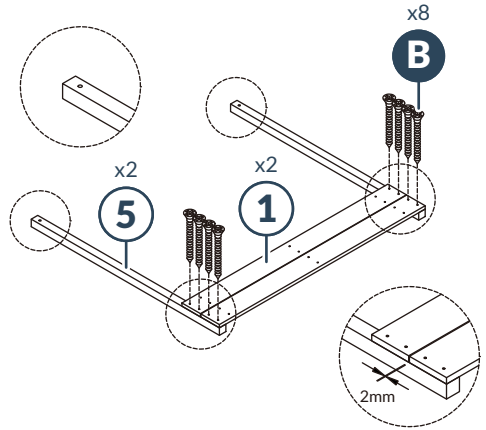 


3 Attach three part 10 bench support to the part 1 bench panels with twelve part B screws.

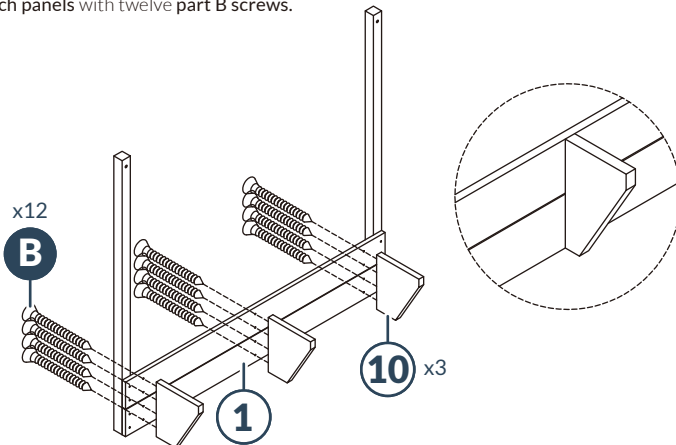 


4

 Attach the two assembled sandbox sides to two **part 3** side panels and two **part 4** side panels with sixteen **part B** screws.

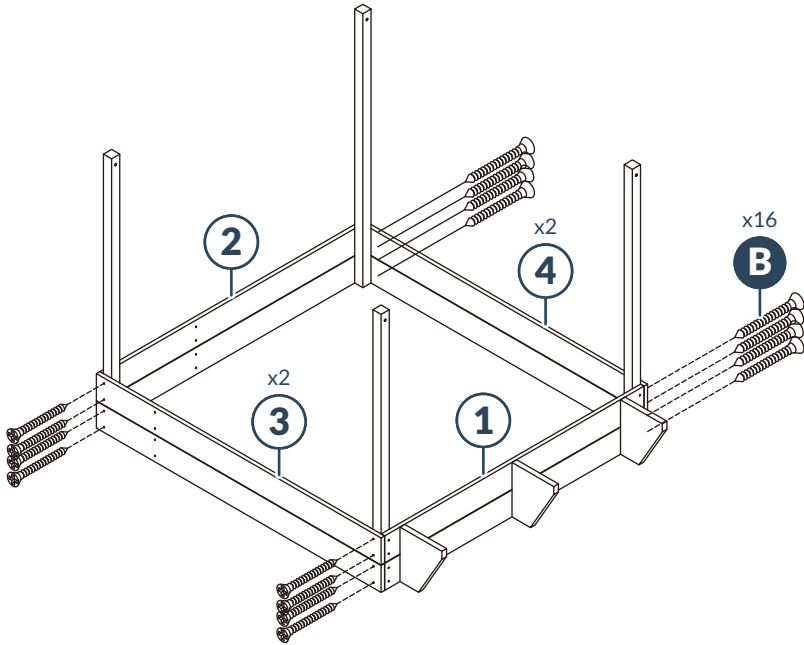


5

 
Attach the **part 9** bench seat to the **part 1** bench panels with four **part C** screws.

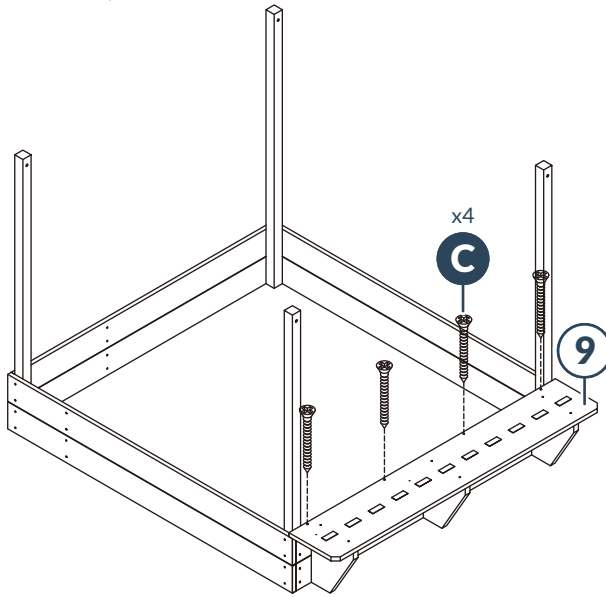

6 | Secure the **part 9** bench seat to the **part 10** bench supports with six **part B** screws.

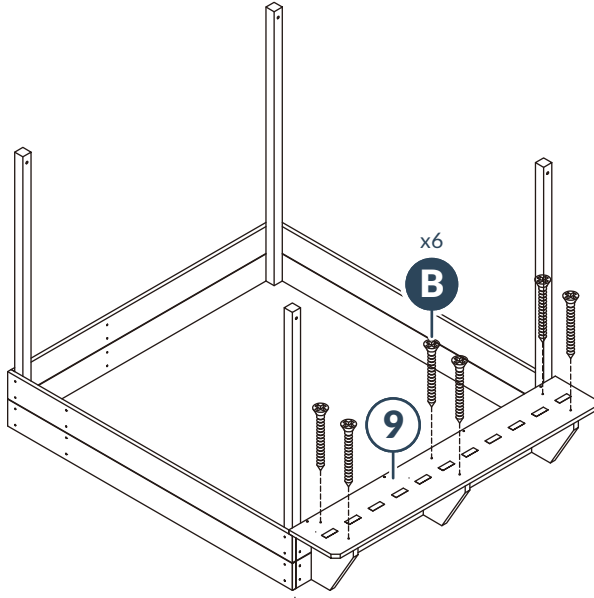 


7 | Attach the **part 7** sink side frame to the **part 8** sink front frame with four **part C** screws. Then attach the assembled sink frame to the **part 2&3** side panels with eight **part C** screws.

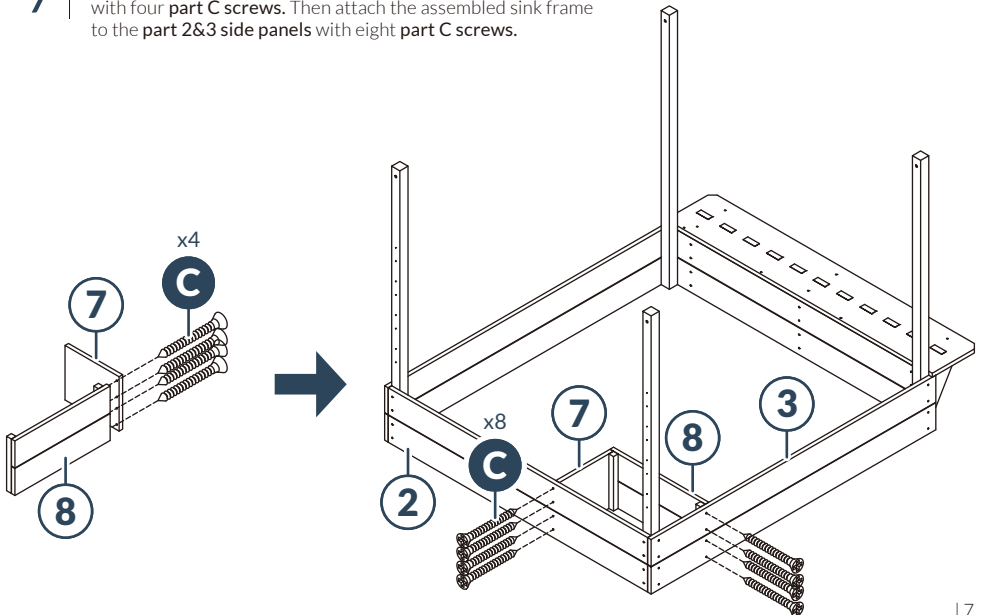 




8

 2-PERSON ASSEMBLY: Attach the part 11-14 upper back panels into the designated slots, then secure them with sixteen part B screws.

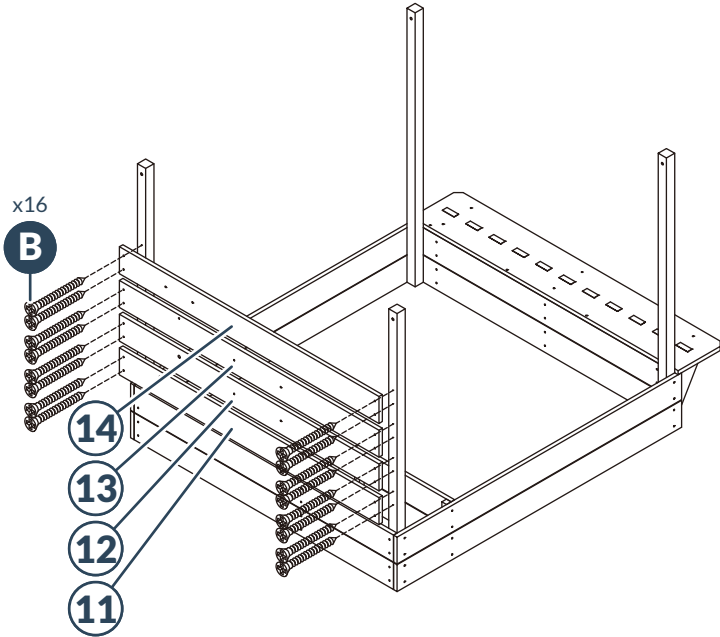


9

   
Attach the part 15 sand spiral to part 12 upper back panel with one part I screw & nut set.

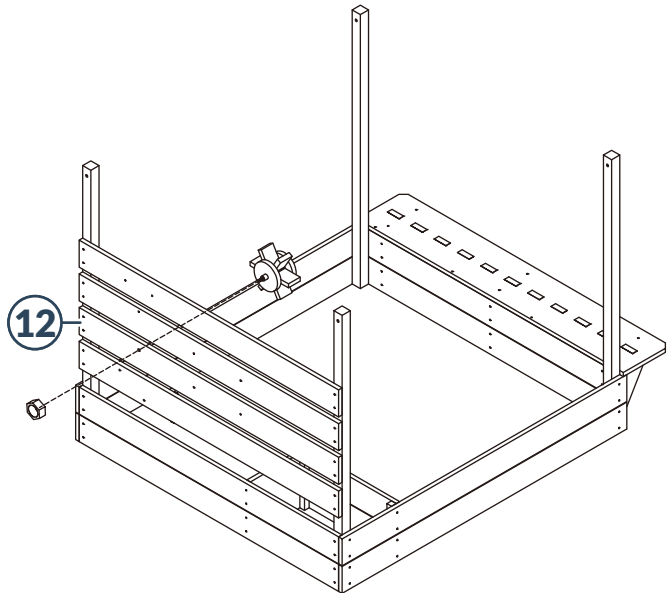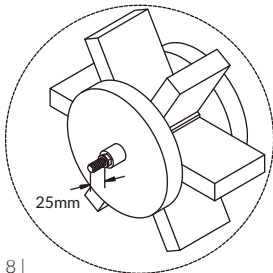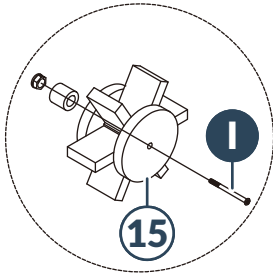

10 | Insert part 22 sand guide tray into the part 16 sand funnel, then attach the funnel to the part 13 & 14 upper back panels with three part C screws. Attach the part 17 sand chute to the part 11 upper back panel with two part G screws and two part F socket barrel nuts.

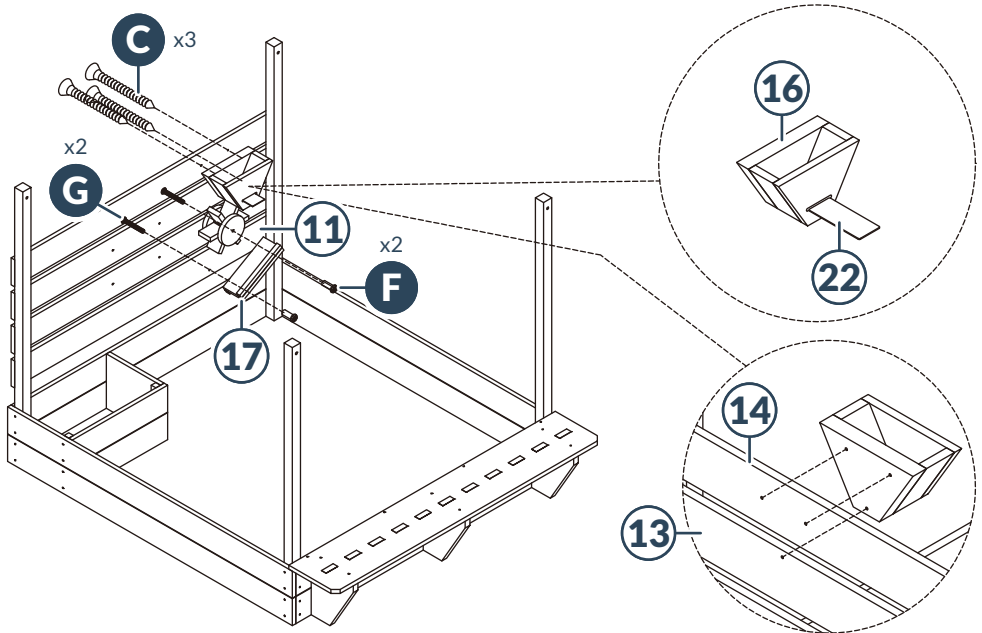 


11 | Attach the part 21 chalkboard to the part 12&13 upper back panel with four part D screws.

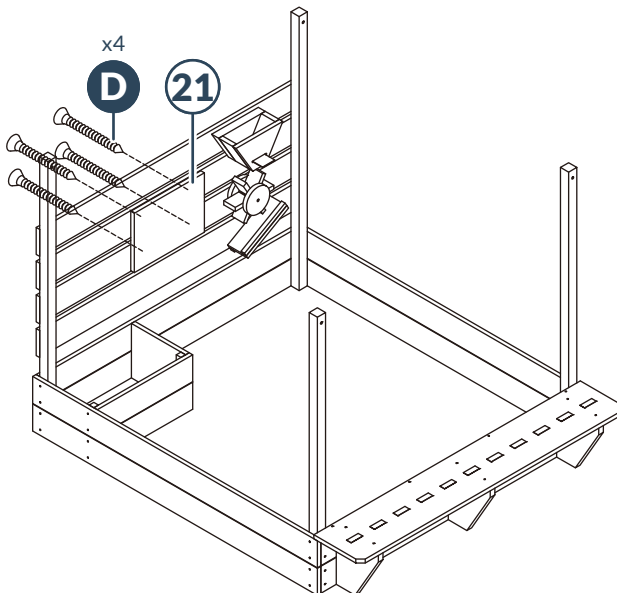 


12

 Assemble the **part 23 faucet bucket**, then attach it to **part 13 upper back panel** with two **part E screws**.
Insert the **part 24 plastic sink** into the assembled sink frame.

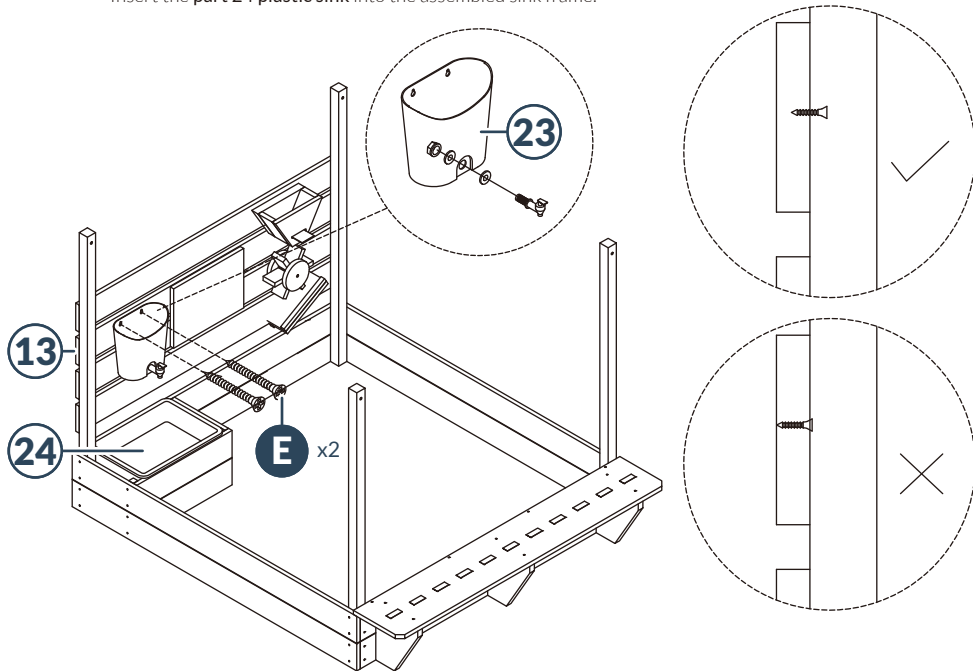


13

 Assemble one **part 18&19 roof frames**, then attach three **part 20 roof supports** with three **part A screws**.
Slide the **part 25 roof** onto the assembled roof frame.

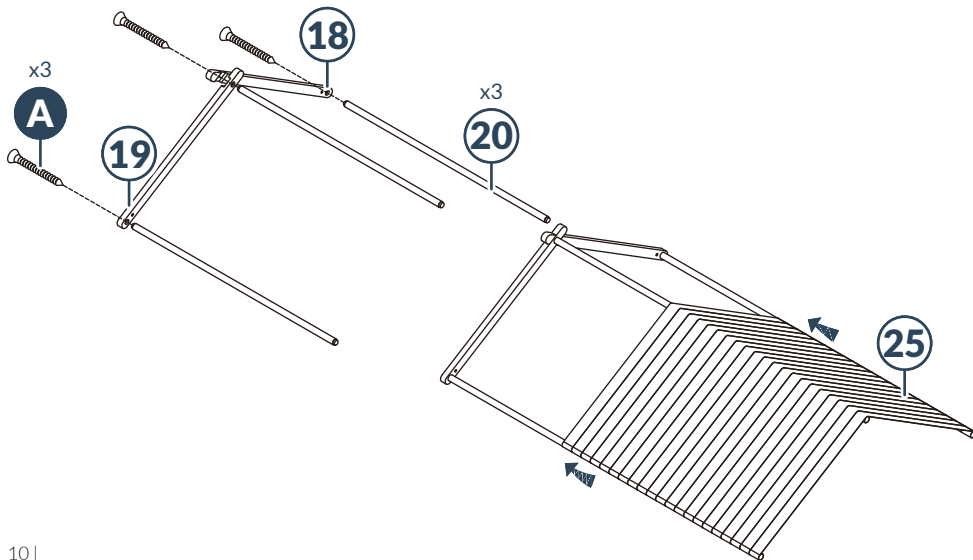

14

 
Assemble another **part 18&19** roof frames, then attach it with three **part A** screws.

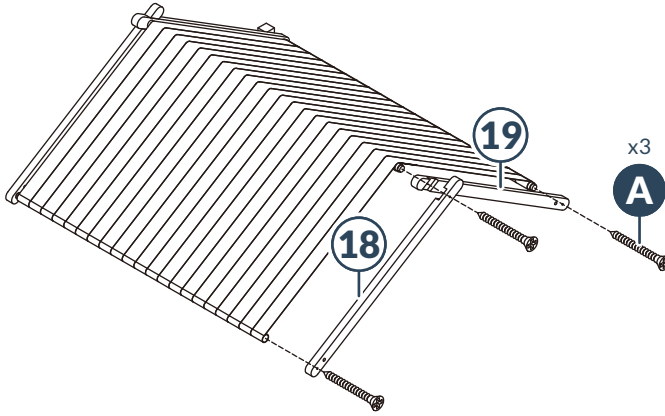

15

2-PERSON ASSEMBLY: Place sandbox on the **part 26** sand screen.

 Attach the assembled roof to the post with four **part H** screws and four **part F** socket barrel nuts.

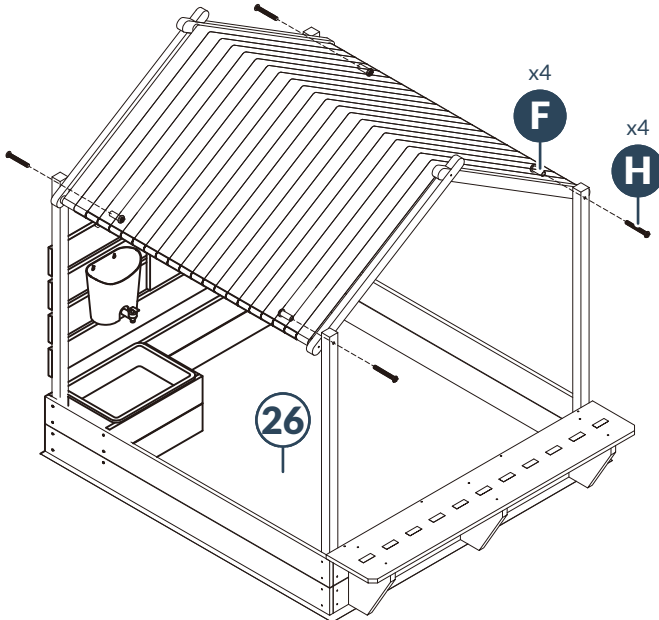



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.