



INSTRUCTION MANUAL

PCM-8L
30" Popcorn Machine

This manual contains important information regarding your Adcraft unit. Please read this manual thoroughly prior to equipment set-up, operation and maintenance. Failure to comply with regular maintenance guidelines outlined in this manual may void the warranty.



WARNINGS

- Do not touch any hot surfaces
- Plug only into a 3-hole grounded electrical outlet of the appropriate voltage
- Do not immerse unit, cord or plug in liquid at any time
- Unplug cord from outlet when not in use and before cleaning
- Do not operate unattended
- Do not use this unit for anything other than intended use
- Do not use outdoors
- Always use on a firm, dry and level surface
- Do not use if unit has a damaged cord or plug, in the event the appliance malfunctions, or has been damaged in any manner
- Keep children and animals away from unit
- Any incorrect installation, alterations, adjustments and/or improper maintenance can lead to property loss and injury. All repairs should be done by authorized professionals only.

TO INSTALL:

1. Take unit out of the box and remove all packing material.
2. Place unit on a solid and level table that is the appropriate height for use.
3. Before first use, please wash all of the glass surfaces and wipe down the interior with a clean, damp sponge.

TO USE

1. Hang the kettle pot on the popper so that its roller bar is on the door side of the unit.
 2. Plug the power cord into the electrical outlet of the appropriate voltage.
 3. Turn the light and heater to the ON setting before adding butter or oil to the kettle. Please don't use more than .5 oz of oil or butter in the kettle. NOTE: Only use butter or oil with this unit. Liquid sugar or any other sweetener can cause damage to the pot and potential injury to the user
 4. Allow the kettle to pre-heat for 3-4 minutes or until steam is visible.
 5. Open the lid to the kettle and add the kernels into the pre-heated pot. Once popcorn is in the kettle, close the lid. Please use caution as the lid to the kettle will be very hot.
 6. Turn ON the stirrer button and close the main units door. The popcorn inside the kettle will begin popping after 2-3 minutes.
 7. When the popping has finished, turn the stirrer and heat to OFF.
 8. To empty the contents of the kettle completely, gently turn the roll bar.
 9. Leave on warming light to keep the popcorn inside the unit warm and ready to serve. Turn off the heat and stir buttons to prevent motor burnout.
-



CLEANING & MAINTENANCE

NOTE: To maintain cleanliness and increase service life, this item should be cleaned daily. Do not immerse the unit in water or any other liquid. If liquid enters the electrical compartment it may cause a short circuit or electrical shock.

1. Turn off all switches on the unit and unplug the unit to let cool down.
2. Add a kettle cleaner directly into the kettle and follow cleaning directions on the bottle
3. Turn on the heater and stirrer and allow for the water to boil for 2 minutes.
4. Turn off the heater and stirrer after 2 minutes of boiling and then dump out water into a pan and discard.
5. Wipe the kettle with a damp cloth.
6. For the cabinet, use a degreaser and damp cloth to wipe the interior and exterior.


NOTE: Once you finish popping, unplug the unit from the power supply and allow for the unit to cool down completely. When removing the pot, please use caution near the heat lamp bulb.

NOTE: It is recommended to clean the kettle pot after every 3 to 4 uses or before it goes into storage for an extended period of time.

TROUBLESHOOTING:

Problem	Cause	Solution
Light is not going on	Unit is not plugged into outlet	Check the power cord and plug in
Unit does not heat	Wire for heating tube is loose	Tighten wire
	Heating tube is burnt	Replace the heating tube
	Thermostat	Replace the thermostat

Wiring Diagram for the Popcorn Machine

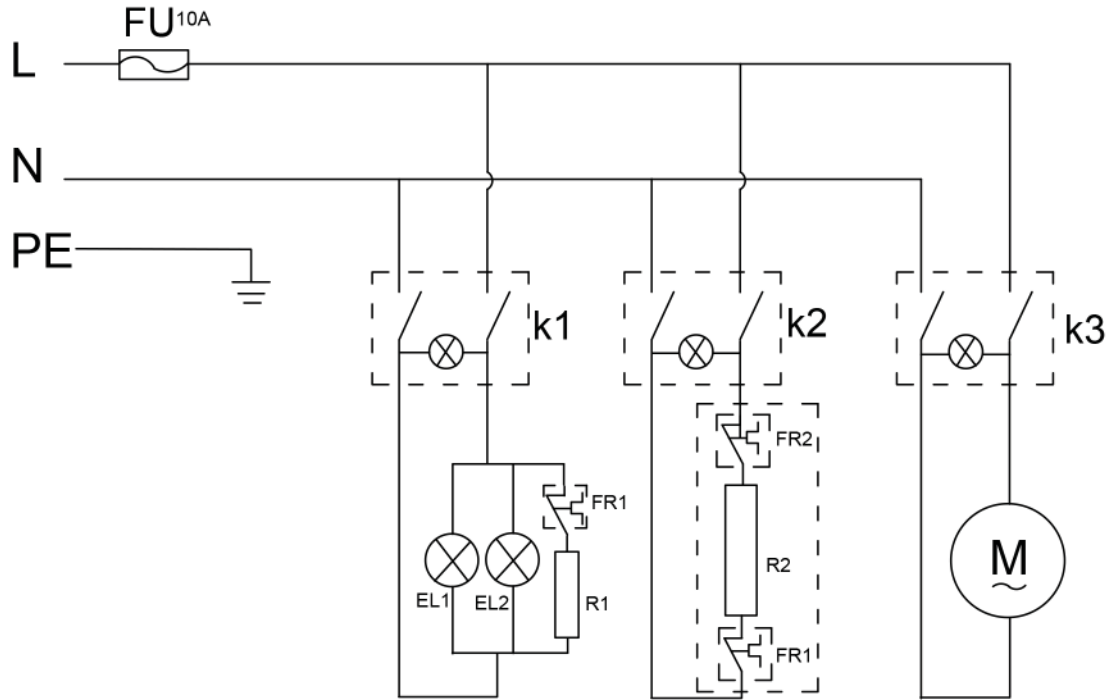

- R2 - Heat tube 115V/1000W
- FR1 - Temperature Limiter
- R1 - Insulating Tube 115V/300W
- FR2 - Temperature Limiter
- T - Light 60W
- D - Stir Motor 115V/14W
- K1 - Warm & Light Switch
- K2 - Heating Switch
- K3 - Stiring Motor Switch
- FR3 - Thermostat
- FU - Protective Tube 20A



1-Year Limited Warranty

Admiral Craft Equipment Corp. (the "Company") warrants this product (the "Product") will be free from failures in material and workmanship for one (1) year from the date of original purchase with proof of purchase, provided that the Product is operated and maintained in conformity with the Owner's Manual. This Limited Warranty is non-transferable. During this period, your exclusive remedy is repair or replacement without charge of the Product or any component found to be defective at the Company's discretion. If the Product or any component is no longer available, the Company will replace it with a similar one of equal or greater value. This Limited Warranty is void if the Product is used with voltage other than 120 Volts. **THIS WARRANTY IS IN LIEU OF ALL IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, PERFORMANCE, OR OTHERWISE, WHICH ARE HEREBY EXCLUDED. IN NO EVENT SHALL THE COMPANY BE LIABLE FOR ANY DAMAGES, WHETHER DIRECT, INDIRECT, INCIDENTAL, FORSEEABLE, CONSEQUENTIAL, OR SPECIAL ARISING OUT OF OR IN CONNECTION WITH THIS PRODUCT INCLUDING DAMAGES ARISING FOR FOOD OR BEVERAGE SPOILAGE CLAIMS.**

You may have other legal rights depending upon where you live. Some States or Provinces do not allow limitations on warranties so the foregoing may not apply to you.

Warranty Exclusions

IMPROPER ELECTRICAL CONNECTIONS:

The Company is not responsible for the repair or replacement of failed or damaged components resulting from electrical power failure, the use of extension cords, low voltage, or voltage spikes to the Product.

IMPROPER USAGE:

This Limited Warranty does not cover failure or other damages to the Product resulting from (i) improper usage or installation or failure to clean and/or maintain the Product as set forth in the Owner's Manual; or (ii) accident, misuse, abuse, negligence, or modification or alteration of the Product.

CONSUMABLES:

This Limited Warranty does not include consumables or wear-and-tear items such as legs, feet, plastic component parts, splash shields, filters, gaskets, and non-stick cooking surfaces.

ADJUSTMENTS & CALIBRATIONS:

Leveling, tightening of fasteners, or utility connections normally associated with the original installation are the responsibility of the dealer, installer, or the end user and not the responsibility of the Company and will not be considered warranty issues.

If you think the Product has failed, or requires service, within its warranty period, please contact the Company's Customer Care Department through our website at: www.admiralcraft.com

"Service" > "Technical Support Request". A receipt proving the original purchase date will be required for all warranty claims, handwritten receipts are not accepted. You may also be required to return the Product for inspection and evaluation. Return shipping costs are not refundable. The Company is not responsible for returns lost in transit.

This Limited Warranty is Valid only in the USA and Canada.