



Hubbell Control Solutions
Low Voltage Sensors(devices)
Requires 33mA each

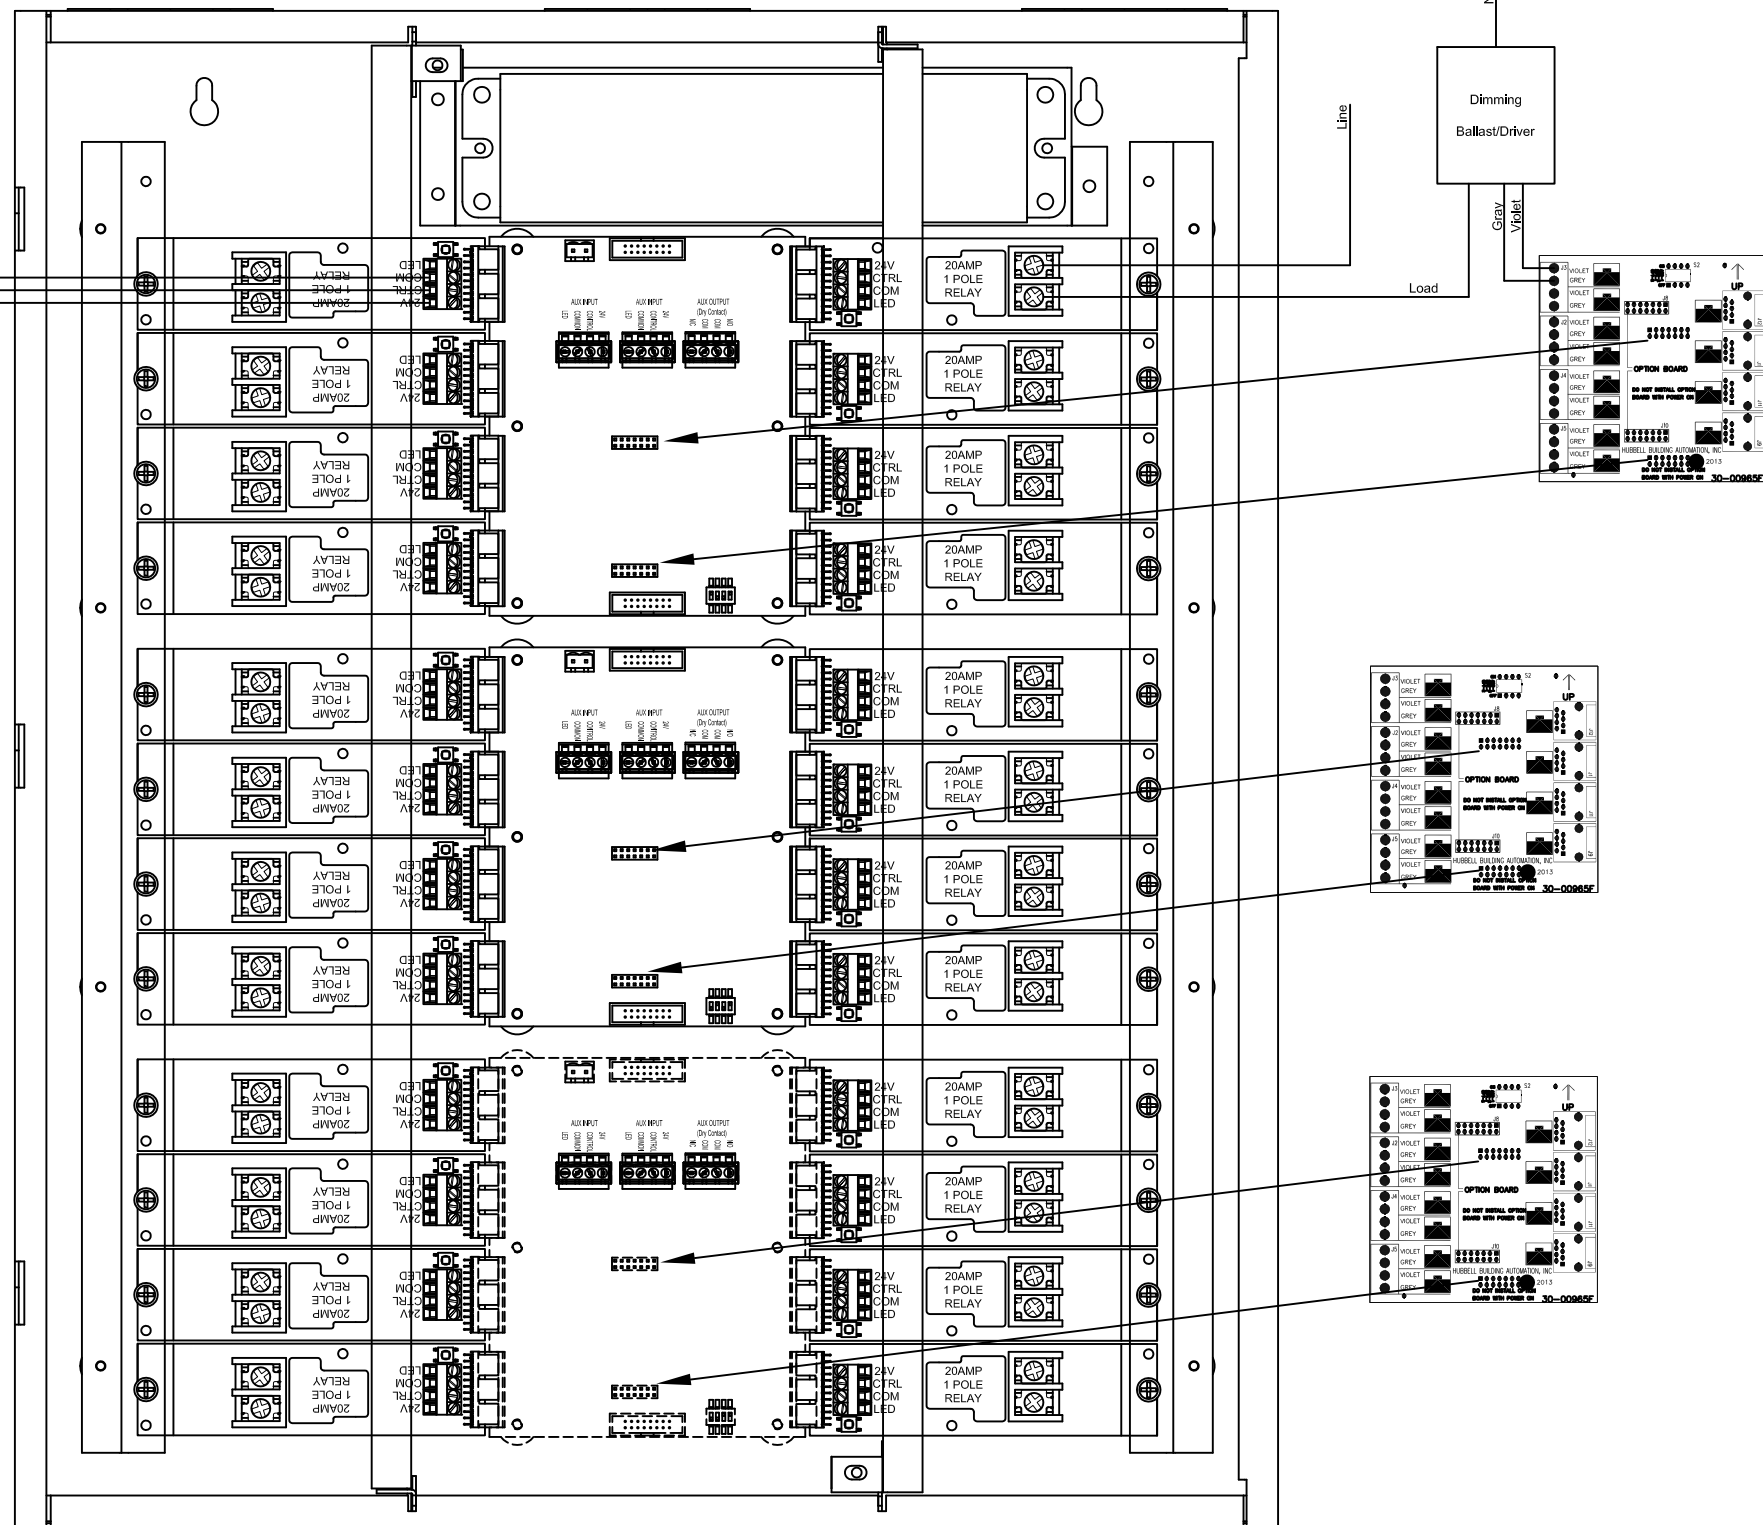

CX16/CX24

NOTES:

1. Caution: ALWAYS remove supply power to the Panel control Transformer prior to making any connections between dimming boards and panel processor board. Failure to do so may result in personnel injury, damage to the panel, and void its warranty.
2. Locate Option connectors on CX CPU Board. Verify Key alignment and firmly press board into place.
3. CX16/24 (Note -On the CX16 the third CPU board and relays 17-24 are not present).

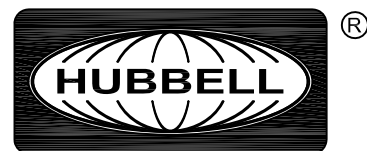

HUBBELL
Control Solutions

(888) 698-3242
(512) 450-1100

9601 Dessau Rd. - Bldg 1
Austin, Tx 78754

CX16/24 Control Panel with Dimming Card and Occupancy Sensor

THIS DOCUMENT AND SPECIFICATIONS DESCRIBED WITHIN
ARE THE EXCLUSIVE PROPERTY OF HUBBELL CONTROL
SOLUTIONS ISSUED IN THE STRICTEST CONFIDENCE, AND
SHALL NOT BE REPRODUCED, COPIED OR USED WITHOUT
PRIOR WRITTEN PERMISSION.