



90" TOP SHELF AIR HOCKEY TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3531

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: **G04865W/F**

Date Code: **2 - G04865W/F- - HL**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least one capable adults are required to assemble this product.

Non-replaceable batteries are included. Do not dispose of this product in fire.
Batteries inside this product may explode or leak.

NOTICE

REFER TO [CONTAINER] FOR SAFETY INSTRUCTIONS WHEN USING CLEANING PRODUCTS.

⚠ CAUTION

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFULL. THE TABLE IS VERY HEAVY.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

"CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Battery model: LIR2016
- Battery quantity: 2PCS
- Battery voltage: 3.6V
- Non- rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (60°C) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

Non-replaceable batteries are included. Do not dispose of this product in fire. Batteries inside this product may explode or leak.

First Time Battery Installation:

Locate battery compartment for this product .

Use alkaline batteries for maximum performance .

Using a small Phillips head screwdriver – loosen and remove the battery compartment cover screw(s).

Remove battery compartment cover .

Install new batteries only after reading the “ Battery Information NOTICE“ !

Replace compartment cover and secure cover with the cover screw . Do not over tighten and strip out the screw .

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference. Batteries must be installed / replaced by an adult .

Notice:

1. Remove and replace batteries when the electrical features of this product work slowly or are not functional .
2. Do not mix old and new batteries .
3. Do not mix different types of batteries : Alkaline , Standard (Carbon-Zinc) , or rechargeable (Nickel-Cadmium batteries) .
4. Use Alkaline Batteries for maximum performance .
5. Do not use damaged batteries .
6. Use only batteries of the same or equivalent type as recommended.
7. Install new batteries as per matching the battery polarity guide (+ & - , positive and negative) inside of the battery compartment . Correct battery polarity installation is critical as to not damage the internal electrical components as well as insuring the correct functionality of the product .
8. Do not short circuit the battery terminals .
9. Always remove exhausted , leaking , weak , and batteries from long periods of nonuse from the product . Battery leakage and corrosion can cause damage .
10. Check the battery terminals are clean and bright before installing new batteries.
11. Dispose of old batteries safely and per local battery disposal codes .
12. Do not dispose of batteries into a fire as they may explode or leak.
13. If removable rechargeable batteries are used , they are to be charged under adult supervision .
14. Rechargeable batteries are to removed from the product before they are charged .
15. If you use a battery charger, it should be examined regularly for damage to the cord , plug, enclosure, and other parts. Do not use a damaged or malfunctioning charger until it is properly repaired.
16. Non rechargeable batteries must not be recharged .
17. Always remove batteries from this product for extended storage and or non-use .
18. Should this product cause , or be affected by, local electrical interference , move it away from other electrical equipment . Reset (switching off and back on again and or removing and reinserting the batteries) if necessary .

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

Allen Wrench (Included)
Furniture Polish and Soft Cloth
Carpenters Level
Phillips Screw Driver

 
ASSEMBLY TIPS

Make sure you understand the following tips before you begin to assemble your game table.


1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.

HARDWARE IDENTIFIER


(To Scale)



 H1 = 28 pcs
8 mm x 35 mm
Allen Head Bolt

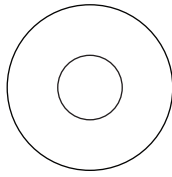

H2 = 32 pcs
8.5 mm x 22 mm
Flat Washer

 

H3 = 4 pcs
8 mm x 28 mm
Allen Head Bolt



H4 = 16 pcs
4 mm x 45 mm
Phillips Flat
Head Screw



H5 = 8 pcs
3.5 mm x 12 mm
Phillips Round
Head Screw



H6 = 2 pcs
3.5 mm x 14 mm
Phillips Flat
Head Screw



 
H7 = 2 pcs
3.5 mm x 18 mm
Phillips Round
Head Screw



H8 = 4pcs
3.5 mm x 33 mm
Phillips Round
Head Screw



H9 = 32 pcs
M8- Lock Washer

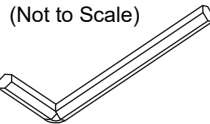


T1 = 1 pc
Allen Wrench


ACCESSORIES IDENTIFIER

(Not to Scale)

 NOTE: A3 Felt Pads may already
be attached to A1, A2 and A10 Strikers.




A1 = 1 pc
Blue LED Striker

 


A2 = 1 pc
Red LED Striker



 A3 = 4 pcs
Felt Pad



A6 = 2 pc
Red Puck

 

(Only used to charge A1 and A2 LED
striker and A13 LED puck charger)

A7 = 1 pc
USB Cable

Used to level table if required

 


A8 = 3 pcs
1mm Shim Pack


Used to level table if required




A9 = 3 pcs
2mm Shim Pack




A10 = 2 pcs
Red Striker

 

A11 = 1 pc
Rechargeable
Blue LED Puck

 


A12 = 1 pc
Rechargeable
Red LED Puck

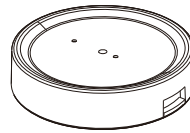 


A13 = 1 pcs
LED puck charger

 
PARTS IDENTIFIER (Not to Scale)

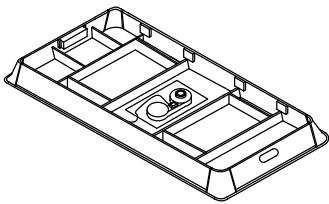

 
P13-2121 = 1 pc
Air Hockey
Table Cabinet

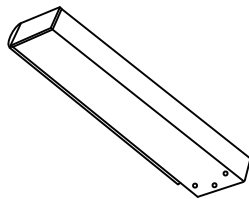


P2 = 2 pcs
Left Leg

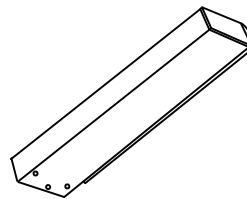 


P3 = 2 pcs
Right Leg

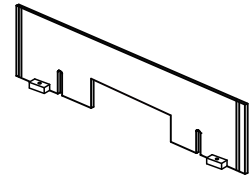 


P4 = 1 pc
End Apron

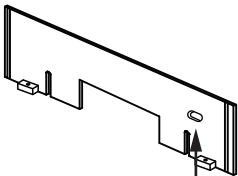 


P5-R = 1 pcs
End Apron with
ON/OFF Slot

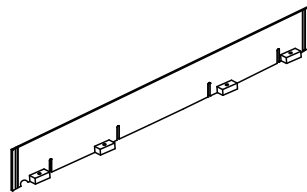 


P6-R = 2 pcs
Side Apron

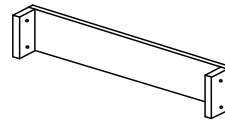 


P7 = 2 pcs
End Leg Panel

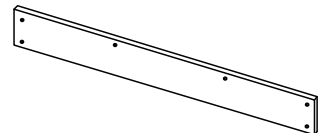 


P8 = 2 pcs
Side Leg Panel

 


P9 = 1 pc
Side Leg
Support Board A

 

P10 = 1 pc
Side Leg
Support Board B

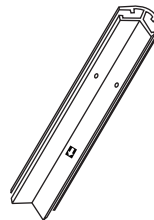 

P11 = 4 pcs
Corner Post

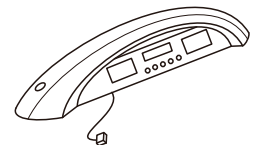 

P14-2021 = 1 pc
Electronic Scorer

PARTS REQUIRED:

28 pcs - H1	8 x 35mm Allen Head Bolt	28 pcs - H2	8.5 x 22mm Flat Washer
2 pcs - P7	End Leg Panel	2 pcs - P8	Side Leg Panel
2 pcs - P2	Left Leg	2 pcs - P3	Right Leg
1 pc - P13-2021	Air Hockey Table Cabinet	1 pc - T1	Allen Wrench
28 pcs - H9	M8 Lock Washer		

STEP:1

Leave Air Hockey Table Cabinet (**P13-2021**) face down in carton to assemble.

Install Left Legs (**P2**) and Right Legs (**P3**) onto the Air Hockey Table Cabinet (**P13-2021**) with Allen Head Bolts (**H1**), Lock Washers (**H9**) and Flat Washers (**H2**) using Allen Wrench (**T1**) as shown in **FIGURE 1**.

Do not tighten Bolts (H1) at this time.

Install End Leg Panels (**P7**) and Side Leg Panels (**P8**) onto the Legs using Bolts (**H1**), Lock Washers (**H9**) and Flat Washers (**H2**) as shown in **FIGURE 1**.

Do not tighten these Apron Bolts (H1) at this time.

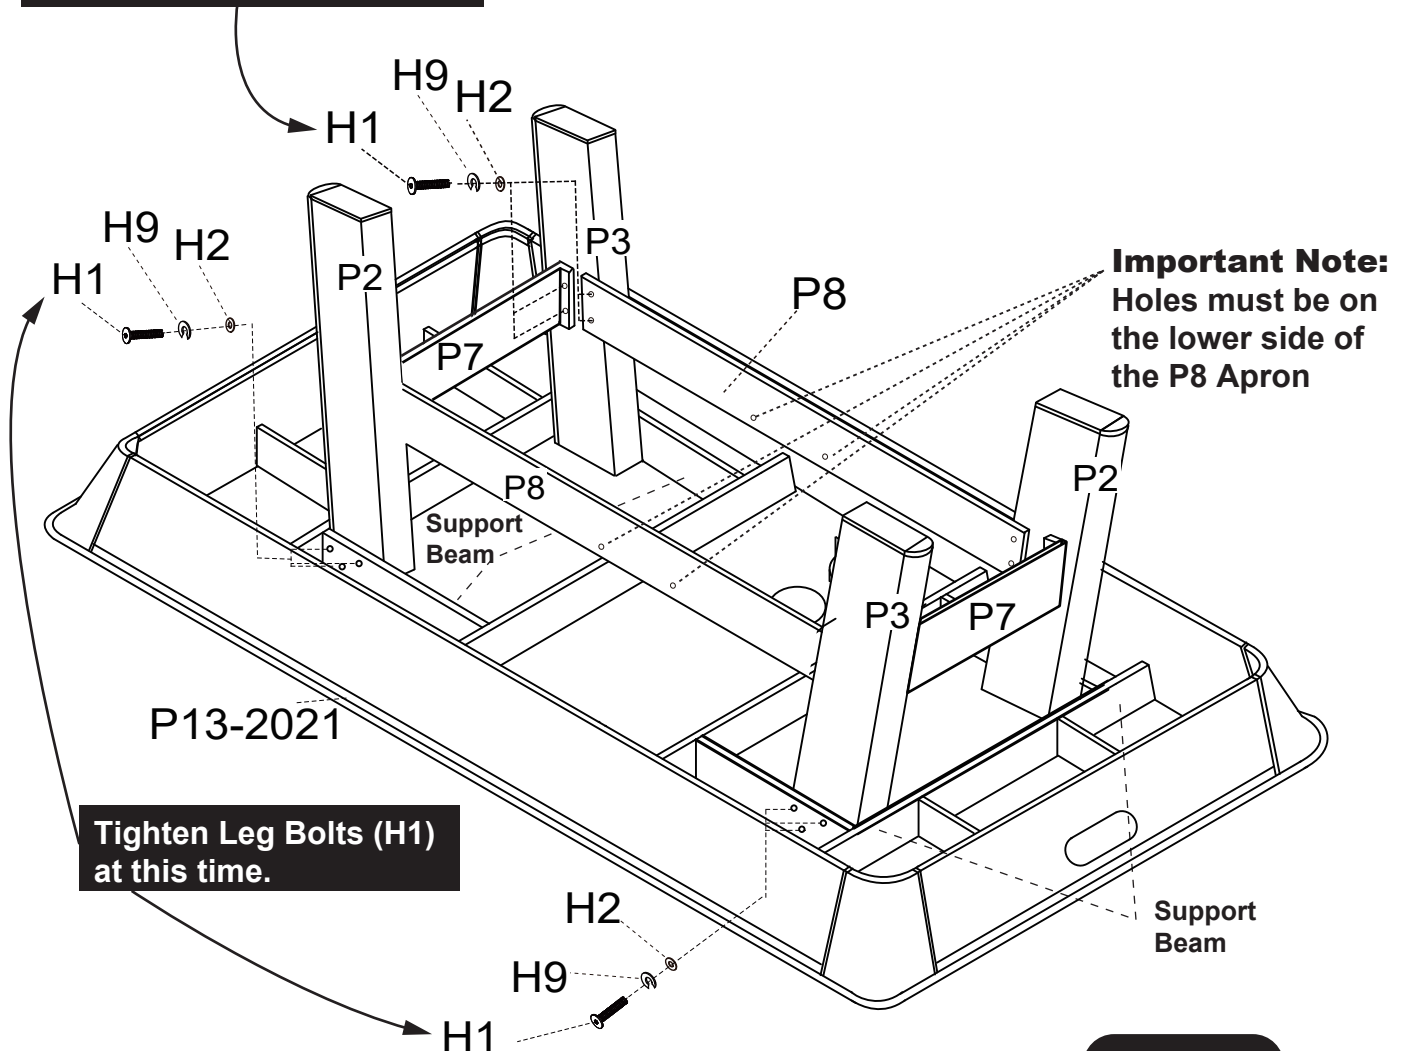 


FIGURE 1

NOTE: BE SURE LEFT LEGS(P2) AND RIGHT LEGS(P3) ARE INSTALLED INSIDE OF SUPPORT BEAMS AS PER DIAGRAM

PARTS REQUIRED:

4 pcs - **H8** 3.5x 33mm Phillips Round Head Screw 12 pcs - **H4** 4 x 45mm Phillips Flat Head Screw
8 pcs - **H5** 3.5 x 12mm Phillips Round Head Screw 2 pcs - **P6-R** Side Apron
1 pc - **P4** End Apron 1 pc - **P5-R** End Apron ON/OFF Slot 4 pcs - **P11** Corner Post

STEP:2

 
Install End Aprons (**P4**), End Apron with ON/OFF Slot (**P4**) and Side Apron (**P6-R**) as shown in **FIGURE 2**.

Slide Corner Posts (**P11**) down onto each end of End Aprons and Side Aprons, and attach them using Screws (**H5**) as shown in **DETAIL A**.

Next, install screws (**H8**) using predrilled holes into side aprons only as shown in **DETAIL B**.

Lastly, Attach **P4**, **P5-R** and **P6-R** via apron support blocks to the main cabinet using screws (**H4**) as per **DETAIL B** and **DETAIL C**.

Tighten, but do not strip out any Screws.

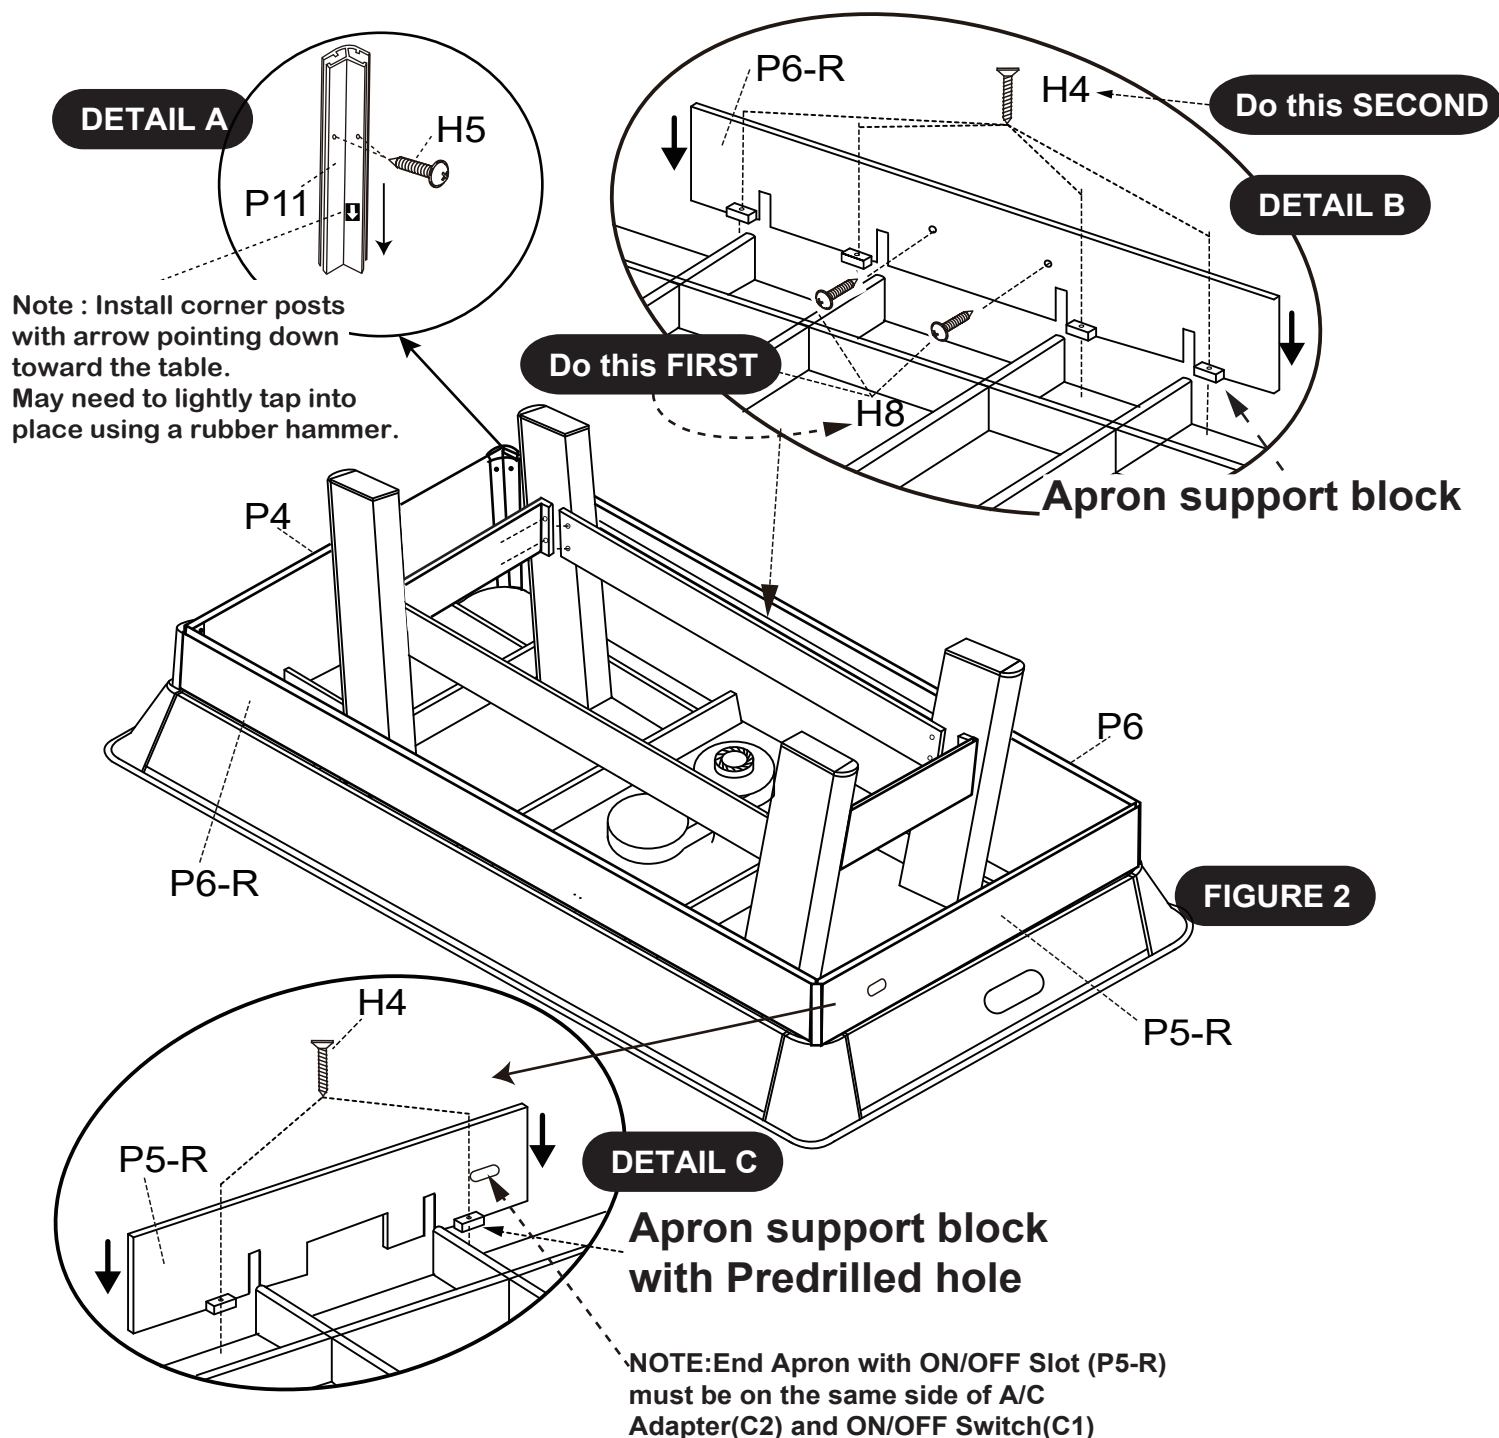

PARTS REQUIRED:

2 pcs - **H6** 3.5 x 14mm Phillips Flat Head Screw


1 pc - **C1** ON/OFF Switch (already attached to underside of table)

STEP:3

Install ON/OFF Switch (**C1**) onto inside of End Apron with ON/OFF Slot (**P5-R**) using pilot holes with Philips Flat Head Screws (**H6**) as shown in **FIGURE 3**.

Tighten, but do not strip out Screws (H6).

 FIGURE 3

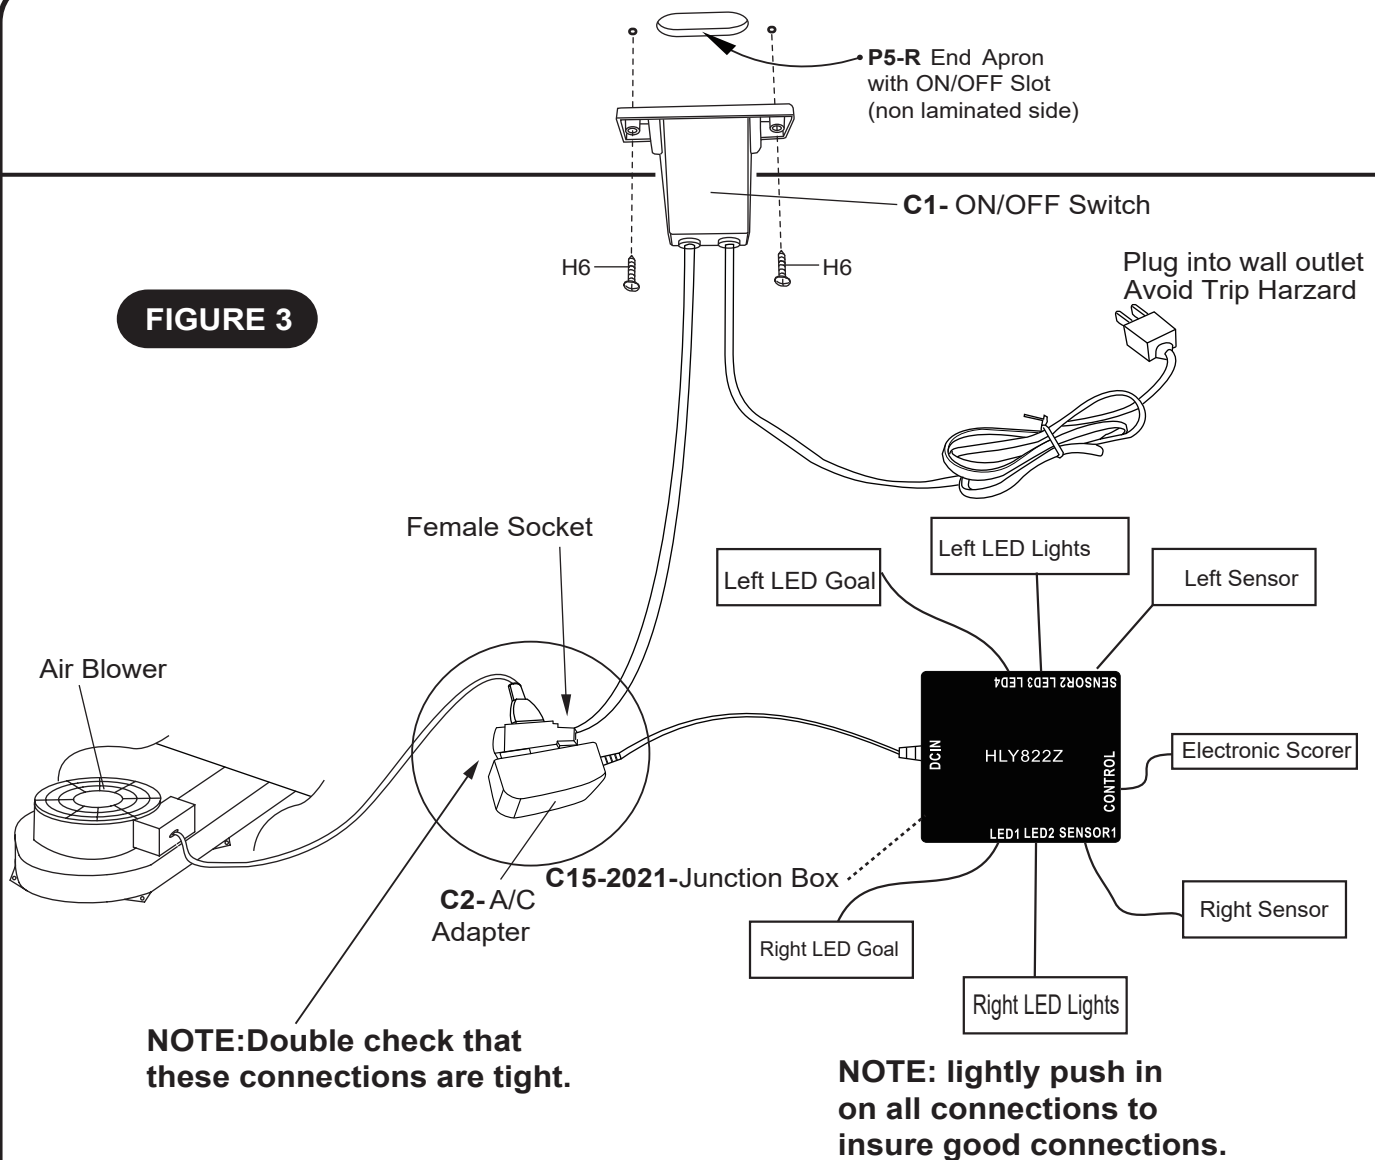

PARTS REQUIRED:

4 pcs - **H4** 4 x 45mm Phillips Flat Head Screw
4 pcs - **H3** 8 X 28mm Allen Head Bolt
1 pc - **P9** Side Leg Support Board A

4 pcs - **H2** 8.5 x 22mm Flat Washer
1 pc - **P10** Side Leg Support Board B
4 pcs - **H9** M8 Lock Washer

 
STEP:4

Screw Side Leg Support Board A (**P9**) and Side Leg Support Board B (**P10**) to Air Hockey Table Cabinet (**P13-2021**) using Screws (**H4**) as shown in **DETAIL D** and **DETAIL E**.

Next, install Side Leg Support Board A (**P9**) and Side Leg Support Board B (**P10**) onto inside of Side Leg Panels (**P8**) with Bolts (**H3**), Lock Washers (**H9**) and Flat Washers (**H2**) using Allen Wrench (**T1**) as shown in **DETAIL D** and **DETAIL E**.

Do not strip out Screws(H4).

Lastly , tighten all remaining H1 Bolts from Step 1 and Step 4 at this time.

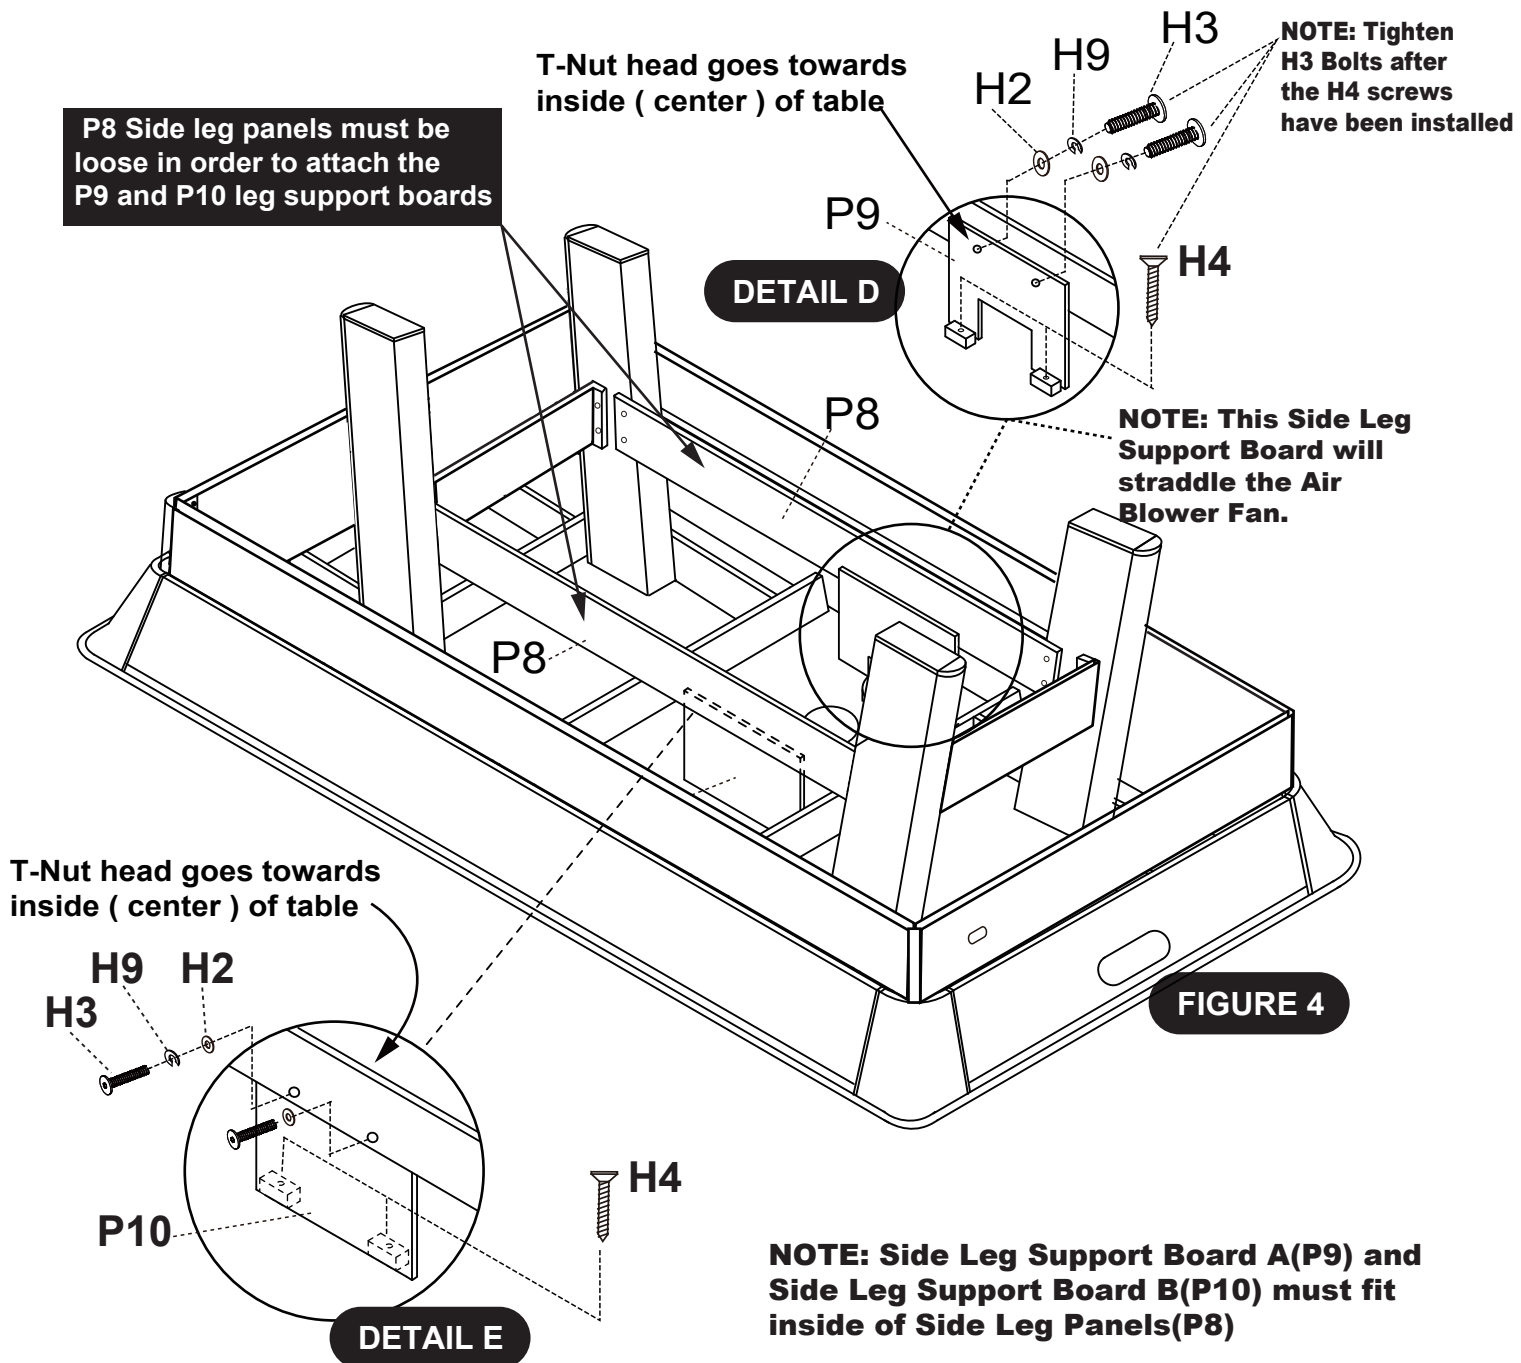

LIFT + ROTATE THE TABLE

 
Always use proper lifting techniques

⚠ CAUTION :

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION :

VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL. THE TABLE IS VERY HEAVY.

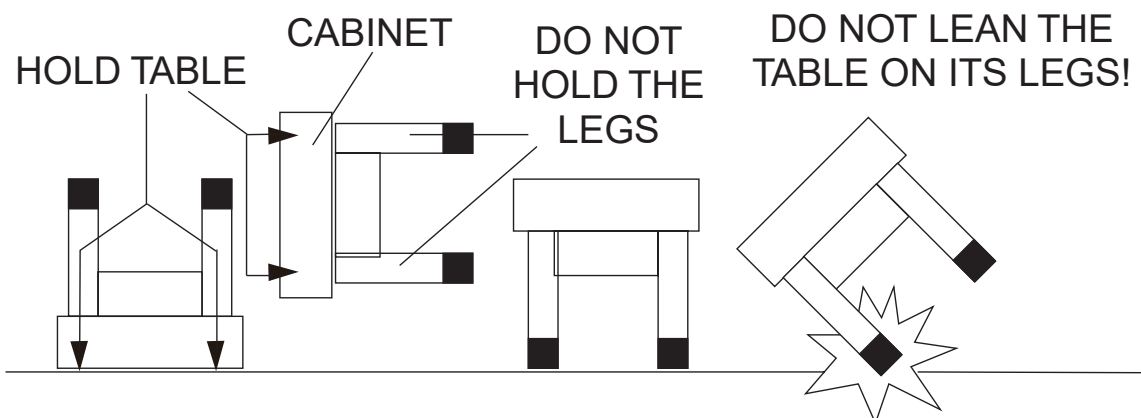

PARTS REQUIRED:

2 pcs - **H7** 3.5 x 18mm Phillips Round Head Screw

1 pc -**P14-2021** Electronic Scorer

 
STEP:5

First, feed the Electronic Scorer (**P14-2021**) plug wire down through the hole on one side of the long top rail as shown in **FIGURE 6**.


Next, connect the Electronic Scorer plug to Junction Box (**C3**) as shown in **DETAIL F**.

Next, install Electronic Scorer (**P14-2021**) onto long top rail using Philips Round Head Screws (**H7**) as shown in **FIGURE 6**.

Tighten, but do not strip out Screws (H7).

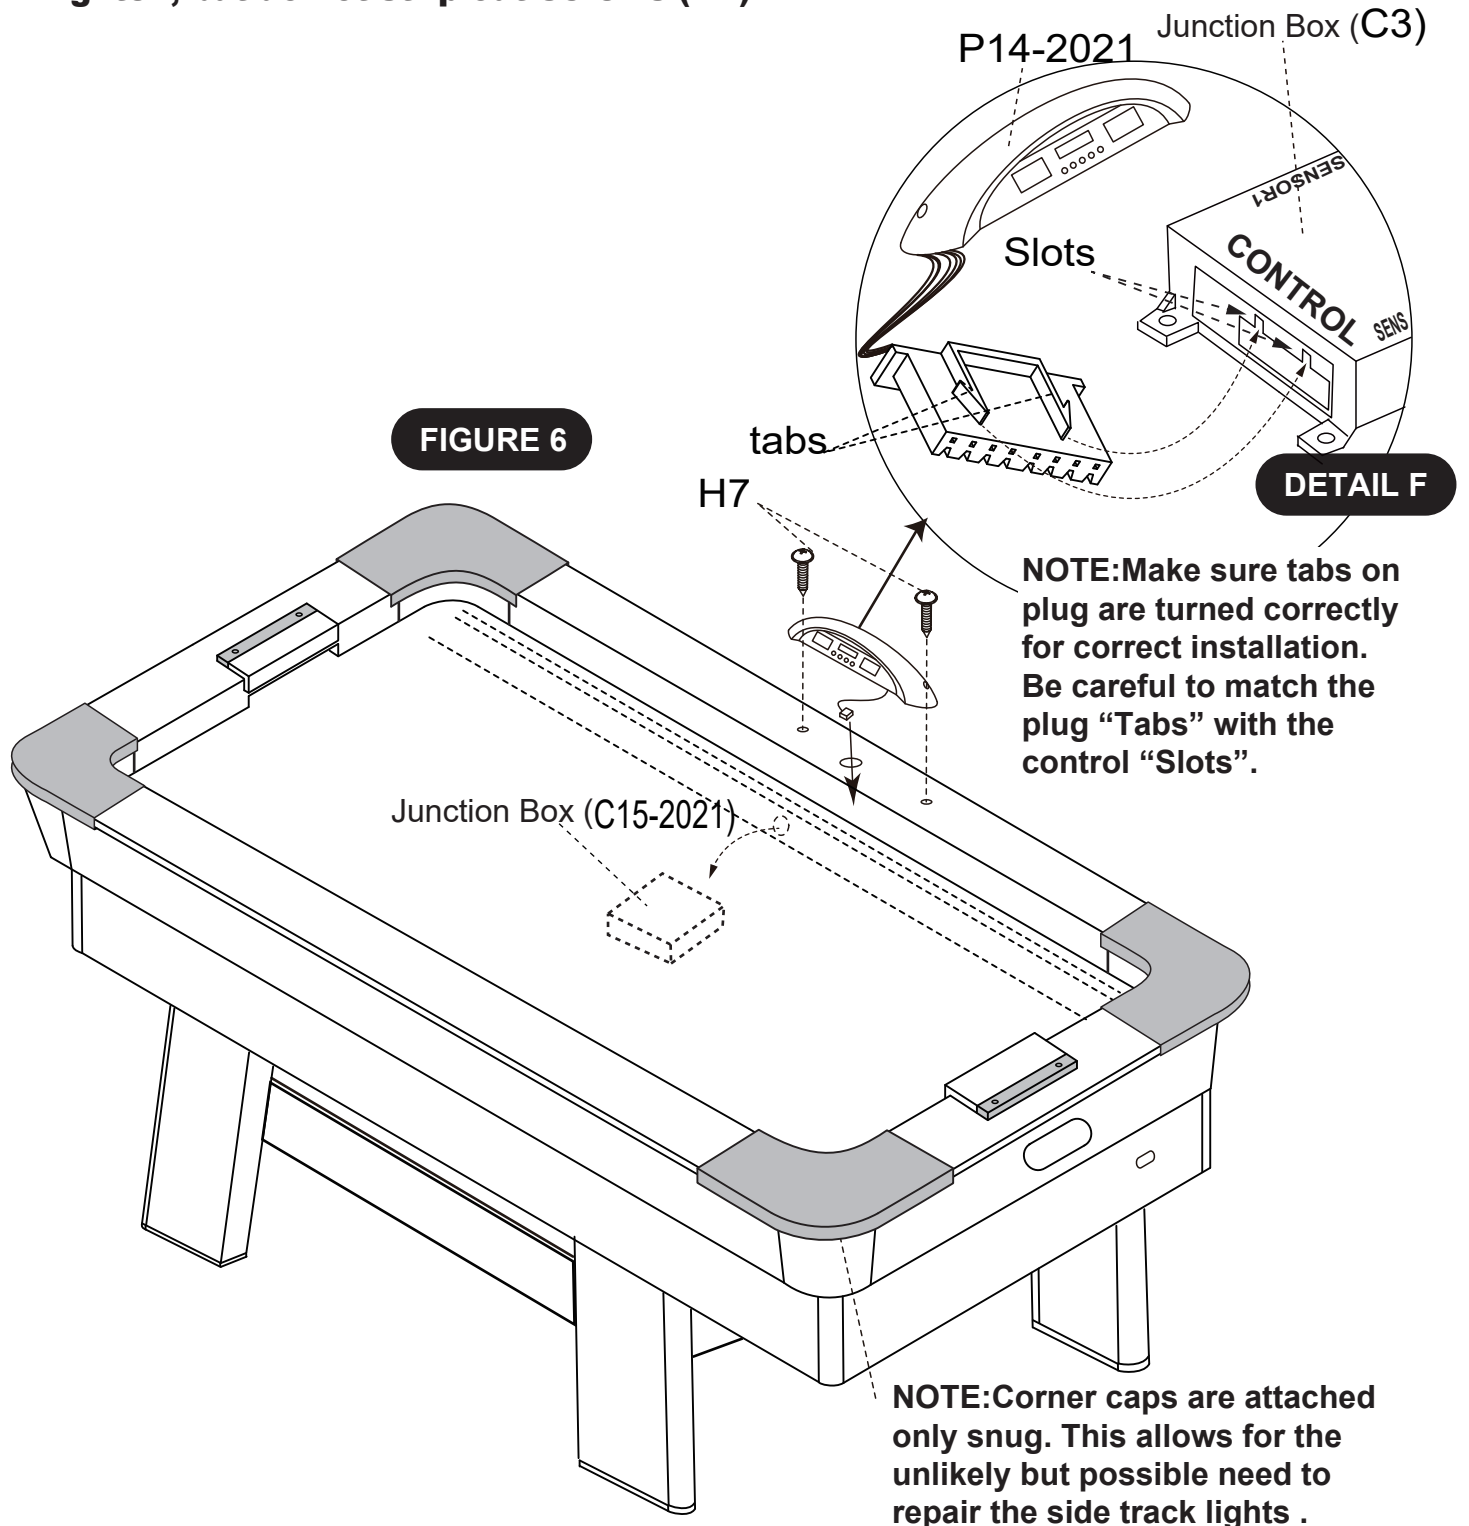

 ELECTRICAL CONNECTIONS & SPARE PARTS DRAWINGS

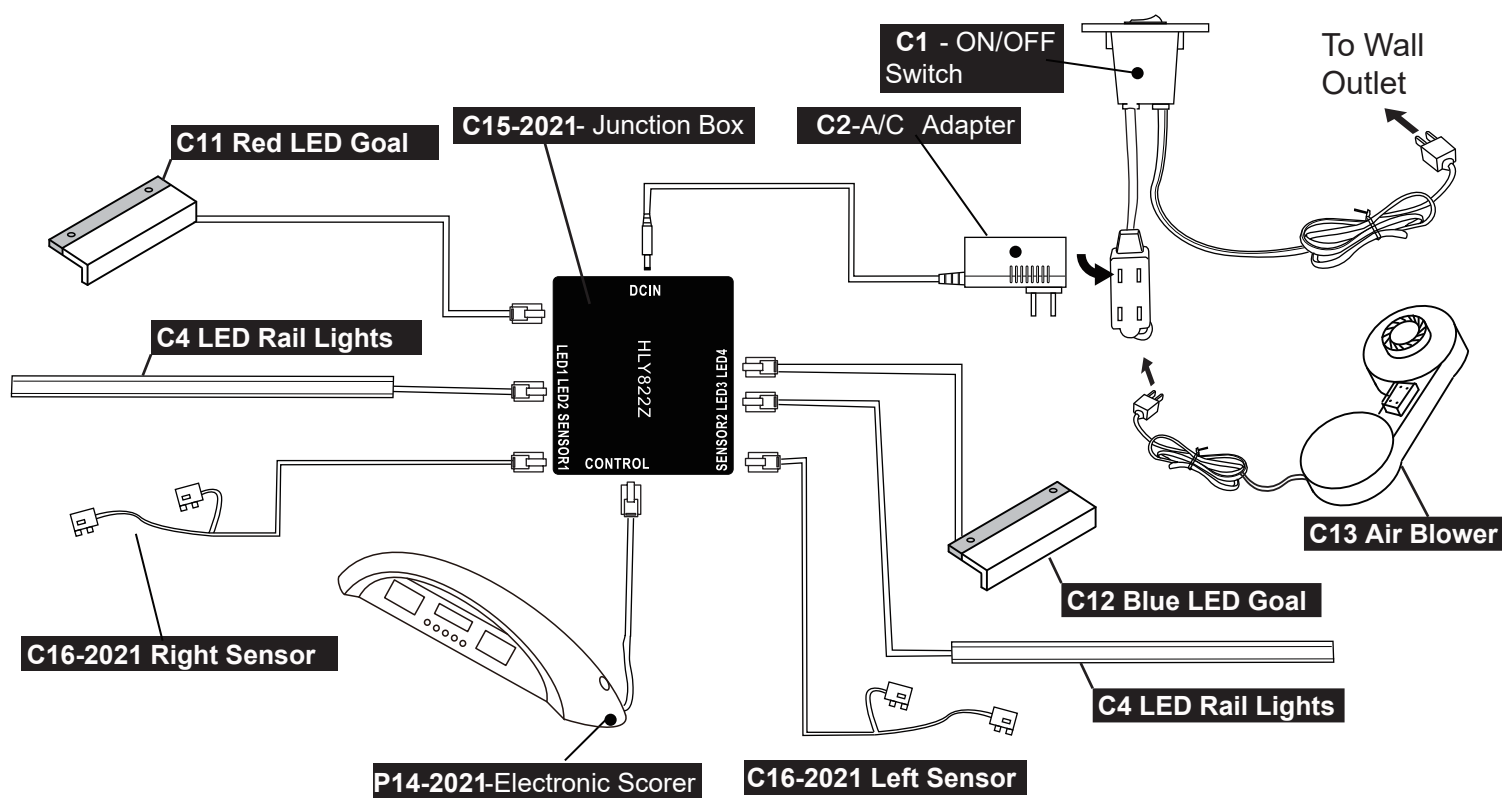

HOCKEY GAME RULES:

1. This game is designed to be played with two (2) players, one at each end, or with four (4) players, two at each end of the game table.
2. Flip a coin to determine who will begin play, or a face-off can be held at the center of the table.
3. Play begins when the puck is placed on the playing surface. Players must hit the puck with the strikers and attempt to shoot into the opponent's goal.
4. One point is awarded when a puck is shot into the opponent's goal.
5. Winning the game: the winning score is accomplished by being the first player to reach a predetermined score or by being the player to score the most points within a given period of time.

ELECTRONIC SCORER OPERATION:

POWER ON/OFF = Press POWER ON/OFF button to start or turn off the scoring unit.

START/PAUSE = Press START/PAUSE button to START the game. Press START/PAUSE button during game will PAUSE or RESUME the game.

LIGHT ON/OFF = Press LIGHT ON/OFF button to turn on or turn off the Light.

SELECT/RESET = Press SELECT/RESET button to select time options 5, 10, 15 minutes or No Time Limit. Long press SELECT/RESET button to reset back to the game option.

SOUND ON/OFF = Press Sound ON/OFF button to turn on or turn off the Sound.

Congratulations! You have now assembled your table. Please note the Care and Use instructions below to insure many years of trouble free use of your game table.

CARE AND USE FOR YOUR PRODUCT

- 1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
- 2. For long life and best play from your air hockey table, apply spray furniture polish to a clean cloth and wipe down the playfield with air motor running to make the best play and frequently thereafter.
- 3. This product is intended for **INDOOR** use only.
- 4. **DO NOT** operate the motor if the cord is damaged in any way.
- 5. **DO NOT** sit, climb or lean on the table.
- 6. **DO NOT** drag the table when moving it. This will damage the legs.
- 7. **DO NOT** set drinks on the table.
- 8. It is suggested that this table be placed close to wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.
- 9. Use a carpenters level to properly level table using the leg levelers.
- 10. If possible, cover table with a pool table cover or sheet when not used to keep playfield clean preventing any dust build up.


PRODUCT PARTS LIST FOR MODEL # G04865W/F

Part #	Description	Qty.	Part #	Description	Qty.
G04865HLH1	8 x 35 mm Allen Head Bolt	28	G04865HLP4	End Apron	1
G04865HLH2	8.5 x 22 mm Flat Washer	32	G04865HLP5-R	End Apron with ON/OFF Slot	1
G04865HLH3	8 x 28 mm Phillips Round Head Screw	4	G04865HLP6-R	Side Apron	2
G04865HLH4	4 x 45 mm Phillips Flat Head Screw	16	G04865HLP7	End Leg Panel	2
G04865HLH5	3.5 x 12 mm Phillips Round Head Screw	8	G04865HLP8	Side Leg Panel	2
G04865HLH6	3.5 x 14 mm Phillips Flat Head Screw	2	G04865HLP9	Side Leg Support Board A	1
G04865HLH7	3.5 x 18 mm Phillips Round Head Screw	2	G04865HLP10	Side Leg Support Board B	1
G04865HLH8	3.5 x 33 mm Phillips Round Head Screw	4	G04865HLP11	Corner Post	4
G04865HLH9	M8 Lock Washer	32	G04865HLP14-2021	Electronic Scorer	1
G04865HLA1	BLUE LED Striker	1	G04865HLC1	ON/OFF Switch	1
G04865HLA2	RED LED Striker	1	G04865HLC2	A/C Adapter	1
G04865HLA3	Felt Pad	4	G04865HLC15-2021	Junction Box	1
G04865HLA6	Red Puck	2	G04865HLC4-A	LED Rail Light A	2
G04865HLA7	USB Cable	1	G04865HLC4-B	LED Rail Light B	6
G04865HLA8	1 mm Shim Pack	3	G04865HLC4-C	LED Rail Light C	2
G04865HLA9	2 mm Shim Pack	3	G04865HLC5	Corner Cap	4
G04865HLA10	Red Striker	2	G04865HLC6-A	Side Top Rail with Hole (ES installation)	1
G04865HLA11	Rechargeable Blue LED Puck	1	G04865HLC6-B	Side Top Rail without Hole	1
G04865HLA12	Rechargeable Red LED Puck	1	G04865HLC7	8 x 25 mm Allen Head Bolt	4
G04865HLA13	LED Puck Charger	1	G04865HLC8	3 x 9 mm Phillips Round Head Screw	30
G04865HLT1	M5 Allen Wrench	1	G04865HLC9	8.5 x 22 mm Flat Washer	4
G04865HLK1	Hardware Kit	1	G04865HLC16-2021	Lower Puck Catcher with Sensor Wires	2
G04865HLM1	Owner's Manual	1	G04865HLC11	Red LED Goal	1
G04865HLP13-2021	Air Hockey Table Cabinet (no motor)	1	G04865HLC12	Blue LED Goal	1
G04865HLP2	Left Leg	2	G04865HLC13	Air Blower	1
G04865HLP3	Right Leg	2	G04865HLC14	Plastic Puck Catcher	2

Replacement of LED Rail Lights


STEP ONE :

 Remove Corner Caps (C5) from the table top rail.

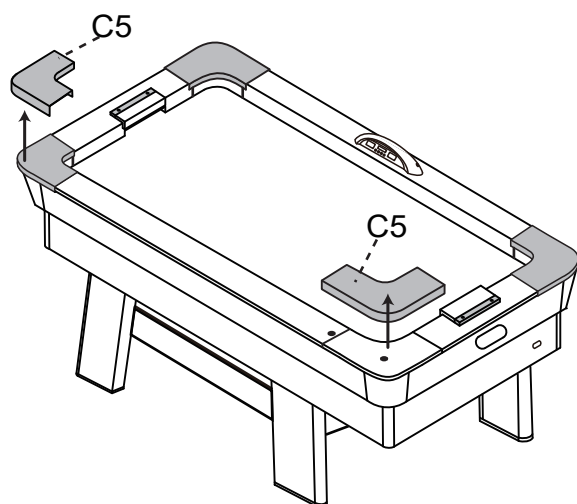

STEP TWO :

 Unscrew Bolts (C7) and slide Side Top Rail (C6-A) or (C6-B) from Table Cabinet (P1). And carefully unplug the LED Rail Light A (C4-A).

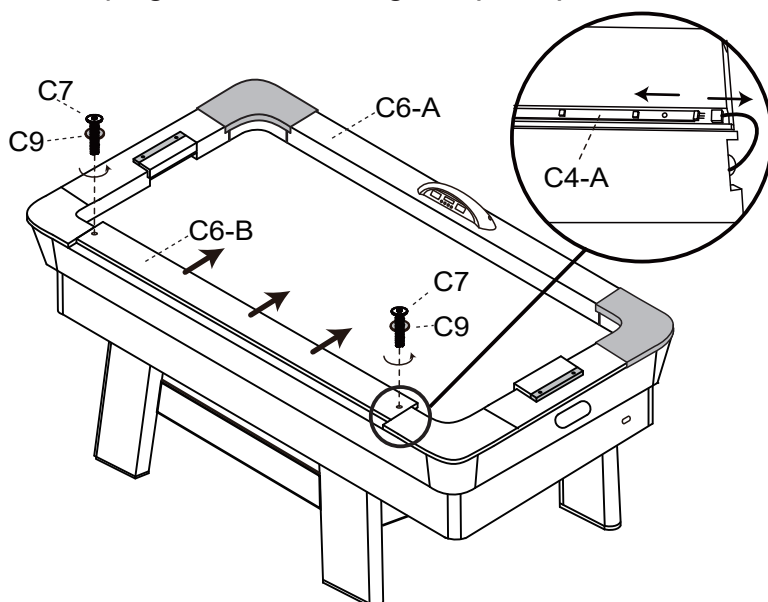

STEP THREE :

Unscrew Screws (C8), and separate LED Rail Lights from each other, by gently pulling apart.

 
Align the male and female connectors of the working LED Rail Lights , and install them back into Side Top Rail (C6-A/C6-B) using Screws (C8) as shown in the diagram.

Next, connect the plug of LED Rail Light A (C4-A).

Slide back and screw Side Top Rail (C6-A/C6-B) to the table top rail using Bolts (C7) and Washers (C9).

Lastly, press Corner Caps (C5) back to the table top rail.


Tighten, but do not strip out screws (C8).

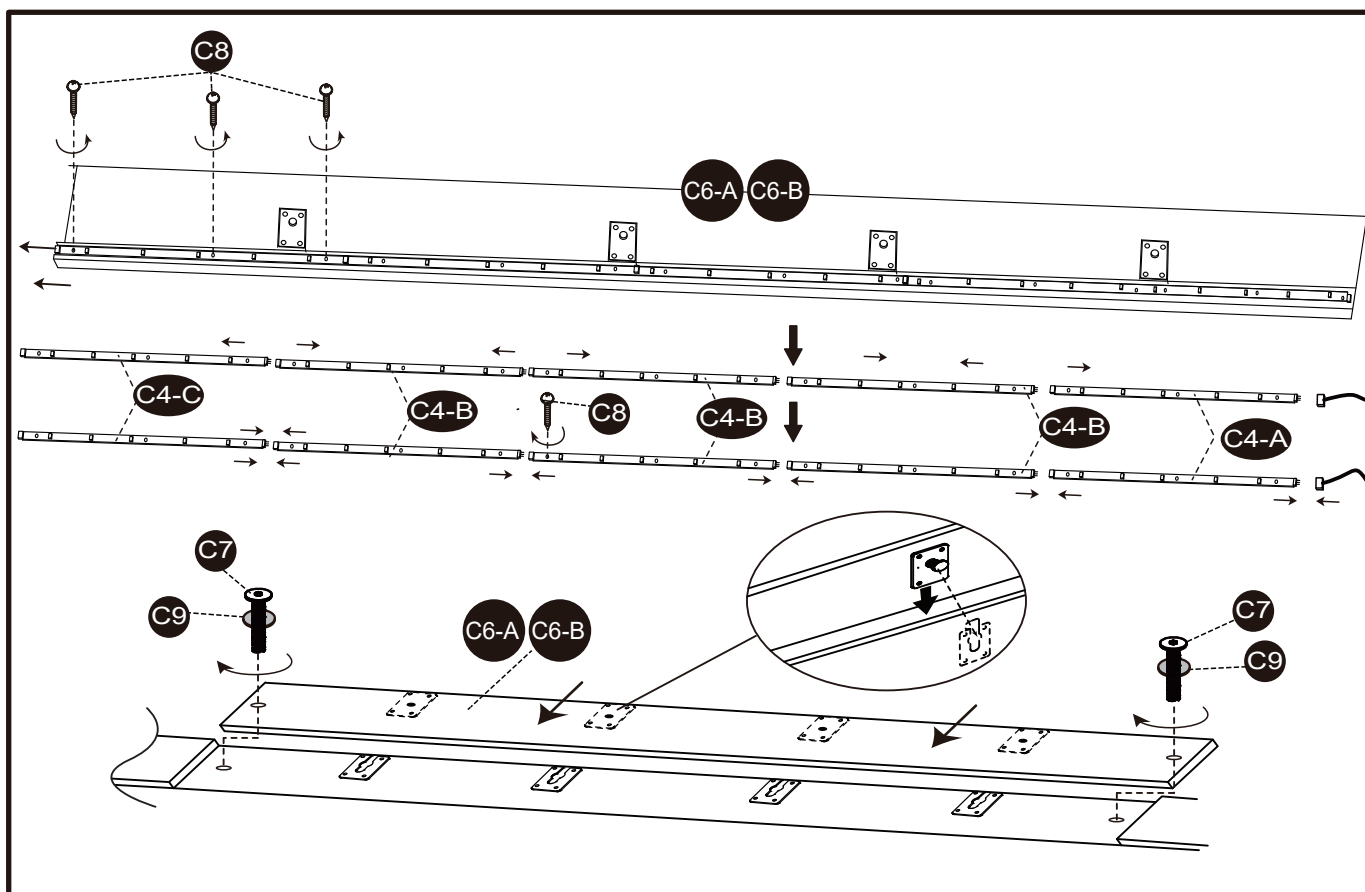

LED PUCK BATTERY CHARGE INSTRUCTION


STEP ONE:

 Plug the USB cable into the LED puck charger.

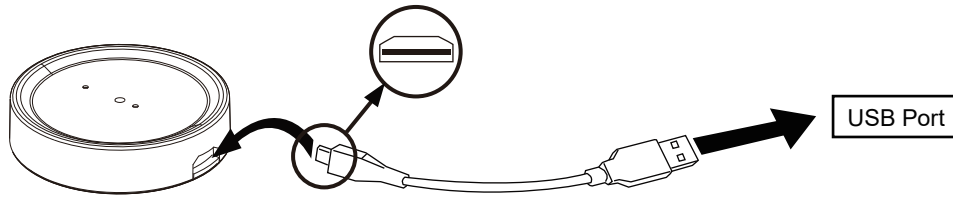


STEP ONE:

 Place the small hole on the back of the PUCK corresponding to the contact of the LED puck charger.

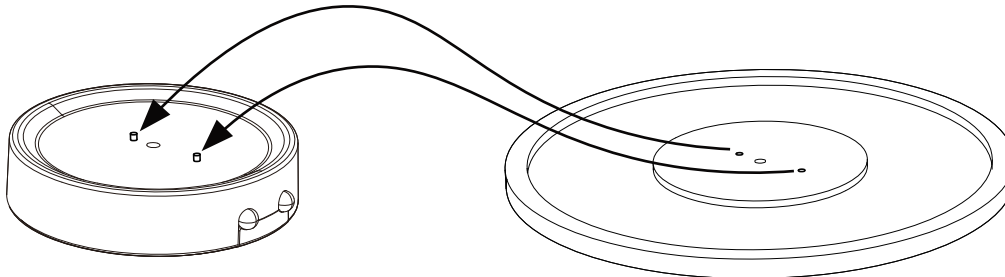

STEP ONE:

 
The red light indicates will light-up during charging and the green light will light-up when its fully charged.

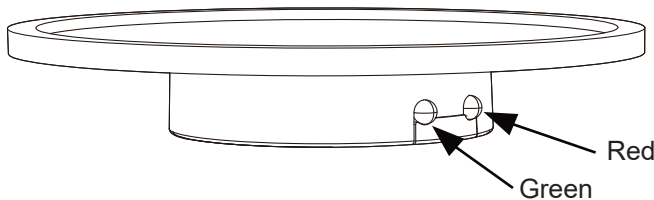

Helpful Hint:

The LED strikers each will require about 45 minutes to fully charge up and will last approximately 3 hours of continuous play time. Be sure to turn the switch to the "OFF" position when not in use.

 LED STRIKER BATTERY CHARGE INSTRUCTION

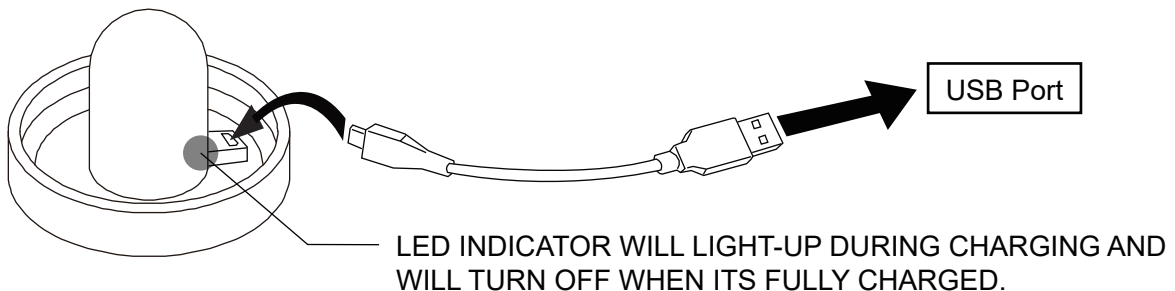

Helpful Hint:

The LED strikers each will require about 4 hours to fully charge up and will last approximately 7 hours of continuous play time. Be sure to turn the switch to the "OFF" position when not in use.

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.