



INSTRUCTION MANUAL

5-Piece Kids Beginner
Drum Set

Ver. 3 SKY5565 + SKY5566

(!) NOTICE

- Do not stand on or use any part of this product as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

TOOLS REQUIRED













UP TO 1 HOUR ASSEMBLY

HARDWARE

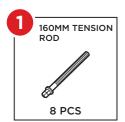


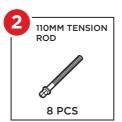








PARTS

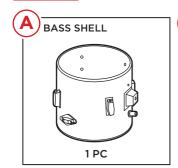

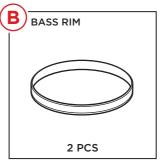

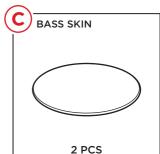


PARTS

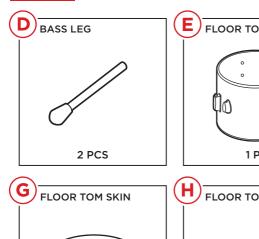







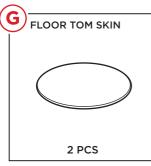





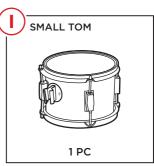





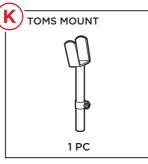

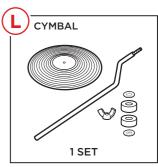


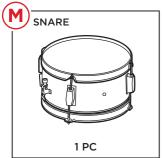

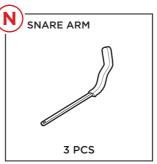


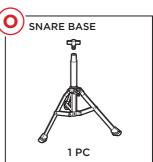



PARTS

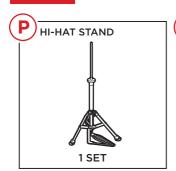




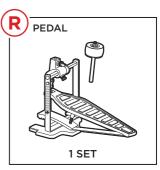

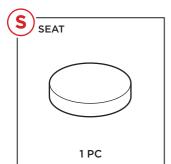

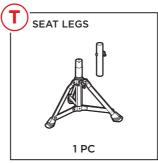


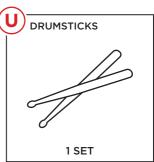

PRODUCT ASSEMBLY




Place two part G floor tom skins and two part F floor tom rims on the part E floor tom shell.

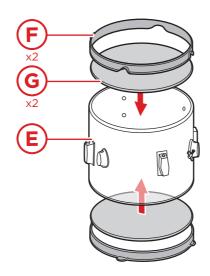


2

Attach the tom rims/skins with eight part 2 tension rods and eight part 3 washers.

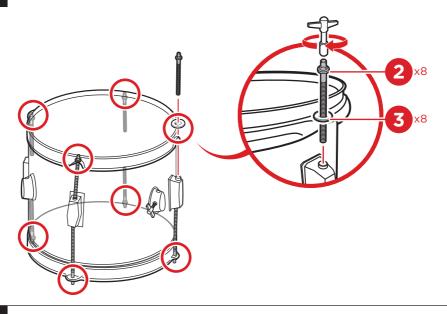


3

Insert three part H floor tom legs. Tighten the wingnuts to secure the legs.

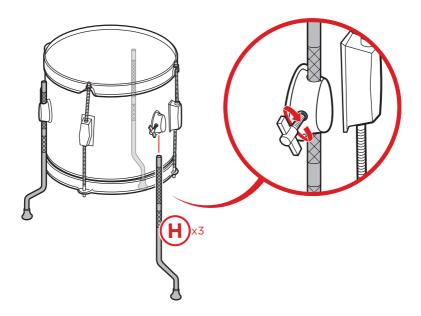


4

Place two part C bass skins and two part B bass rims on the part A bass shell.

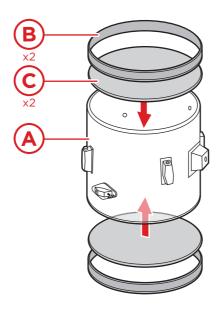


Attach the bass rims/skins with eight part 1 tension rods, eight part 3 washers, and eight part 4 claw hooks.

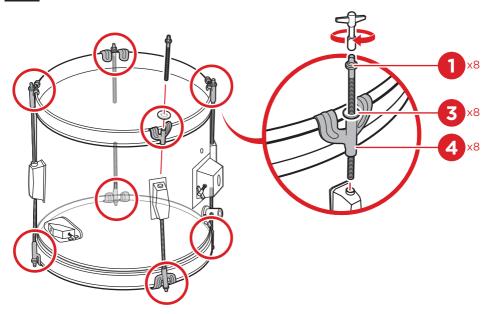


Insert two part D bass legs into the bass drum. Tighten the wingnuts to secure the legs.

Stand the bass drum up on its legs. Insert the part K toms mount and tighten the wingnut to secure it.

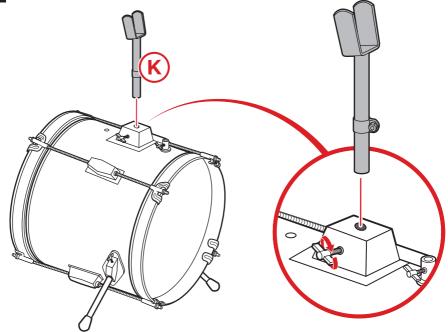


Slide the part I small tom and part J large tom onto the toms mount.

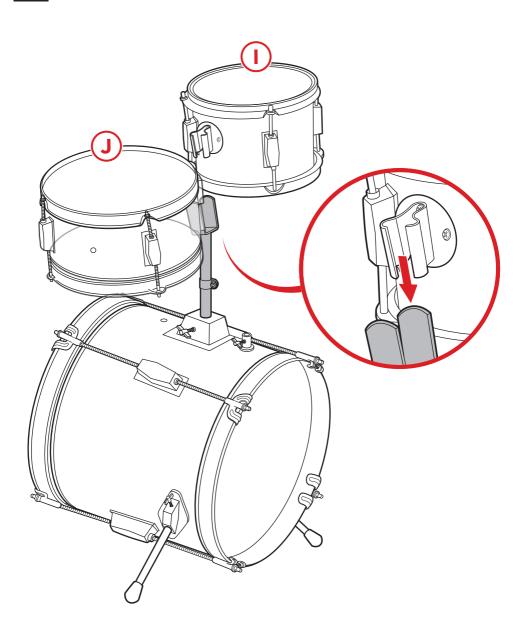



Insert the stand from the part ${\sf L}$ cymbal set into the designated slot. Tighten the wingnut to secure the stand.


Remove the wingnut, washer, and pad from the stand, place the cymbal, then replace the pad, washer, and wingnut.

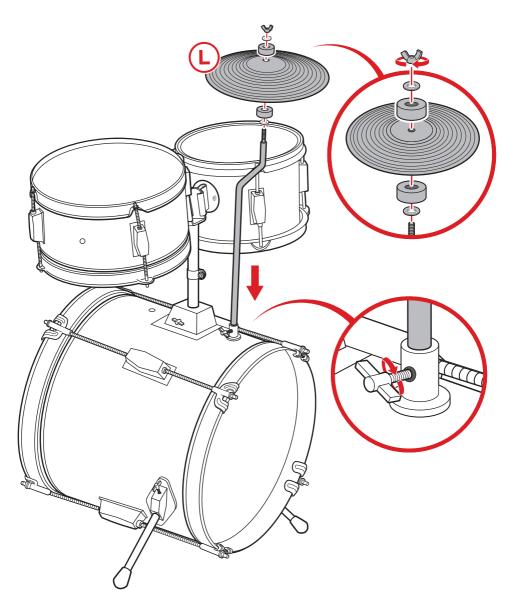



Slide the part Q hi-hat cymbals onto the part P hi-hat stand.

Adjust the upper hi-hat to your desired height, then tighten the wingnut to secure it.

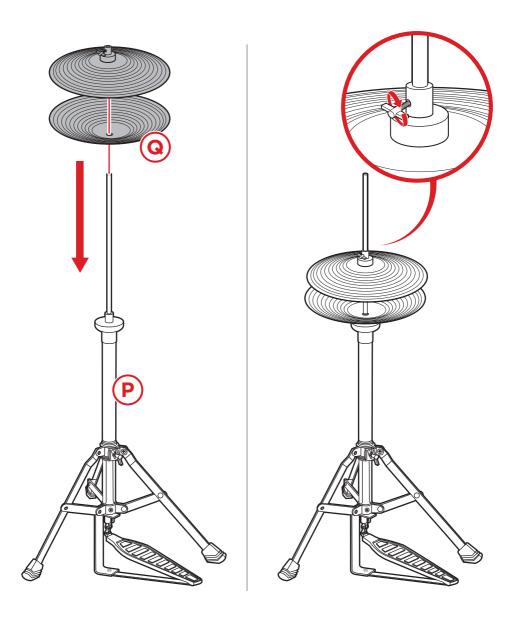





Remove the wingnut on the part O snare base. Attach three part N snare arms by replacing the wingnut.

NOTE: Make sure the arms are evenly spread apart.


Place the part M snare.

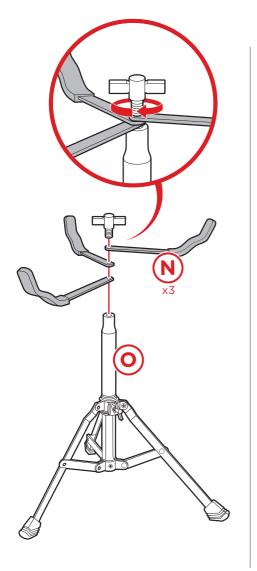

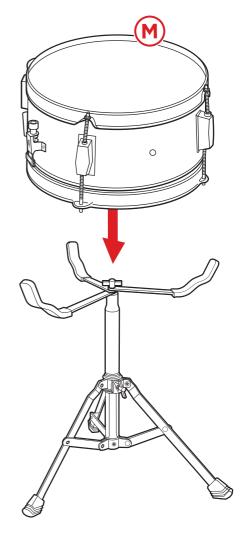


12

Assemble the part R pedal. Place the pedal under the rim of the bass drum.

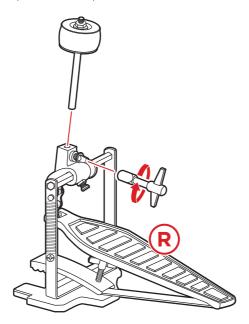


Place the part S seat on the part T seat legs. Tighten the wingnuts to secure the seat.

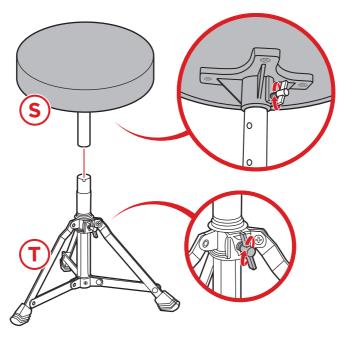




Arrange the drum set according to your preference.

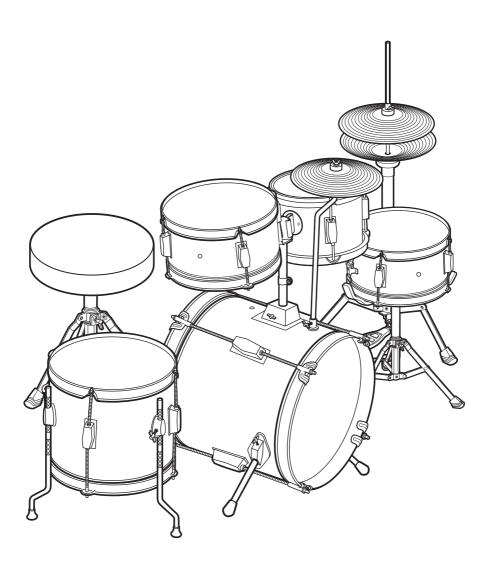

TUNING THE DRUMS

The tension rods on a drum double as tuning keys. Use the drum key to tighten and loosen the tension rods until each one is tightened equally.

NOTE: Tighten one tension rod at a time, then tighten the rod diagonally across from it. This will maintain even tension on the drum skin and produce a fuller sound.

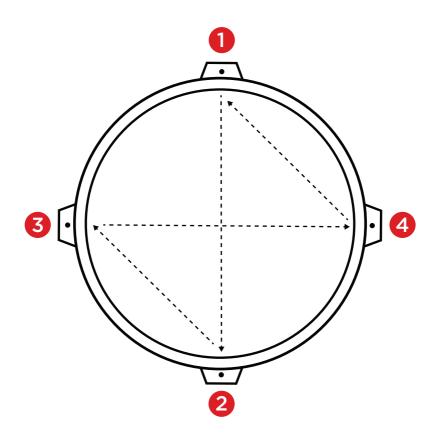

4-LUG DRUM TUNING

Earn points while you shop. Join today!

bestchoice products reward\$

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Product Assembly

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

MARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.