



bestchoiceproducts

Standing  
**ANIMATRONIC CLOWN**



SOUND  
ACTIVATED




MOTION / TOUCH  
ACTIVATED



INDOOR/  
COVERED PORCH

bestchoiceproducts.com

SKY5360

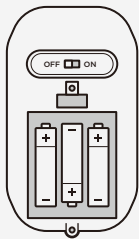

## BATTERY BOX INSTALLMENT

1. Locate the battery box in the back of the animatronic
2. Unscrew the battery cover and insert 3 AA batteries

## BATTERY BOX FUNCTION

**AUTOMATIC MODE:** Turn the switch ON to activate motion/touch sensor

**MANUAL MODE.** Turn the switch OFF. Press the button to activate the animatronic



**BUTTON**



Questions about your product? Visit our help center via the QR code or link below and search for your product.

[bestchoiceproducts.com/pages/help](https://www.bestchoiceproducts.com/pages/help)

SKY5360

## REQUIRES

- #0 or #1 Mini Screwdriver (Not Included)
- 3 AA Batteries (Not Included)

## STAND ASSEMBLY

1. Insert poles into connectors to build stand
2. Slide four legs into base connector
3. Attach figure to top of stand

