

WHEN ALL ELSE FAILS,
CHECK YOUR BATTERIES AS
THEY ARE USUALLY
THE PROBLEM.
RENEW YOUR BATTERIES TO
RETURN YOUR TOY TO ITS
OPTIMUM PERFORMANCE.

WARNING

- To avoid injury or aggravation of pre-existing conditions, this device should not be used on swollen or inflamed areas or lacerated skin.
- No medical claims are warranted or implied by use of this product.
- If you have a pacemaker or other medical device, consult your doctor.
- If you are unsure or pregnant, consult a doctor before use.
- If you experience pain or discomfort, then discontinue use immediately.
- Do not use on unexplained calf pain.

And finally ...

If you have any questions about your new sex toy, please contact your nearest Ann Summers store or visit Customer Help Online: www.annsummers.com/customer-help.html
By following these simple guidelines we are sure your new sex toy will give you great pleasure ... many, many, many times.

PLEASE RETAIN ALL
INFORMATION RELATING
TO THIS PRODUCT FOR FUTURE
REFERENCE.

THIS IS NOT A CHILDRENS TOY –
ADULT USE ONLY.

Not for use by persons under the age of 18.

WEEE

Electrical and electronic equipment (EEE) contains materials, components and substances that may be hazardous and present a risk to human health and the environment when WEEE is not handled correctly. Should the time come for you to dispose of this product, please ensure that you do so in accordance with the European Waste of Electrical and Electronic Equipment (WEEE) Directive and compliance with local laws relating to this directive. Alternatively bring your old toy back into store and we will dispose of it for you. For more information, please visit: www.annsummers.com/recycling.html



Ann Summers

Made in China for
Ann Summers Ltd. CR3 OGG. UK.
Ann Summers Ireland Ltd.
88 Harcourt Street, Dublin 2.
D02 DK18. Ireland.
annsummers.com



How to get the best out of your

WILD OBSESSION BULLET

TOY CARE INSTRUCTIONS

- In the interest of hygiene once the hygiene seal has been removed the item is non-returnable. Statutory rights are unaffected.
- Clean your toy before and after each use with Ann Summers Cleansing products. If this is not available wash the product with clean warm water and soap. Pat dry with a lint free towel.
- Always check if your product is waterproof. This will be clearly marked on the outer box.
- Waterproof toys are intended to be used in water but only when fully assembled in accordance with instructions.
- Do not use alcohol-based products as this may damage the surface of your toy.
- Always check the compatibility of your lube with your product.
- Do not use silicone-based lubrication with silicone products.
- Store your toy separately in its own box or in a protective case or sleeve if provided with the toy,


as contact with plastic bags or other toys may cause damage to its surface. Different materials have different chemical properties and can react against each other and also damage your toy.

- Keep away from sources of extreme temperature such as direct sunlight or exposure to cold temperatures. This will prevent any adverse effects to the surface of your toy.
- Some toys are electrical and motors may become warm during use. If you feel your toy is getting unduly warm, switch off and allow it to cool down.
- Always allow your toy to cool down before storing in a safe place.
- Store your toy in a clean dry environment as moisture can damage the batteries and the motor.
- Take care when using oils and lubricants that they do not enter the battery compartment as they can react with the batteries.

TAKE CARE WHEN USING
YOUR TOY FOR THE FIRST
TIME, AS VIBRATION
CAN BE INTENSE.
WE RECOMMEND LIBERAL
USE OF ANN SUMMERS
LUBRICANTS.

BATTERY CARE INSTRUCTIONS

- For smaller battery items your product may contain an isolator disc. This has been added to prevent your batteries discharging during transit. Please remove prior to use.
- Some products may contain a polarity paper within the battery chamber. This is a functional part of the battery product and should not be removed.
- Do not mix different types of battery brands or mix new and used batteries, as this may affect the performance of your toy.
- Only use the recommended type of batteries, as stated on the packaging.
- Batteries must be inserted with the correct polarity (+/-).
- Only operate when fully assembled in accordance with instructions (see over).
- The supply terminals should not be short circuited i.e. do not bridge terminals with a metallic material.
- Take care when cleaning your toy, remembering it's an electrical item and moisture can damage your toy and also react with batteries.
- When using rechargeable batteries, make sure they are fully charged before use.
- Rechargeable batteries may limit the power output of the product and may compromise the overall performance.

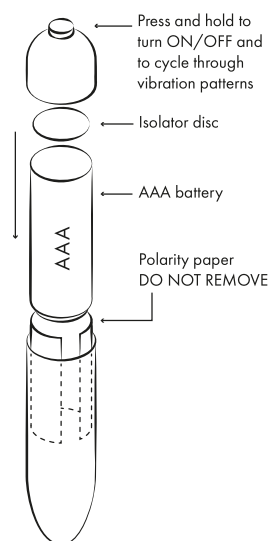

Please remove isolator disc before use.

Please make sure the polarity paper remains inside the product at all times to ensure optimum performance.

Please insert batteries as shown.

SUITABLE FOR EXTERNAL USE