



Be sure to write your model number and serial number here for future reference. You can find these numbers printed on the bottom of the table.

MODEL NO.: T8756W
DATE CODE : CPSIA#2-T8756W- _____ SY
PURCHASE DATE : _____

OWNER'S MANUAL

1. **Read this manual carefully before starting assembly.** Read each step completely before beginning each step.
2. **Some smaller parts may be shipped inside larger parts. Check inside all parts and cartons before assembling or ordering parts.**
3. If hardware is tightened too soon, mounting holes may not align and parts may not easily fit together. Leave bolts slightly loose until you are instructed to tighten them.
4. **Tools required for assembly:** Allen Wrench T1 & Wrench T2 (not included), 10mm Wrench is helpful and Phillips Screwdriver.
5. **An electric screwdriver is recommended in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.**
6. To make assembly as easy as possible, place all parts of the table tennis table in a cleared area and remove the packaging material. Organize all parts as per parts identifier in the assembly manual. Do not dispose of the packing material until assembly is completed.
7. Avoid scratching table tennis top and metal tube parts during the assembly process.
8. Assemble product on a clean, level and flat surface.
9. **Take time to correctly orientate parts exactly as each assembly diagram.**
10. **Save this manual in the event that the manufacturer has to be contacted for replacement parts.**

NOTICE:

READ ASSEMBLY, OPERATING AND SAFETY INSTRUCTIONS CAREFULLY! AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS TABLE TOGETHER!

STIGA® is a registered trademark of STIGA Sports AB, a Swedish company known for its high-quality table tennis equipment. Escalade Sports is a long-term licensing and manufacturing partner of STIGA, holding a licensing agreement to produce and distribute STIGA-branded table tennis tables, paddles, nets, balls, and related products across North America. This partnership enables Escalade Sports to bring STIGA's premium products to North American consumers while maintaining the brand's commitment to quality and innovation.

Thank you for buying our product. We ensure that our products are of high quality and free of problems, such as manufacturing defects or missing parts. However, if you have any problems with your new product, please **DO NOT RETURN IT TO THE STORE!**

DO NOT RETURN PRODUCT TO THE STORE!

Contact STIGA US Customer Service Department at:

Phone: 1-800-467-1421 Toll-Free!
Fax: 1-866-873-3533 Toll-Free!
E-mail: tabletennis@escaladesports.com

Mailing Address
(correspondence only):
Escalade® Sports
PO Box 889, Evansville, IN 47706

Physical Location:
817 Maxwell Ave.
Evansville, IN 47711

Please provide model number and/or part number of the product and/or part when you call or write. These numbers can be found on the product, packaging, and/or in this Owner's Manual.

**Please visit our website at: www.stiga.us.com for:
Troubleshooting, Parts Requests, Technical Assistance and FAQs.**

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least four capable adults are required to assemble this product.

WARNING:

**THIS STEP REQUIRES FOUR OR MORE ADULTS.
VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON
ITS LEGS. BE CAREFUL, THE TABLE IS VERY HEAVY.**

CAUTION:

**DO NOT CLIMB, STAND OR JUMP ON TABLE!
SERIOUS OR FATAL INJURY MAY RESULT! THIS IS NOT A TOY!**

 
HARDWARE IDENTIFIER (To Scale)




H1 - 8 mm x 20 mm
Hex Head Bolt
(8 pcs)



H2 - 8 mm x 40 mm
Hex Head Bolt
(8 pcs)

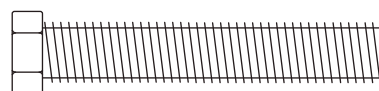


H3 - 8 mm x 45 mm
Hex Head Bolt
(6 pcs)

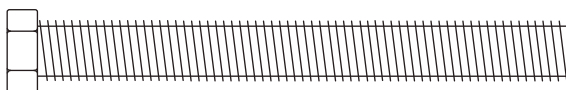 

H4 - 8 mm x 70 mm
Hex Head Bolt
(4 pcs)



 H5 - 8 mm x 20 mm
Flat Washer
(32 pcs)

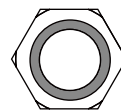


H6 - 8 mm Nylon
Lock Nut
(22 pcs)




H7 - Plastic
Step Washer
(16 pcs)


FOR LEG LEVELER (To Scale)

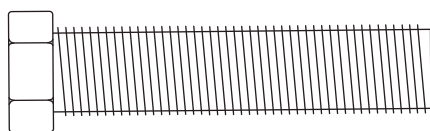


H8 - 12 mm x 50 mm
Hex Head Bolt
(4 pcs)

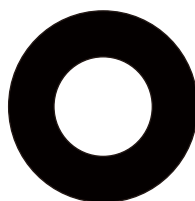

H9 - 12 mm x 25 mm
Flat Washer
(4 pcs)

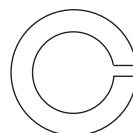


H10 - M12
Lock Washer
(4 pcs)

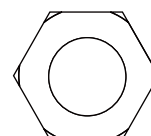


H11 - 12 mm Nut
(4 pcs)


PARTS IDENTIFIER (Not to Scale)

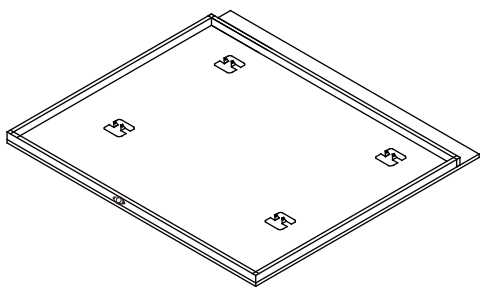


P1 - Table Tennis Table Top
Frame Assembly
(2 pcs)

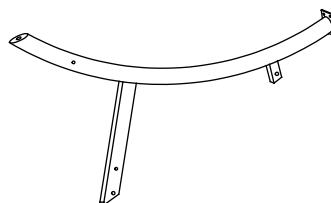


P2 - Leg (4 pcs)

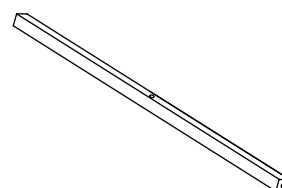


P3 - Leg Support Tube
(2 pcs)

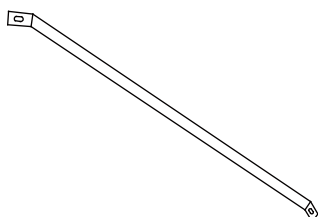


P4 - Leg Support Brace
(4 pcs)

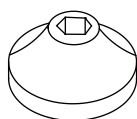 

P5 - Leg Leveler
(4 pcs)

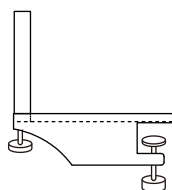

P6 - Net Post
(2 pcs)

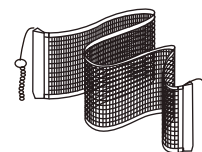

P7 - Net (1 pc)

IMPORTANT NOTICE:

Place table half top with playing surface face down on a **CLEAN** flat surface for ease of correct assembly and to prevent any scratches or blemishes to the playing surface.

PARTS REQUIRED


- 1 pc - **P1** Table Tennis Table Top and Frame Assembly
- 2 pcs - **P2** Leg
- 4 pcs - **H2** 8x40mm Hex Head Bolt
- 4 pcs - **H6** 8mm Nylon Lock Nut
- 8 pcs - **H7** Plastic Step Washer

STEP 1:

Lay one piece **P1** Table Tennis Table Top and Frame Assembly flat with playing surface facing down as shown in **FIGURE 1**. Install **P2** Legs using **H2** Bolts with **H7** Step Washers and **H6** Nuts as shown in **FIGURE 1**.

IMPORTANT NOTICE:

DO NOT TIGHTEN H2 BOLTS & H6 NUTS ON THIS STEP.

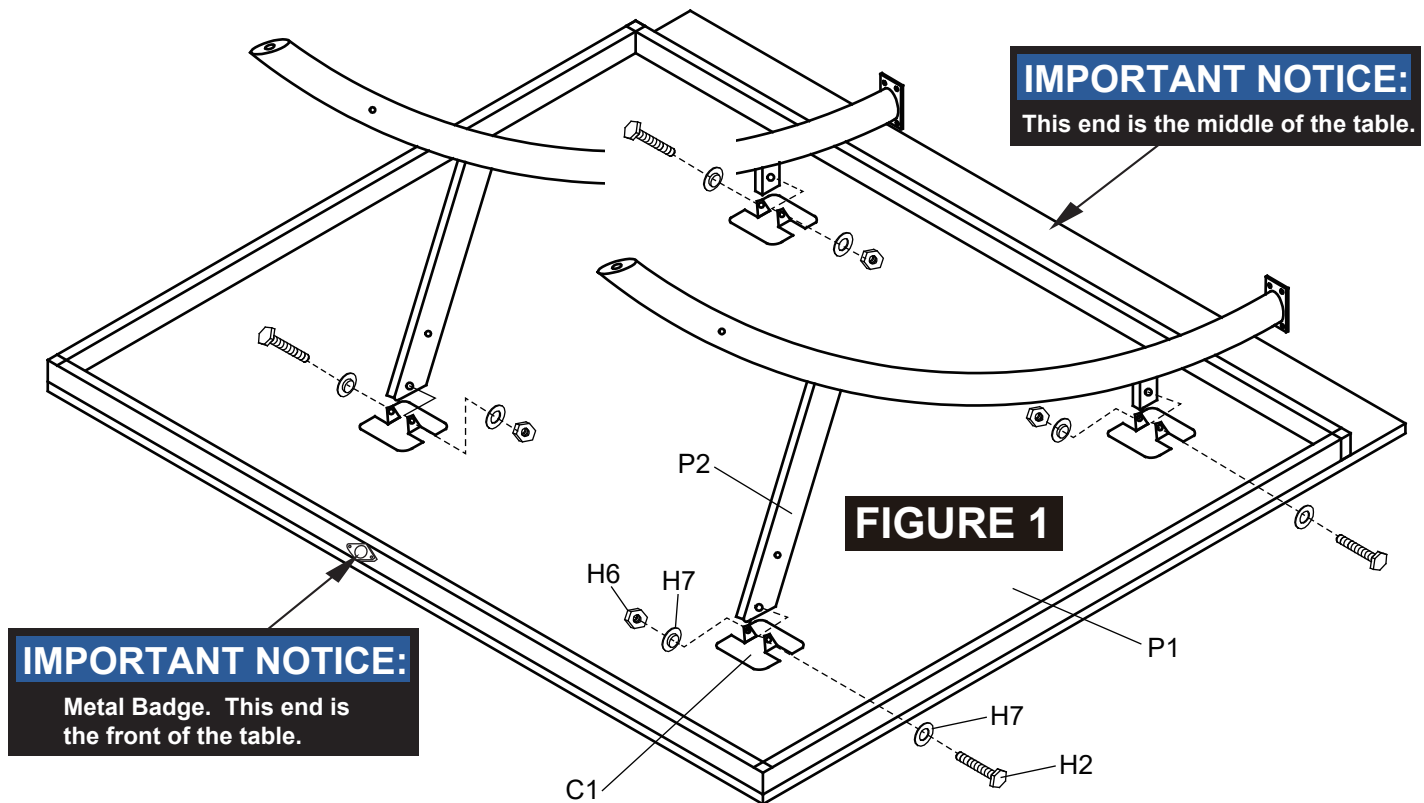


PARTS REQUIRED

- 4 pcs - **P5** Leg Leveler
- 4 pcs - **H8** 12x50mm Hex Head Bolt
- 4 pcs - **H9** 12mm Flat Washer
- 4 pcs - **H10** M12 Lock Washer
- 4 pcs - **H11** 12mm Nut

STEP 2:

Install **H8** Bolt with **H10** Lock Washer, **H9** Washer and **H11** Nut onto **P5** Leg Leveler as shown in **FIGURE 2**. Tighten, but do not overtighten.

Repeat procedure for the other three **P5** Leg Levelers.

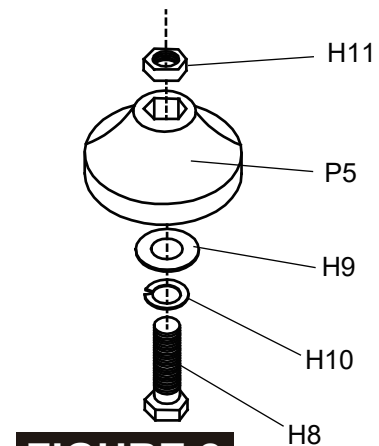

PARTS REQUIRED


1 pc - **P3** Leg Support Tube

2 pcs - **H3** 8x45mm Hex Head Bolt

2 pcs - **H5** Flat Washer

STEP 3:

Install **P3** Tube using **H3** Bolts with **H5** Flat Washers as shown in **FIGURE 3**. **DO NOT TIGHTEN H3 BOLTS ON THIS STEP.** Thread **P5** Leg Levelers assembly from **STEP 2** onto the **P2** Legs as shown in **FIGURE 3**.

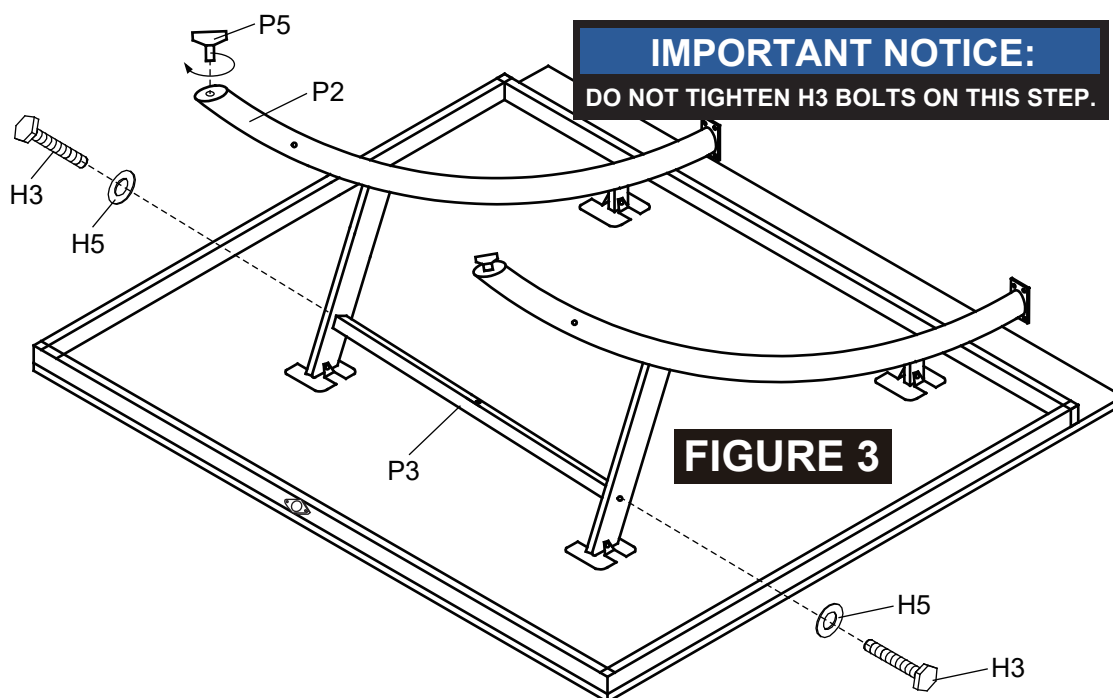

PARTS REQUIRED

1 pc - **P4** Leg Support Brace

1 pc - **H3** 8x45mm Hex Head Bolt
2 pcs - **H4** 8x70mm Hex Head Bolt

6 pcs - **H5** Flat Washer
3 pcs - **H6** Lock Nut


STEP 4:

Install **P4** Leg Support Brace using **H4** Bolts with **H5** Flat Washers and **H6** Lock Nuts as shown in **FIGURE 4**.

Install **P4** Leg Support Brace using **H3** Bolt with **H5** Flat Washers and **H6** Lock Nut as shown in **FIGURE 4**.

DO NOT TIGHTEN H3 BOLTS, H4 BOLTS AND H6 NUTS ON THIS STEP.

REPEAT PROCEDURE FROM STEP 1 TO STEP 4 FOR OTHER HALF TABLE TOP.

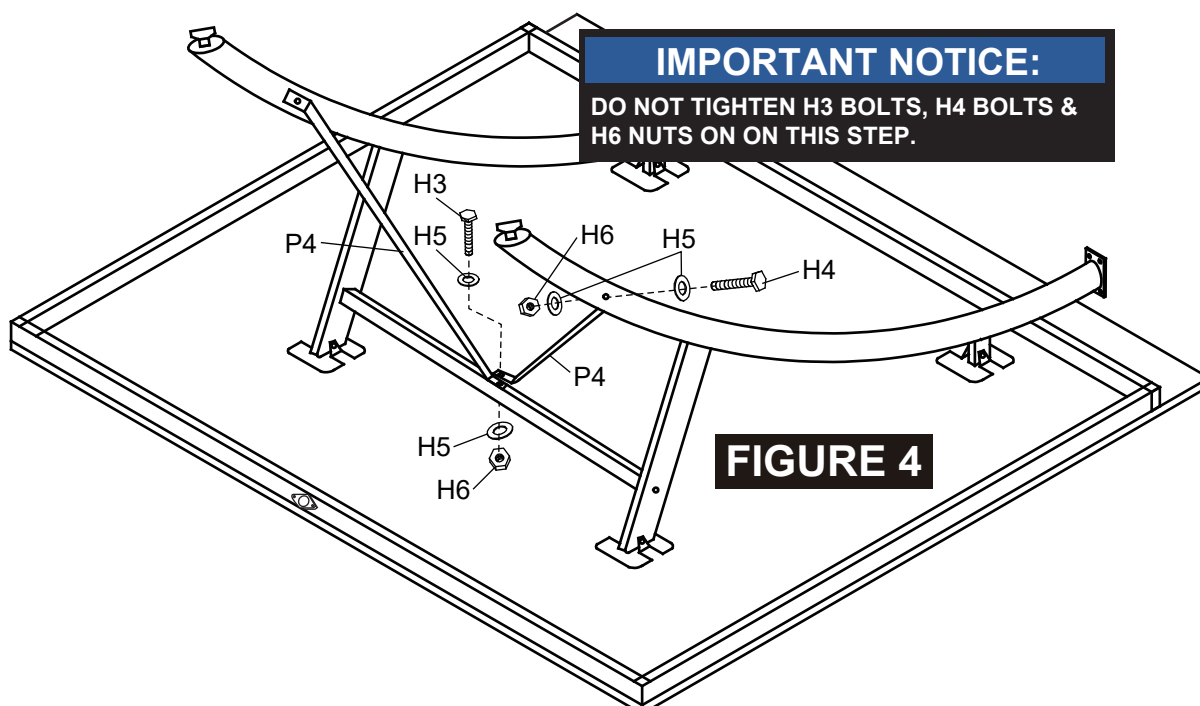

PARTS REQUIRED

8 pcs - **H1** 8x20mm Hex Head Bolt

16 pcs - **H5** Flat Washer

8 pcs - **H6** Lock Nut

STEP 5:

Connect two Half Tabletops using **H1** Bolts with **H5** Flat Washers and **H6** Lock Nuts as shown in **FIGURE 5** and **DETAIL A**. **MAKE SURE TABLE HALVES ARE ALIGNED AND FLAT BEFORE ATTACHING & TIGHTENING H1 BOLTS & H6 NUTS ON THIS STEP 5.**

IMPORTANT NOTICE:


MAKE SURE TABLE HALVES ARE ALIGNED AND FLAT BEFORE ATTACHING & TIGHTENING H1 BOLTS & H6 NUTS ON STEP 5.

FIGURE 5

IMPORTANT NOTICE:

MAKE SURE TABLE HALVES ARE ALIGNED AND FLAT BEFORE ATTACHING & TIGHTENING H1 BOLTS & H6 NUTS ON STEP 5.

DETAIL A

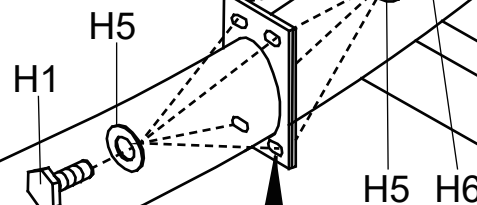


NOTICE:

* MAKE SURE THE TABLE HALVES ARE ALIGNED AND FLAT *

STEP 6:

TIGHTEN ALL BOLTS & NUTS FROM STEP 1, 3 AND 4

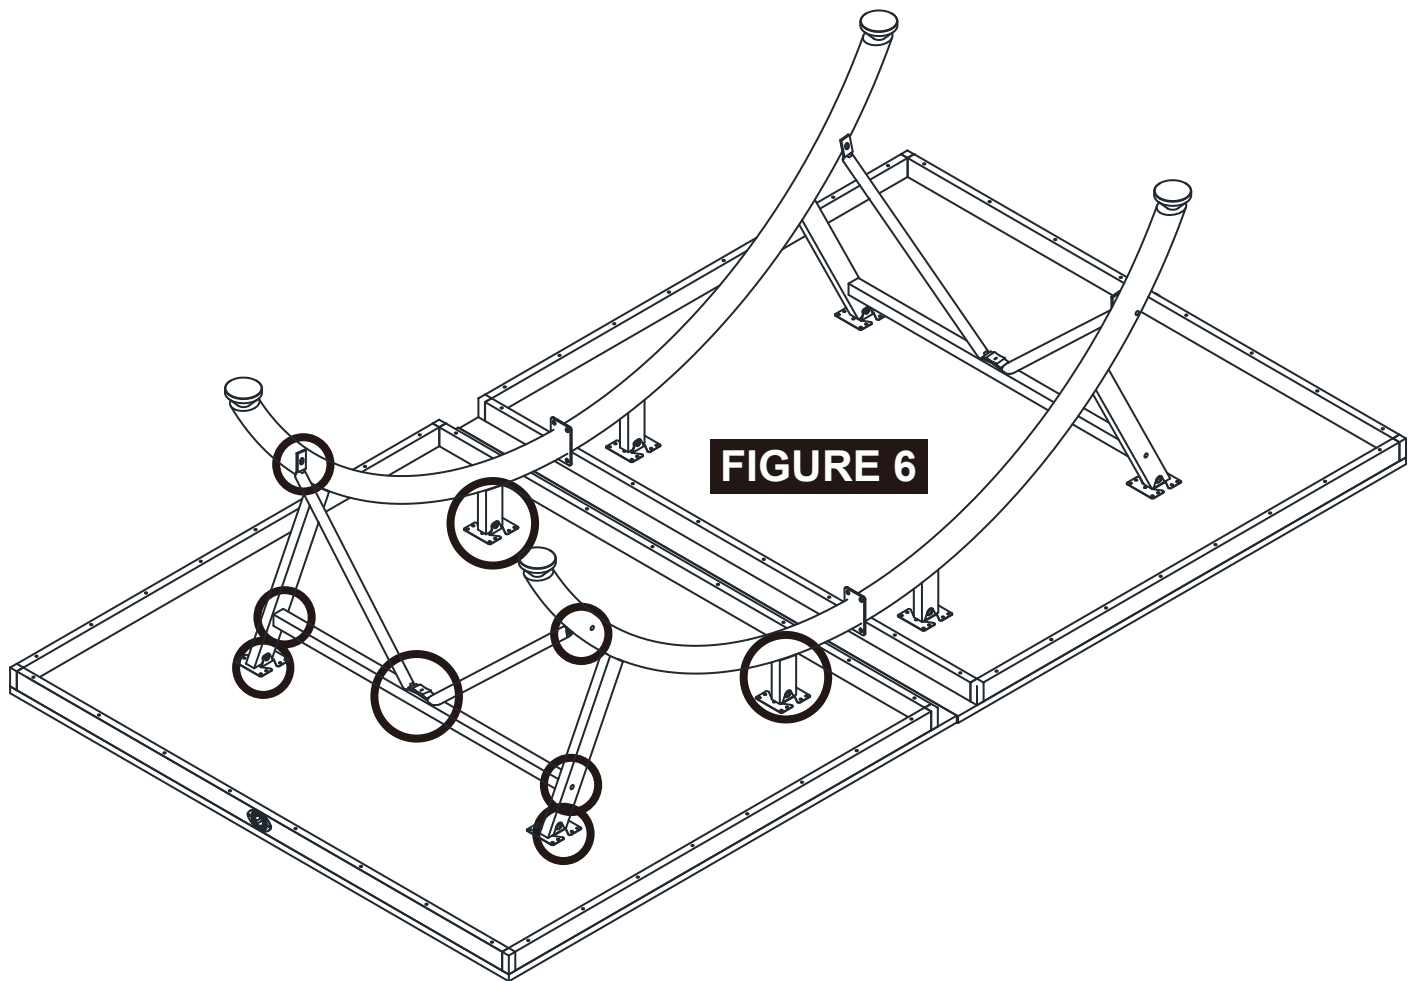

THIS STEP REQUIRES FOUR OR MORE ADULTS.

DO NOT CLIMB, STAND OR JUMP ON TABLE!

PARTS REQUIRED


2 pcs - **P6** Net Post
1 pc - **P7** Net

STEP 7:

With the help of other capable adults, carefully turn the table over and set it on its legs.

Attach one **P6** Net Post to the middle edge of where the table halves meet. Repeat this with other **P6** Net Post on opposite side.

Then, slide **P7** Net into corresponding **P6** Net Post and repeat for the other side. Make sure the net tape is on top. Use strings at either end of the **P7** Net to tighten the net and attach to base of net post securely.

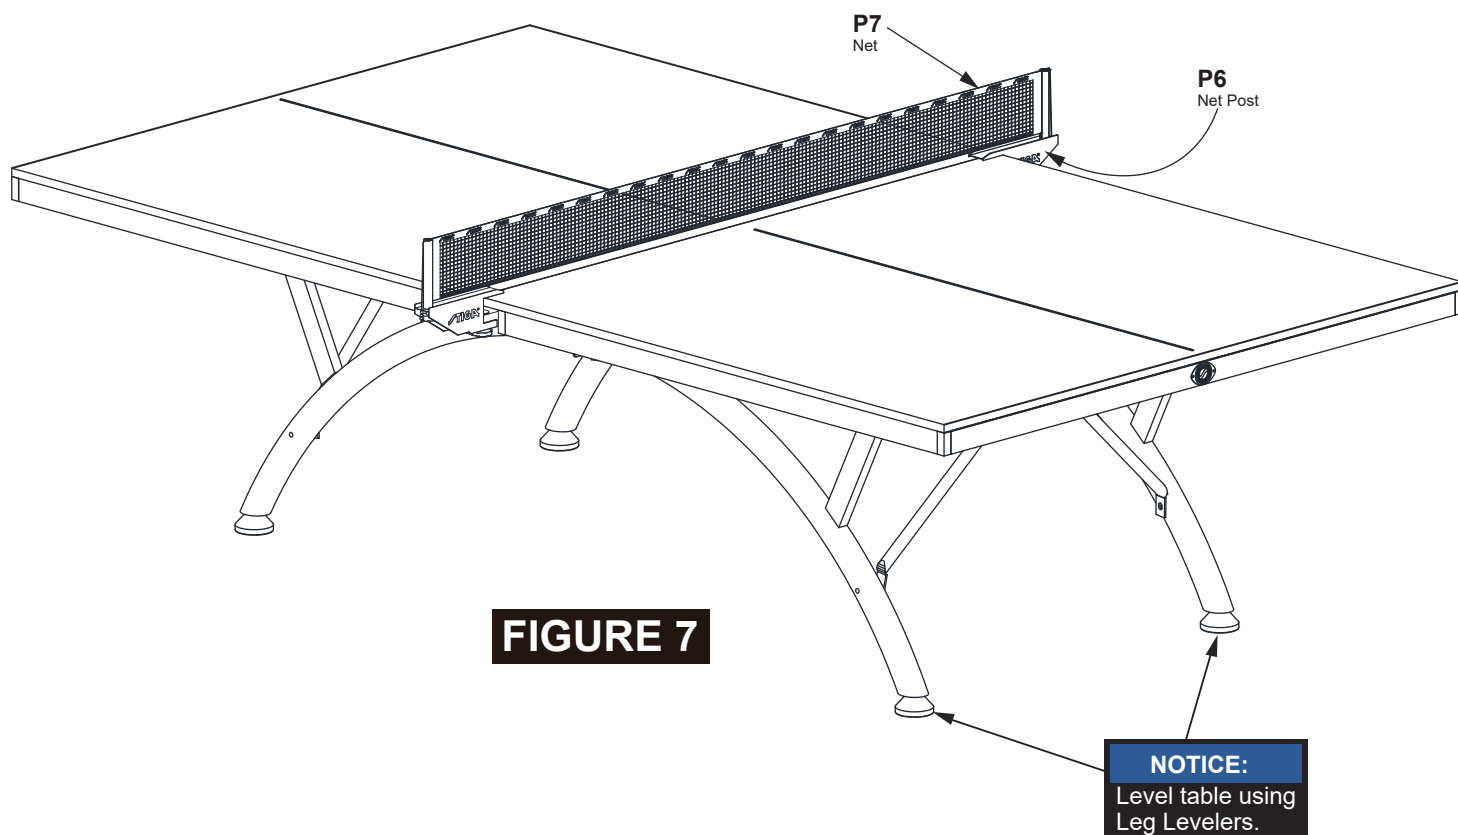

T8756 TABLE TENNIS TABLE REPLACEMENT PARTS

Key#	Part No.	Description	Qty
H1	T8756SY-H1	8 mm x 20 mm Hex Head Bolt	8
H2	T8756SY-H2	8 mm x 40 mm Hex Head Bolt	8
H3	T8756SY-H3	8 mm x 45 mm Hex Head Bolt	6
H4	T8756SY-H4	8 mm x 70 mm Hex Head Bolt	4
H5	T8756SY-H5	8 mm x 20 mm Flat Washer	32
H6	T8756SY-H6	8 mm Nylon Lock Nut	22
H7	T8756SY-H7	Plastic Step Washer	16
H8	T8756SY-H8	12 mm x 50 mm Hex Head Bolt	4
H9	T8756SY-H9	12 mm x 25 mm Flat Washer	4
H10	T8756SY-H10	M12 Lock Washer	4
H11	T8756SY-H11	12 mm Nut	4
P1	T8756SY-P1	Table Tennis Table Top Frame Assembly	2
P2	T8756SY-P2	Leg	4
P3	T8756SY-P3	Leg Support Tube	2
P4	T8756SY-P4	Leg Support Brace	4
P5	T8756SY-P5	Leg Leveler	4
P6	T8756SY-P6	Net Post	2
P7	T8756SY-P7	Net	1
C1	T8756SY-C1	Steel Bracket (Pre-installed)	8
M1	T8756SY-M1	Owner's Manual	1
K1	T8756SY-K1	Hardware Kit	1

CARE AND MAINTENANCE

You have purchased a quality product that will give you years of enjoyment. By following these simple maintenance steps, you will add to the life of your new table.

THE TABLE TOP

The top (playing surface) of your table is made of Mid-Density Board. Like all products made of wood, it can be affected by atmospheric changes in both temperature and humidity. This may cause a slight sag or distortion as the top expands or contracts. This is normal and should not cause concern as it does not detract from the play or utility value of the table. After assembly of the table, you can minimize the effects of temperature and humidity changes by storing the table in a dry area when table is not in use.

STORAGE OF YOUR TABLE

This table must be stored indoors to prevent damage to the playing surface. Dampness and extreme temperature changes can cause the wood to warp, swell, crack or blister. When your table is not in use, it should be stored in a dry area. Due to the nature of particle board, table top may bow. Damp and humid conditions will amplify this. This is normal and will not affect playability of table.

CLEANING YOUR TABLE

To clean your table use a soft, damp (NOT WET) cloth only. To prevent damage to your table's playing surface, DO NOT USE ANY CHEMICALS, ABRASIVE OR CLEANING PRODUCTS on your table's playing surface.

MAINTENANCE OF YOUR TABLE

This table must be kept indoors to prevent damage to the playing surface. Dampness and extreme temperature changes which occur on patios or similar areas can cause wood to warp, swell, crack or blister.

UNEVEL FLOORS

If table does not seem level, it is probably due to uneven or unlevel floors. Set the table in its PLAYING POSITION and move table several inches in different directions to find the best location for the table. If the floor is extremely unlevel, table may not play or operate properly. The table has leg levelers - Adjust leg levelers as required.

3 YEARS LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE® SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of three (3) years from the original purchase.

WARRANTY COVERAGE: ESCALADE® SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above three (3) years warranty period, ESCALADE® SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706 - Attn: Warranty Dept.

Or E-mail us at:

customerservice@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE® SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE THREE (3) YEARS WARRANTY PERIOD. ESCALADE® SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty give you specific legal rights and you may also have other rights which may vary from state to state.