



INSTRUCTION MANUAL

Set of 2 Cushioned Counter-Height Stools

(!) NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, or knobs before use.
- · Reconfirm that all bolts, screws, or knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Assemble this item on a flat, level, and stable surface for an ideal construction.
- This product is intended for indoor use only.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

This product is intended for residential use only.

 
TOOLS REQUIRED

 






HARDWARE



 



















Fasten screws loosely during assembly. Do not firmly tighten screws until item is fully assembled.

2 PCS

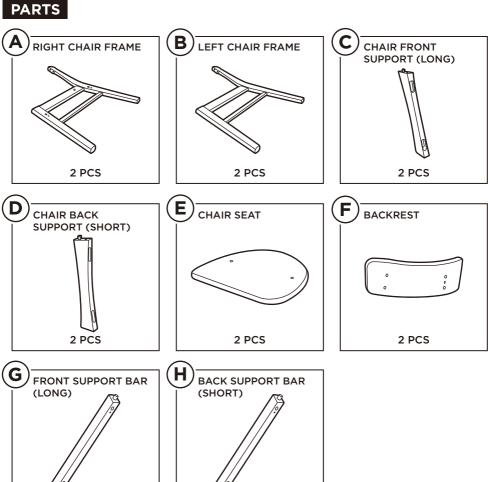


2 PCS

1


NOTE: Before assembly, make sure to position the parts in the same direction as the arrow in the diagram.

Place one part A right chair frame on its side, then attach one part C chair front support (long) and one part D chair back support (short) with two part 1 bolts, two part 3 spring washers, and two part 4 flat washers.

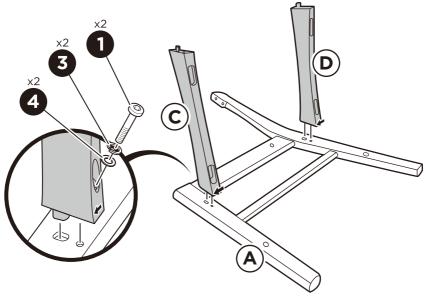

2

Attach one part G front support bar (long) and one part H back support bar (short) to part A right chair frame.

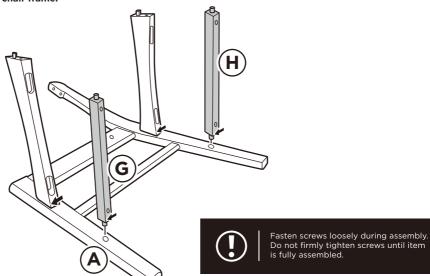




Attach one **part B left chair frame** onto the chair assembly.


Flip the chair assembly to the other side, then secure the part C & D supports with two part 1 bolts, two part 3 spring washers, and two part 4 flat washers.

Attach the part G front support bar (long) and part H back support bar (short) to part B left chair frame.

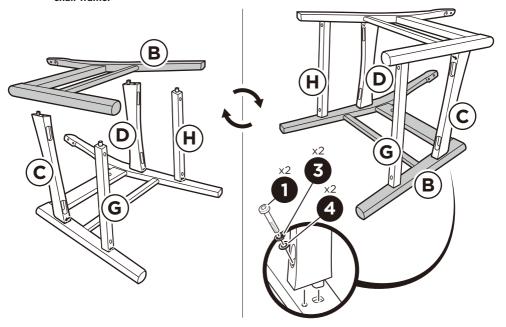

4

Flip the chair assembly upright, then insert **one part 7 dowels** into the central hole on both chair frame sides, two dowels total.

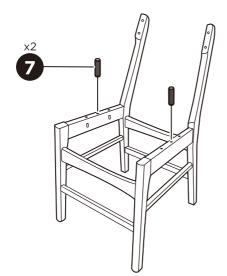






Locate one part E chair seat and place it upside down on a flat level surface.

Flip the chair assembly and insert the dowels (see previous step) into openings on the bottom of the **part E chair seat**, then secure with four **part 5 screws**.

Secure the part G front support bar (long) and part H back support bar (short) with four part 6 screws, two screws per support.

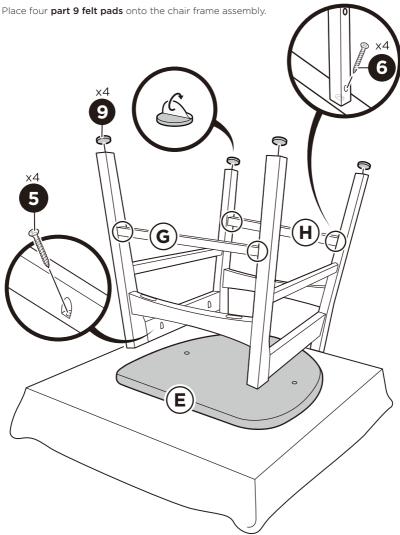






NOTE: Before assembly, make sure to position the parts in the same direction as the arrow in the diagram.

Attach one part F backrest to the part upper supports on the part A & B chair frames with four part 2 bolts, four part 3 spring washers, and four part 4 flat washers.

Cover the fastener holes on the back of the **part F backrest** with four **part 8 wooden buttons**. Repeat **steps 1-6** to assemble a second chair and enjoy.

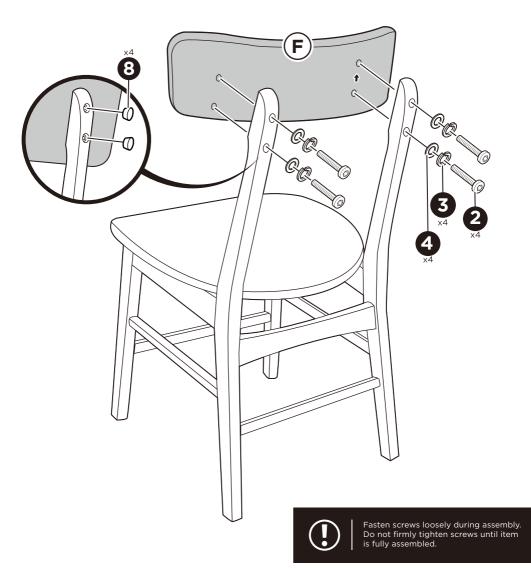



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com













Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

∕!\WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.