



bestchoiceproducts



# INSTRUCTION MANUAL

---

Wine Opener Set



Charge for **10-12 hrs**  
before initial use.

Unplug the  
charging base  
when charging  
is complete.





bestchoiceproducts

---

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

## NOTICE

Please retain these instructions for future reference.

- This appliance is intended for household use only.
- This appliance is intended to extract corks from standard wine bottles.
- This appliance is intended for indoor use only.
- This appliance contains rechargeable batteries.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way that is inconsistent with the manufacturer's instructions as this could void the product warranty.

## WARNING

- Do not use in wet or damp conditions.
- Keep away from open flames or heated areas.
- Do not submerge this appliance in water.
- Do not touch or adjust the corkscrew or setting mechanism; handle only the plastic housing.
- Do not allow cords or wires to hang unattended, may cause tripping hazard.
- Do not move appliance or touch any of its components while in motion.
- Do not unplug the appliance by pulling on the power cord. Always grasp the plug firmly and pull straight from the outlet.
- Do not operate with non-factory parts.
- Do not open the unit; there are no user serviceable parts.


## BEFORE FIRST USE

1. Remove all accessories from packaging.
2. Inspect contents for defects, damage, or missing parts.
3. Place appliance on a stable, level surface.
4. Allow the appliance to charge for 10-12 hours.

## USAGE TIPS

- A fully charged opener unit can uncork up to 30 bottles.
- Return the wine opener and wine preserver to the charging base when not in use.
- The non-slip mouth may attach itself to the wine stopper. In such an event, hold the wine stopper and the neck of the bottle securely in one hand and tilt the wine preserver away from the wine stopper to break the suction. This will prevent air from re-entering the bottle. Repeat this process as many times as necessary.
- When opening a resealed bottle, firmly hold the bottle in one hand and gently ease the wine stopper away from the bottle with the other hand.

## DIAGRAM

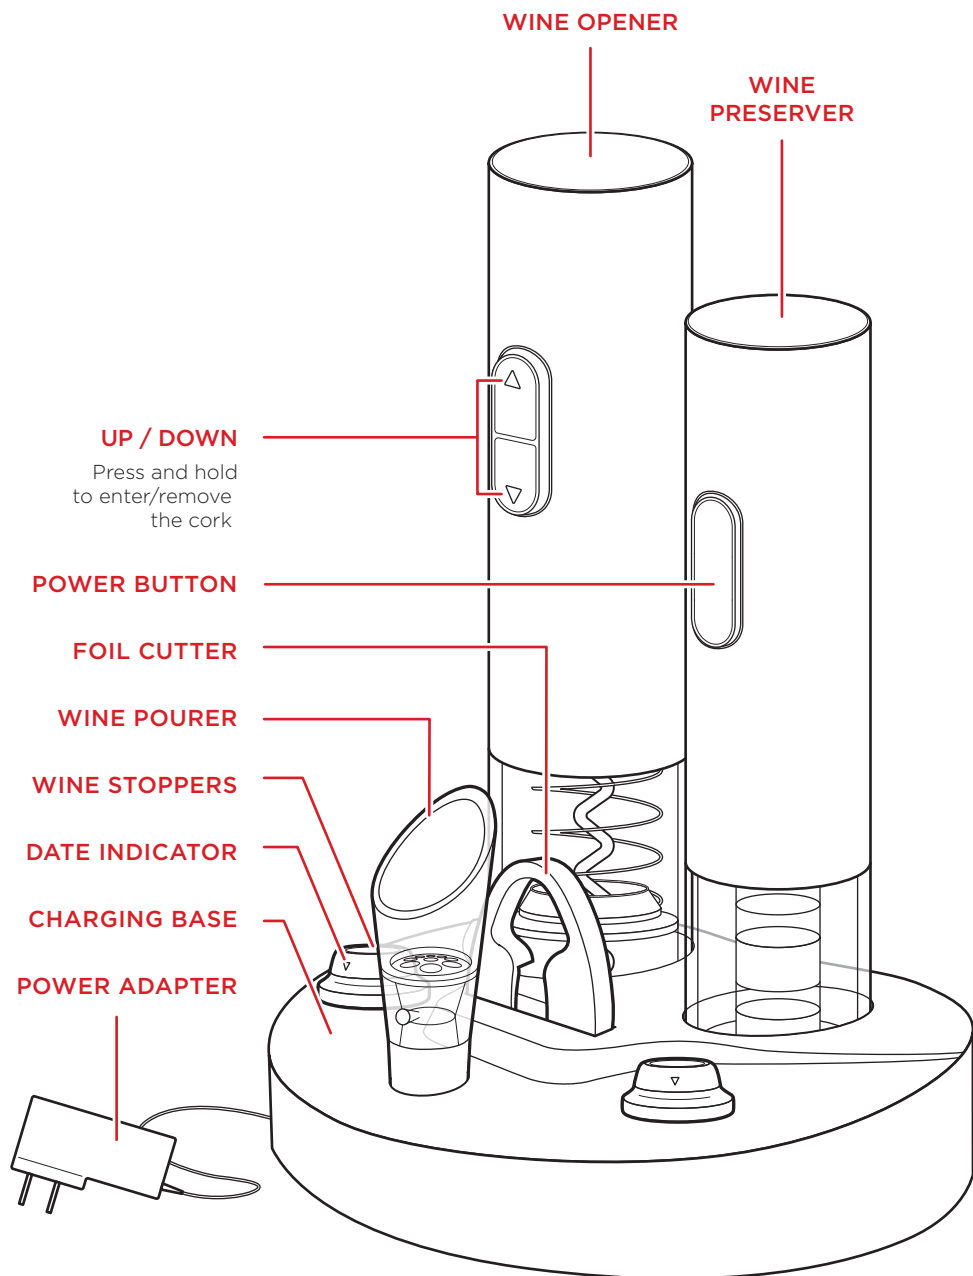

## OPERATING INSTRUCTIONS

### OPENING A WINE BOTTLE

1. Remove any seal or foil with the foil cutter.
2. Place the wine bottle on a flat surface. Place the wine opener on top of the bottle in an upright position.
3. Grasp the wine bottle and wine opener firmly. Press and hold the down ▼ button; the corkscrew will enter the cork and remove it. The cork is removed when it is visible in the transparent window and the blue light switches off.
4. Lift the wine opener away from the bottle. Remove the cork from the corkscrew by pressing and holding the up ▲ button.

### SERVING WINE

1. Press the pourer into the wine bottle until secured. The pourer will reduce splashing while aerating the wine to improve the flavor.
2. Carefully pour the wine.

### SEALING A WINE BOTTLE

1. Place the wine bottle on a flat surface.
2. Insert a wine stopper into the wine bottle.
3. Grasp the wine bottle and wine preserver firmly. Place the wine preserver over the wine stopper in an upright position.
4. Push down on the wine stopper, then press and hold the power button on the wine preserver. While the preserver is in use, the unit will emit a clicking noise as it removes air.
5. Hold the power button until the preserver stops clicking. The bottle has been sealed.

### WINE STORAGE

1. Use the “▼” symbol on the wine stopper to indicate the date when the bottle was sealed.
2. Turn the silver ring until the correct date is in line with the “▼.”
3. Store your wine in a cool, dark place to prevent spoiling.

### CLEANING AND CARE

1. When not in use, return your opener and preserver to the charging base.
2. Wipe the opener, preserver, and charging base with a dry, soft cloth.
3. To prolong battery life, charge your opener and preserver units completely once every three months.

## CHARGING INSTRUCTIONS

1. Connect the power adapter to the power port at the back of the charging base.
2. Insert the wine opener and preserver units into the charging base. Align the electrical connectors on the charging base with the connectors on the opener and preserver units.
3. Connect the power adapter to a wall socket.
4. The unit is charging when the indicator lights illuminate blue.
5. Allow 10-12 hours to achieve a full charge. Unplug the charging base when charging is complete.

Earn points while you shop. Join today!

# bestchoiceproducts **rewards**

**Join | Earn | Redeem**

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

[bestchoiceproducts.com](https://bestchoiceproducts.com)



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.