



We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729

FAX: 1-866-873-3535

gameroom@escaladesports.com

Or write to:

Escalade Sports
Customer Service Department
P.O. Box 889
Evansville IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

Your Model Number: **M01480RW**

Date Code: **2-M01480RW- -ZG**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



TWO (2) ADULTS ARE REQUIRED TO ASSEMBLE THIS BASKETBALL SHOOTOUT

Tools Needed:

Wrenches T1 and T2 (Included with the Hardware Kit)

Philips Screwdriver

Adjustable Wrench or Socket Set is helpful but not required.

IMPORTANT !

Make sure you understand the following tips before you begin to assemble your basketball shootout.

1. This game (Mechanical Scoring) can be played outdoors - but must be stored indoors.
2. Tighten hardware as instructed.
3. Do not over tighten hardware, as you could crush the tubing.
4. Some drawings or images in this manual may not look exactly like your product.
5. **To prevent damage to the electronics, do not place this unit any closer than six inches from the wall.**

 


WARNING:


**READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND
SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO
ADULTS ARE NEEDED TO PUT THIS BASKETBALL
SHOOTOUT TOGETHER.**

HARDWARE IDENTIFIER


(To Scale)




H1 - M6 x 25mm
Allen Head Bolt (8)

 

H2 - M6 x 55mm
Allen Head Bolt (2)

 

H3 - M6 x 35mm
Allen Head Bolt (8)

 

H4 - M6 x 45mm
Allen Head Bolt (4)



H5 - M6 Flat
Washer (44)

 


H6 - M6 Locknut (20)



(Not to Scale)


T1 - Allen Wrench (1)




(Not to Scale)

T2 - Wrench (1)

 
PARTS IDENTIFIER (Not to Scale)




P1 - Top Tube (2)

 


P2 - Top Back Upright (2)

 


P3 - 27.5" Middle Back Upright (2)

 


P4 - Lower Back Upright (2)

 


P5 - 24.5" Back Top Support Tube (1)

 


P6 - 31" Front Support Tube (2)

 


P7 - Front Upright (2)

 

 
P8L - Left Connect Tube (1)
P8R - Right Connect Tube (1)




P9 - 26.25" Base Tube Upright (2)

 

P10 - Front Leg Tube (2)

 

P11 - 17.75" Front Tube (1)

 


P12 - Front Cross Tube (1)




P13 - Front Support Brace (1)



 P14 - Curved Side Brace (2)




P15 - Back Bottom Support Tube (1)

 


P15R - Back Top Support Ramp Tube (1)

 
PARTS IDENTIFIER (Not to Scale)

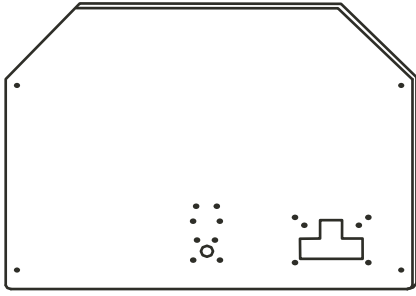


P16 - Backboard (1)

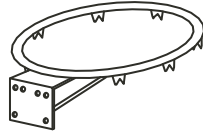 


P17 - Rim (1)

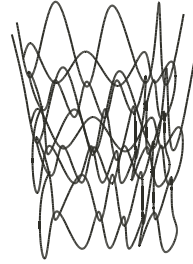 


P18 - Rim Net (1)

 


P19 - Rim Support Plate (1)

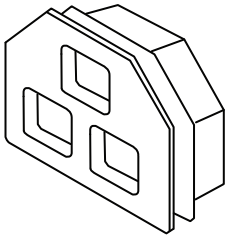 


P20 - Electronic Scoreboard (1)

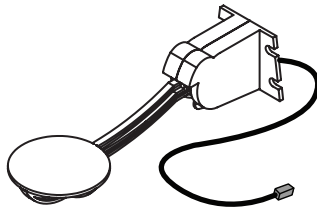 


P21 - Mechanical Scoring Arm (1)

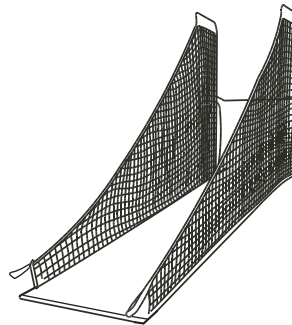 


P22 - Ramp Net (1)

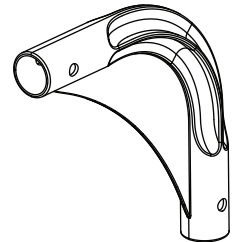 


P23 - L-Joint Plastic Part (6)

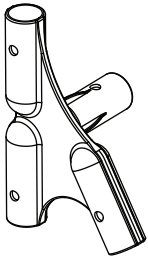 

P24 - Left 4-Joint Plastic Part (1)

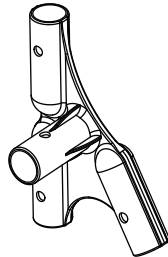 


P25 - Right 4-Joint Plastic Part (1)

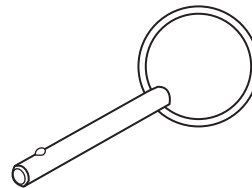 


P26 - Locking Pin (2)

 ACCESSORY IDENTIFIER (Not to Scale)



A1- Air Pump w/ Needle (1)

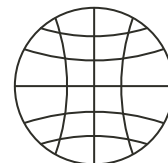 

A2 - Basketball (2)

 


WARNING:
CHOKING HAZARD
Small parts.
Not for children under 3 yrs.

PARTS REQUIRED:

- 1 pc - **P16** Backboard
- 1 pc - **P20** Electronic Scoreboard
- 3 pcs - AA Batteries (not included)

1. Locate four(4) pieces Phillips Head Screws, **P20** Electronic Scoreboard from the box.
2. Peel protective coating from **P20** Electronic Scoreboard as shown in **FIGURE 1**.
Note **inset**, back view. Install 3 "AA" batteries into electronic scorer.
3. Attach **P20** Electronic Scoreboard to **P16** Backboard using four pieces Phillips Head Screws as shown in **FIGURE 1**.

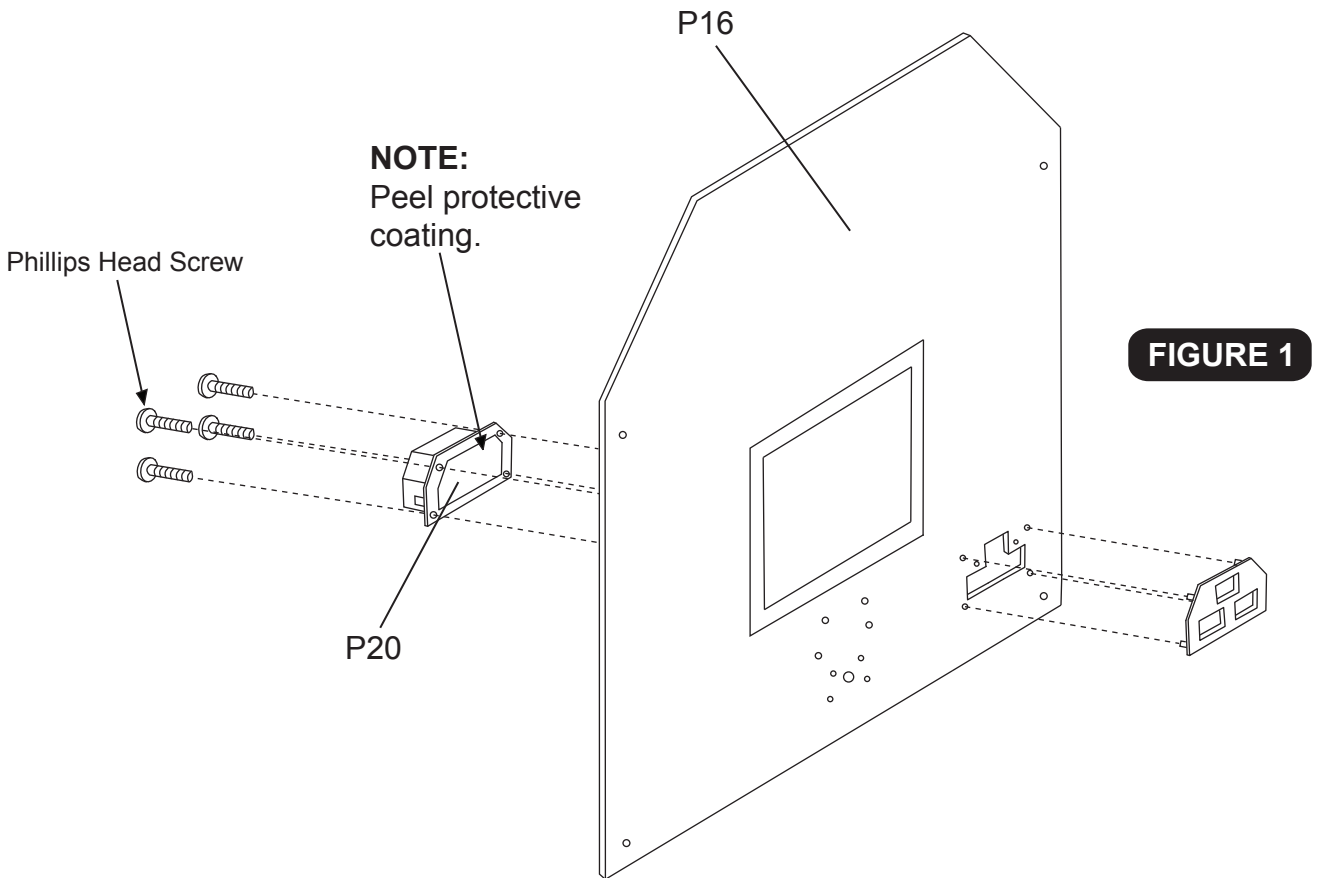


PARTS REQUIRED:

8 pcs - **H1** Allen Head Bolt
16 pcs - **H5** Flat Washer
8 pcs - **H6** Lock Nut
1 pc - **P17** Rim

1 pc - **P18** Rim Net
1 pc - **P19** Rim Support Plate
1 pc - **P21** Mechanical Scoring Arm

1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

 
4. Attach **P17** Rim to **P16** Backboard using **H1** Bolts, **H5** Flat Washers, **P19** Rim Support Plate and **H6** Lock Nuts as shown in **FIGURE 2**. **P19** Rim Support Plate attaches to the back of backboard as per diagram. Use **T1** Allen Wrench and **T2** Wrench to tighten **H1** Bolts and **H6** Lock Nuts.

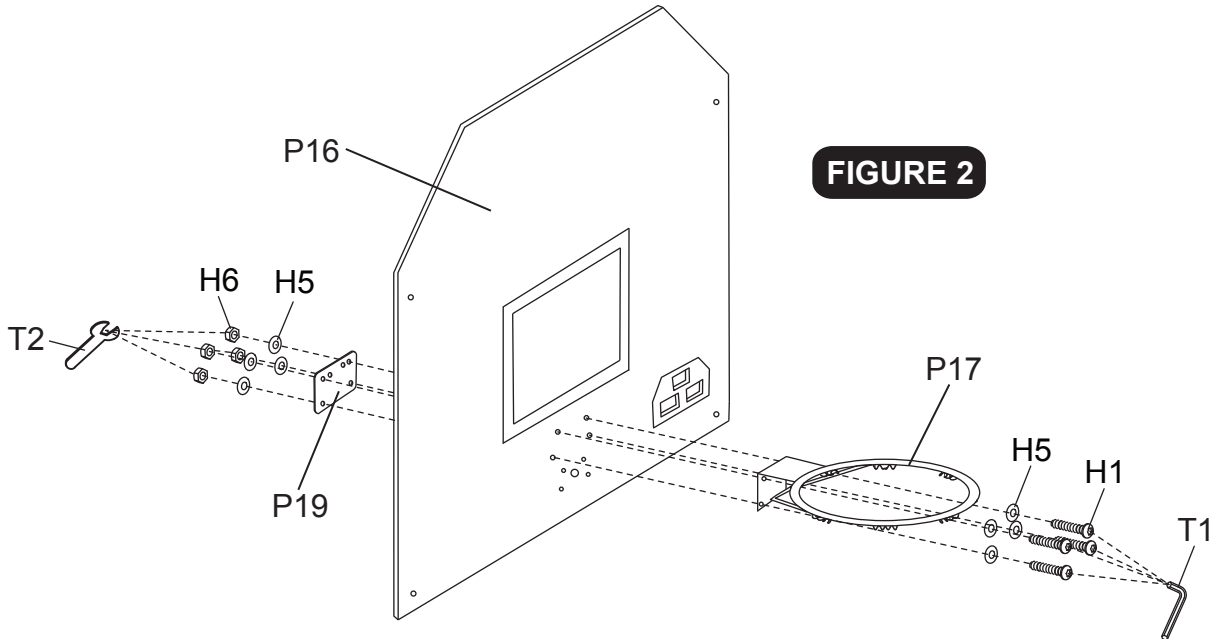

5. Attach **P21** Mechanical Scoring Arm to **P16** Backboard using **H1** Bolts, **H5** Flat Washers and **H6** Lock Nuts as shown in **FIGURE 3**. Use **T1** Allen Wrench and **T2** Wrench to tighten **H1** Bolts and **H6** Lock Nuts.

Connect **P21** Scoring Arm plug to the back side of **P20** Electronic Scoreboard as shown.

 6. Place **P18** Net on **P17** Rim as shown in **FIGURE 4**.

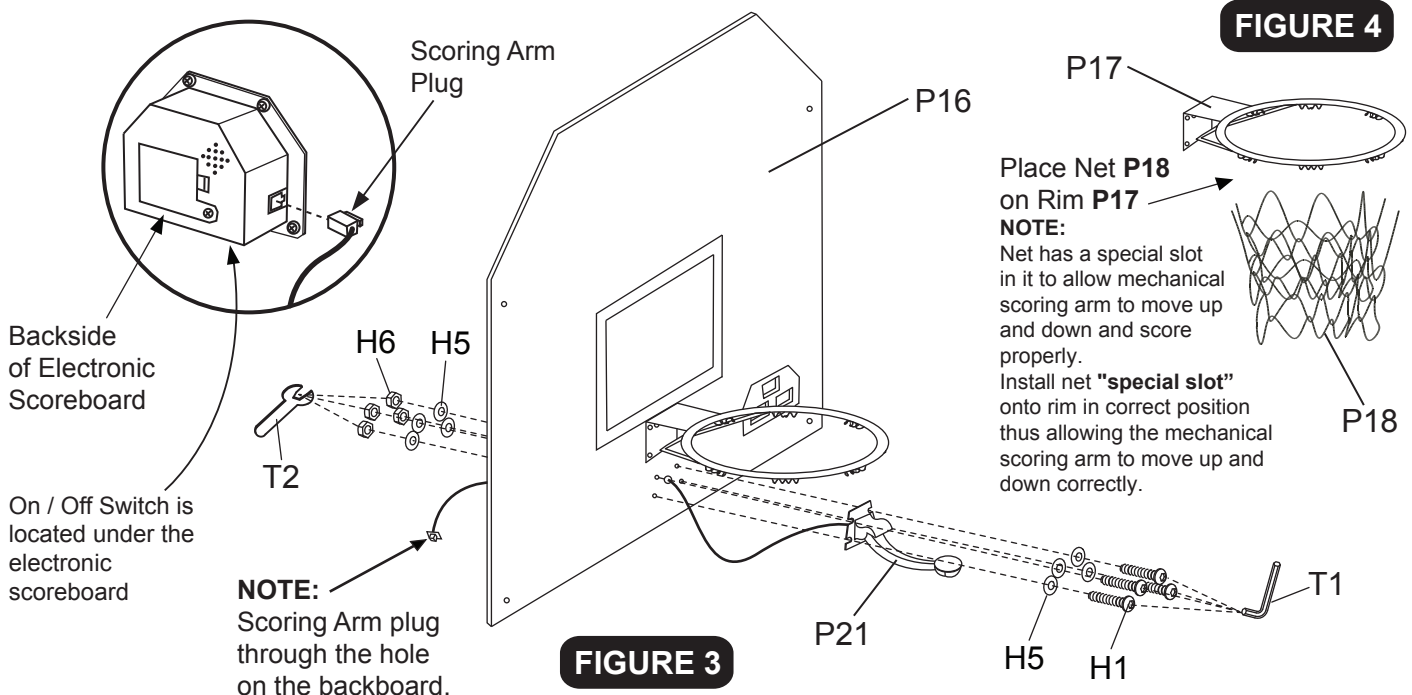


PARTS REQUIRED:

2 pcs - **P1** Top Tube
2 pcs - **P2** Top Back Upright
1 pc - **P5** 24.5" Back Top
Support Tube

2 pcs - **P23** L-Joint Plastic Part
1 pc - **P24** Left 4-Joint Plastic Part
1 pc - **P25** Right 4-Joint Plastic Part

 7. Snap **P1** Top Tubes to **P23** L-Joint Plastic Parts using spring locks as shown in **FIGURE 5**.
8. Snap **P2** Top Back Upright Tubes to **P23** L-Joint Plastic Parts using spring locks as shown in **FIGURE 5**.
9. Snap **P24** Left and **P25** Right 4-Joint Plastic Part to **P2** Tube using spring locks as shown in **FIGURE 5**.
10. Snap **P5** Back Top Support Tube between **P24** Left and **P25** Right 4-Joint Plastic Part using spring locks as shown in **FIGURE 5**.

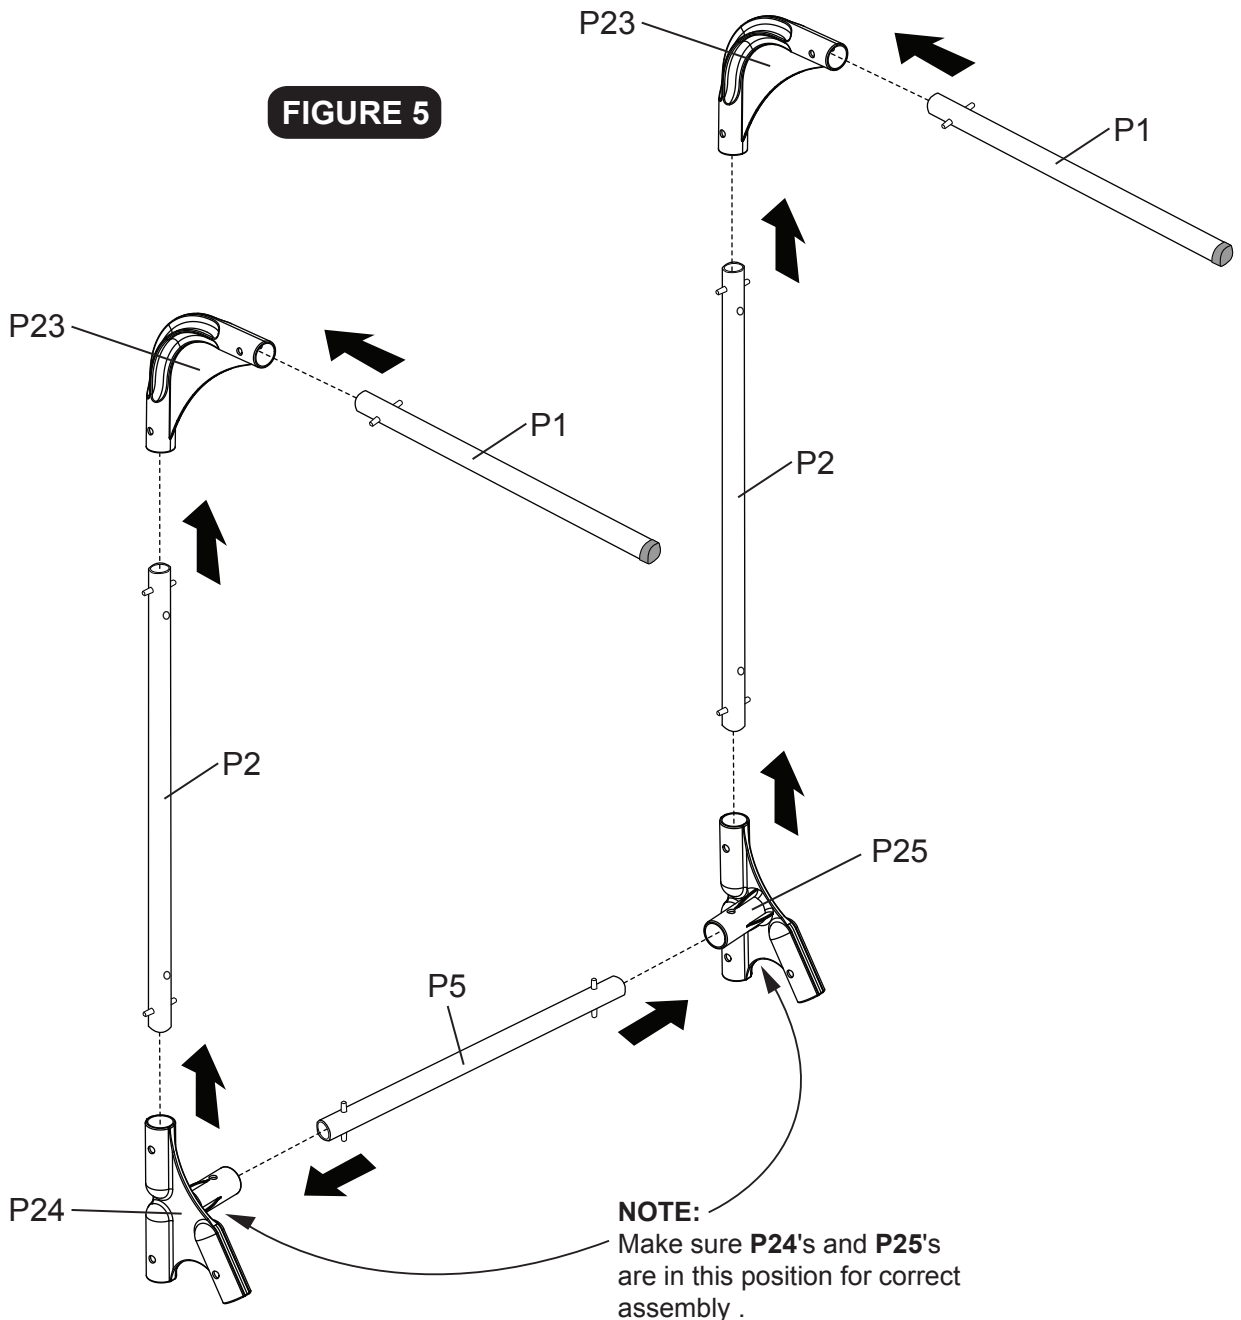


PARTS REQUIRED:

2 pcs - **P3** 27.5" Middle Back Upright
2 pcs - **P4** Lower Back Upright

2 pcs - **P6** 31" Front Support Tube
2 pcs - **P7** Front Upright

 11. Snap **P3** Middle Back Upright Tubes & **P6** Front Support Tubes to **P24** Left and **P25** Right 4-Joint Plastic Part using spring locks as shown in **FIGURE 6**.
12. Snap **P4** Lower Back Upright Tubes to **P3** Middle Back Upright Tubes using spring locks as shown in **FIGURE 6**.
13. Snap **P7** Front Upright Tubes to **P6** Front Support Tubes using spring locks as shown in **FIGURE 6**.

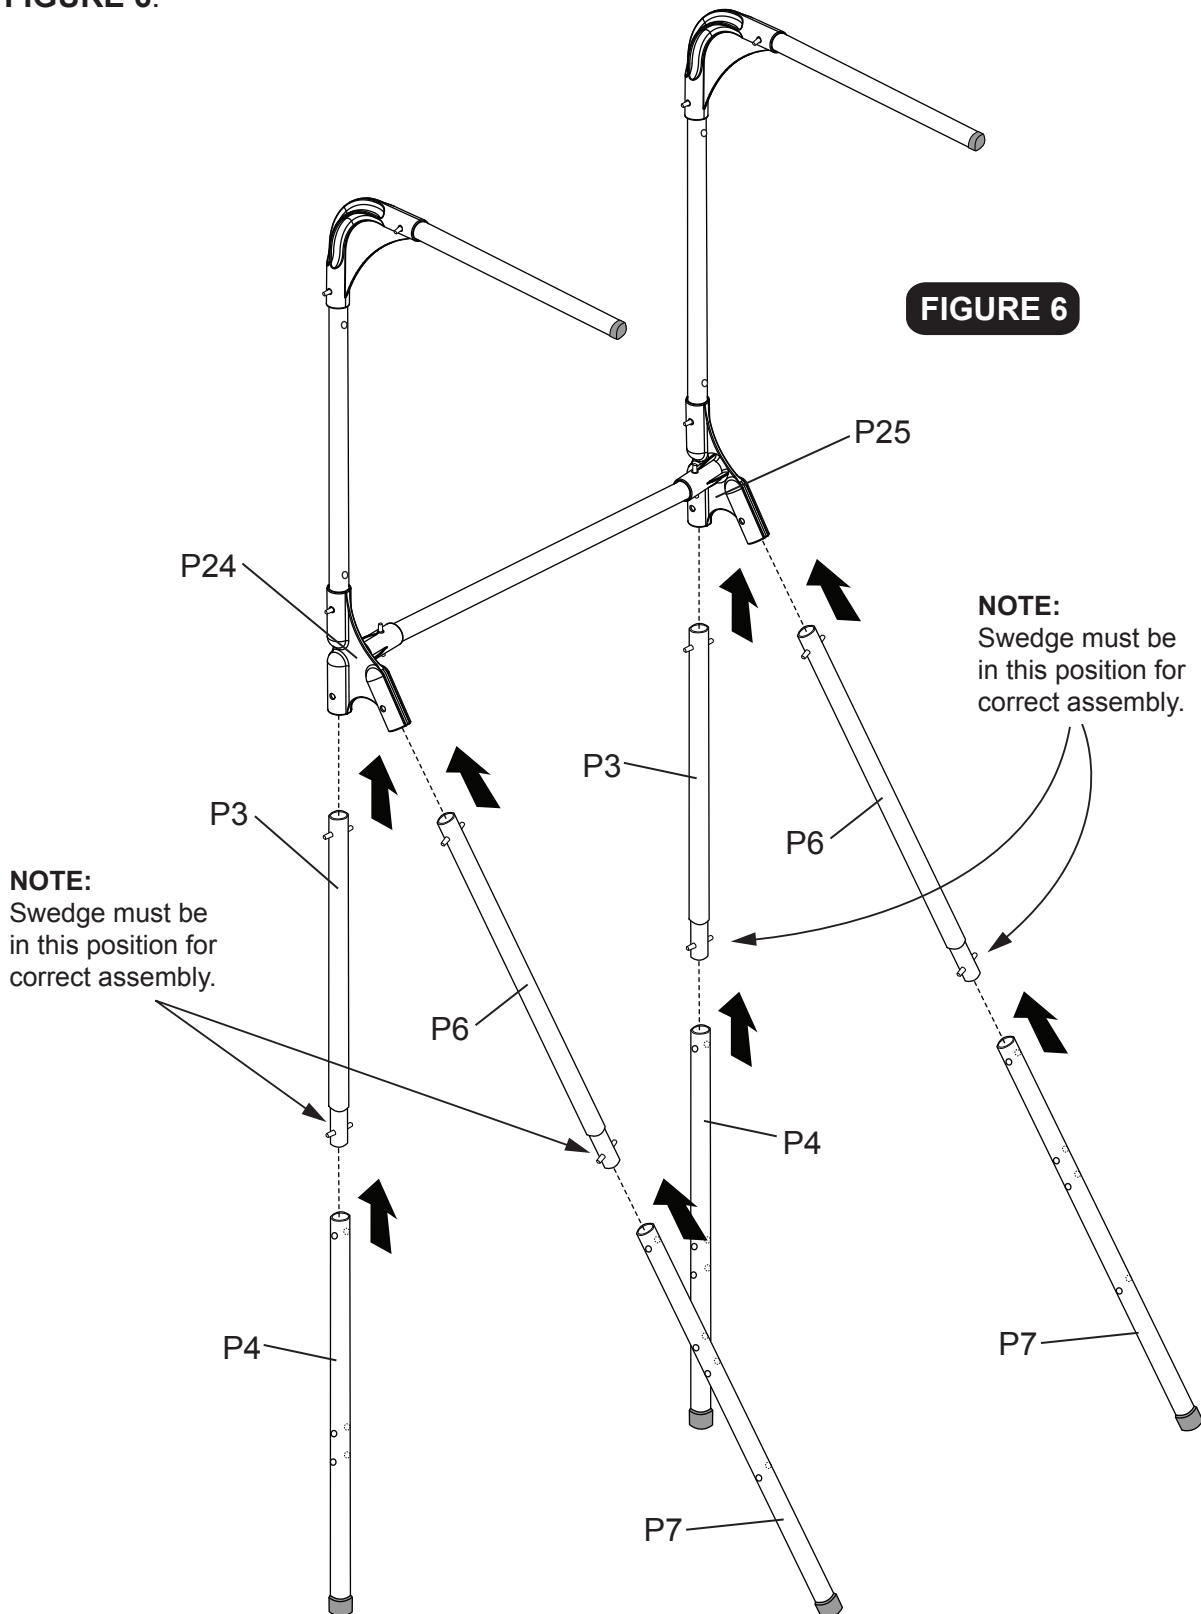

PARTS REQUIRED:

6 pcs - H3 Allen Head Bolt	2 pcs - P14 Curved Side Brace
10 pcs - H5 Flat Washer	1 pc - P15 Back Bottom Support Tube
4 pcs - H6 Lock Nut	1 pc - T1 Allen Wrench
1 pc - P13 Front Support Brace	1 pc - T2 Wrench

14. Install **P13** Front Support Brace and **P14** Curved Side Braces to **P7** Tubes using **H3** Allen Head Bolts with **H5** Flat Washers as shown in **FIGURE 7**. **Do not tighten Bolts.**
15. Install **P15** Back Bottom Support Tube and another end of **P14** Curved Side Braces to **P4** Tubes using **H3** Allen Head Bolts, **H5** Flat Washers and **H6** Lock Nuts as shown in **FIGURE 7**. **Tighten all Bolts and Nuts.**

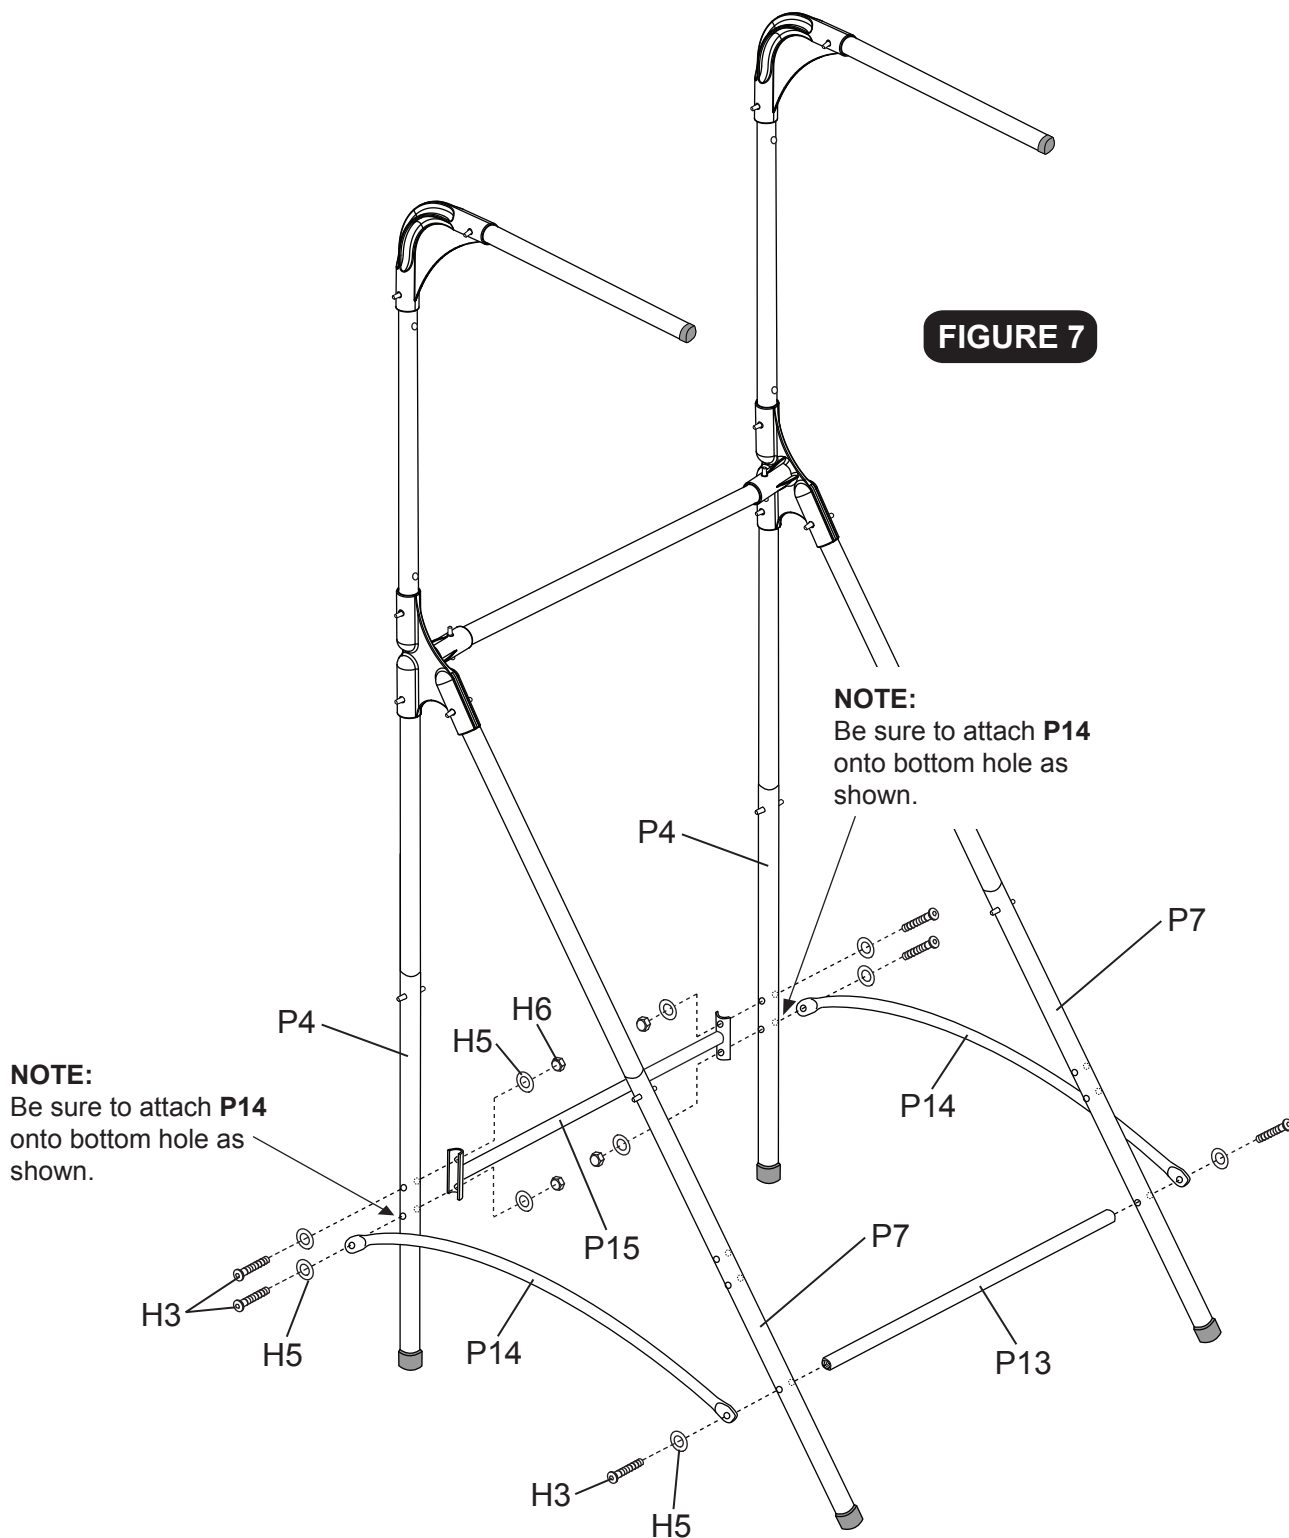 


FIGURE 7

PARTS REQUIRED:

2 pcs - **H2** Allen Head Bolt
 6 pcs - **H5** Flat Washer
 2 pcs - **H6** Lock Nut
 1 pc - **P8L** Left Connect Tube
 1 pc - **P8R** Right Connect Tube

2 pcs - **P9** 26.25" Base Tube Upright
 2 pcs - **P10** Front Leg Tube
 2 pcs - **P23** L-Joint Plastic Part
 1 pc - **T1** Allen Wrench
 1 pc - **T2** Wrench

16. Install **P8L (Left)** and **P8R (Right)** Connect Tubes to **P7** Tubes using **H2** Allen Head Bolts, **H5** Flat Washers and **H6** Lock Nuts as shown in **FIGURE 8**.
Note: This is a pivot point. "Snug" tighten H6 Lock Nuts only. Make sure this assembly pivots freely.
17. Snap **P9** Base Tube Uprights to **P8L** and **P8R** Connect Tubes using spring locks as shown in **FIGURE 8**.
18. Snap **P23** L-Joint Plastic Parts to **P9** Base Tubes using spring locks as shown in **FIGURE 8**.
19. Snap **P10** Front Leg Tubes to **P23** L-Joint Plastic Parts using spring locks as shown in **FIGURE 8**.

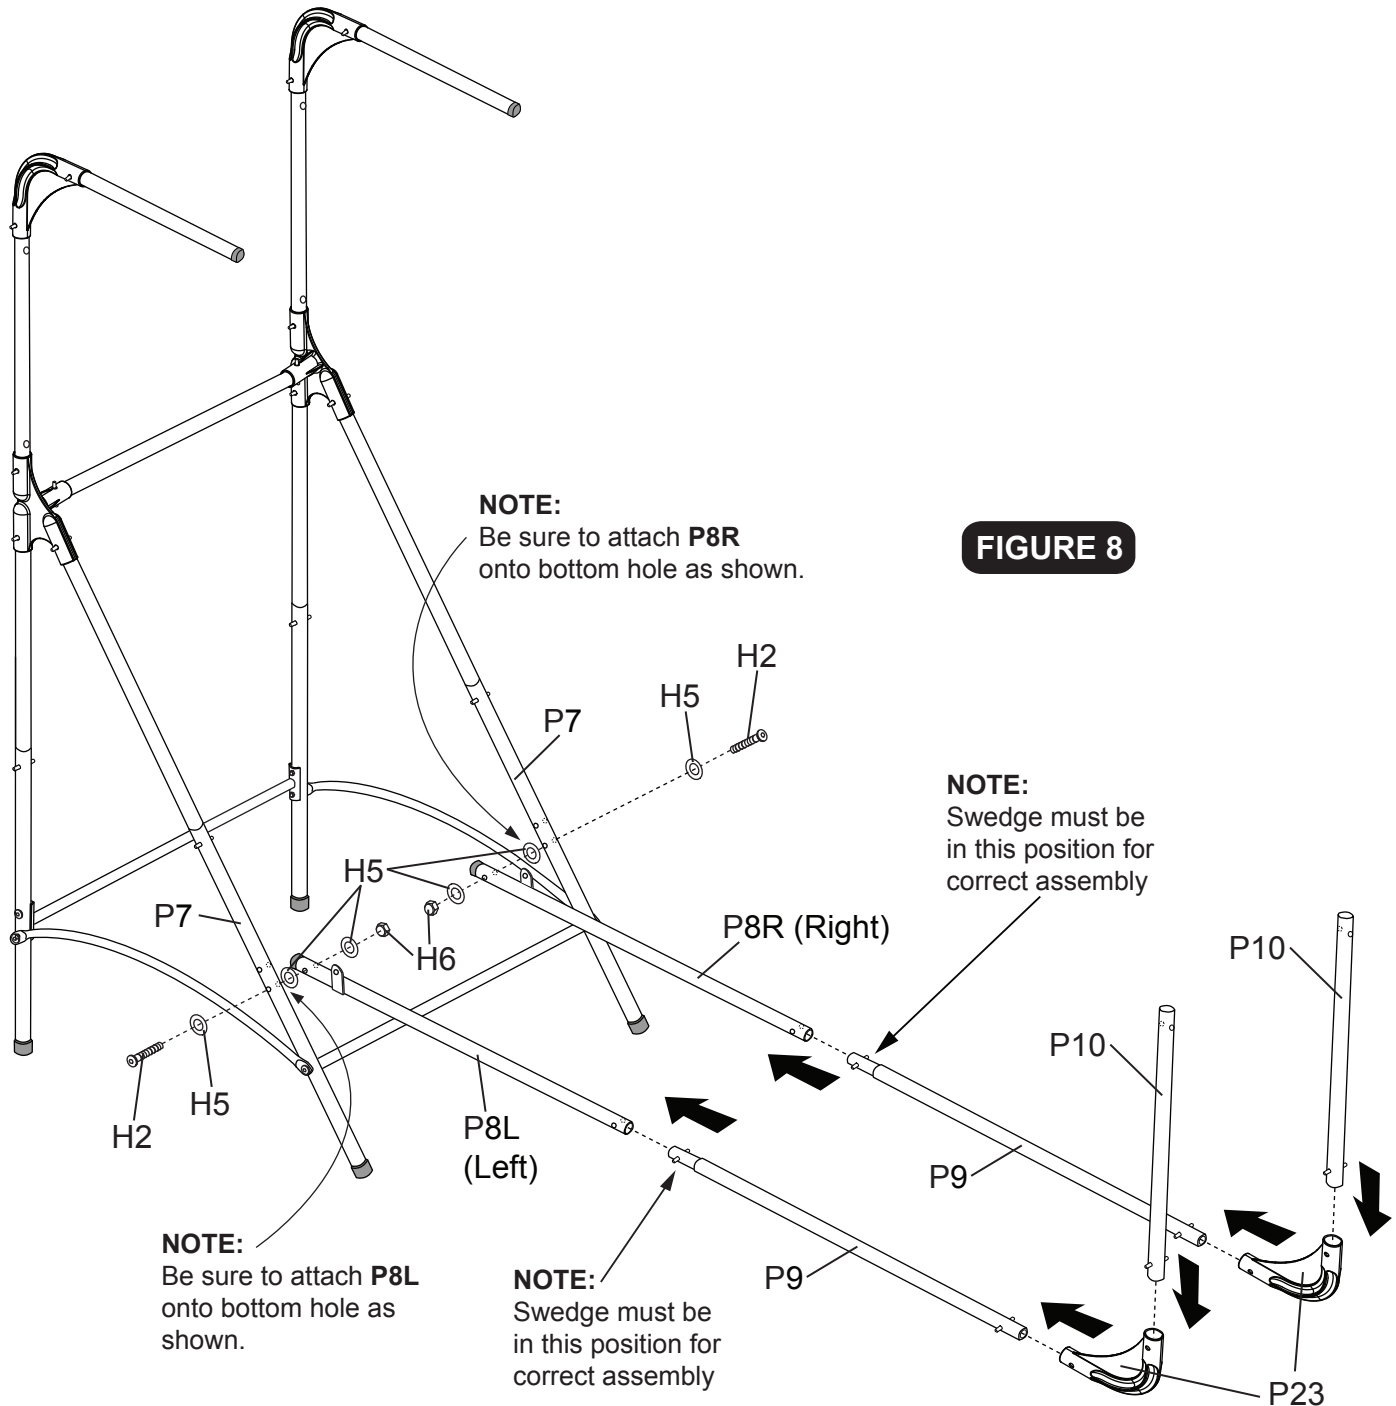 


FIGURE 8

PARTS REQUIRED:

4 pcs - **H4** Allen Head Bolt
8 pcs - **H5** Flat Washer
4 pcs - **H6** Lock Nut
1 pc - **P11** 17.75" Front Tube

1 pc - **P15R** Back Top Support
Ramp Tube
1 pc - **P22** Ramp Net
2 pcs - **P23** L-Joint Plastic Part


1 pc - **T1** Allen Wrench
1 pc - **T2** Wrench

20. Slide **P22** Ramp Net into **P1** Top Tube as shown in **FIGURE 10**.

21. Attach Backboard assembly to the frame. With the help of another adult, start at **top hole**, place a **H5** Flat Washer on a **H4** Bolt, pass the bolt through **P2** Tube and **P16** Backboard, place **H5** Flat Washer on the bolt and secure with a **H6** Lock Nut as shown in **FIGURE 10**. Repeat for other side. **Do not tighten Bolts.**

At each **bottom hole** of the backboard, repeat the above procedure except bring the ramp up behind the **P5** Tube, slide **P15R** Tube through sleeve on the back of **P22** Ramp Net and attach with **H5** Washer and **H6** Lock Nut as shown in **FIGURE 10**. Tighten all Bolts & Nuts using **T1** Allen Wrench and **T2** Wrench.

 FIGURE 10

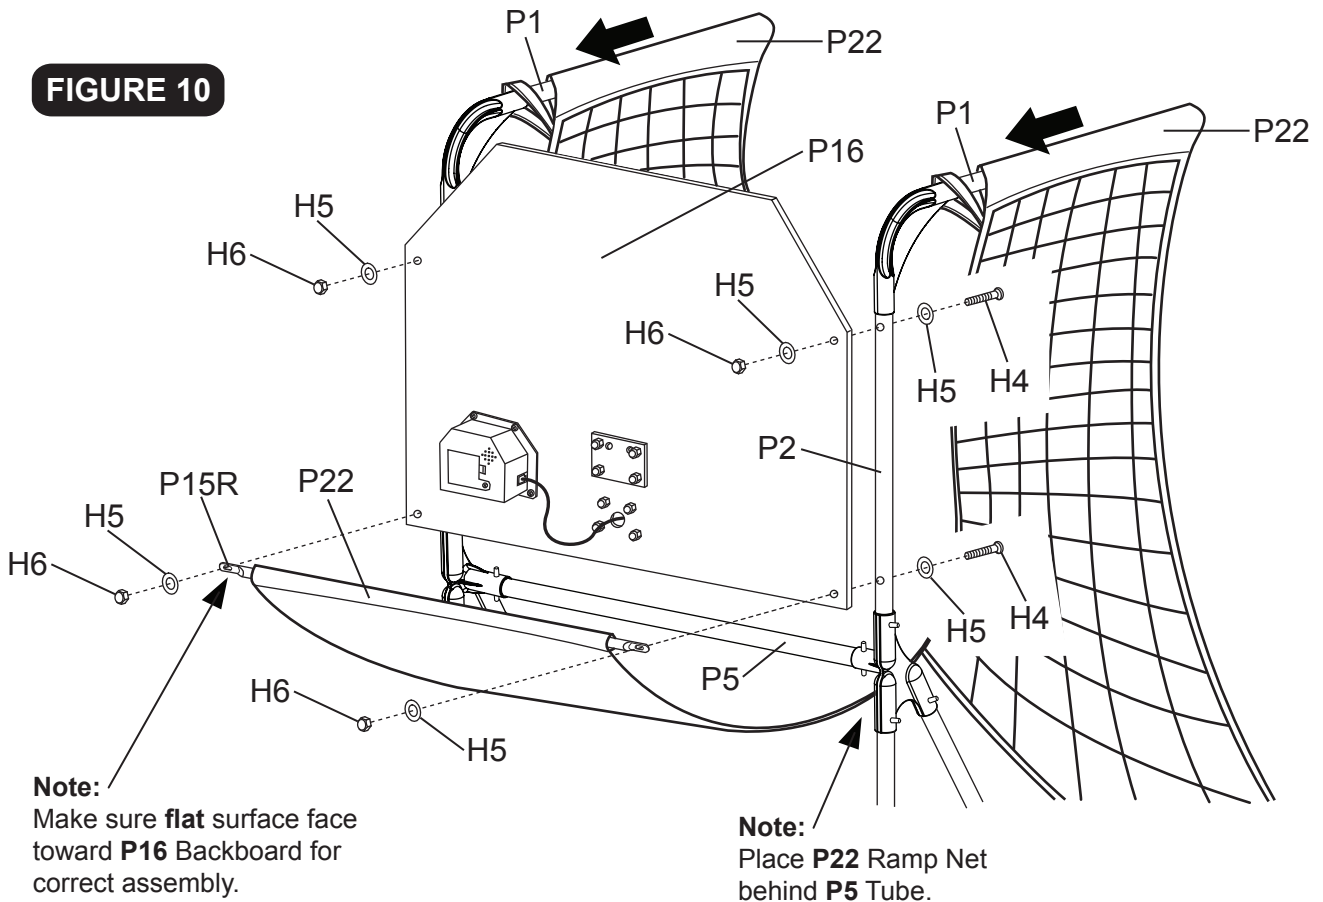

22. Snap **P23** L-Joint Plastic Parts to **P11** Front Tube using spring locks as shown in **FIGURE 11**.

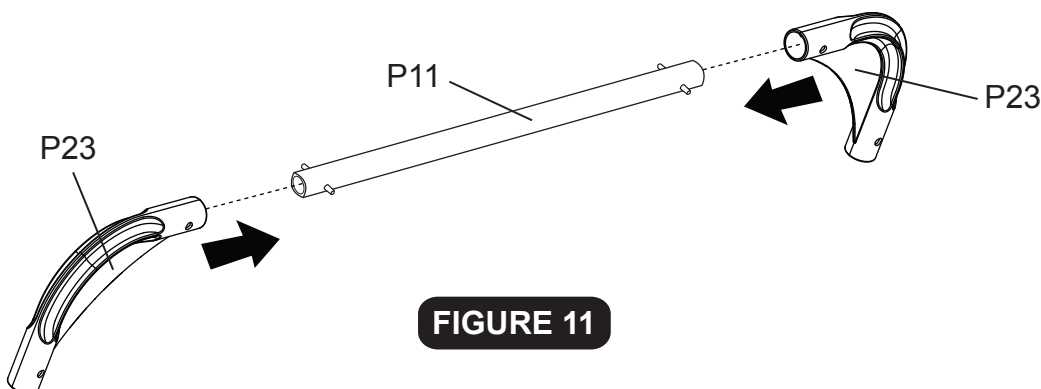 


FIGURE 11

PARTS REQUIRED:

2 pcs - **H3** Allen Head Bolt

1 pc - **P12** Front Cross Tube

4 pcs - **H5** Flat Washer

1 pc - **T1** Allen Wrench

2 pcs - **H6** Lock Nut

1 pc - **T2** Wrench

23. Slide **P23** L-Joint Plastic Parts and **P11** Tube assemble from **STEP 22** onto **P10** Tubes as shown. Slide **P12** Front Cross Tube through sleeve on the front of the ramp net, attach **P12** Tube to **P23** L-Joint Plastic Parts and **P10** Tube assemble using **H3** Allen Head Bolts, **H5** Flat Washers and **H6** Lock Nuts as shown in **DETAIL A**.

Tighten Bolts and Nuts with **T1** Allen Wrench and **T2** Wrench.

24. Secure the Velcro Straps (front of the ramp net) around the **P23** L-Joint Plastic Part as shown in **FIGURE 12**.



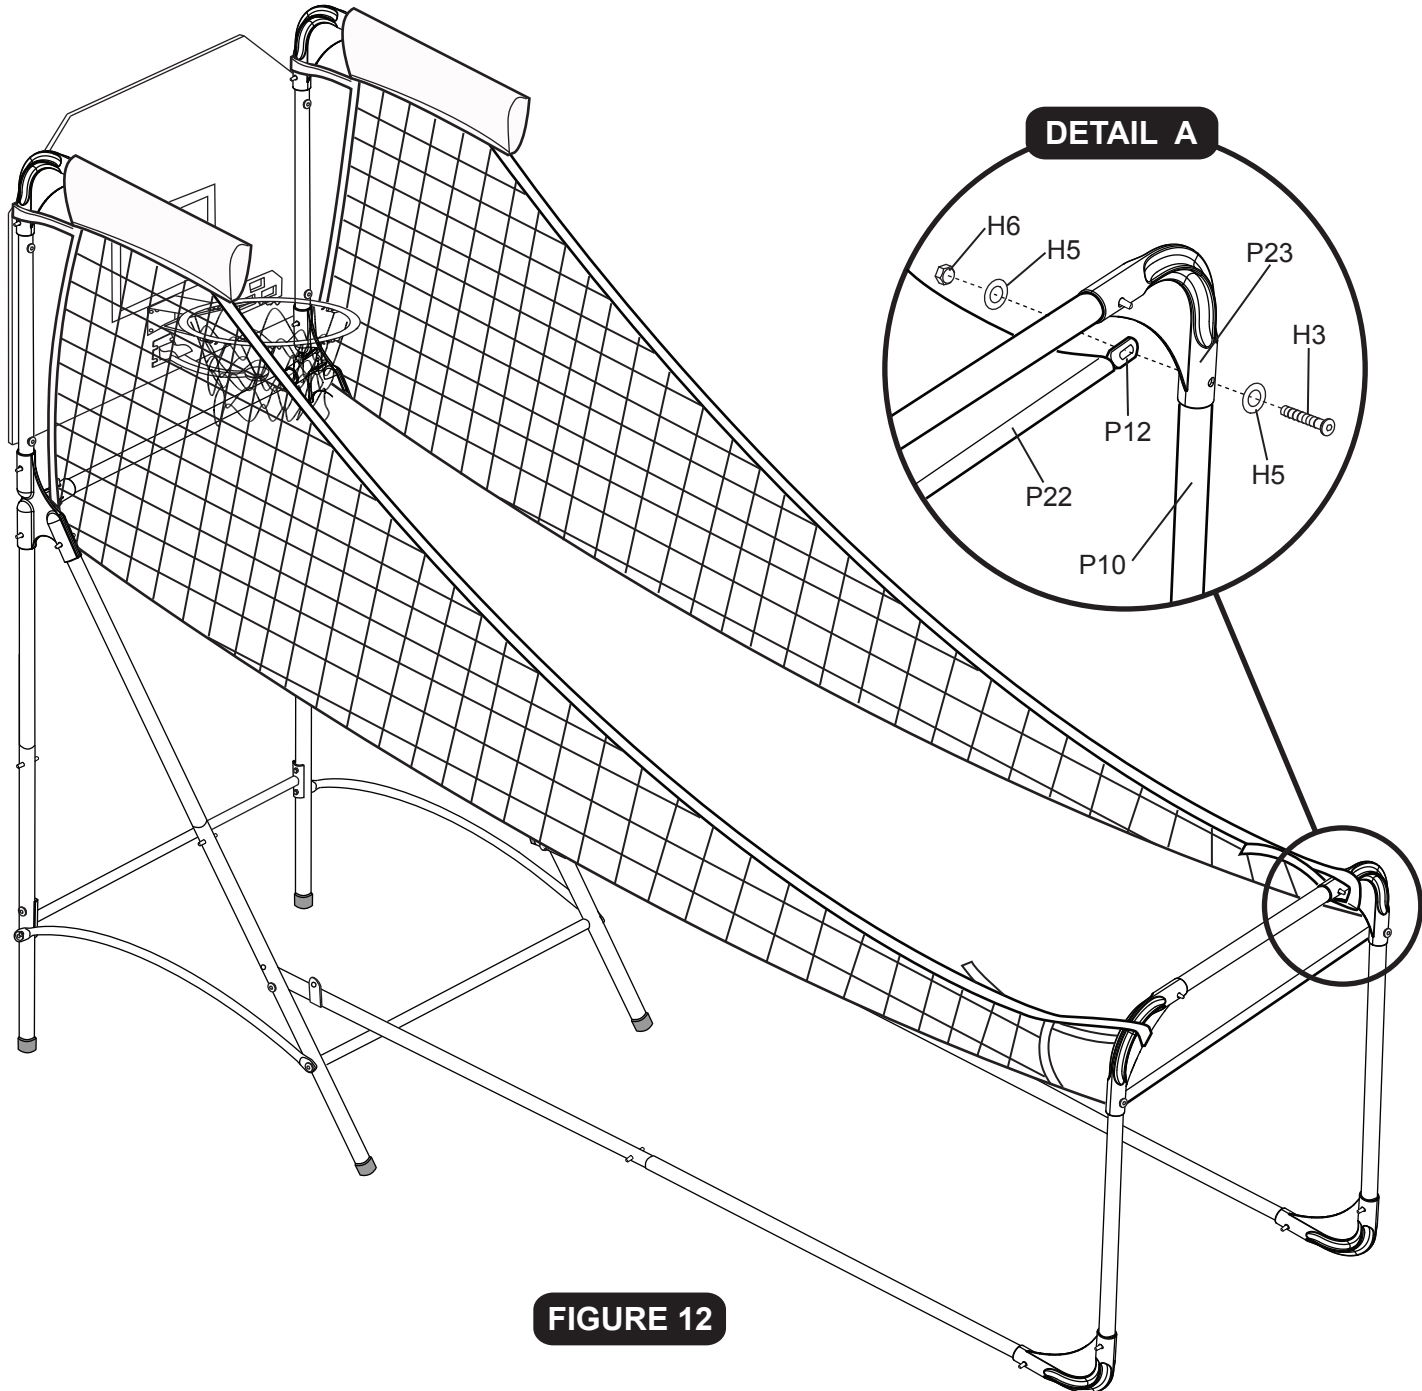 


FIGURE 12

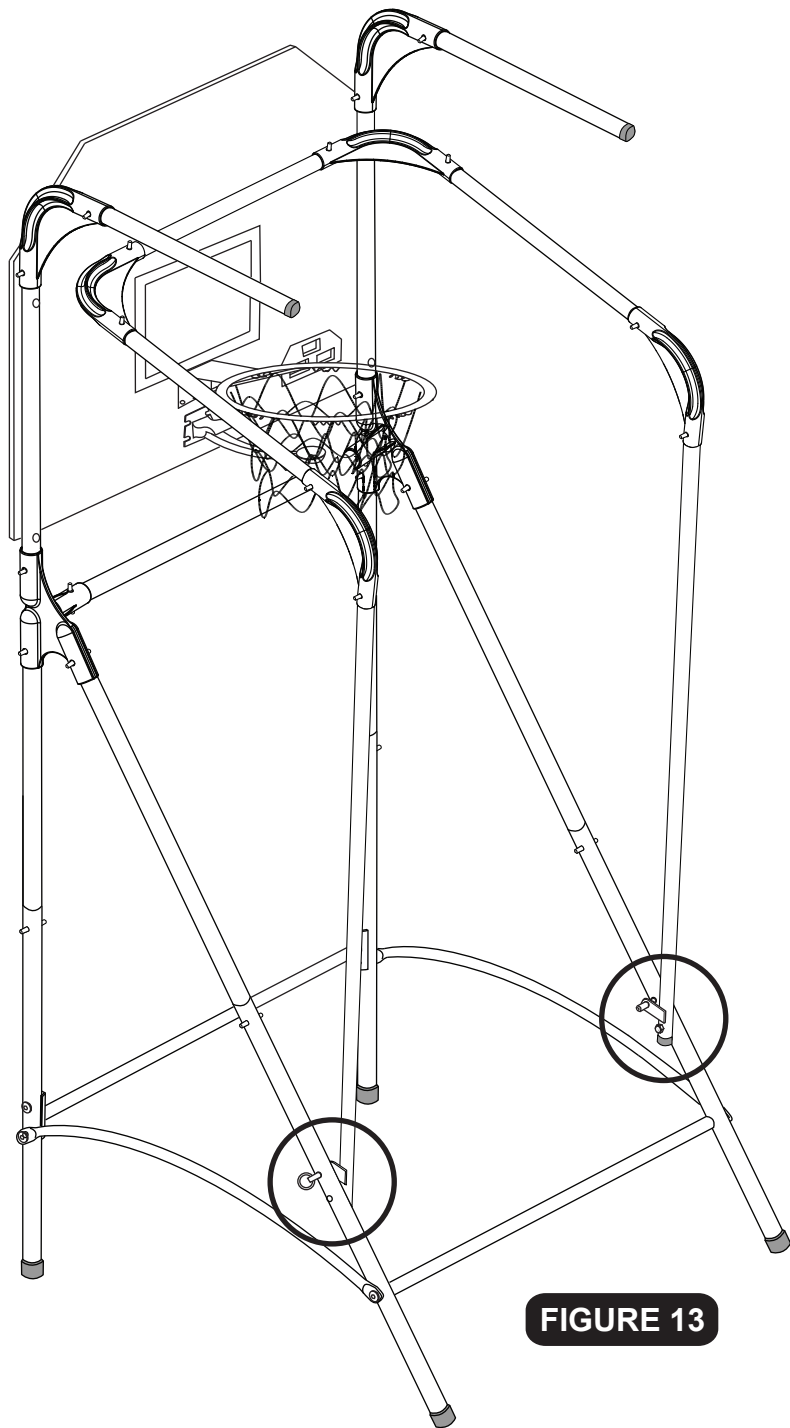 

P26 Locking Pin

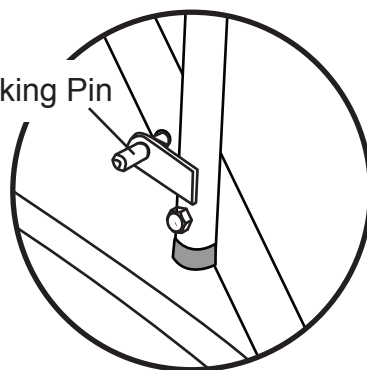 

In **STORAGE** position,
use **P26** Locking Pin to lock
ramp in storage position.

FIGURE 13

**Congratulations! You have now assembled your Single Shootout.
Please note the Care and Use instructions below.**

CARE AND USE OF YOUR SHOOTOUT

1. Product can be used **OUTDOORS** - but must be stored **INDOORS**.
2. **DO NOT** sit, climb or lean on the unit.
3. **DO NOT** drag the unit when moving it, This will damage the legs.

USE OF YOUR SHOOTOUT

Inset 3(three) pieces "AA" batteries at the backside of electronic scoreboard.

Plug the mechanical scoring arm plug into backside of the electronic scoreboard.

Press on/off button at the bottom backside of the electronic scoreboard to play and stop the game.

Each player has 60 seconds to make as many baskets as they can. During the first 45 seconds each shot counts as 2 points. During the last 15 seconds each shot counts as 3 points.

PRODUCT PARTS LIST

- M01480RW -

PARTS	KEY#	DESCRIPTION	QTY.
01480RWZGH1	H1	M6 x 25mm Allen Head Bolt	8
01480RWZGH2	H2	M6 x 55mm Allen Head Bolt	2
01480RWZGH3	H3	M6 x 35mm Allen Head Bolt	8
01480RWZGH4	H4	M6 x 45mm Allen Head Bolt	4
01480RWZGH5	H5	M6 Flat Washer	44
01480RWZGH6	H6	M6 Lock Nut	20
01480RWZGT1	T1	Allen Wrench	1
01480RWZGT2	T2	Wrench	1
01480RWZGP1	P1	Top Tube	2
01480RWZGP2	P2	Top Back Upright	2
01480RWZGP3	P3	27.5" Middle Back Upright	2
01480RWZGP4	P4	Lower Back Upright	2
01480RWZGP5	P5	24.5" Back Top Support Tube	1
01480RWZGP6	P6	31" Front Support Tube	2
01480RWZGP7	P7	Front Upright	2
01480RWZGP8L	P8L	Left Connect Tube	1
01480RWZGP8R	P8R	Right Connect Tube	1
01480RWZGP9	P9	26.25" Base Tube Upright	2
01480RWZGP10	P10	Front Leg Tube	2
01480RWZGP11	P11	17.75" Front Tube	1
01480RWZGP12	P12	Front Cross Tube	1
01480RWZGP13	P13	Front Support Brace	1
01480RWZGP14	P14	Curved Side Brace	2
01480RWZGP15	P15	Back Bottom Support Tube	1
01480RWZGP15R	P15R	Back Top Support Ramp Tube	1
01480RWZGP16	P16	Backboard	1
01480RWZGP17	P17	Rim	1
01480RWZGP18	P18	Rim Net	1
01480RWZGP19	P19	Rim Support Plate	1
01480RWZGP20	P20	Electronic Scoreboard	1
01480RWZGP21	P21	Mechanical Scoring Arm	1
01480RWZGP22	P22	Ramp Net	1
01480RWZGP23	P23	L-Joint Plastic Part	6
01480RWZGP24	P24	Left 4-Joint Plastic Part	1
01480RWZGP25	P25	Right 4-Joint Plastic Part	1
01480RWZGP26	P26	Locking Pin	2
01480RWZGA1	A1	Air Pump with Needle	1
01480RWZGA2	A2	Basketball	2
01480RWZGK1	K1	Hardware Kit	1
01480RWZGM1	M1	Owner's Manual	1

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADESPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADESPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-888-996-2729 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.