

# Wall-M Firmware

Below are the latest release notes for Wall-M controllers. To check the current firmware version, go to Settings > External Device and locate the unit under “Paired” in your PowerZone™ Connect amplifier’s software interface.

To avoid any installation and configuration issues, we recommend updating the firmware installed on your PowerZone Connect™ amplifier before attempting to install and configure the Blaze by Sonance Wall-M controller.

Please note that Blaze by Sonance Wall-M controllers are only compatible with our PowerZone Connect™ amplifiers running firmware version 1.8.0 or later.

August 27, 2025

## Firmware 1.4.0

Introducing Firmware 1.4.0 for the Wall-M, multi-zone PoE-powered wall controller.

Note:

- **Wall-S1 controllers are not upgradable to Wall-M functionality** with firmware 1.4.0+.
- Wall-M ships with firmware 1.4.0+ pre-installed, ensuring it is ready for immediate use out of the box.

### New features:

- GUI home screen featuring updated icons for Input, Mute, Zone, and Back.

Requirements



**Requirements:**

- Blaze by Sonance PowerZone™ Connect amplifiers (firmware 1.8.0+).
- No external drivers or additional hardware required.