



# INSTRUCTION MANUAL

Small Kitchen Island Cart

SKY8094 + SKY8095 + SKY8096 + SKY8097 + SKY8098 SKY10998 + SKY10999



As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

Always.



44 LBS TOP BOARD CAPACITY



**11 LBS** DRAWER CAPACITY



33 LBS SHELF (EACH) CAPACITY



**BOTTOM BOARD** CAPACITY



**ASSEMBLY** 





**ASSEMBLY** 

**TOOLS REQUIRED** 









# (!) NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- Do not immerse this appliance in water, rinse under tap, spray with water, or keep in wet/humid areas.
- Do not use this product in an excessively humid or dusty environment.
- Keep product away from direct sunlight and other sources of heat (stove, heater, etc.).
- This product is intended for residential use only.

 
### **MARNING**

- To reduce the risk of electric shock:
  - Do not exceed rating/maximum load: 15a 125v 60 hz 1800w.
  - For indoors use & in dry locations only.
  - Do not plug into another relocatable power tap.
- · To prevent cord damage and tripping hazard:
  - Do not step or roll over cord.
  - Avoid extending cord over areas of foot traffic.

 
### HARDWARE



 






 




 










 
























# **PARTS**

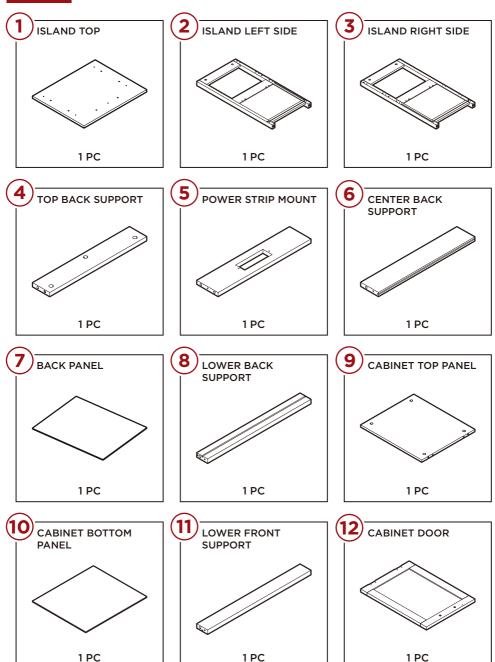


# PARTS

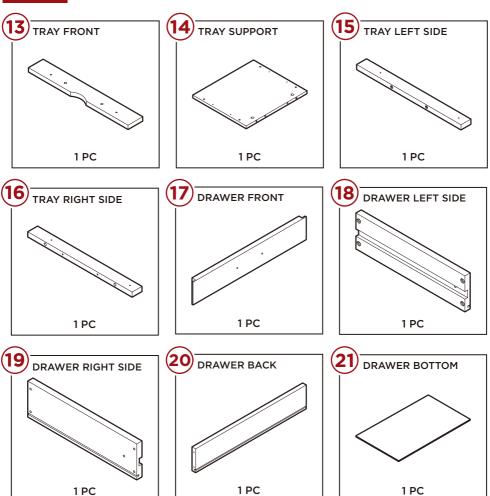



On one **part N drawer runner,** locate and press down on the release latch, then separate the guide section from the rail section. Repeat on a second runner, then set the four sections aside.

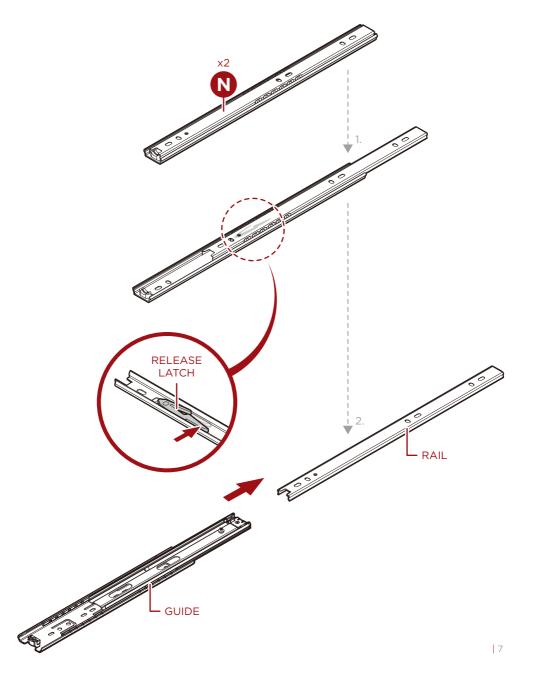




Locate one part O drawer runner and attach it to the part 2 island left side with two part H screws. Slide the rail section left or right to reveal the fastener holes if necessary.

Attach the guide section of the one part N drawer runner to the part 2 island left side with two part H screws.

Insert three part A cam bolts into the part 2 island left side.

NOTE: Make sure the magnetic flashing is faced away from the side panel interior.

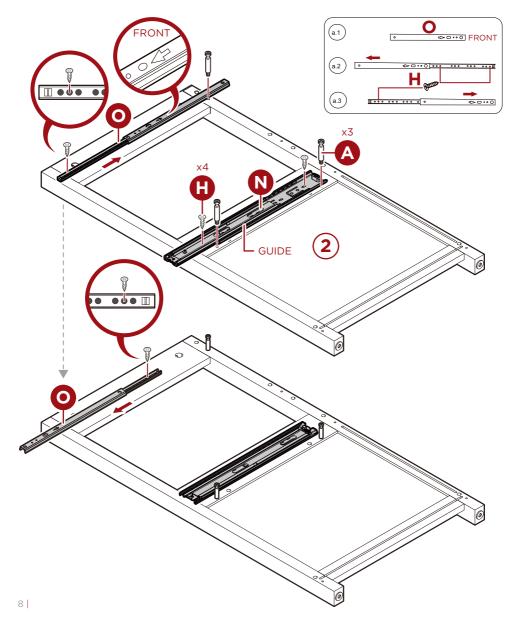




Locate one part O drawer runner and attach it to the part 3 island right side with three part H screws. Slide the rail section left or right to reveal the fastener holes if necessary.


Attach the guide section of the one  $part\ N$  drawer runner to the  $part\ 3$  island right side with three  $part\ H$  screws.

Insert three part A cam bolts into the part 3 island right side.

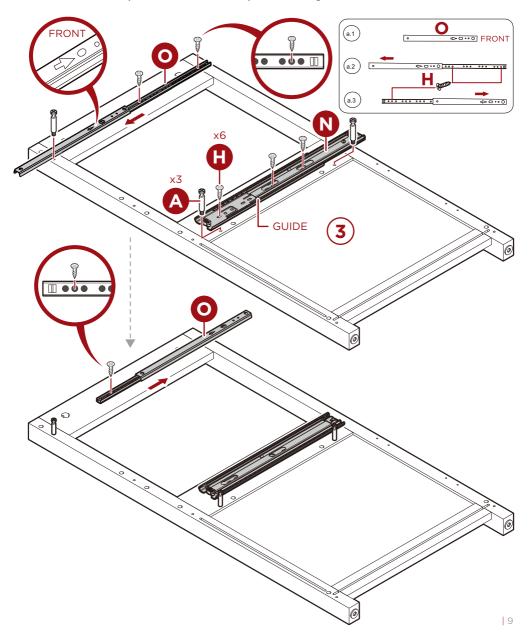




Insert the part T power strip into the receiver hole on the part 5 power strip mount, then secure with two part W screws.

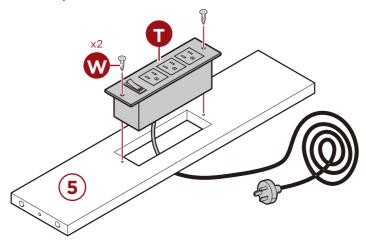

5


Insert one part B cam lock and one part C dowel into the part 4 top back support, then attach it to the part 2 island left side assembly, turn the cam locks to secure.

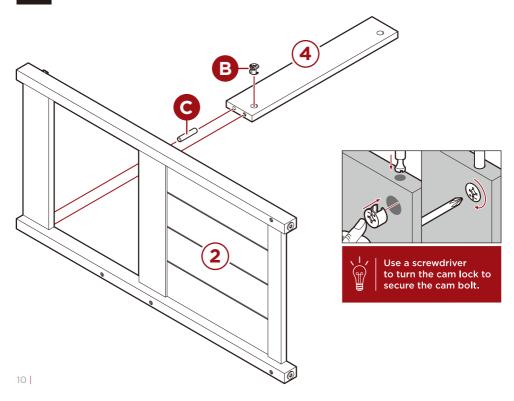




Insert one part C dowel each into the part 6 center back support, part 8 lower back support, and part 11 lower front support, three dowels total.

Attach the support panels to the **part 2 island left side assembly** with three **part M screws**, one screw per support.

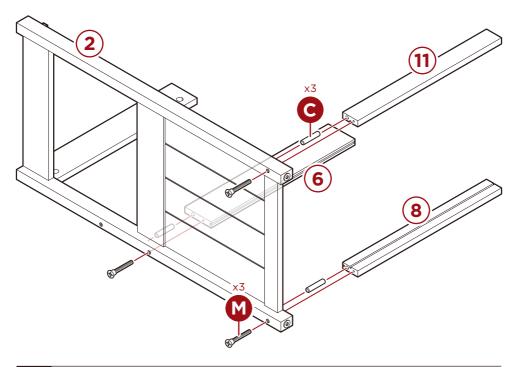

7


Attach one part J magnetic flashing to the part 9 cabinet top panel with two part K screws.

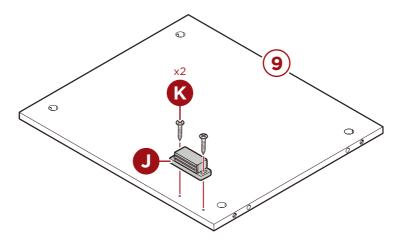




Insert two part C dowels into the part 5 power strip mount, then attach it to the part 2 island left side assembly with one part M screw.


Insert two part B cam locks and two part C dowels into the part 9 cabinet top panel, then attach it to the part 2 island left side assembly, turn the cam locks to secure.

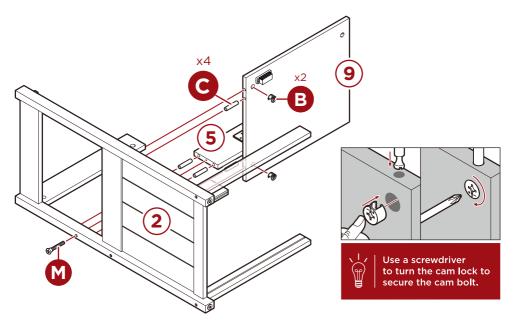


Slide the part 7 back panel into the grooves between the part 6 and 8 back supports.

Slide the part 10 bottom panel into the grooves between the part 8 lower back support and part 11 front support.

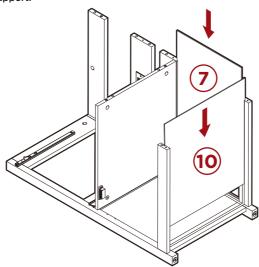


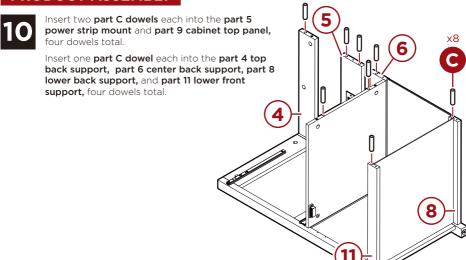

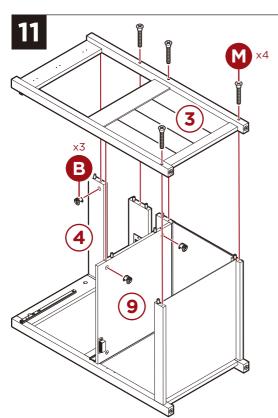

Insert two part B cam locks into the part 9 cabinet top panel, then insert one more part B cam lock into the part 4 top back panel.

Attach the part 3 island right side assembly to the part 4 top back panel, part 6 center back support, part 8 lower back support, part 5 power strip mount, and part 11 lower front support with four part M screws, then turn the cam locks in part 4 and part 9 to secure.

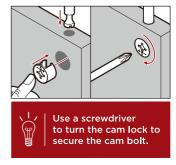



Insert five part A cam bolts into the part 1 island top.


13

 
Insert two part B cam locks and two part C dowels each into the part 2 island left side and part 3 island right side, four locks and dowels total.

Insert one part B cam lock and two part C dowels into the part 4 top back panel.

Attach the  ${\bf part}~{\bf 1}$  island  ${\bf top},$  then turn the camlocks to secure.



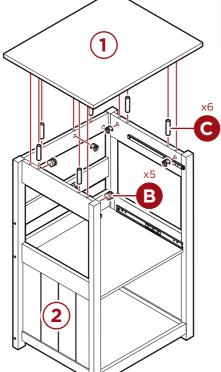






Use the included wrench to attach one part P locking caster and one part Q caster to the bottom of the part 2 island left side.

Repeat to attach one part P locking caster and one part Q caster to the bottom of the of the part 3 island right side.


NOTE: When installing, make sure the part P locking casters installed in perpendicular corners.

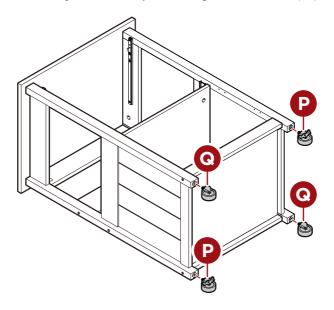

15


Attach two part G hinges to the part 12 cabinet door with four part H screws, two screws per hinge.

Attach the part I metal plate to the part 12 cabinet door with the included screw, then attach one part E handle with two part F screws.

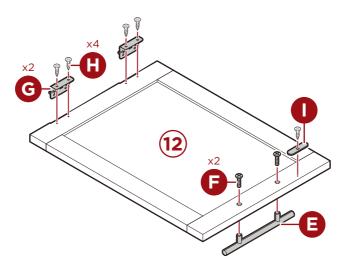

16


Attach the part 12 cabinet door to the part 3 island right side by securing the part G hinges with four part H screws, two screws per hinge.

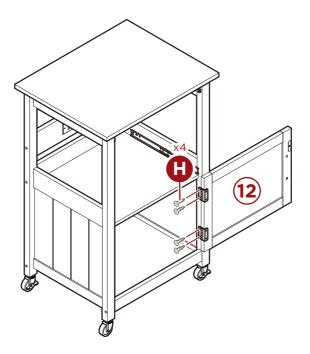

**17** 


Locate the two rail sections of part N drawer runners (see step 1) then attach one each to the part 15 tray left side and part 16 tray right side with four part H screws, two screws per side.


Insert two part A cam bolts into the part 13 tray front.

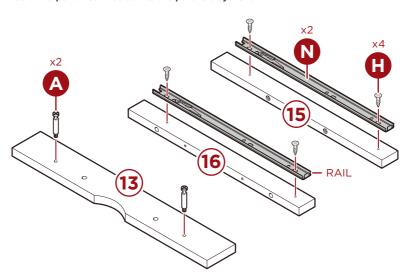

18


Insert two part C dowels each into the part 15 and 16 tray sides, then attach them to the part 14 tray support with four part D screws.

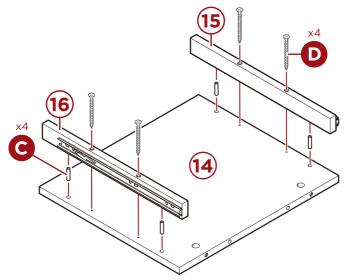

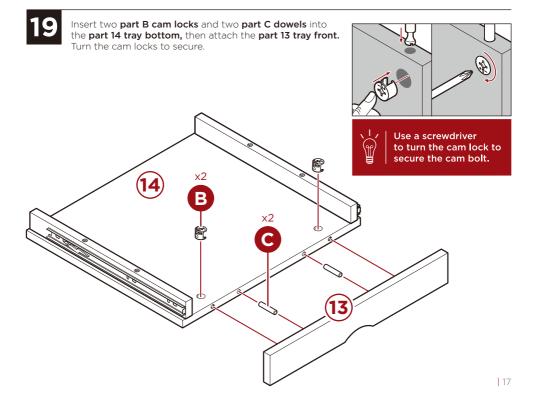

20

Slide the tray assembly into its designated space along the guide sections of the  ${\bf part}\;{\bf N}$  drawer runners.

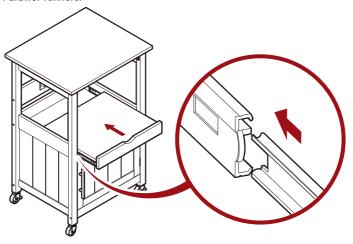


21

Attach one part E handle to the part 17 drawer front with two part F screws.


Attach the part 19 drawer right side to the part 17 drawer front and part 20 drawer back with four part L screws.

Slide the part 21 drawer bottom between the drawer front and back, then attach the part 18 drawer left side with four part L screws.

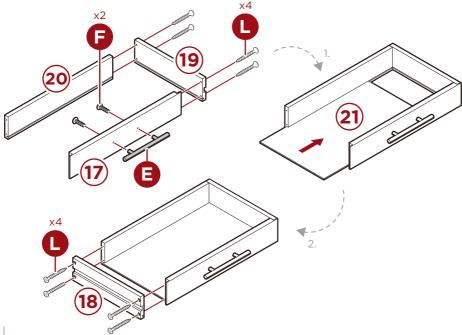




2 PERSON ASSEMBLY: Slide the drawer assembly into its designated space, then insert two part U screws on the part 18 and 19 drawer sides to secure the part O drawer runners.

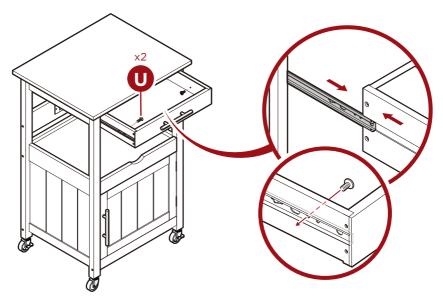

23

Attach three part R side hooks to the part 3 island right side with six part S screws, two screws per hook.

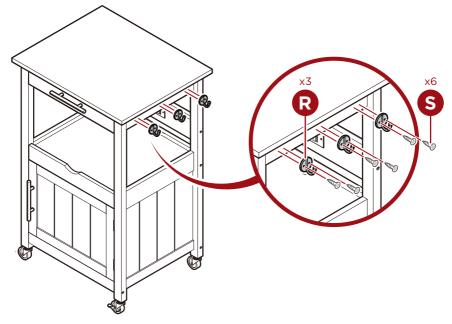



Question about your product? We're here to help. Visit us at:

### help.bestchoiceproducts.com















Returns & Refunds

### PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

# **△WARNING**

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.