

# Leaf+Bean

## Electric Magnetic Milk Frother & Warmer

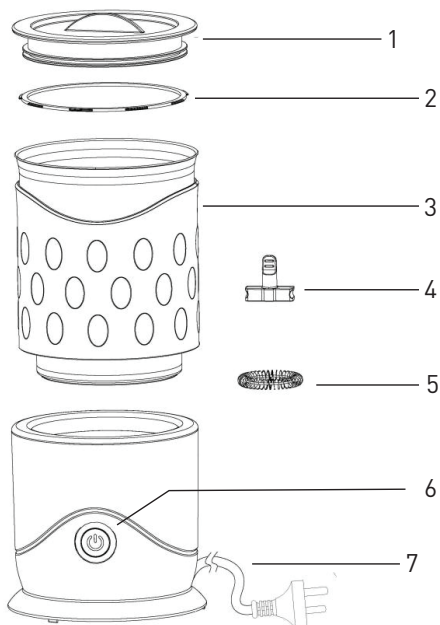 
LBEC03

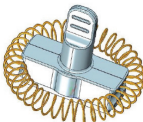
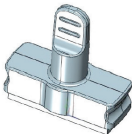
Instruction Manual

Thank you for choosing the Leaf & Bean Electric Magnetic Milk Frother & Warmer. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before first use.

### Features and Parts

1. Protective Lid
2. Silicone Sealing Ring
3. Stainless Steel Milk Jug with Silicone Housing
4. Stirrer
5. Whisk Spring
6. Power Button
7. Power Cord



Whisk Type	Function	Minimum milk amount	Time	Temperature
	Frothing milk at room temperature	200ml	120 seconds	Room temperature
	Heating and frothing milk	200ml	160-240 seconds	65°C
	Heating milk	350ml	200-420 seconds	65°C
	Stirring milk or hot chocolate	350ml	200-450 seconds	70°C

### Technical Parameters

Input Voltage	220-240V~
Power	550W

## Safety First

- Please read the instructions carefully before using this appliance.
- Keep the appliance and cord out of reach of children younger than 8 years of age.
- Children 8 years and older must be strictly supervised if operating the appliance. Do not allow children to clean or maintain the appliance without supervision.
- Children are not allowed to play with the appliance.
- Small parts such as the whisks must be kept in a safe place to avoid choking hazards.
- Persons with reduced physical, sensory, or mental ability must use the appliance with care and supervision having understood all the hazards involved in operation.
- Never rinse the appliance under the tap.
- Never immerse the power base, appliance, cord or plug in water.
- Always ensure the appliance is switched off before removing it from its stand.
- This appliance must be earthed. Do not place it on a polished wood surface as it could damage the wood grain.
- Do not touch the live or rotating parts of the milk frother.
- Do not allow the main cable to hang loosely, or touch/move the plug with wet hands. Do not place the plug on a hot surface or bring it in contact with oil.
- Unplug the milk frother when not in use. Always keep the milk frother unplugged when cleaning or replacing accessories.
- When the milk frother is in use, do not touch the metal shell to avoid scalding.
- Do not operate the milk frother without milk. Milk volume cannot exceed the volume marked in the cup, otherwise it will overflow.
- Do not insert fingers or any other object into the gaps of the frother.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and

other working environments, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.

- Never rinse the appliance under the tap.
- Never immerse the power base, appliance, cord or plug in water.
- The appliance is only to be used with the stand provided.
- Caution is to be taken as the heating element surface is subject to residual heat after use.
- Warning: Avoid spillage on the connector.
- Potential injury if this appliance is misused.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualifies persons in order to avoid hazard.
- Do not use this appliance for any purpose other than it's intended use.

## Before First Use

Carefully open the box and save all the packaging materials inside. Keep the packaging out of reach of children. Make sure all listed accessories are present and no damage has occurred prior to opening.

Clean the cover, whisk and mixer with warm water and a mild washing-up liquid. Dry these components thoroughly.

Clean the base unit and milk jug with a moist cloth only, and dry thoroughly. Never fill the milk frother with other liquids.

Place the milk frother on a heat-resistant flat surface, check the voltage corresponds to the required parameters and plug the cord into the socket.

## Using Your Frother

- Open the lid and pour the milk into the jug making sure it does not go over the overflow point engraved on the wall of the jug. Keep the lid firmly closed.
- This appliance can perform four different heating and frothing settings. Each requires a different amount of liquid and duration to finish heating and/or frothing.

- **For heating and frothing milk:** Install the whisk spring onto the stirrer in the base of the jug. Pour in the milk, making sure it does not exceed the max limit marked on the jug. Press the power button once; a red backlight will switch on. The heating and frothing process should take 160-240 seconds. Once it is finished, the red backlight will flash for 30 seconds and will go out once the jug is lifted off the base. Pour the milk out of the jug into your desired beverage.
- **For heating milk only:** Use the stirrer only, without installing the whisk spring. Pour in the milk, making sure it does not exceed the max limit marked on the jug. Press the power button twice; a white backlight will switch on. The heating process should take 200-420 seconds. Once it is finished, the white backlight will flash for 30 seconds and will go out once the jug is lifted off the base. Pour the milk out of the jug into your desired beverage.
- **For hot chocolate:** Use the stirrer only, without installing the whisk spring. Pour in the milk, making sure it does not exceed the max limit marked on the jug. Press the power button twice; a white backlight will switch on. As the milk heats, add 35 grams of hot chocolate powder. The heating and mixing process should take 200-450 seconds. Once it is finished, the white backlight will flash for 30 seconds and will go out once the jug is lifted off the base. Pour the hot chocolate out of the jug into a glass.
- **For frothing cold or room temperature milk:** Install the whisk spring onto the stirrer in the base of the jug. Pour in the milk, making sure it does not exceed the max limit marked on the jug. Press the power button three times; a blue backlight will switch on. The heating and frothing process should take 120 seconds. Once it is finished, the blue backlight will flash for 30 seconds and will go out once the jug is lifted off the base. Pour the milk out of the jug into your desired beverage.
- If the jug is not placed on the base, the machine will not work and the backlight will flash red for one minute.

## Tips

- For coffee or hot chocolate, prepare it while the milk frother is working so you can add hot and frothy milk to your beverage.
- Full fat milk usually produces the best foam, however, try experimenting with different milk types.
- The milk frother can work on cold milk, but it cannot cool down milk further, as the whisk produces its own heat when working.
- Milk can be heated up to 60-70°C before being poured into the frother. The hotter the milk, the stronger the taste of your coffee.

## Cleaning and Maintenance

- Before cleaning the appliance, make sure to separate the jug from the base of the frother, and take out the stirrer and whisk spring. Only the jug and its lid can be washed in the dishwasher.
- Do NOT immerse the body of the appliance, the connector base, cord, or any other part in water.
- The jug and lid can either be cleaned in the dishwasher not exceeding a temperature of 75°C, or with cold water and mild detergent. Use a soft dry towel to gently wipe them clean.
- The stirrer and whisk can be cleaned with warm water and mild detergent. Use a soft dry towel, wipe them clean and store them in a safe place.
- Use a soft damp towel to clean the external surface of the frother base. Do not use any abrasive detergents, steel wool or other sharp objects to clean the appliance. This could damage the surface.
- For hygiene purposes, always make sure there is no milk residue left behind in the jug or whisk.
- Make sure all components are thoroughly clean and dry before each use.

## Care

- If a defect renders the appliance unusable, we recommend removing the plug from the wall socket and cutting the cord with scissors.
- If the appliance does not function after it has been switched on, it is possible that the fuse or circuit breaker has been activated due to overload or a current leak.
- In case of a breakdown, never attempt to repair the appliance yourself. If the safety device is blown, it cannot be repaired, and the appliance must be replaced. Do not attempt to operate the milk frother when damaged (including damage to the power cord).
- Only original parts should ever be used. The milk frother can only be used with the base provided.
- Do not use damaged cords or plugs to operate the milk frother. If the power cord is damaged, it must be replaced by the manufacturer, service agent or similar professionals.
- This product cannot be discarded with normal household waste. Please check your respective council guidelines on hard rubbish disposal or take the product to an approved recycling facility.

## Recipes

Use your milk frother to create these delicious drinks.

**Cappuccino:** 1/3 espresso + 2/3 frothed milk, top with cocoa powder

**Latte Macchiato:** pour frothed milk in a tall glass, add espresso carefully along rim of the glass

**Instant Frothy Coffee:** instant coffee + frothed milk

**Café Latte:** 1/3 espresso shot + 2/3 heated frothed milk and stir

**Hot Chocolate:** heated frothed milk + hot chocolate powder and stir

**Frothy Coffee Milkshake:** 1 part espresso cooled down + 2 parts frothed cold milk

## Our 12-Month Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product. Therefore, we offer a 12-month guarantee on this appliance. The benefits of this guarantee are in addition to any rights and remedies imposed by Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

**What IsAlbi will do:** During this guarantee period, IsAlbi will repair, replace or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

**What to do:** If a fault/defect is identified, cease using the product immediately.

To make a claim on this guarantee, take the product, proof of purchase and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

## IsAlbi

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: [enquiries@isalbi.com.au](mailto:enquiries@isalbi.com.au)

[www.isalbi.com.au](http://www.isalbi.com.au)