### homestyles

### 88 5089 95C Kitchen Cart


#### IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.



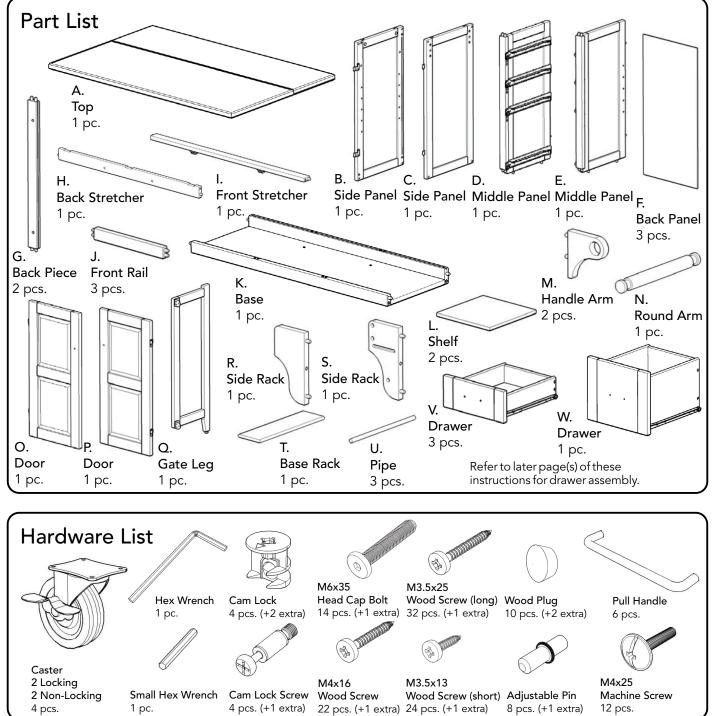


Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

#### Assembly Instructions 2/7

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

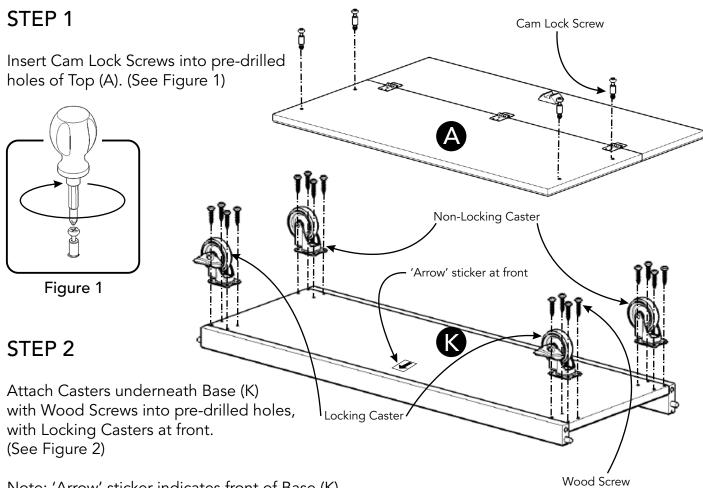

Note: 'Arrow' sticker indicates front of Base (K).


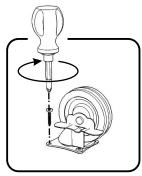


Figure 2

#### STEP 3

Attach Back Pieces (G) to Middle Panels (D) and (E).

Attach Front Rails (J) to Middle Panels (D) and (E).

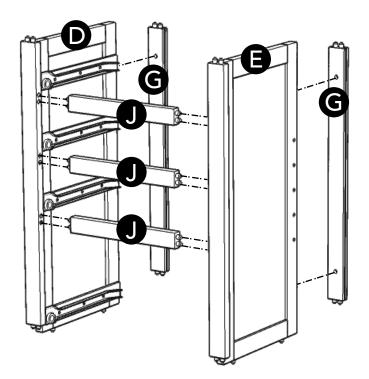

#### Assembly Instructions 3/7



Attach unit to Base (K).

Attach Side Panel (B) to unit with Head Cap Bolts. (See Figure 3)

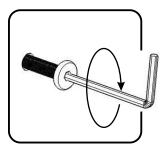


Figure 3


#### STEP 5


Slide Back Panels (F) into place.

· Head Cap Bolt

Attach Back Stretcher (H) and Front Stretcher (I) to unit with Head Cap Bolts.

Attach Side Panel (C) to unit with Head Cap Bolts.

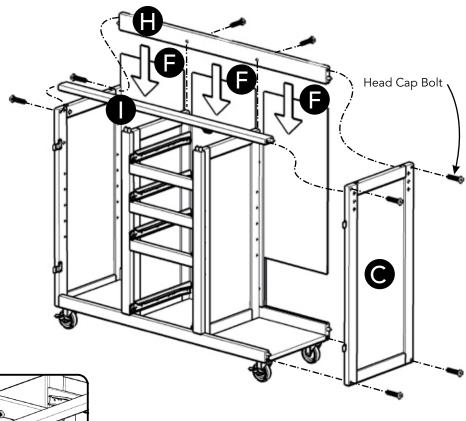

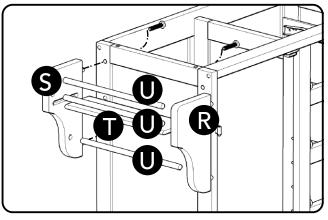

#### STEP 6

Attach Side Rack (R) to unit with Head Cap Bolt.

Slide Base Rack (T) and Pipes (U) into Side Rack (R).

Attach Side Rack (S) to unit with Head Cap Bolt.

#### Assembly Instructions 4/7

#### STEP 7

Attach Handle Arms (M) to Side Panel (C) with Head Cap Bolts.

Slide Round Arm (N) into place.

Attach Gate Leg (Q) to back of unit with Wood Screws into pre-drilled holes. (See Figure 4)




Figure 4

Ô

0

Adjustable Pin

.

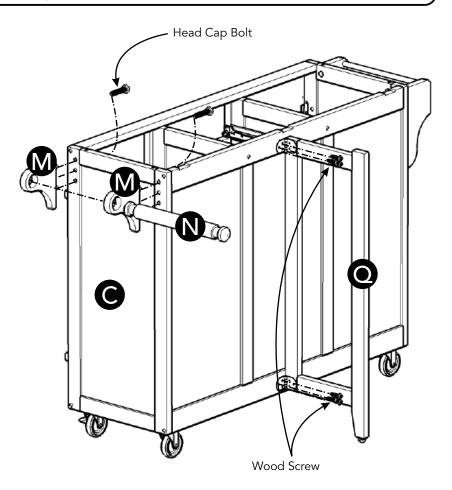


#### **STEP 8**

Insert Adjustable Pins into side panels and middle panels at desired level.


Place Shelves (L) into position.

Attach Doors (O) and (P) by sliding door lift hinges into side panel lift hinges. (See Figure 5)

Attach Pull Handles to Doors (O) and (P) with Machine Screws. (See Figure 6)

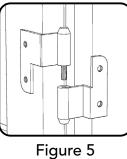





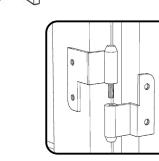

#### Assembly Instructions 5/7

#### Drawer (V)

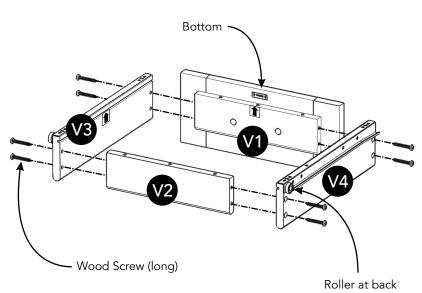

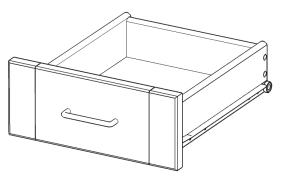

#### STEP 9


Attach Drawer Front (V1) and Drawer Back (V2) to Drawer Side (V3) with Wood Screws (long).


Attach Drawer Side (V4) to unit with Wood Screws (long).

#### STEP 10

Slide Drawer Bottom (V5) into the grooves of Drawer Sides (V3) and (V4) until it meets Drawer Front (V1).


Attach Drawer Bottom (V5) to unit with Wood Screws (short).

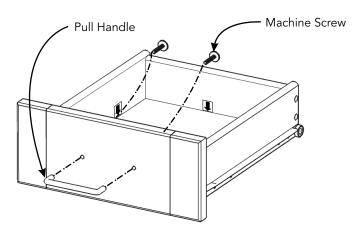

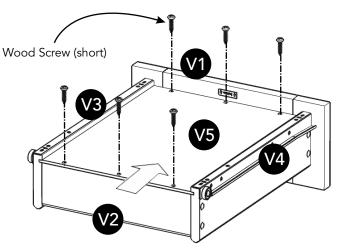


#### STEP 11

Attach Pull Handle with Machine Screws.

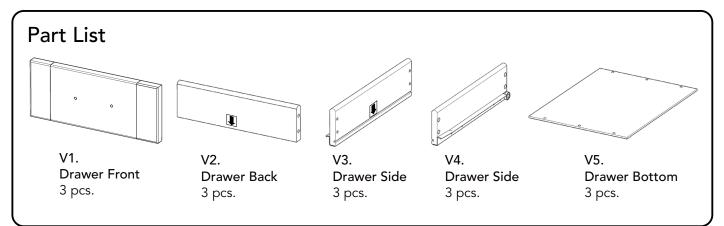

#### Assembly Instructions 6/7


#### Drawer (W)

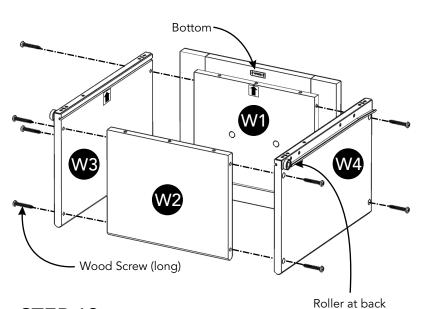


#### STEP 13

Slide Drawer Bottom (W5) into the grooves of Drawer Sides (W3) and (W4) until it meets Drawer Front (W1).

Attach Drawer Bottom (W5) to unit with Wood Screws (short).

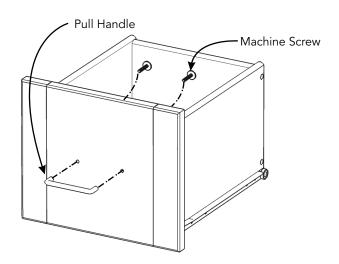


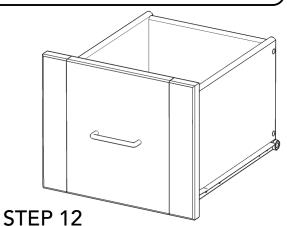

Attach Drawer Front (W1) and Drawer Back (W2) to Drawer Side (W3) with


Wood Screws (long).

Attach Drawer Side (W4) to unit with Wood Screws (long).

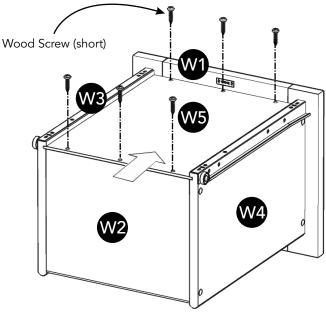


STEP 14

Attach Pull Handle with Machine Screws.

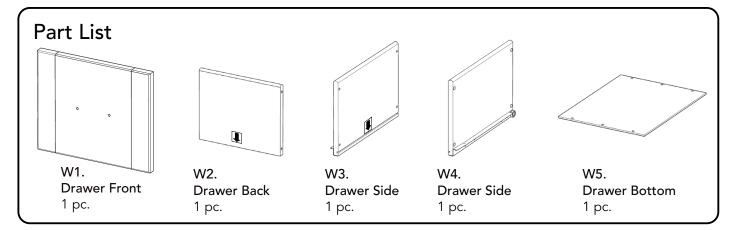


#### Assembly Instructions 7/7

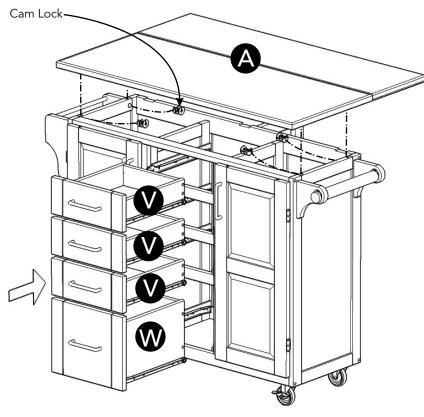

STEP 15

Attach Top (A) to unit with Cam Locks. (See Figure 7)


Slide Drawers (V) and (W) into position.

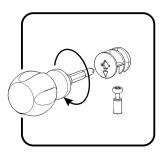



#### STEP 16

Cover all holes with Wood Plugs. (See Figure 8)

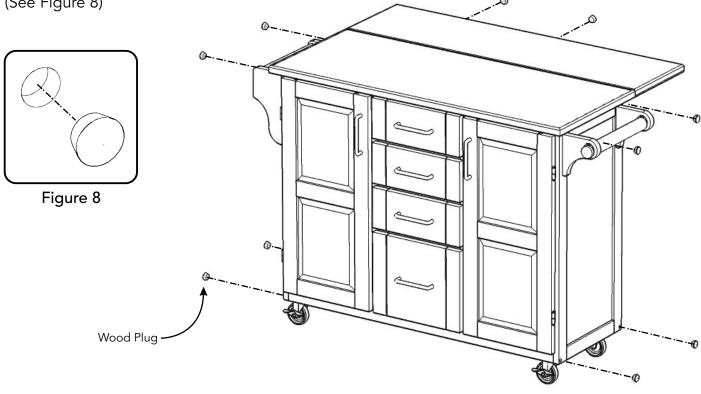

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at: www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319