

KL00000001CDUEU7

6M Extendable Radiator Airer

Please retain instructions for future reference.

CARE AND USE

Please retain instructions for future reference.

To assemble, align both hooks with each end of the airer and slot into place until resistance is felt.

To move the hooks further along, push in the button on the hook and slide into the desired position.

Ensure the gap between the edge of the airer and the end of the hook matches the depth of the radiator.

To extend the airer, hold either end of the airer and carefully pull outwards to extend the bars to the desired width.

Once assembled, hang the airer on the radiator using the hooks.

Distribute weight evenly to ensure the airer is stable.

Do not overload the airer.

Take care not to trap hands when using the airer.

Only use indoors.

Never move once laden.

To be eligible for the guarantee, please retain your proof of purchase.

Made in China

Manufactured by: UP Global Sourcing UK Ltd, Victoria Street, Oldham, Manchester OL9 0DD. UK
Ultimate Products Europe Ltd, 19 Baggot Street Lower, Dublin, D02 X658. ROI