# **home**styles\*

#### 20 05506 0031


## **Table**


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

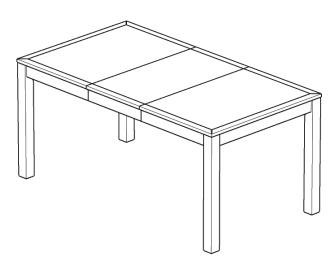

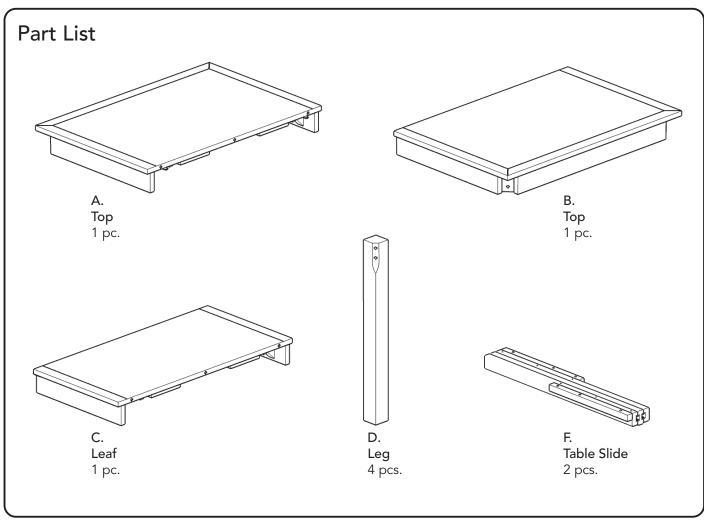

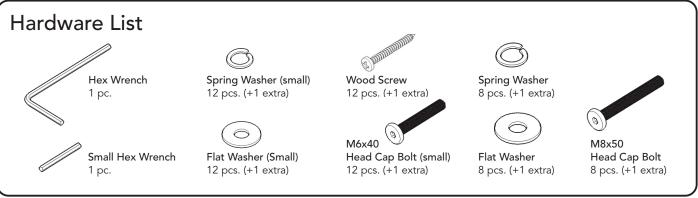

Tool(s) required for assembly: Level

### Assembly Instructions 2/3


#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Key Wrench as the bolts may need to be tightened in the future.


#### STEP 1

Place Tops (A) and (B) upside down on a soft cloth.

Remove Table Slides (F) from their packing position by removing Head Cap Bolts (small), Spring Washers (small) and Flat Washers (small). (See Figure 1)

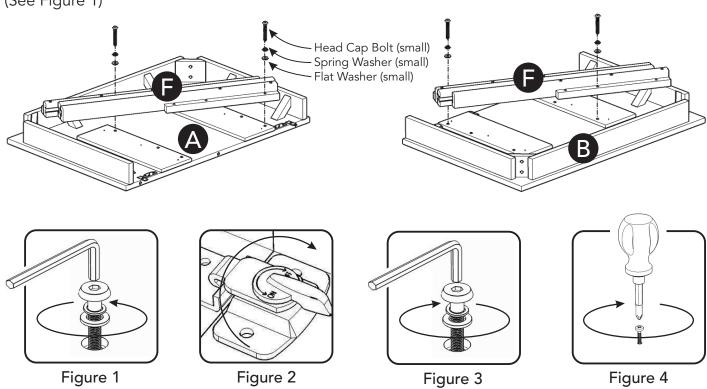

### STEP 2

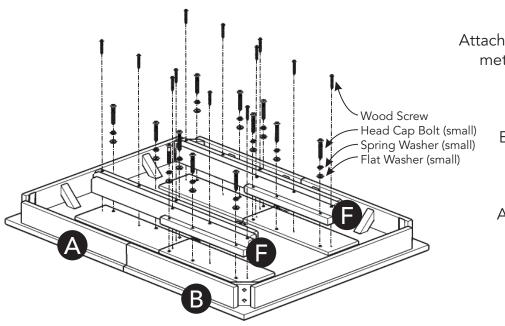

Attach Tops (A) and (B) by aligning metal pins with holes and firmly pushing together.

Engage locks by turning lock handles clockwise 1/4 turn. (See Figure 2)


Attach Table Slides (F) to unit with Flat Washers (small), Spring Washers (small), Head Cap Bolts (small) and Wood Screws. (See Figures 3 and 4)


## Assembly Instructions 3/3

### STEP 3

Attach Legs (D) to unit with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 5)

Tighten all bolts.

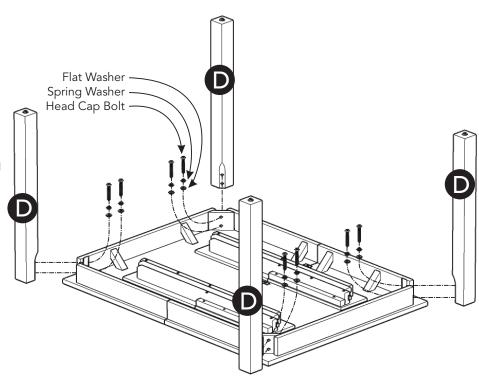

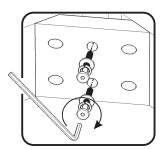



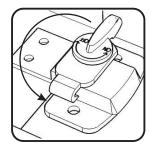


Figure 6

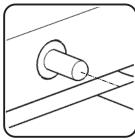


Figure 7

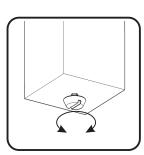


Figure 8

#### STEP 4


Turn table over to its upright position.

Disengage locks by turning lock handles counter-clockwise 1/4 turn. (See Figure 6)

> Pull out both ends of table, then place Leaf (C) in unit, aligning metal pins with holes. (See Figure 7)

Push table together firmly, then engage locks by turning lock handles clockwise 1/4 turn.

Level unit by adjusting the adjustable levelers on bottom of legs.
(See Figure 8)

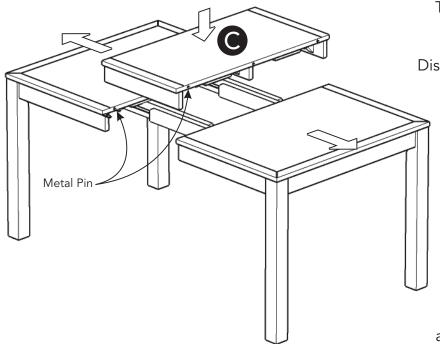

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319