




bestchoiceproducts

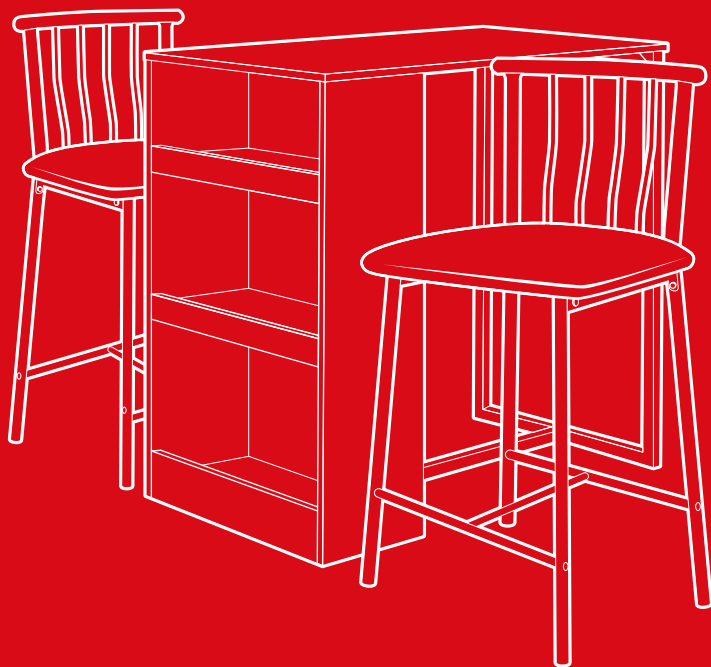

# INSTRUCTION MANUAL

---

3-Piece Dinette Set  
with Storage Shelves



Fasten screws loosely  
during assembly. Do not  
firmly tighten screws until  
item is fully assembled.


[bestchoiceproducts.com](http://bestchoiceproducts.com)

## ! NOTICE


Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.


## TIGHTENING CAMLOCKS

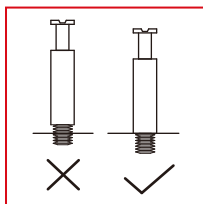

1. Screw cam bolt in completely.

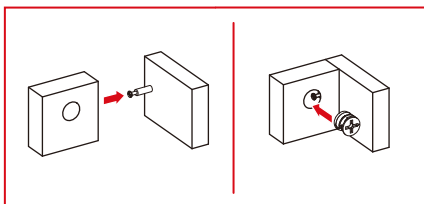

2. Insert cam bolt and cam lock into designated holes.

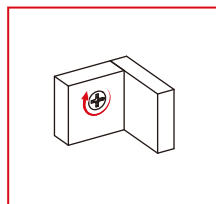

3. Screw cam lock clockwise to secure cam bolt.

## TOOLS REQUIRED



PHILLIPS  
SCREWDRIVER



ALLEN WRENCH  
(PROVIDED)



110 LBS  
CAPACITY  
TABLE



286 LBS  
CAPACITY  
CHAIR



44 LBS  
CAPACITY  
PER SHELF



1 PERSON  
ASSEMBLY

 


UP TO 45 MIN.  
ASSEMBLY

## TABLE HARDWARE

1

CAM BOLT



38 PCS

2

CAM LOCK



38 PCS

3

M6 X 12MM  
SCREW



16 PCS

4

M6 X 35MM  
SCREW



3 PCS

## TABLE HARDWARE

5

DOWEL



12 PCS

6

CORNER  
BRACE

 


2 PCS

## TABLE PARTS

A


SHELF SIDE I



1 PC

B

 
SHELF SIDE II



1 PC

C


SHELF  
SUPPORT I

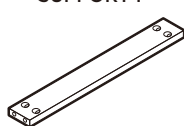

2 PCS

D

SHELF  
SUPPORT II

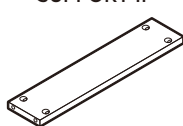

1 PC

E

 
SHELF



3 PCS

F


SHELF BACK  
PANEL



1 PC

G

 TABLETOP



1 PC

H

 
SIDE FRAME



1 PC

I

SUPPORT BEAM



2 PCS

J

FOOT




2 PCS

## PRODUCT ASSEMBLY - TABLE

1

Screw thirty-two part 1 cam bolts into the part A and B shelf sides, sixteen cam bolts per shelf side. Insert one part 5 dowel into the top of each shelf side.

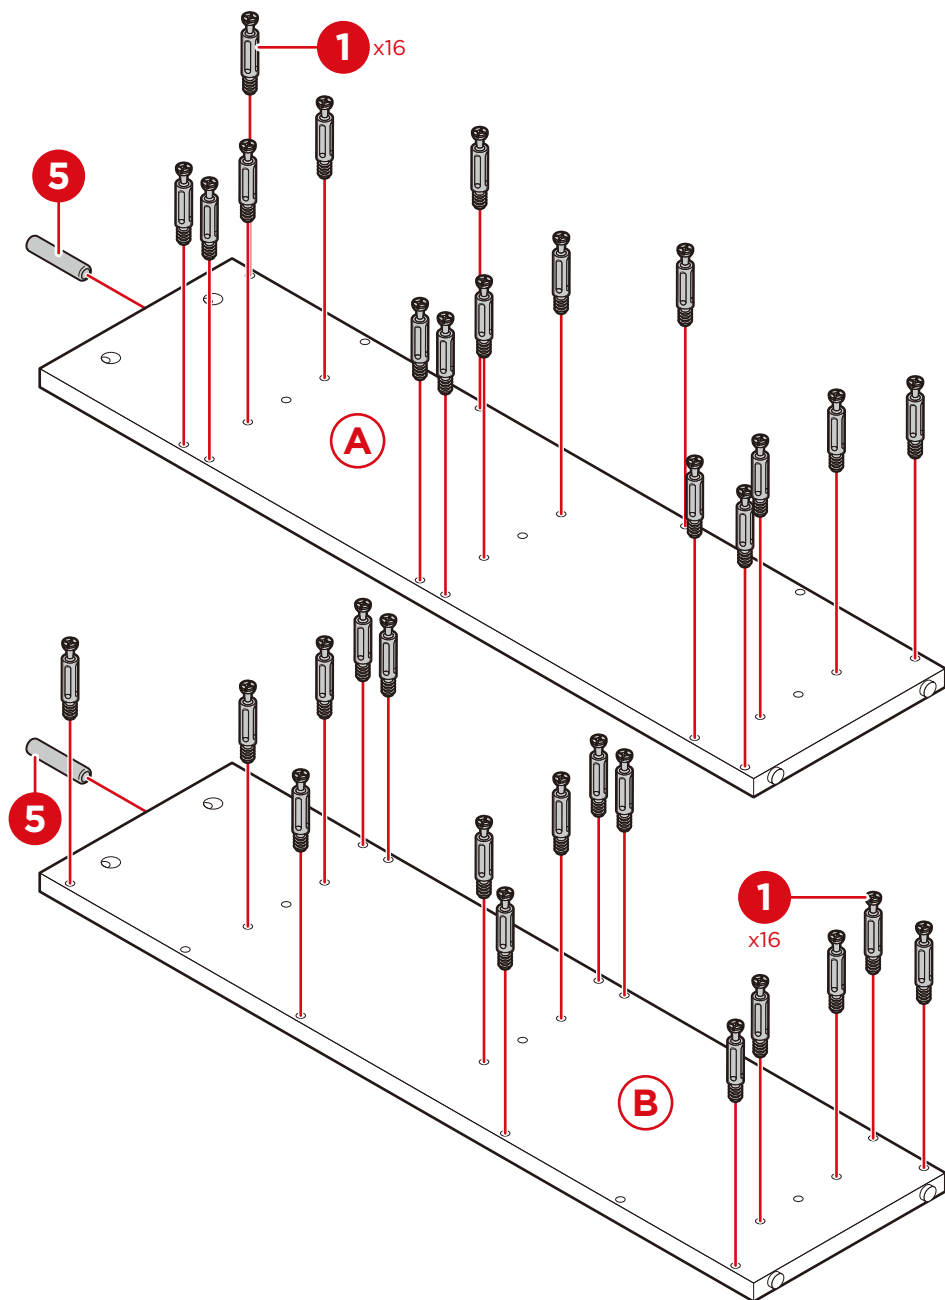


## PRODUCT ASSEMBLY - TABLE

2


Locate three part E shelves and insert two part 5 dowels into each.

Locate the part F shelf back panel and insert four part 5 dowels.

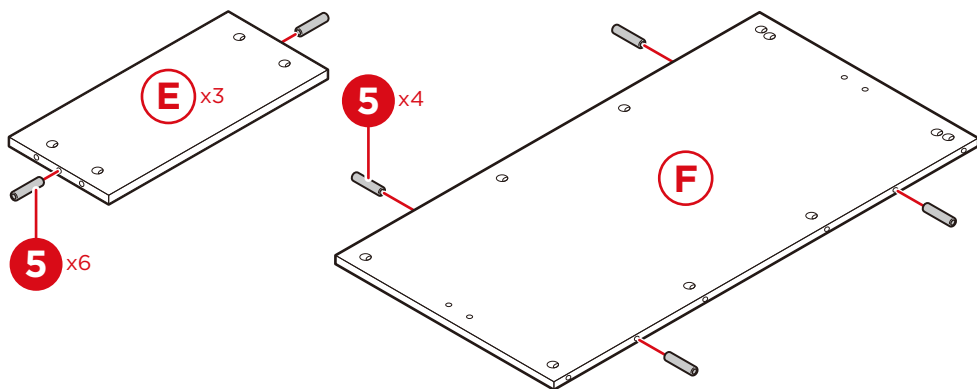

3


Attach two part C and one part D shelf support to the part A shelf side with six part 2 cam locks.

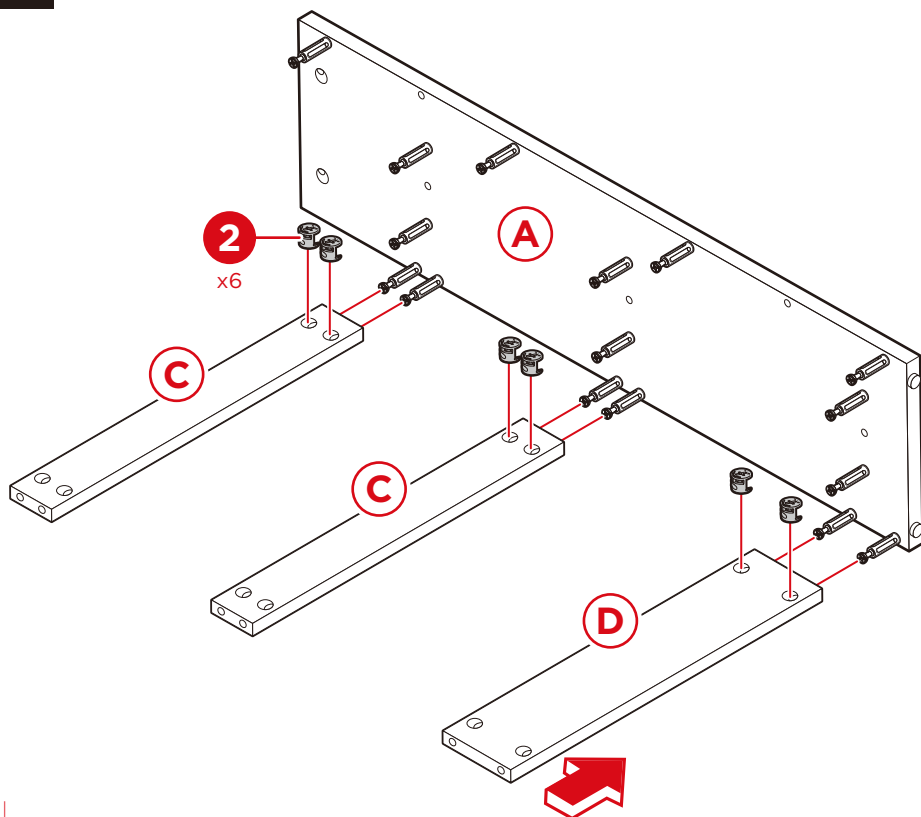

## PRODUCT ASSEMBLY - TABLE

4


Attach three part E shelves with six part 2 cam locks.

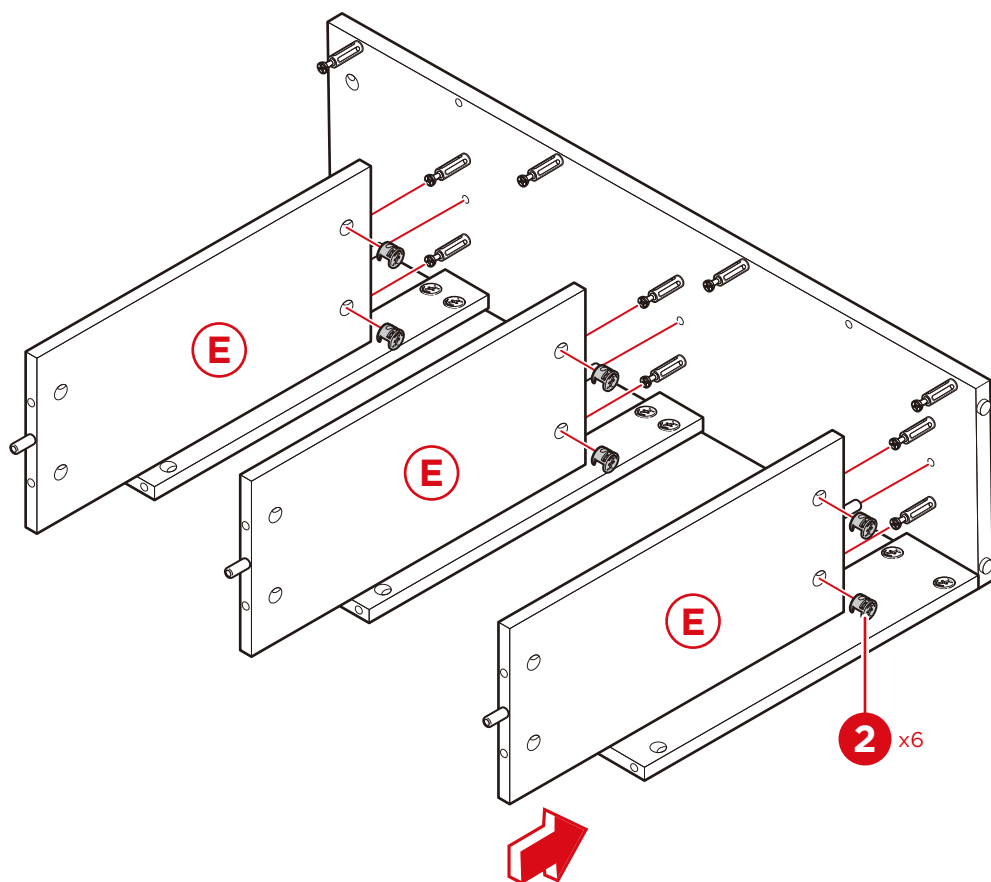

## PRODUCT ASSEMBLY - TABLE

5

Attach the part F shelf back panel to the part A side panel with four part 2 cam locks.

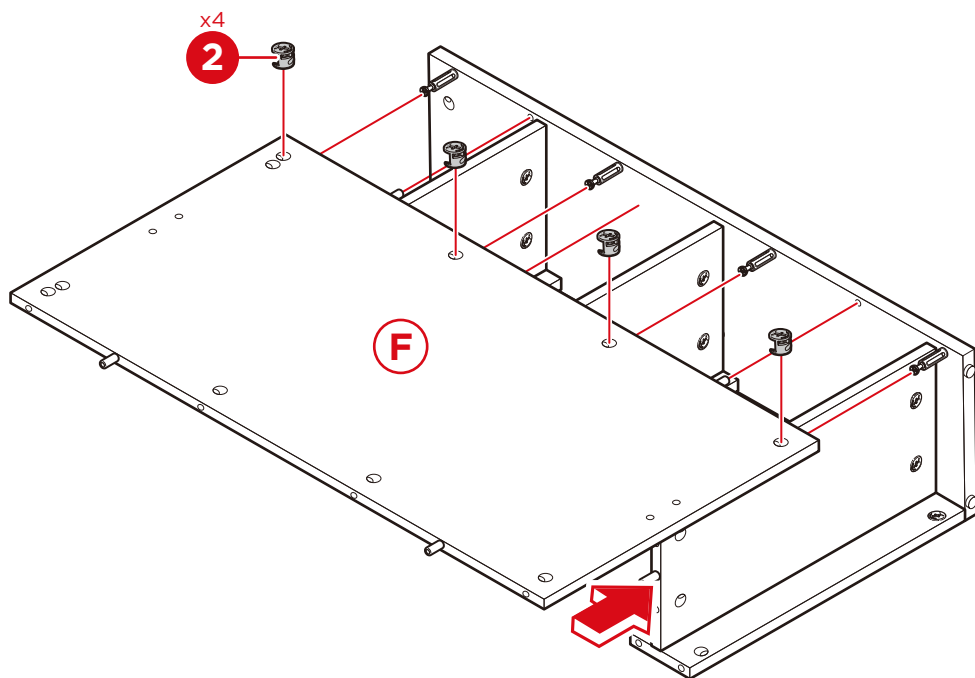




## PRODUCT ASSEMBLY - TABLE

6


Attach the part B shelf side panel with sixteen part 2 cam locks.  
Set this shelf assembly aside.

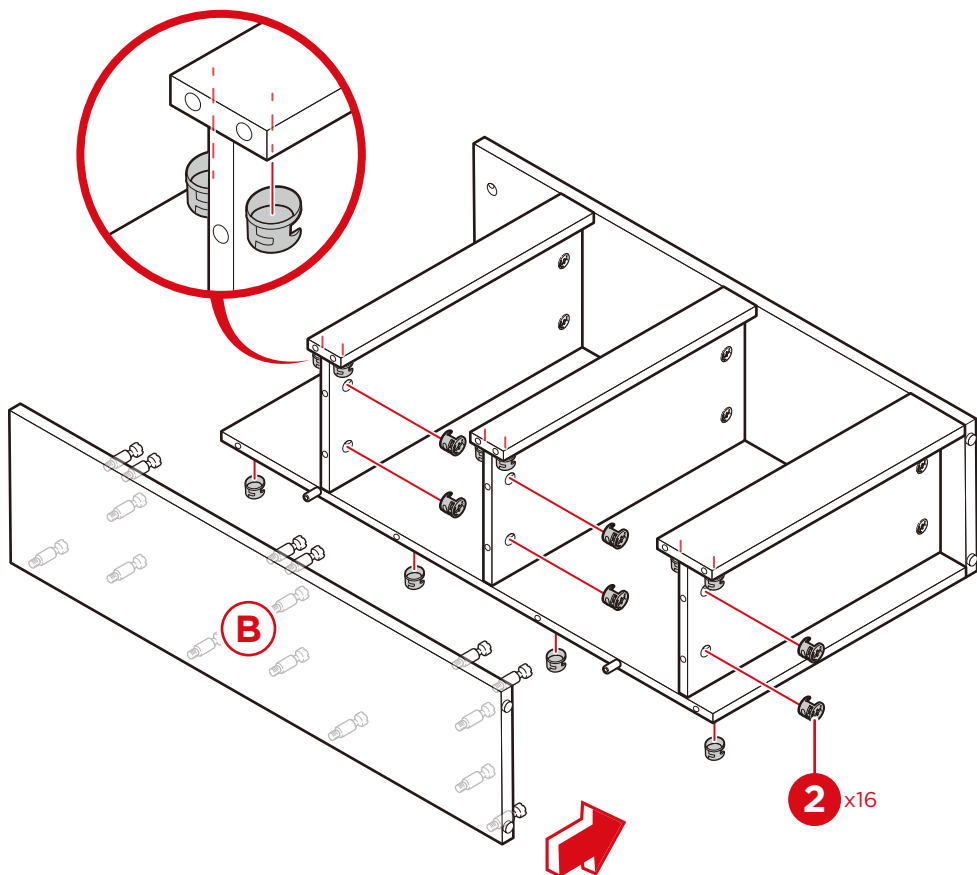

## PRODUCT ASSEMBLY - TABLE


7

Attach two part 6 corner braces to the part H side frame with four part 3 screws.  
Attach two part I support beams to the side frame with four part 3 screws.  
Screw two part J feet into the side frame.

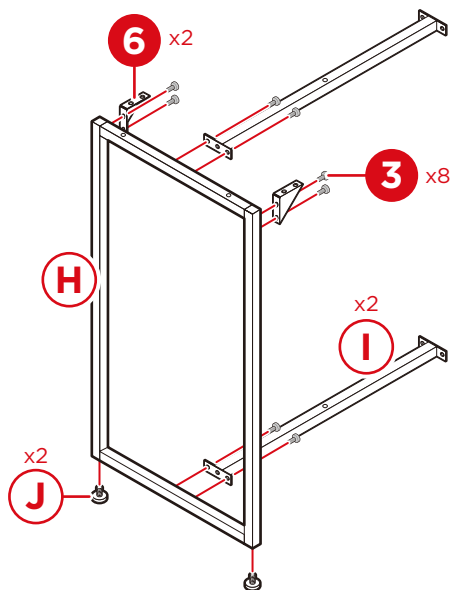

8

Locate the part G tabletop and screw in six part 1 cam bolts, then attach the side frame assembly to the tabletop with four part 3 screws and three part 4 screws.

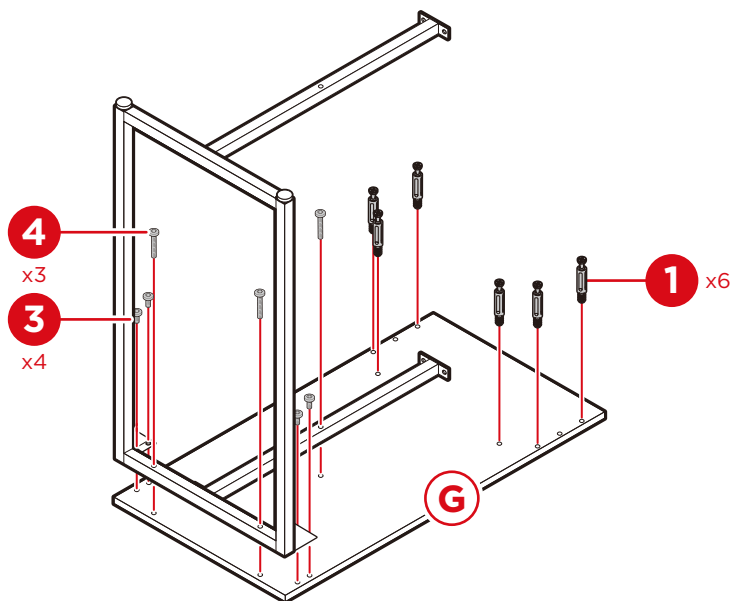


## PRODUCT ASSEMBLY - TABLE

9

Attach the shelf assembly to the tabletop with six part 2 cam locks, then attach the support beams with four part 3 screws.


Flip the assembled table and adjust the part J feet until they are level.

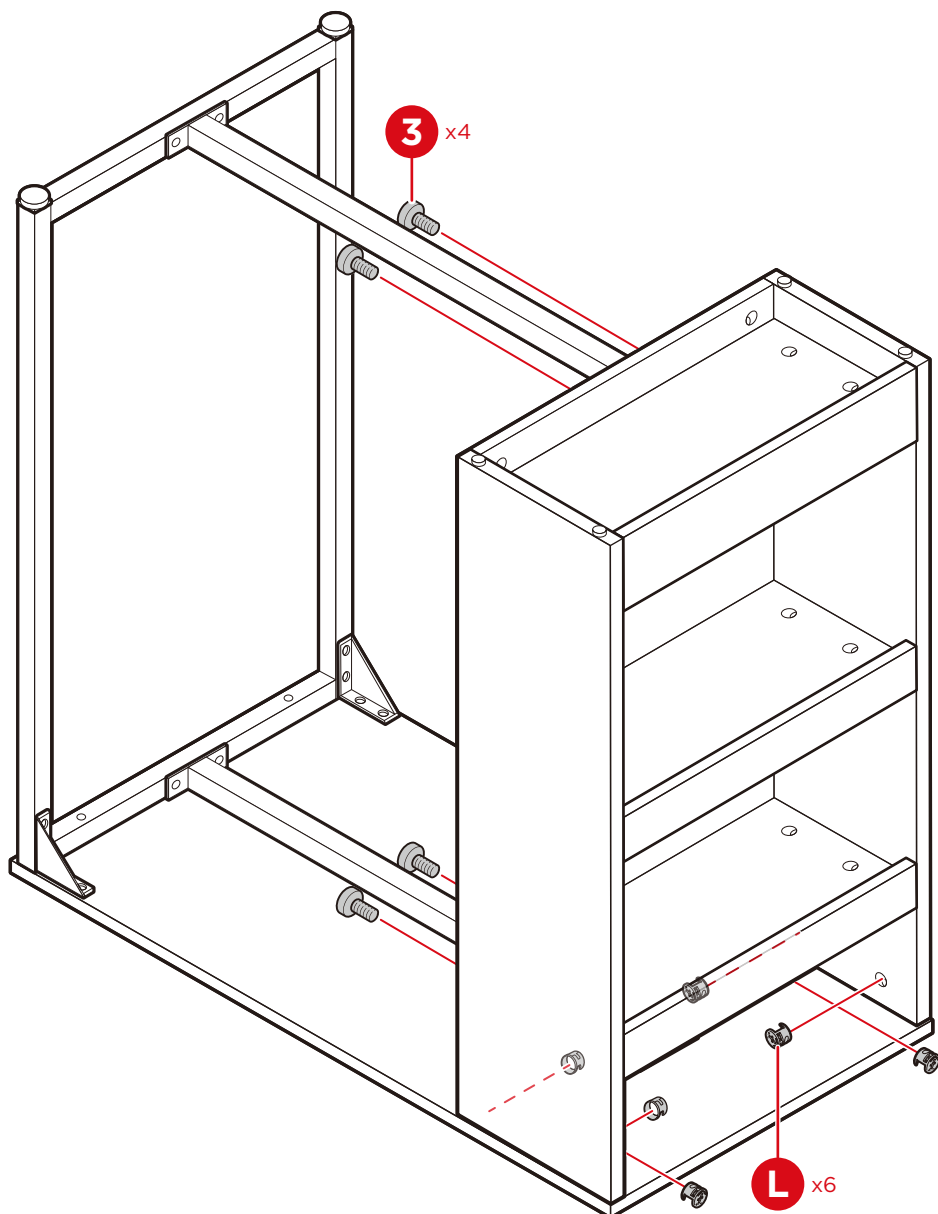

## CHAIR HARDWARE

1A

 M6 X 45MM  
SCREW



16 PCS

2A

M6 X 25MM  
SCREW



4 PCS

3A

M6 X 20MM  
BOLT



4 PCS

4A

M6 X 12MM  
SCREW



4 PCS

5A

M6 SLEEVE  
NUT



4 PCS

## CHAIR PARTS

A2

BACKREST



2 PCS

B2

 
LEG



4 PCS

C2

BOTTOM  
SUPPORT



2 PCS

D2

FRONT  
SUPPORT



2 PCS

E2

SEAT




2PCS

## PRODUCT ASSEMBLY - CHAIR


1

Attach the part D2 seat support to two part B2 legs with two part 2A screws.

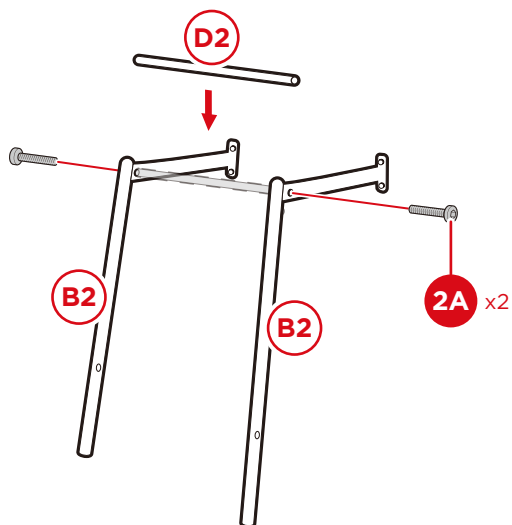

2


Attach the leg assembly to the part A2 backrest with two part 3A bolts, two part 4A screws, and two part 5A sleeve nuts.

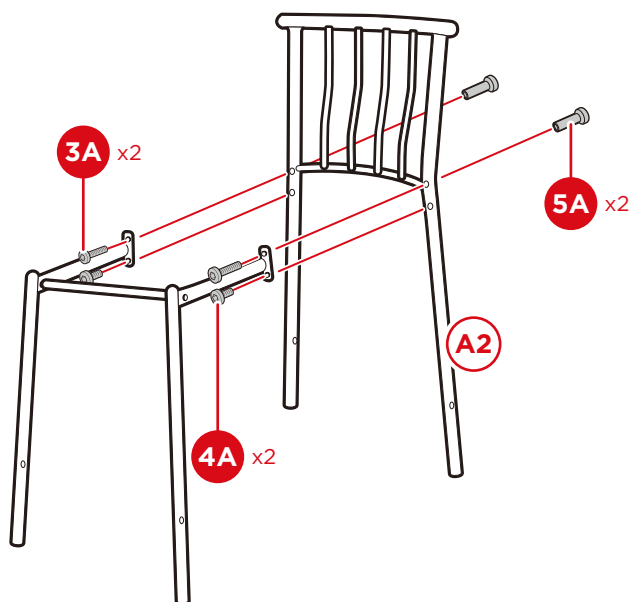

## PRODUCT ASSEMBLY - CHAIR

3


Attach the part C2 bottom support to the part B2 legs with four part 1A screws.

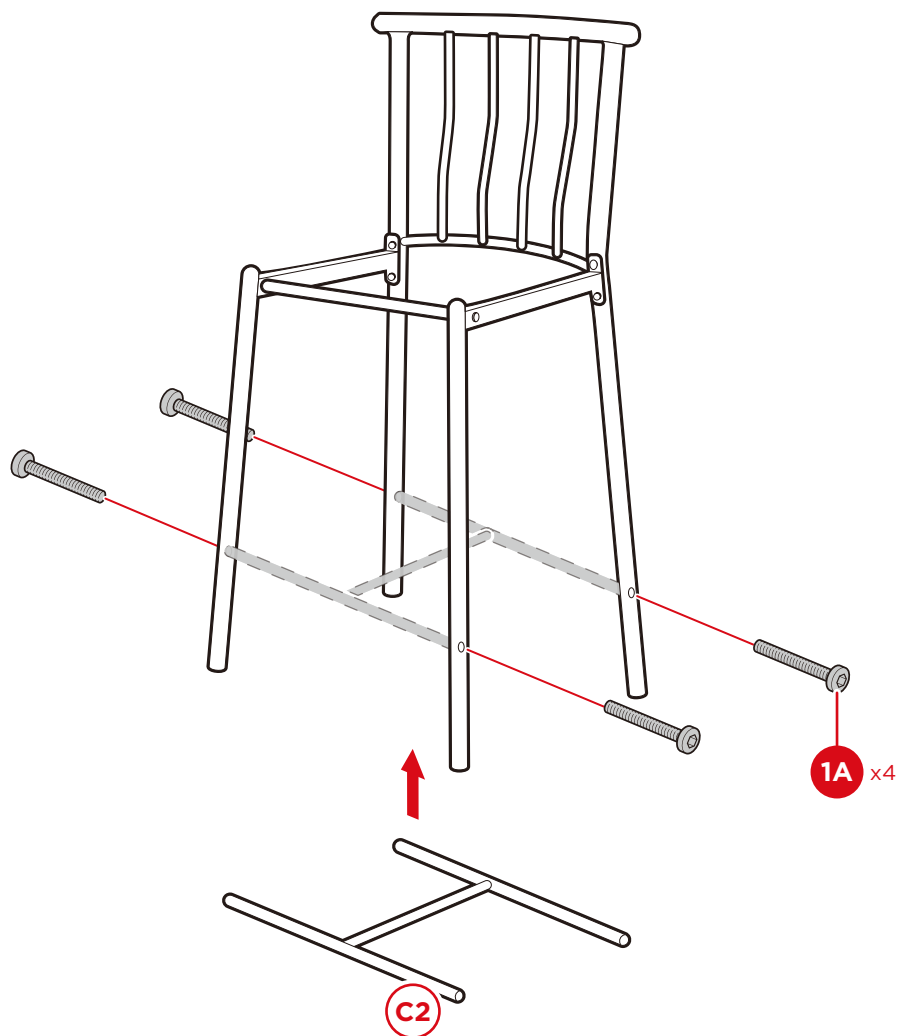

## PRODUCT ASSEMBLY - CHAIR

4

Attach the part E2 seat with four part 1A screws.  
Repeat to assemble a second chair.

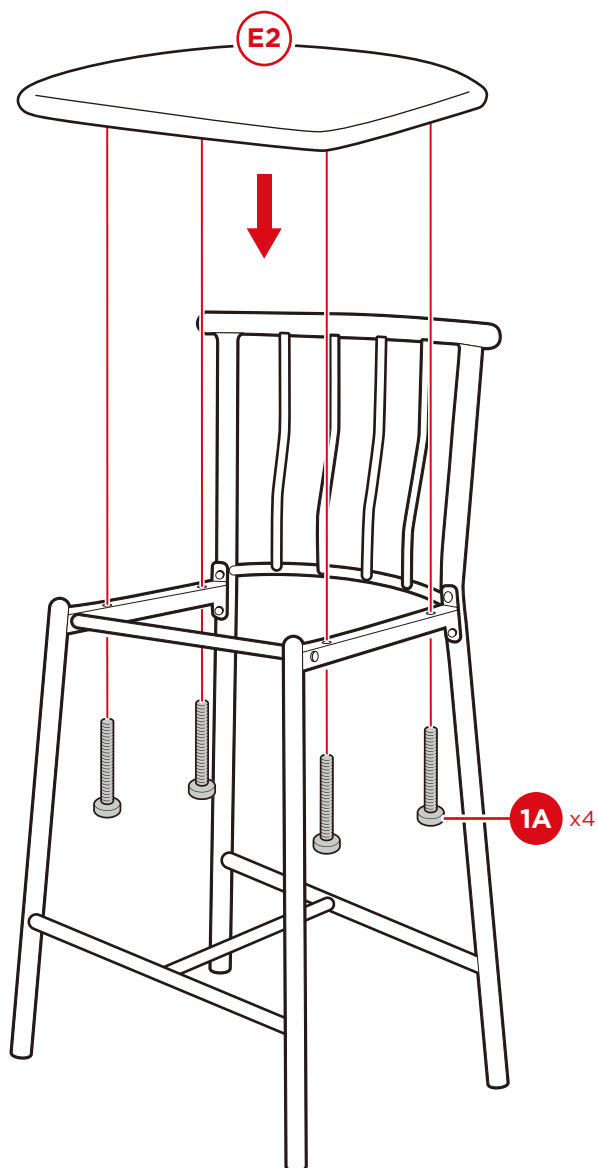



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.