



3 IN 1 BILLIARD, TABLE TENNIS, DINING TABLE

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-800-467-1421

gameroom@escaladesports.com

Mailing Address: (Correspondence Only)

Escalade Sports
PO Box 889
Evansville, Indiana 47706-0889

Physical Location:

Escalade Sports
817 Maxwell Ave.
Evansville, Indiana 47711

Please visit our Web site at:

www.escaladesports.com

Please have your model number when inquiring about parts.

When contacting Escalade Sports please provide your model number, date code (if applicable) and part number if requesting a replacement part. These numbers are located on the product, packaging, and this owners manual.

Your Model Number: **G05302W/F-TAN**

Date Code: **2 - G05302W/F-TAN - FS**

Purchase Date: _____

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

SAFETY INSTRUCTIONS

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS MAY RESULT IN SERIOUS INJURY, PROPERTY DAMAGE AND WILL VOID WARRANTY.

Owner must ensure that all players know and follow these rules for safe operation of the system.

To ensure safety, do not attempt to assemble this system without following the instructions carefully. Check entire box and inside packing material for parts and/or additional instruction material. Before beginning assembly, read the instructions and identify parts using the hardware identifier and parts list in this document. Proper and complete assembly, use and supervision is essential for proper operation and to reduce the risk of accident or injury. A high probability of serious injury exists if this system is not installed, maintained, and operated properly.

*Most injuries are caused by misuse and/or not following instructions.
Use caution when assembling and using this system.*

- **DO NOT** sit, climb or lean on the product
- Read and follow all the assembly, operation and safety instructions carefully.
- At least four capable adults are required to assemble this product.

NOTICE

REFER TO [CONTAINER] FOR SAFETY INSTRUCTIONS WHEN USING CLEANING PRODUCTS.

⚠ CAUTION

AT LEAST FOUR OR MORE CAPABLE ADULTS ARE REQUIRED TO LIFT AND ROTATE THIS GAME TABLE INTO PLAYING POSITION. DO NOT LEAN THE TABLE ON ITS LEGS AS THIS COULD DAMAGE THEM.

⚠ CAUTION

USE CARE TO AVOID PINCH POINTS WHEN INSTALLING OR REMOVING THE BUFFET CONVERSION TOPS.



⚠ WARNING

Crush and Shear Points

Keep hands and fingers clear of the hinge area and the bench lid area when closing the bench lid

⚠ WARNING

**MAX. LOAD CAPACITY:
550 LBS.**

**IMPORTANT! READ EACH STEP
IN THIS MANUAL BEFORE YOU
BEGIN THE ASSEMBLY.**

IMPORTANT!

THE DRAWINGS IN THIS
MANUAL MAY BE
EXAGGERATED OR MODIFIED
TO SHOW DETAILS.



Tools Required:

Allen Wrench (Included)
Furniture Polish and Soft Cloth
Carpenters Level
Needle Nose Pliers
Small Ball-peen Hammer

ASSEMBLY TIPS

 
Make sure you understand the following tips before you begin to assemble your game table.

1. Start all bolts by hand before tightening.
2. An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.
3. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.
4. Assembly can be made both simpler and less timely by first unpacking all parts, and matching and organizing them to the Parts Identifier. This will greatly help you become familiar with the parts before and during assembly.
5. Some of this assembly can be made easier – by placing the parts and building the assembly on a pair of saw horses. A table can be used also as long as the top is well protected from any scratches that could occur. The table or saw horses would need to be structurally strong enough to support this weight.


HARDWARE IDENTIFIER

(To Scale)


HARDWARE KIT IS PACKED INSIDE OF CARTON A



 
H1 = 16 pcs
5/16" x 1-1/4"
Allen Head Bolt



 
H2 = 48 pcs
5/16" x 1-3/8"
Allen Head Bolt

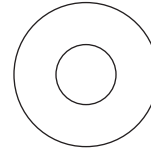


H3 = 64 pcs
5/16" x 3/4"
Flat Washer

 

H4 = 64 pcs
5/16" x 1/2"
Lock Washer

 


H5 = 26 pcs
1/24" x 3/4" Nail

 

(Not to Scale)

 T1 = 1 pc
Allen Wrench




(Not to Scale)

T2 = 1 pc
Small Hammer


PARTS IDENTIFIER

 (Not to Scale)

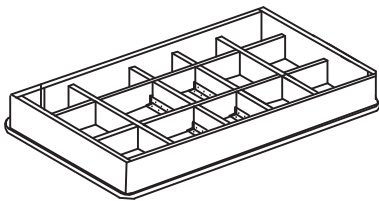


P1 = 1 pc
Main Table Cabinet

 PACKED INSIDE OF CARTON A

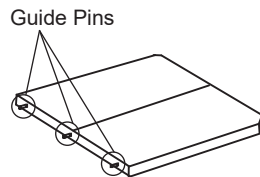

P2 = 1 pc
A Table Tennis Top
With Guide Pins

 PACKED INSIDE OF CARTON A

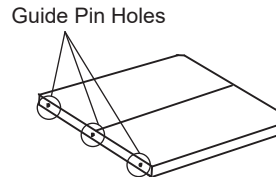


P3 = 1 pc
B Table Tennis Top
With Guide Pin Holes

PACKED INSIDE OF CARTON A




P4 = 4 pcs
Table Leg
With Pre-installed Leg Leveler

 PACKED INSIDE OF CARTON B

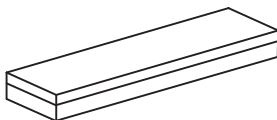


P5 = 2 pcs
Bench Seat

 PACKED INSIDE OF CARTON B



P6 = 4 pcs
Bench Leg

 PACKED INSIDE OF CARTON A

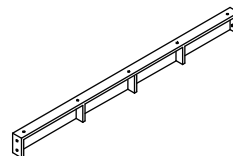

P7 = 4 pcs
Bench Support
(Packed inside P5 Bench Seats)

PACKED INSIDE OF CARTON B

PARTS IDENTIFIER (Not to Scale)



P8= 4 pcs
Corner Pocket

 
PACKED INSIDE OF CARTON A



P9= 2 pcs
Middle Side Pocket

PACKED INSIDE OF CARTON A

ACCESSORIES IDENTIFIER (Not to Scale)

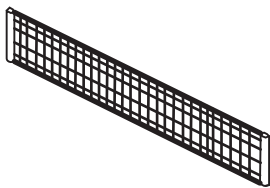


A1= 1 pc
Table Tennis Net

PACKED INSIDE OF CARTON A



A2= 2 pcs
Table Tennis Net Post

 PACKED INSIDE OF CARTON A




A3= 2 pcs
Table Tennis Paddle

PACKED INSIDE OF CARTON A



A4= 2 pcs
Table Tennis Ball

 PACKED INSIDE OF CARTON A




A5= 2 pcs
Cue Chalk

PACKED INSIDE OF CARTON A




A6= 2 pcs
Cue Stick

 PACKED INSIDE OF CARTON B

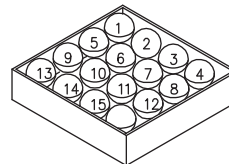


A7= 1 set
Billiard Ball

 PACKED INSIDE OF CARTON A

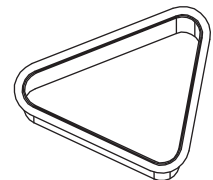


A8= 1 pc
Triangle

 PACKED INSIDE OF CARTON A



A9= 1 pc
Pool Playfield Brush

 PACKED INSIDE OF CARTON A

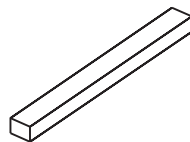

A10= 2 pcs
Table Tennis
Playfield Support
(Packed inside P5 Bench Seats)

PACKED INSIDE OF CARTON B



A11= 2 pcs
Bench Carpet
(Packed inside P5 Bench Seats)

 
PACKED INSIDE OF CARTON B

3 IN 1 BILLIARD, TABLE TENNIS, DINING TABLE

Parts List

(Not To Scale)

All items are packaged in larger Carton A, except, P4, P5, P7, A6, A10 and A11 are packaged in smaller Carton B.

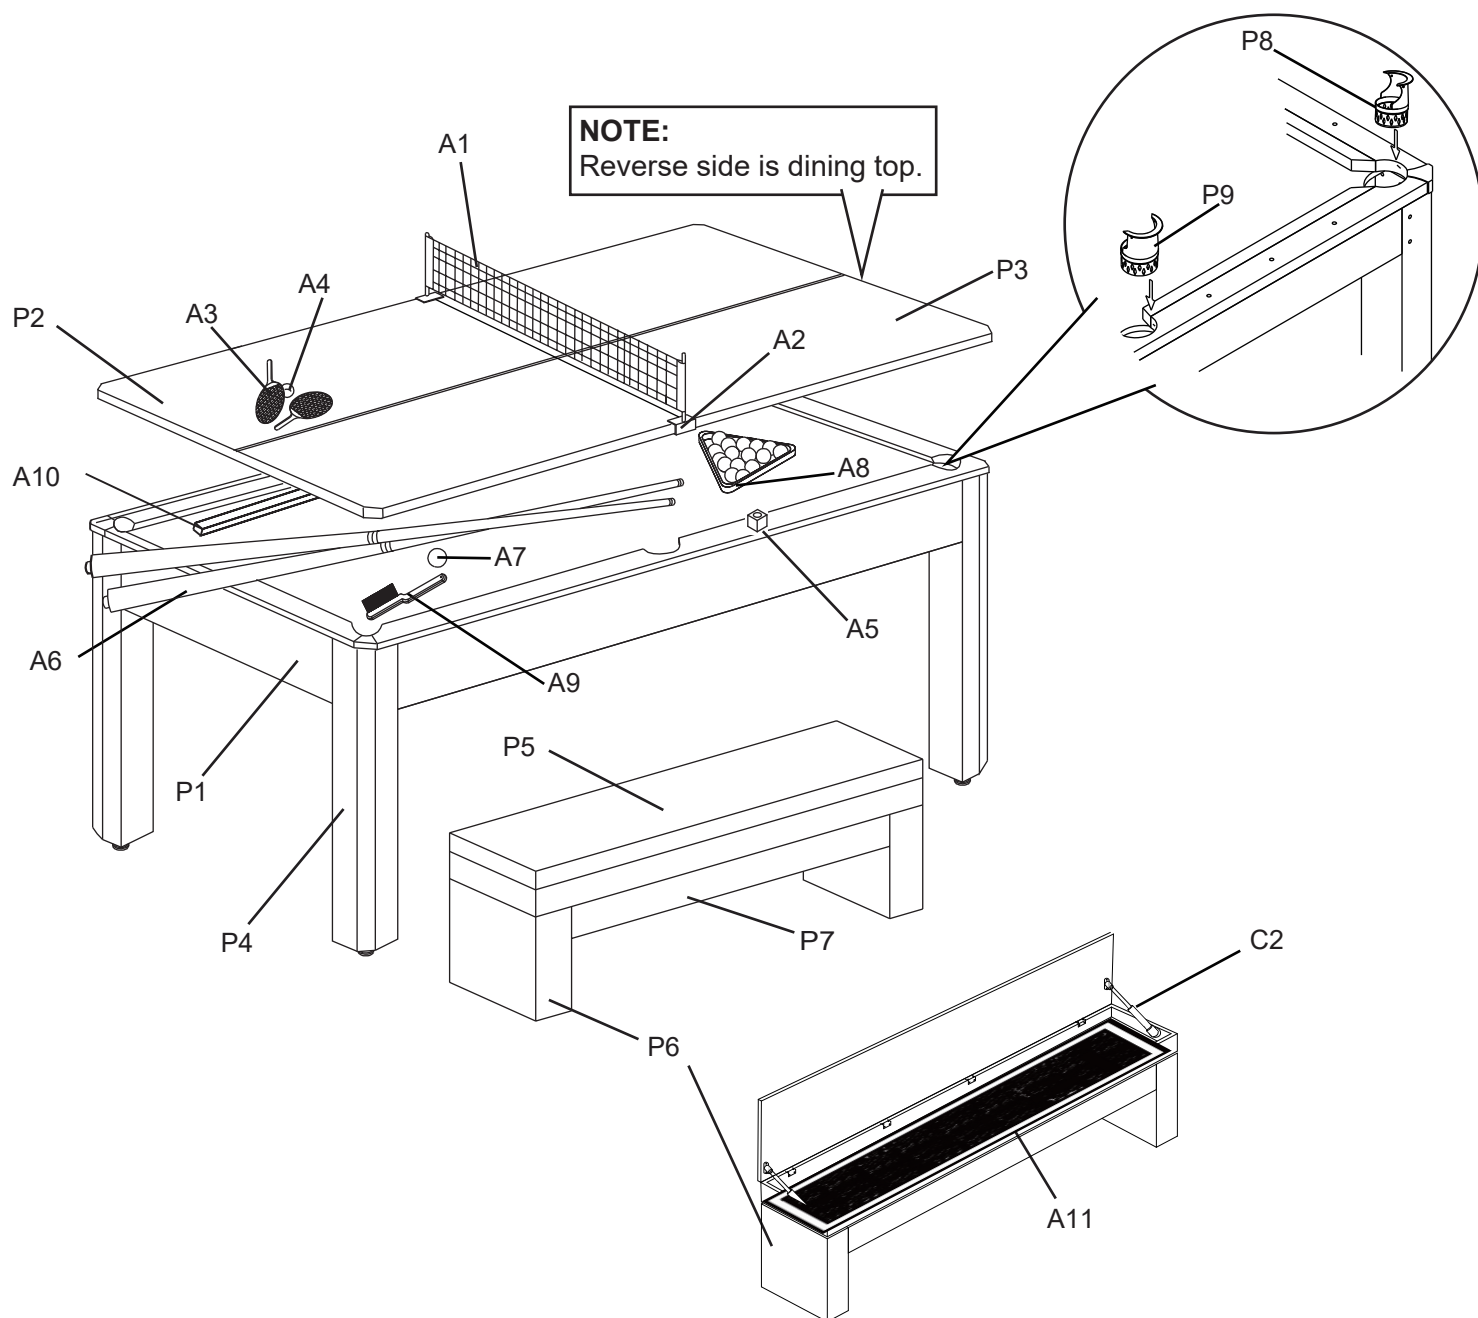

PARTS REQUIRED

16pcs - **H1** Allen Head Bolt

16pcs - **H3** Flat Washer

16pcs - **H4** Lock Washer

1pc - **P1** Main Table Cabinet

4pcs - **P4** Table Leg



1pc - **T1** Allen Wrench

STEP 1:

Attach **P4** Legs onto the Side Aprons and the End Aprons using **H1** Bolts, **H4** Lock Washers and **H3** Flat Washers as shown in **FIGURE 1**.

Use T1 Allen Wrench to tighten all **H1** bolts.

  FIGURE 1

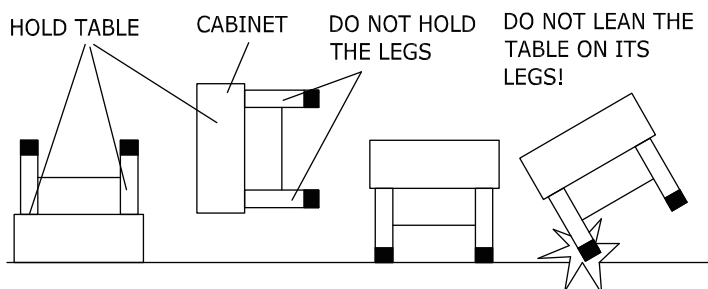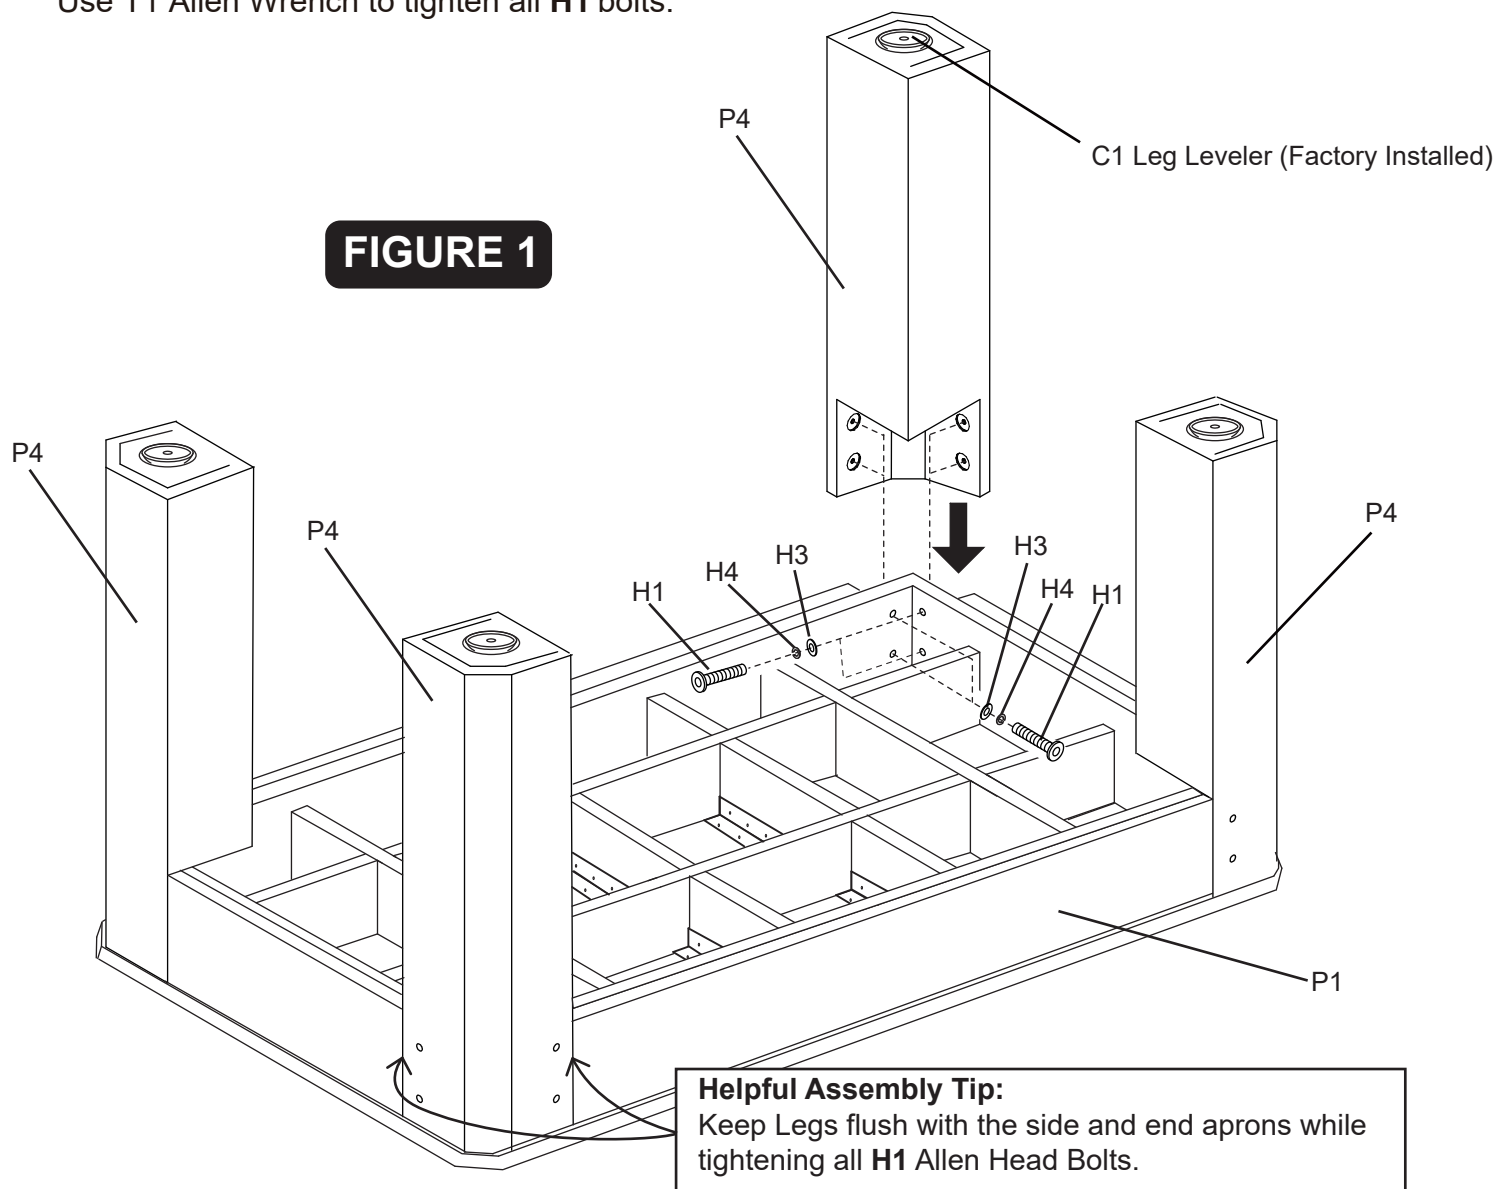

CAUTION:

Six strong adults are recommended to flip the table as shown.

1. Grab the table on the ground.
2. Turn the table over.
3. Place it on all four legs at the same time onto the floor.

 
PARTS REQUIRED

- 26pcs - **H5** Nails
- 4pcs - **P8** Corner Pocket
- 2pcs - **P9** Middle Side Pocket
- 1pc - **T2** Small Hammer

STEP 2:

Insert the **P8** Corner Pockets into each of the corner holes by using four **H5** Nails and **T2** Small Hammer. Insert the **P9** Middle Side Pockets into each of the middle holes by using five **H5** Nails. Hold nails with a pair of Needle Nose Pliers and tap them into the plastic pocket with a small ball peen hammer as shown in **DETAIL A&B&C, FIGURE 2**.

Place nails about 1/2 inch below the top of pocket so the balls will not hit the heads of the nails and get chipped. Once nails have been started into plastic pocket, hammer them in until the heads are flush with the plastic pocket. Use the "BALL" part of the ball-peen hammer to sightly countersink the nail heads.

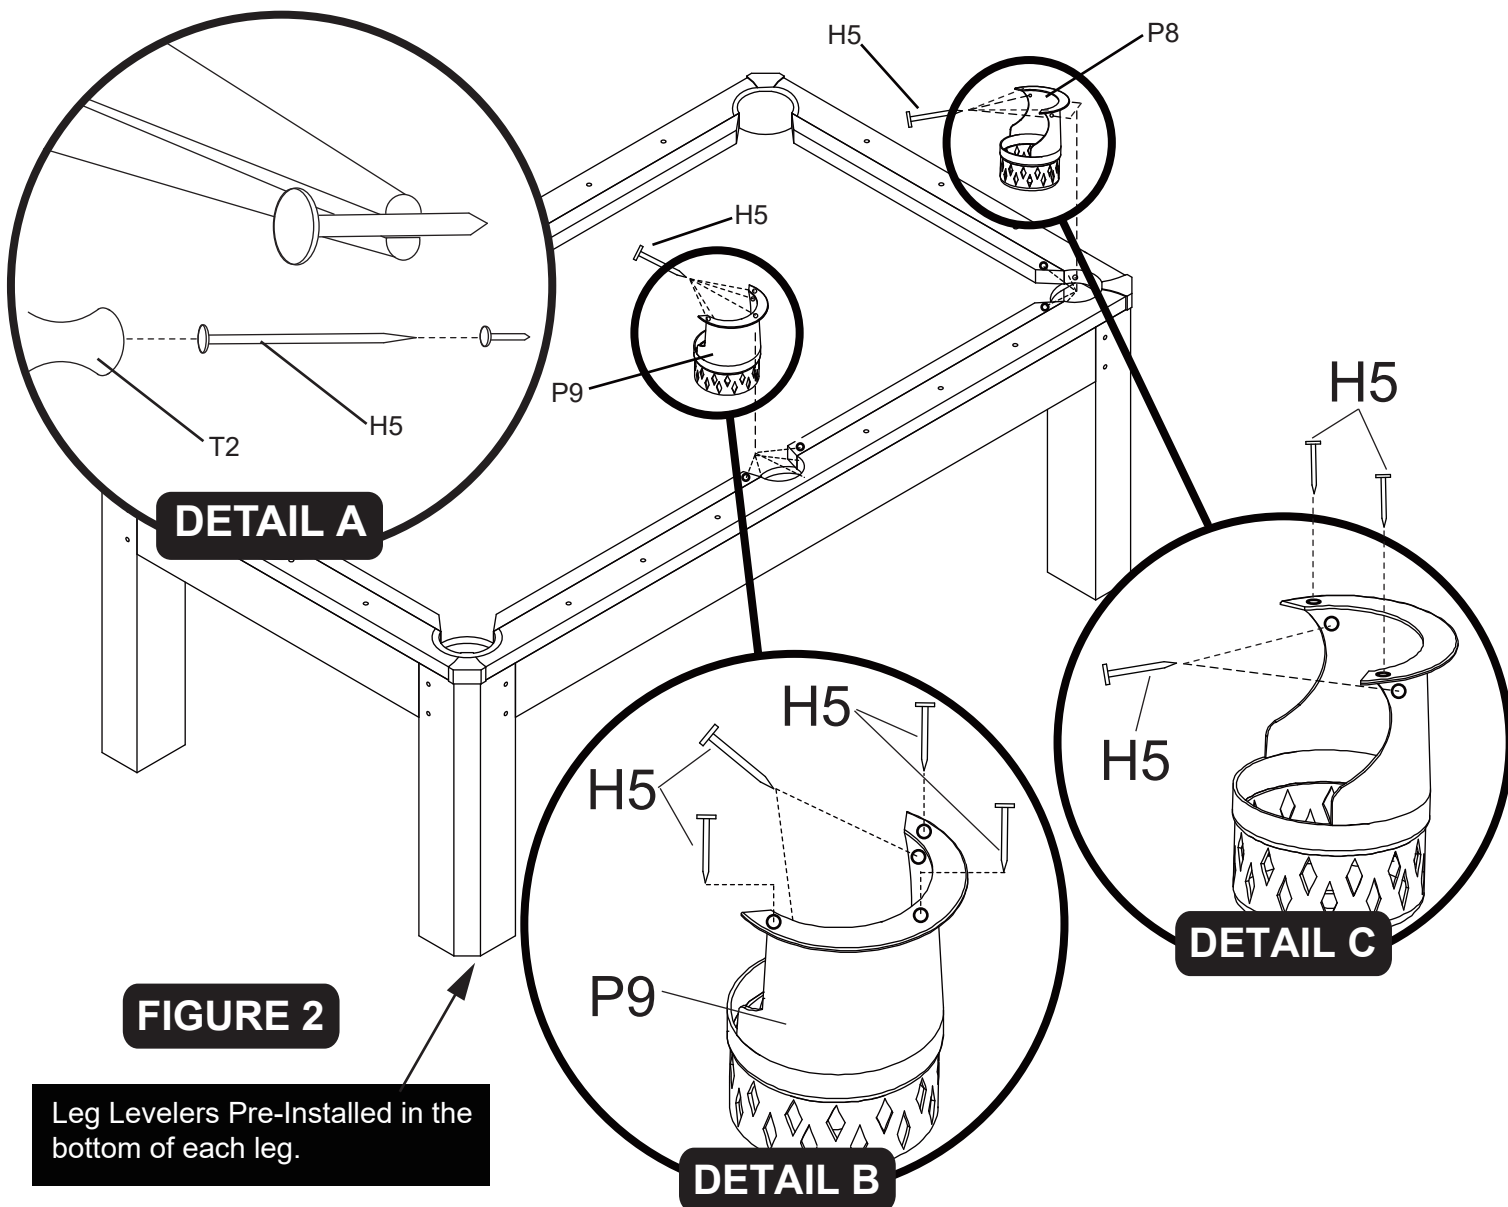


PARTS REQUIRED

- 1pc - **P2** A Table Tennis Top With Guide Pins
- 1pc - **P3** B Table Tennis Top With Guide Pin Holes
- 1pc - **A1** Table Tennis Net
- 2pcs - **A2** Net Post
- 2pcs - **A10** Table Tennis Playfield Support

STEP 3:

 Using the guide pins carefully connect the **P2** A Table Tennis Top With Guide Pins to **P3** B Table Tennis Top With Guide Pin Holes as shown in **DETAIL D**. Place **A10** Table Tennis Playfield Supports between Table Tennis Top and Billiard table. Install **A1** Table Tennis Net by adjusting **A2** Net Post as shown in **DETAIL E** & **FIGURE 3**.

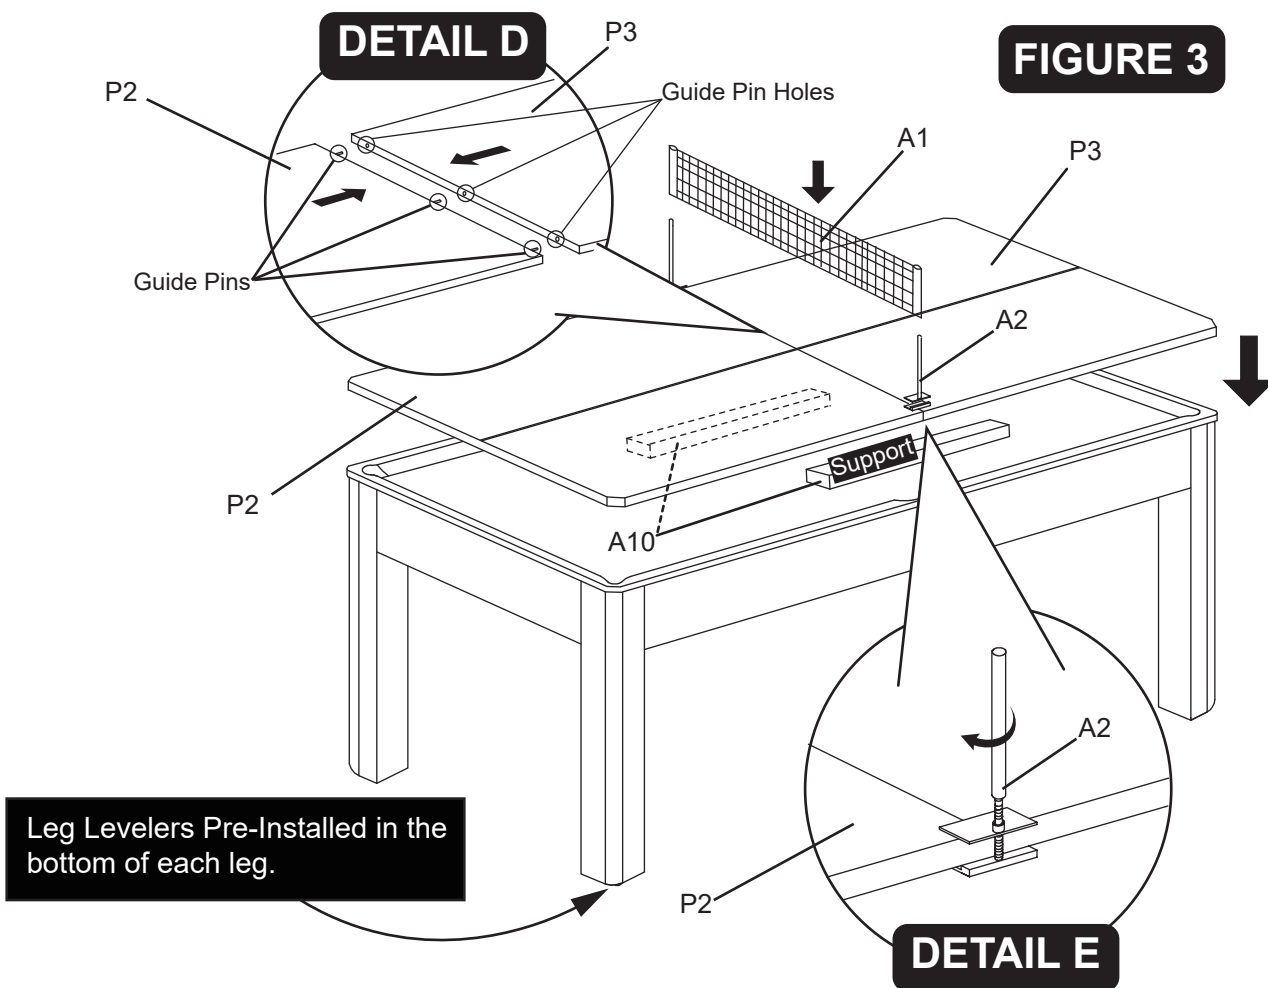

NOTE:

Using Dining Top:

 
Remove Table Tennis Net and Net posts. Carefully separate the two playfield halves, flip the halves and push halves together using the guide pins and guide pin holes in each half top.

PARTS REQUIRED

48pcs - **H2** Allen Head Bolt
48pcs - **H3** Flat Washer
48pcs - **H4** Lock Washer
4pcs - **P6** Bench Leg
4pcs - **P7** Bench Support
2pcs - **P5** Bench Seat
2pcs - **A11** Bench Carpet

STEP 4:

Attach **P6** Bench Legs to **P7** Bench Supports using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 4**. Tighten all **H2** Allen Head Bolts.

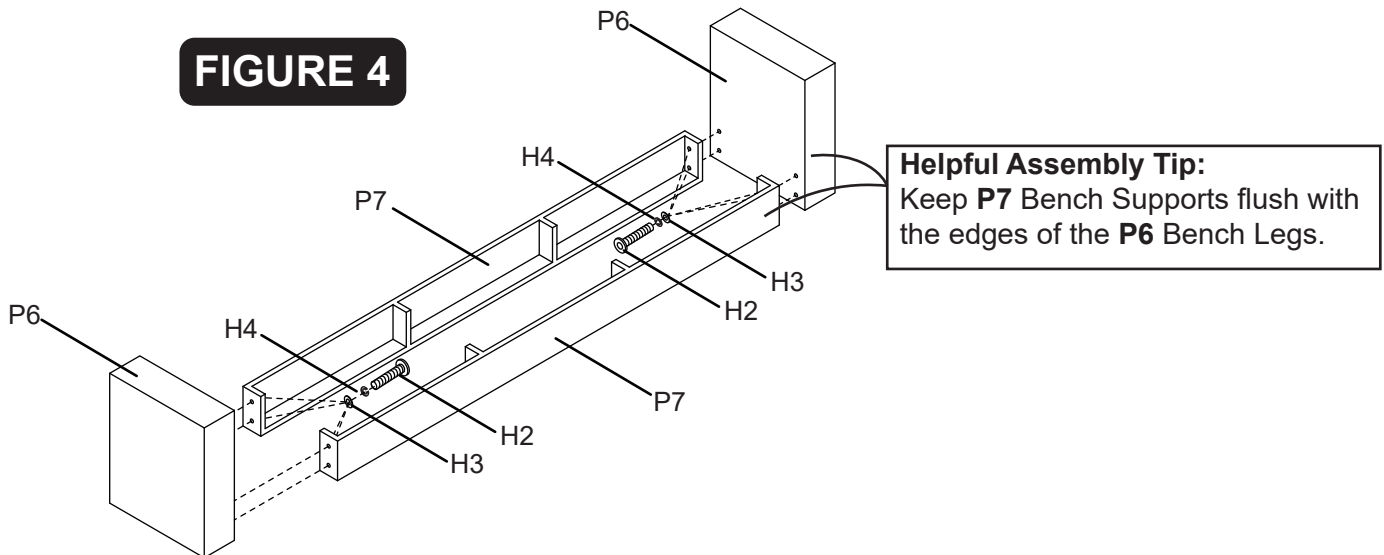


STEP 5:

Firstly, take the **A11** Bench Carpets out from the **P5** Bench Seats.

Attach **P5** Bench Seat to the Leg assembly using **H2** Allen Head Bolts, **H3** Flat Washers and **H4** Lock Washers as shown in **FIGURE 5**.

 Tighten all **H2** Allen Head Bolts.

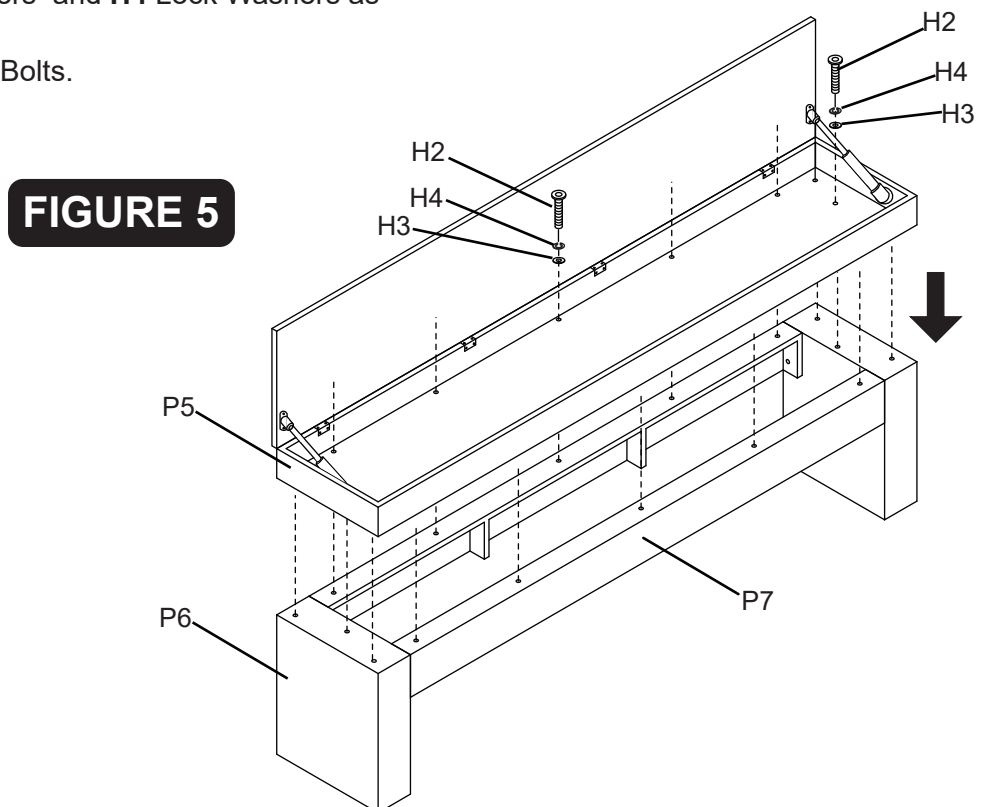


PARTS REQUIRED
2pcs - A11 Bench Carpet

STEP 6:

Install the **A11 Bench Carpet** into each bench as shown in **FIGURE 6**.

 FIGURE 6

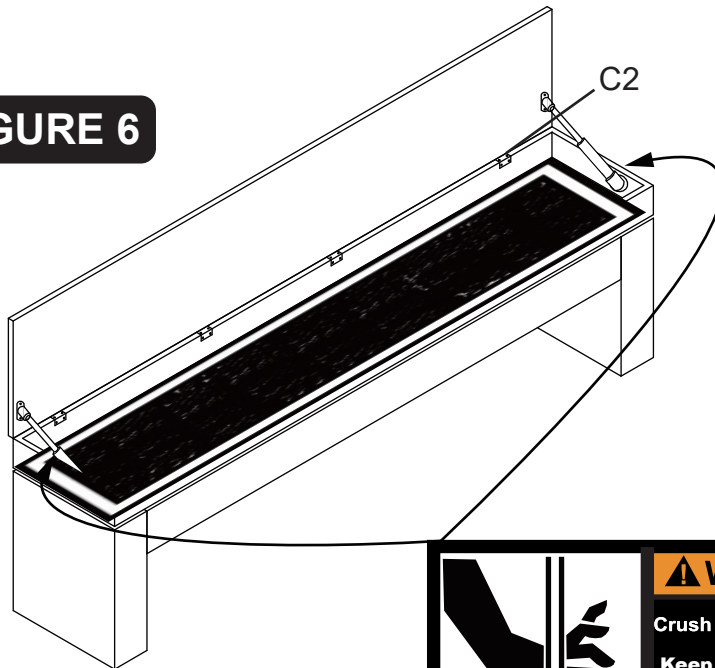

⚠ WARNING

Crush and Shear Points

Keep hands and fingers clear of the hinge area and the bench lid area when closing the bench lid

WARNING:

To prevent injury, exercise caution when opening and closing the bench lid.
DO NOT let bench lid drop shut.
DO NOT let children operate bench lid.
Be cautious when moving bench on floor, Lift bench ends to move.
DO NOT STAND ON BENCH SEAT.

⚠ WARNING

MAX. LOAD CAPACITY:
550 LBS.

Congratulations! You have now assembled your 3 in1 Billiard table. Please note the Care and Use instructions below to insure many years of trouble free use of your 3 in1 Billiard table.

CARE AND USE FOR YOUR TABLE

1. Use spray furniture polish to clean all exterior surfaces of your pool table.
2. Use the table brush provided to clean the cloth on the table.
3. Use only a slightly damp soft cloth to clean the table tennis top (do not use Furniture Polish)
4. This product is intended for **INDOOR** use only .
5. **DO NOT** sit, climb or lean on the table.
6. **DO NOT** drag the table when moving it. This will damage the legs.
7. **DO NOT** set drinks on the table.
8. The purchase of a pool table cover will both protect and help keep clean the entire top of the pool table.
9. Lastly, using a carpenters level and the leg levelers, level table for best play.

PRODUCT PARTS LIST FOR MODEL # G05302W/F-TAN

Part #	Description	Qty.	Part #	Description	Qty.
H1	5/16" x 1-1/4" Allen Head Bolt	16	P9	Middle Side Pocket	2
H2	5/16" x 1-3/8" Allen Head Bolt	48	A1	Table Tennis Net	1
H3	5/16" x 3/4" Flat Washer	64	A2	Net Post	2
H4	5/16" x 1/2" Lock Washer	64	A3	Table Tennis Paddle	2
H5	1/24" x 3/4" Nail	26	A4	Table Tennis Ball	2
T1	Allen Wrench	1	A5	Cue Chalk	2
T2	Small Hammer	1	A6	Cue Stick	2
P1	Main Table Cabinet	1	A7	Billiard Ball Set	1
P2	"A" Table Tennis Top With Guide Pins	1	A8	Triangle	1
P3	"B" Table Tennis Top With Guide Pin Holes	1	A9	Pool Playfield Brush	1
P4	Table Leg	4	A10	Table Tennis Playfield Support	2
P5	Bench Seat Assembly	2	A11	Bench Carpet	2
P6	Bench Leg	4	C1	Leg Leveler (Factory Installed)	4
P7	Bench Support	4	C2	Dampener Piston (Factory Installed)	4
P8	Corner Pocket	4	C3	1/2" Phillips Head Hinge Screw (Factory Installed)	48
			K1	Hardware Kit	1
			M1	Instruction Manual	1

90 DAY LIMITED WARRANTY

This consumer warranty extends to the original consumer purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original consumer purchase of a period of 90 days from the original purchase.

WARRANTY COVERAGE: ESCALADE SPORTS warrants to the original Consumer Purchaser that any Product of its manufacture is free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY PERFORMANCE: During the above 90 day warranty period, ESCALADE SPORTS shall repair or replace with a comparable model, and Product, or component thereof, which may prove defective under normal use and proper care, and which our examination shall disclose to our satisfaction to be thus defective, please contact our Warranty Dept.

1-800-467-1421 / Warranty Dept.

Or Write us at:

Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706

Attn: Warranty Dept.

Or E-mail us at:

gameroom@escaladesports.com

Other than shipping requirements no charge will be made for such repair or replacement of in-warranty Products. ESCALADE SPORTS strongly recommends that the Product is insured for value prior to mailing.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.

NOT COVERED BY THIS WARRANTY

- Product not intended to be in places of public assembly, such as, but not limited to, schools, parks, public or private recreational facilities
- Any product subjected to Non-residential abuse, negligence, improper installation, vandalism, acts of God, alteration of product, or any other events beyond the control of ESCALADE SPORTS.