


# ASSEMBLY INSTRUCTION

## E334-05(3A) SOFA TABLE

**A** Table Top

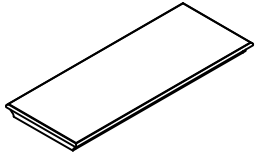

1 pc

**B** Right Legs




2 pcs

**C** Left Legs




2 pcs

**D** Shelf

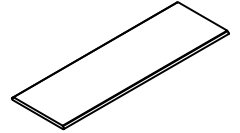

1 pc

**E** Bottom

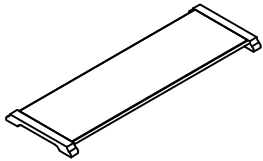


1 pc

**F** Allen Bolt  
Ø1/4"x45mm



12 pcs

 **G** Allen Bolt  
Ø1/4"x15mm



8 pcs

**H** Lock Washer  
Ø1/4"



20 pcs

**I** Flat Washer  
Ø1/4"x19x1.5mm



20 pcs

**J** Allen Key  
4mm



 
1 pc

**K** Angle Iron  
30x18x20mm




4 pcs

**L** Dowel  
Ø8x30mm




8 pcs

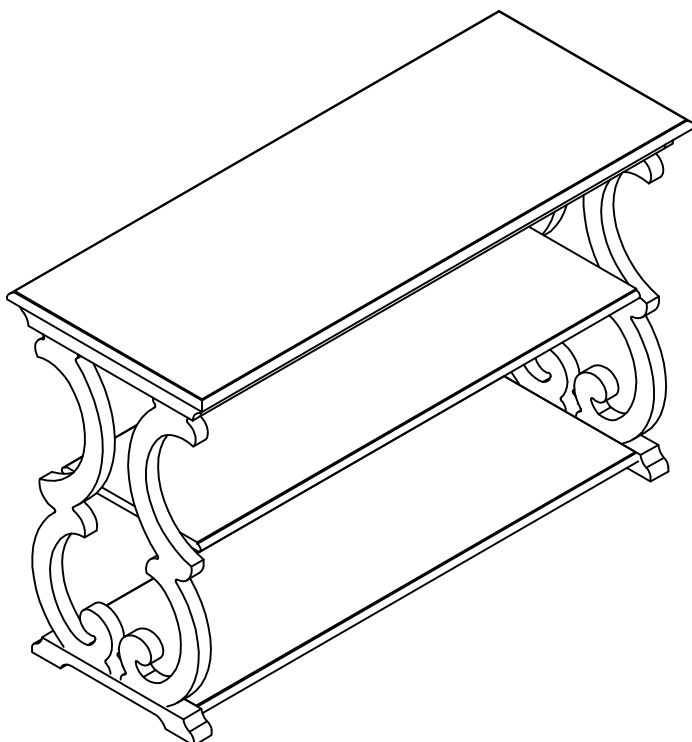


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attached Shelf(D) to the Legs(B & C). Use Dowel(L), Allen Bolt(G) Lock Washer(H) and Flat Washer(I) on holes of Angle Iron(K). Attached Legs(B & C) to the Table Top(A). Use Allen Bolt(F) Lock Washer(H) and Flat Washer(I) on holes of Legs(B & C). Turn the Allen Key(J) in Allen Bolt(F).

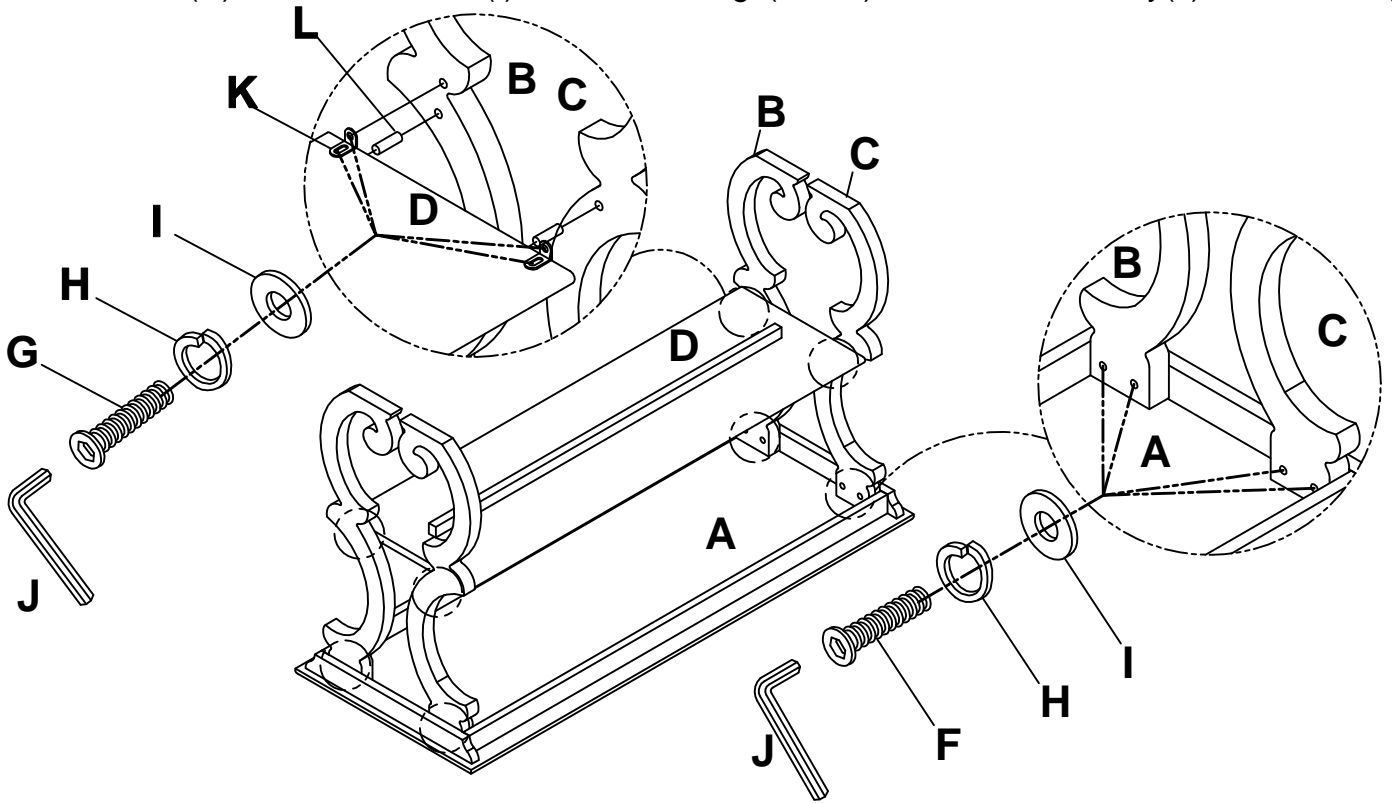

- 2** Attached Bottom(E) to the Legs(B & C). Use Allen Bolt(F), Lock Washer(H), Flat Washer(I) and Dowel(L) on holes of Bottom(E). Turn the Allen Key(J) in Allen Bolt(F).

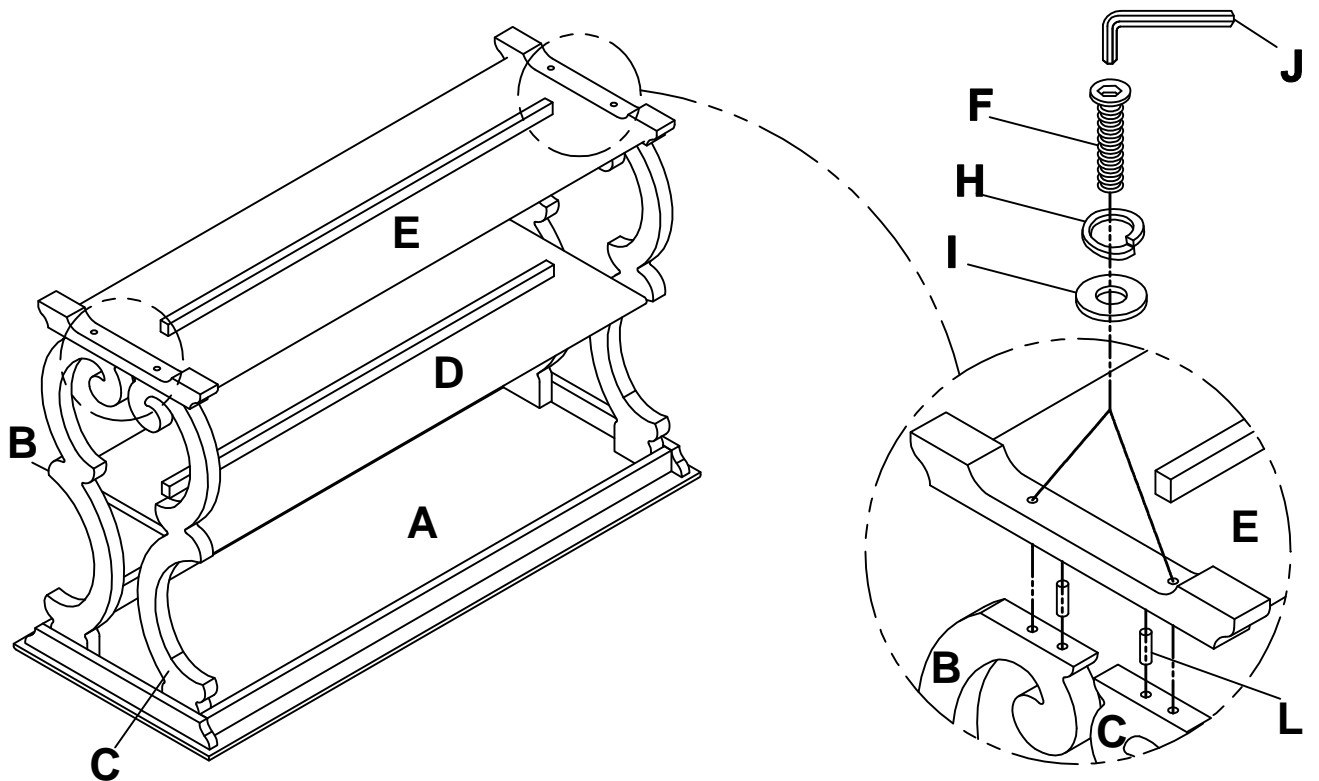

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.