


RESIDENTIAL/COMMERCIAL

RED SERIES OWNER'S MANUAL & INSTALLATION GUIDE

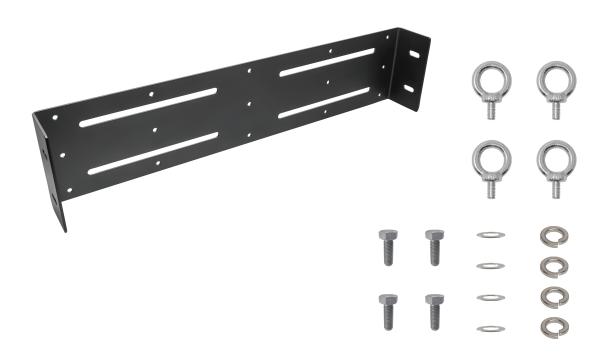

ELURA SUBR10IC.2-HANGKIT



CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

ATTENTION

RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR



WARNING:

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

AVIS:

Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Le symbole de l'éclair fléché dans un triangle équilatéral, est destiné à alerter l'utilisateur de la présence d'une "tension dangereuse" dans le boîtier du produit qui peuvent être des ampleur suffisante pour constituer un risq e d'électrocution aux personnes.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Ce symbole est destiné à alerter l'utilisateur de la présence d'opération et de maintenance (entretien) dans la documentation accompagnant l'appareil.

Important Safety Instructions

- **1.** Read these Instructions. Lisez ces instructions.
- **2.** Keep these Instructions. Conservez ces instructions.
- Heed all Warnings. Respectez tous les avertissements.
- **4.** Follow all instructions. Suivez toutes les instructions.
- Do not use this apparatus near water. Ne pas utiliser cet appareil près de l'eau.
- Clean only with a dry cloth.
 Nettoyer uniquement avec un chiffon
 sec
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 Ne pas bloquer les ouvertures de ventilation. Installer conformément aux instructions du fabricant.
- 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat. Ne pas installer près de sources de chaleur telles que radiateurs, registres de chaleur, poêles ou autres appareils

(y compris les amplificateurs)

produisant de la chaleur.

Do not defeat the safety purpose of the polarized or grounding - type plug. polarized plug has two blades with one wider than the other. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Ne détruisez pas la sécurité de la terre ou polarisées - fiche. Une fich polarisée possède deux lames dont une est plus large que l'autre. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.

- 10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - Protégez le cordon d'alimentation d'être piétiné ou pincé, particulièrement au niveau des fiches, des prises, et le point où ils sortent de l'appareil.
- Only use attachments/accessories specified by the manufacturer.
 N'utilisez que des accessoires spécifiés par le fabricant.
- 12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus, combination to avoid injury from tip-over.

Utilisez uniquement un chariot, stand, trépied, support ou table spécifiés par le fabricant ou vendu avec l'appareil. Quand un panier ou rack est utilisé, faites attention lorsque vous déplacez l'ensemble chariot / appareil, pour éviter d'éventuelles blessures en cas de chute.

- Unplug this apparatus during lightning storms or when unused for long periods of time
 - Débranchez cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes de temps.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Confiez toute réparation à un personnel qualif é. Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce cordon d'alimentation ou la fiche est endommagé, liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou s'il est tombé.
- 15. WARNING: The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

AVERTISSEMENT: La fiche d'alimentation (appareil coupleur) est utilisé comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement accessible.

- **16.** No naked flame sources, such as lighted candles, should be placed on the apparatus.
 - Aucune source de flamme nue, telle que des bougies allumées, ne doit être placé sur l'appareil
- 17. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection.

Borne de terre de protection. L'appareil doit être connecté à une prise secteur avec une prise de terre.


Overview


Your ELURA SUBR101C.2 Subwoofer System can be installed in many ways. Using the SUBR101C.2-HANGKIT simplifies difficult installations. The ELURA SUBR101C.2-HANGKIT allows the ELURA SUBR101C.2 Subwoofer System to be installed on the surface of ordinary architectural walls and ceilings or to be hung/flown overhead using proper cables and rigging hardware. If the SUBR101C.2 is installed overhead, a seismic/safety cable must be used to tether the loudspeaker to a rigid architectural structural element such as an architectural stud, joist or steel beam.

Below is a list of installation options available. Before you begin your project, review the options and select the method that best suits your project.


Floor, Surface & Ceiling Installation Bracket Mounting

For installations using the SUBR101C.2-HANGKIT BRACKET, first attach the bracket to your desired wall, ceiling or floor making sure to secure it to architectural structural members (studs) or to masonry or another architectural structure adequate to support the weight of the SUBR101C.2 subwoofer. Use appropriate hardware (available from any hardware store) to secure the bracket to the mounting surface. In critical installations, you may need to consult a structural engineer to design an optimized installation solution to ensure safety. Once the bracket is securely fastened to the architectural surface, remove the M8 screws and washers from the SUBR101C.2 mount points needed for your configuration and set them aside. Carefully hold the subwoofer in place and mount it to the bracket using the M8 washers, lock washers and heavy-duty hex head bolts provided as shown in the illustration examples below.

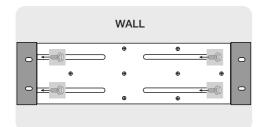

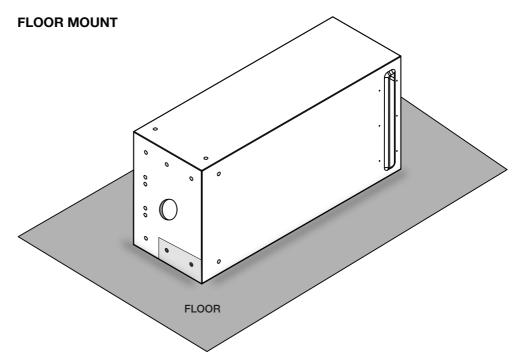


WALL MOUNT USING ONE BRACKET

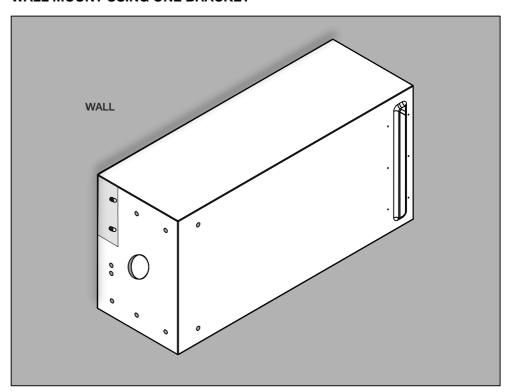

Note: When using the mounting bracket, it is imperative that you only remove the screws needed to mount the bracket properly. All other screws need to remain in place as the subwoofer was shipped.


WALL MOUNT USING TWO BRACKETS

(Note: Optional second bracket shown. Some building codes may require the use of two mounts, please check the local codes prior to installation)

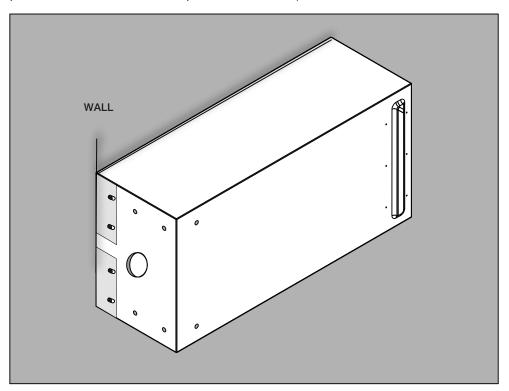


CEILING MOUNT USING ONE BRACKET

(Note: Use center mounting location as shown for one bracket installation)

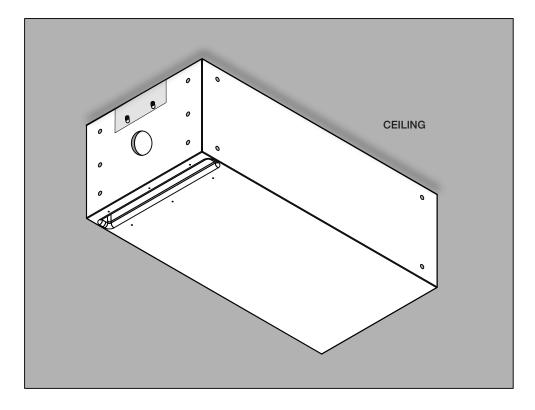


CEILING MOUNT USING TWO BRACKETS

(Note: Optional second bracket shown. Some building codes may require the use of two mounts, please check the local codes prior to installation)

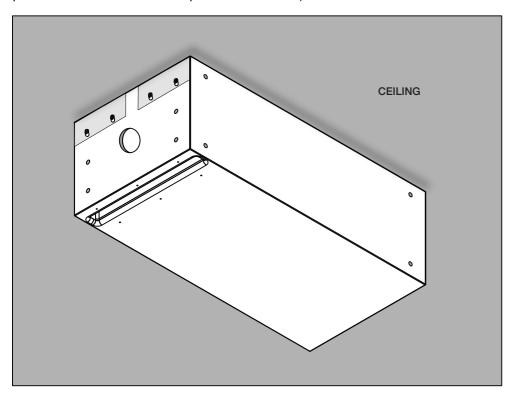



HANGING (FLYING)


Hanging the SUBR101C.2 requires a seismic/safety cable (seismic/safety cable is not included) to tether the loudspeaker to a rigid architectural structural element such as an architectural stud, joist or steel beam.

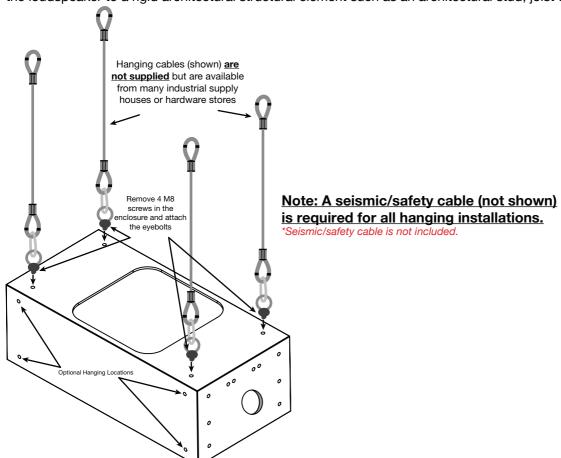


BRACKET M8 EYEBOLT

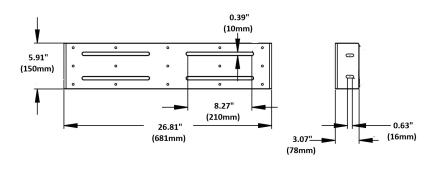

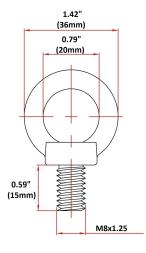

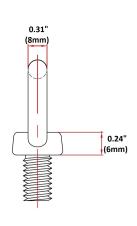

MX HEX BOLT

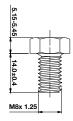

Product Warranty

The seller warrants the SUBR10IC.2-HANGKIT free from defects in the material and workmanship for 2 years from the date of purchase from the seller or authorized dealer. Should this product fail to be in good working order within the warranty period, the product will be repaired or replaced provided that the unit has not been subjected to accident, disaster, abuse, or any unauthorized modification. This warranty is offered by the seller for its buyer with direct transaction only. This warranty does not apply to products that have been abused, incorrectly installed, modified, disassembled and/or repaired by anyone other than Elura or our appointed repair facility.

A unit that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for 90 days from the day of reshipment to the buyer. If the unit is delivered by mail, customers agree to ensure the unit or assume the risk of loss or damage in transit. Under no circumstances will a unit be accepted without a return authorization number. The warranty is in lieu of all other

warranties expressed or implied, including without limitations, any other implied warranty, all of which are expressly disclaimed. Proof of sale may be required in order to claim warranty. The content of this manual has been carefully checked and is believed to be accurate. However, the seller assumes no responsibility for any inaccuracies that may be contained in this manual. Also, the technical information contained herein regarding the features and specifications are subject to change without further notice.

www.elura.com

