 




BEST CHOICE
PRODUCTS

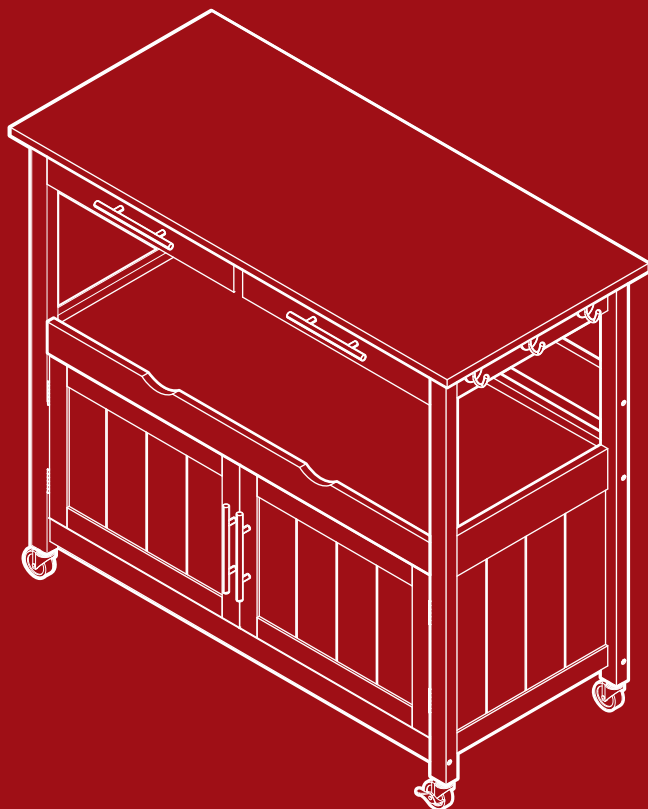

INSTRUCTION MANUAL

Large Kitchen Island Cart

SKY11011 + SKY11012 + SKY11013 + SKY11014 + SKY11015 + SKY11022



44 LBS
TOP BOARD
CAPACITY



11 LBS
DRAWER
CAPACITY



33 LBS
SHELF (EACH)
CAPACITY



33 LBS
BOTTOM BOARD
CAPACITY



2 PERSON
ASSEMBLY



UP TO 90 MIN.
ASSEMBLY

TOOLS REQUIRED



FLAT HEAD
SCREWDRIVER



ALLEN WRENCH
(PROVIDED)



SMALL WRENCH
(PROVIDED)



POWER DRILL
(OPTIONAL)



NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- Do not immerse this appliance in water, rinse under tap, spray with water, or keep in wet/humid areas.
- Do not use this product in an excessively humid or dusty environment.
- Keep product away from direct sunlight and other sources of heat (stove, heater, etc.).
- This product is intended for residential use only.



WARNING

- To reduce the risk of electric shock:
 - Do not exceed rating/maximum load: 15a 125v 60 hz 1800w.
 - For indoors use & in dry locations only.
 - Do not plug into another relocatable power tap.
- To prevent cord damage and tripping hazard:
 - Do not step or roll over cord.
 - Avoid extending cord over areas of foot traffic.

HARDWARE

A

M6 x 35mm
CAM BOLT



21 PCS

B

Φ15 x 9.5mm
CAM LOCK



21 PCS

C

Φ8 x 30mm
DOWEL



30 PCS

D

Φ4 x 35mm
SCREW



7 PCS

E

HANDLE



4 PCS

F

M4 x 16mm
SCREW



8 PCS

G

HINGE



4 PCS

H

Φ3 x 12mm
SCREW



40 PCS

I

METAL PLATE
& SCREW



2 SETS

J

MAGNETIC
FLASHING



1 PC

K

Φ3 x 14mm
SCREW



2 PCS

L

Φ3 x 25mm
SCREW



16 PCS

M

Φ5 x 50mm
SCREW



8 PCS

N

320mm
DRAWER
RUNNER



2 PCS

O

278mm
DRAWER
RUNNER



4 PCS

P

LOCKING
CASTER



2 PCS

Q

CASTER



2 PCS

R

SIDE HOOK



3 PCS

S

Φ3 x 12mm
SCREW



6 PCS

T

POWER STRIP



1 PC

U

Φ4 x 10mm
SCREW



4 PCS

W

Φ3 x 12mm
SCREW

 


2 PCS

PARTS

1


ISLAND TOP

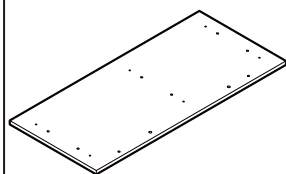

1 PC

2

 
ISLAND LEFT SIDE

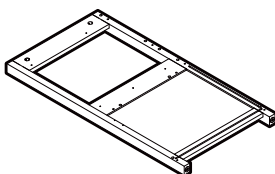

1 PC

3

 
ISLAND RIGHT SIDE

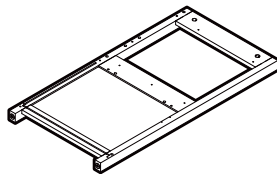

1 PC

4

 
TOP BACK SUPPORT

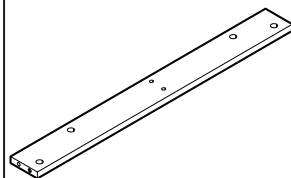

1 PC

5

 
POWER STRIP MOUNT

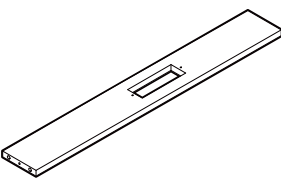

1 PC

6

 
CENTER BACK
SUPPORT

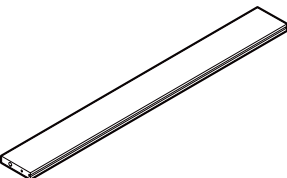

1 PC

7

 
BACK PANEL

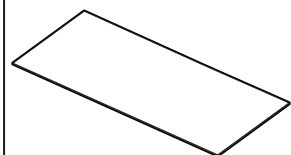

1 PC

8

 
LOWER BACK
SUPPORT

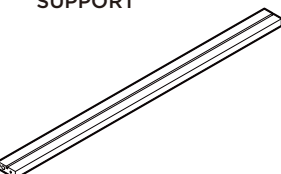

1 PC

9

 
CABINET TOP PANEL

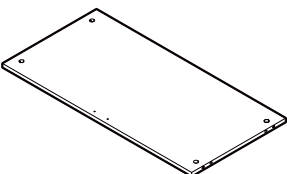

1 PC

10

 
CABINET BOTTOM
PANEL

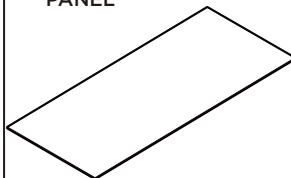

1 PC

11

 
LEFT CABINET DOOR

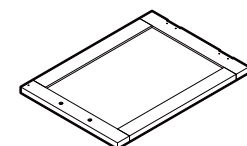

1 PC

12

 RIGHT CABINET DOOR

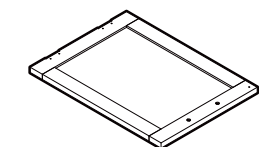


1 PC

PARTS

13

 
TRAY FRONT

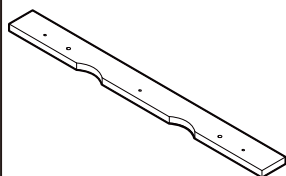

1 PC

14

 
TRAY SUPPORT

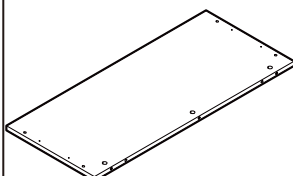

1 PC

15

 
TRAY LEFT SIDE

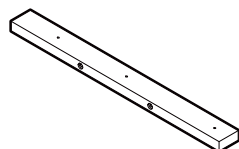

1 PC

16

 
TRAY RIGHT SIDE

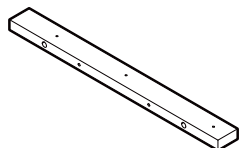

1 PC

17

 
DRAWER FRONT

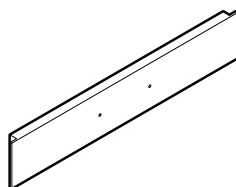

2 PCS

18

 
DRAWER LEFT SIDE

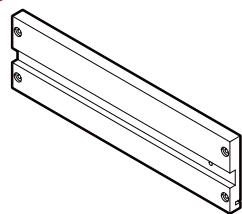

2 PCS

19

 
DRAWER RIGHT SIDE

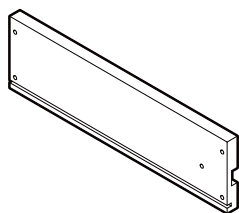

2 PCS

20

 
DRAWER BACK

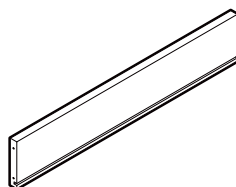

2 PCS

21

 
DRAWER BOTTOM

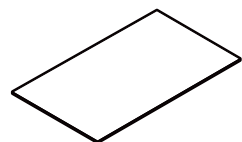

2 PCS

22

 
LOWER FRONT SUPPORT

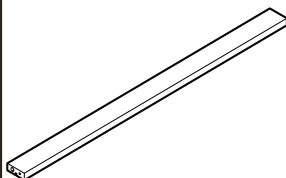

1 PC

23

 
DRAWER DIVIDER

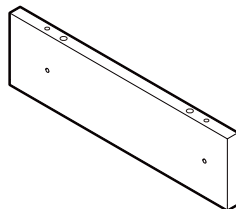

1 PC

24

 UPPER FRONT PANEL

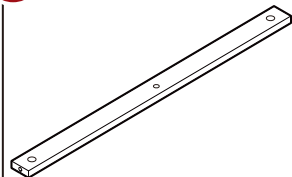


1 PC

PARTS

13

 LOWER MIDDLE SUPPORT

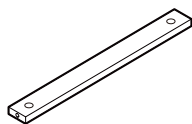



1 PC

PRODUCT ASSEMBLY

1

Locate one **part O** drawer runner and attach it to the **part 23** drawer divider with three **part H** screws. Slide the rail section left or right to reveal the fastener holes if necessary.

  
Flip the drawer and repeat to assemble another runner onto it.

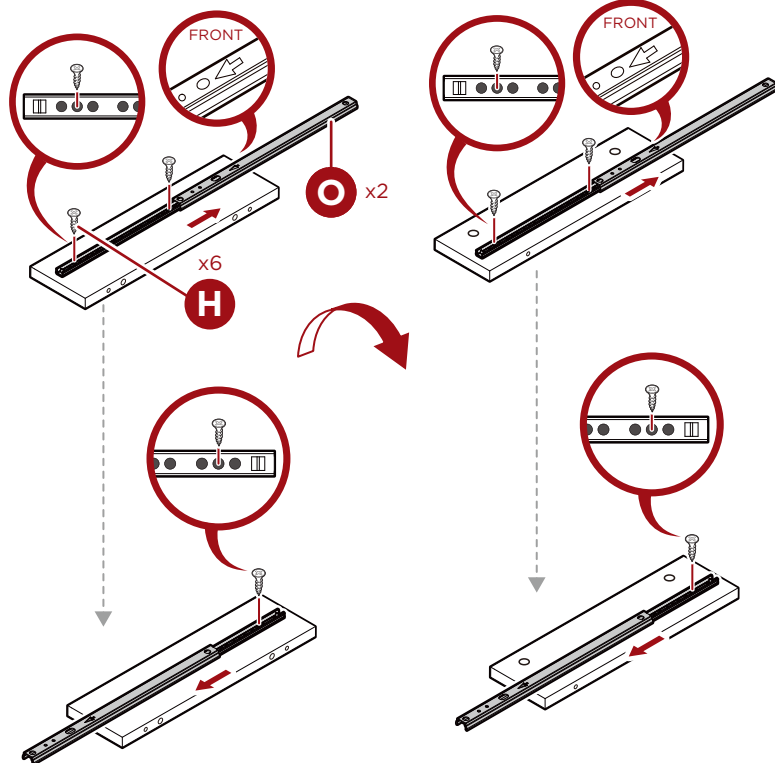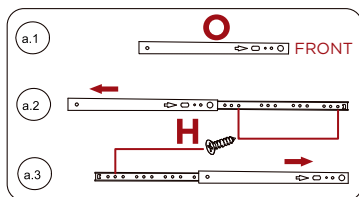

PRODUCT ASSEMBLY

2

 On one **part N drawer runner**, locate and press down on the release latch, then separate the guide section from the rail section. Repeat on a second runner, then set the four sections aside.

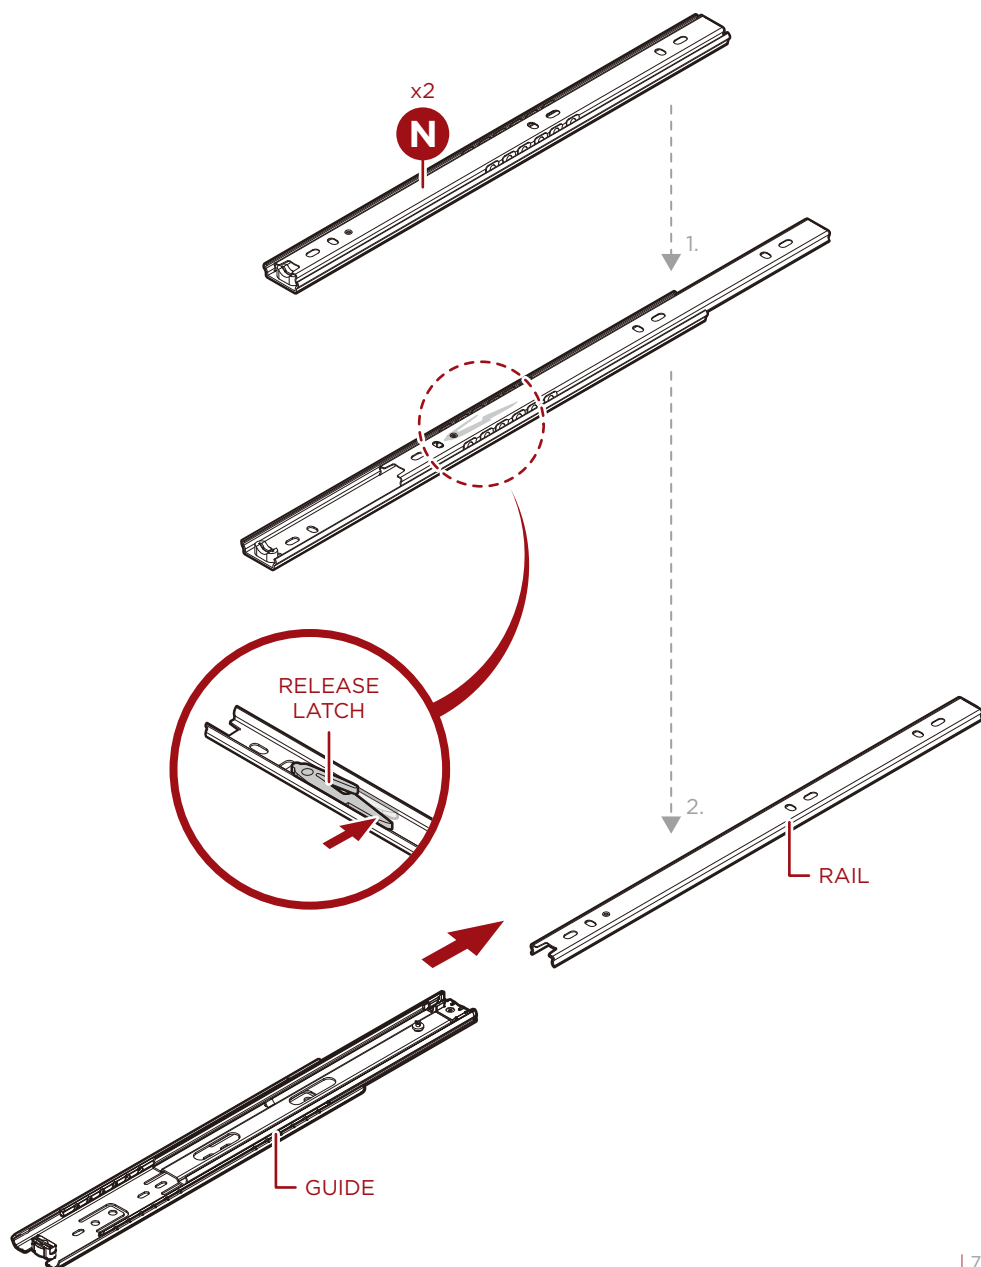


PRODUCT ASSEMBLY

3

Locate one **part O** drawer runner and attach it to the **part 2** island left side with two **part H** screws. Slide the rail section left or right to reveal the fastener holes if necessary.

Attach the guide section of the one **part N** drawer runner to the **part 2** island left side with two **part H** screws.

 Insert three **part A** cam bolts into the **part 2** island left side.

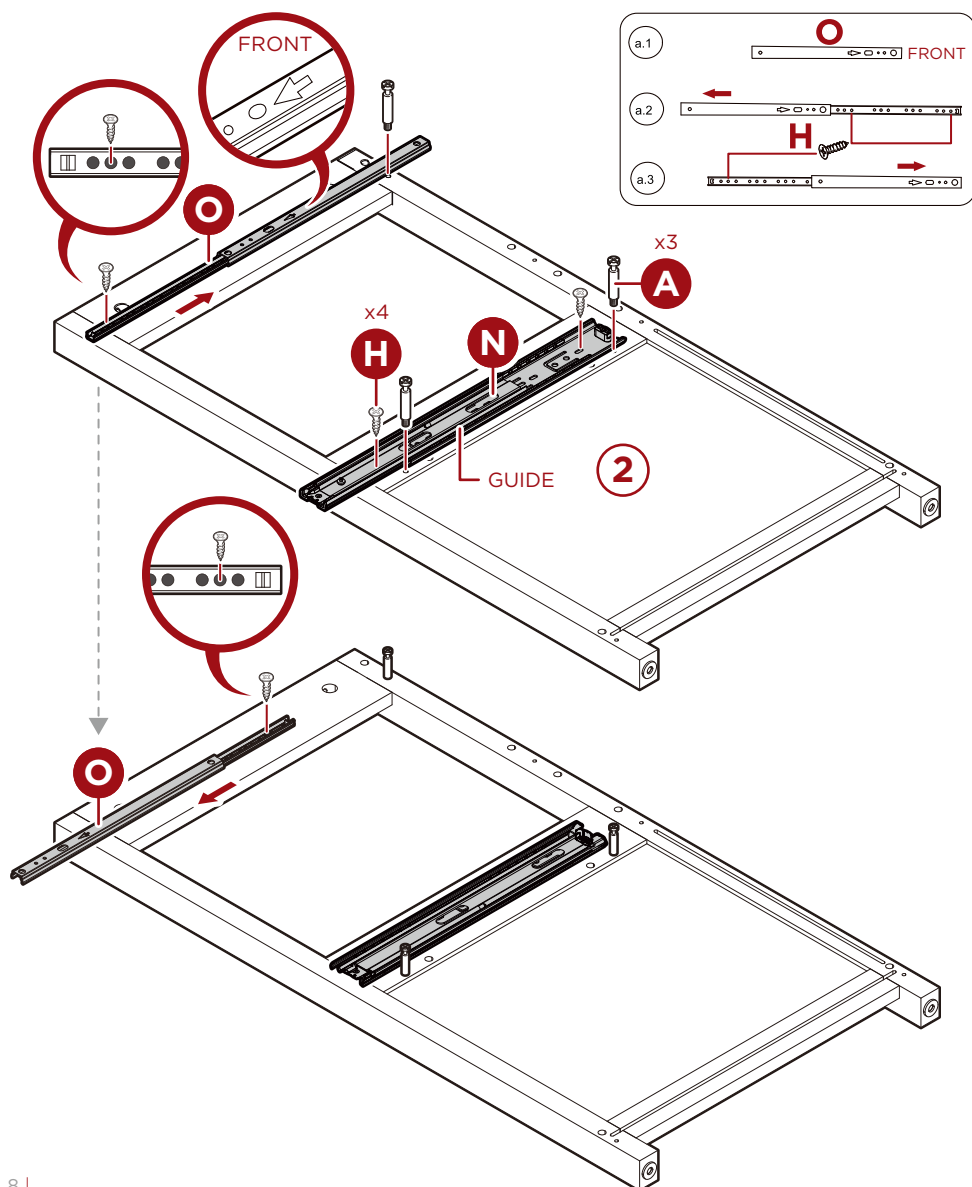


PRODUCT ASSEMBLY

4

Locate one **part O** drawer runner and attach it to the **part 3** island right side with three **part H** screws. Slide the rail section left or right to reveal the fastener holes if necessary.

Attach the guide section of the one **part N** drawer runner to the **part 3** island right side with three **part H** screws.

 
Insert three **part A** cam bolts into the **part 3** island right side.

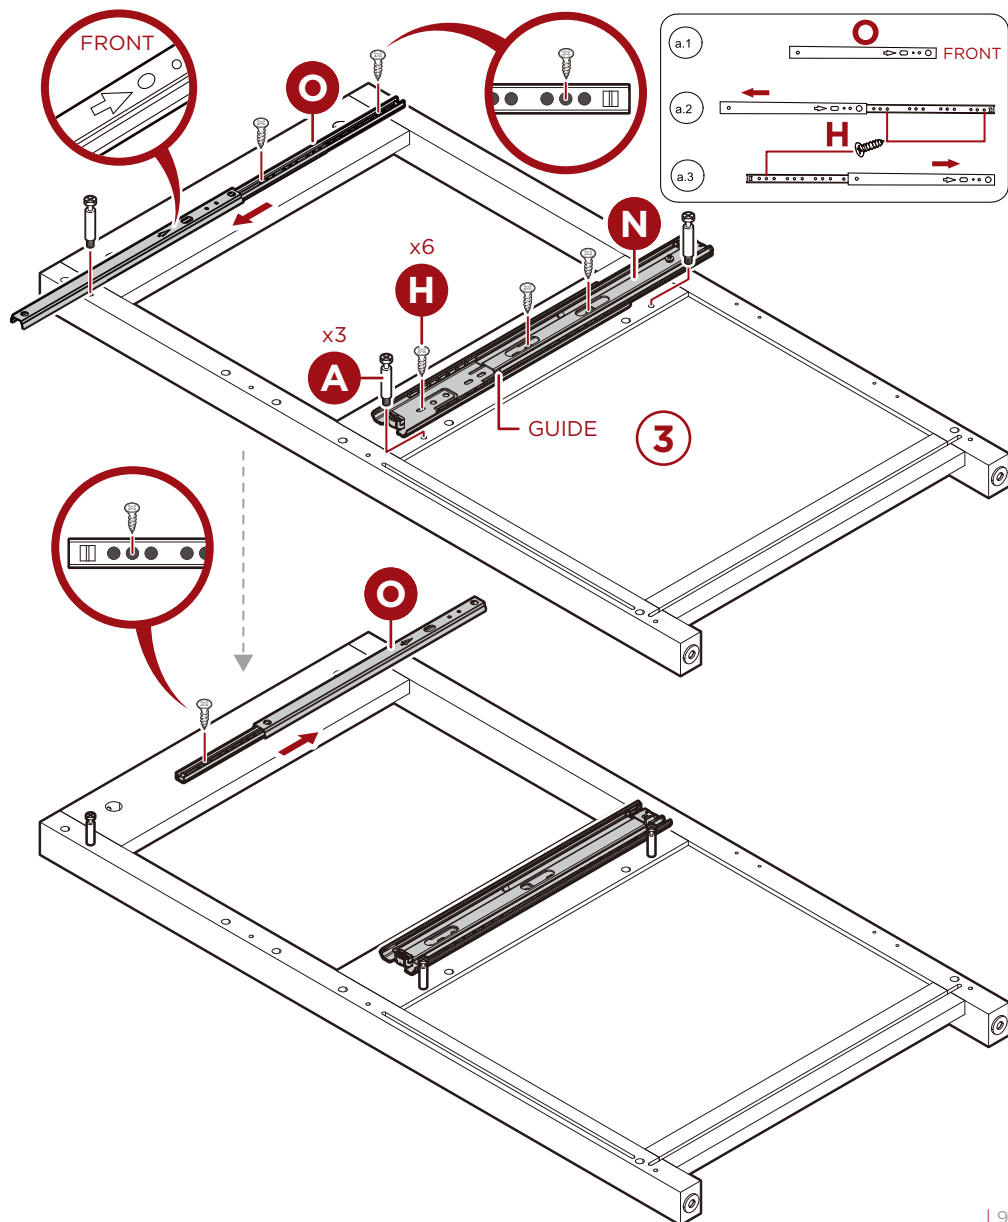

PRODUCT ASSEMBLY



5

 Insert the **part T power strip** into the receiver hole on the **part 5 power strip mount**, then secure with two **part W screws**.

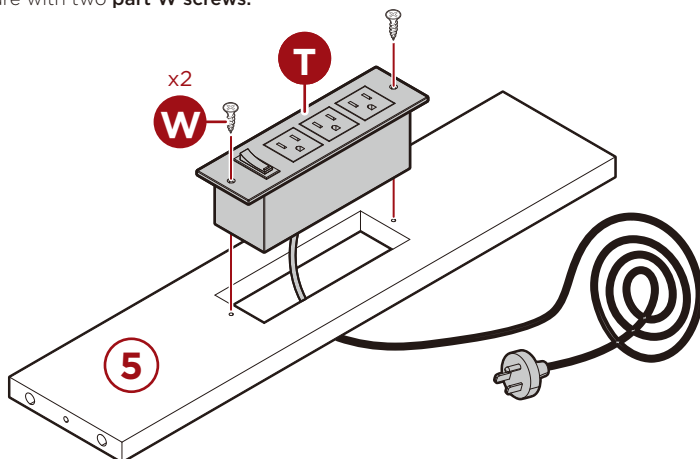

6

  Insert one **part B cam lock** and one **part C dowel** into the **part 4 top back support**, then attach it to the **part 2 island left side assembly**, turn the cam locks to secure.

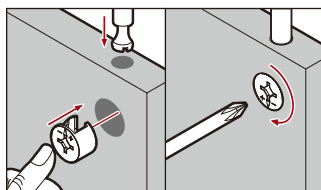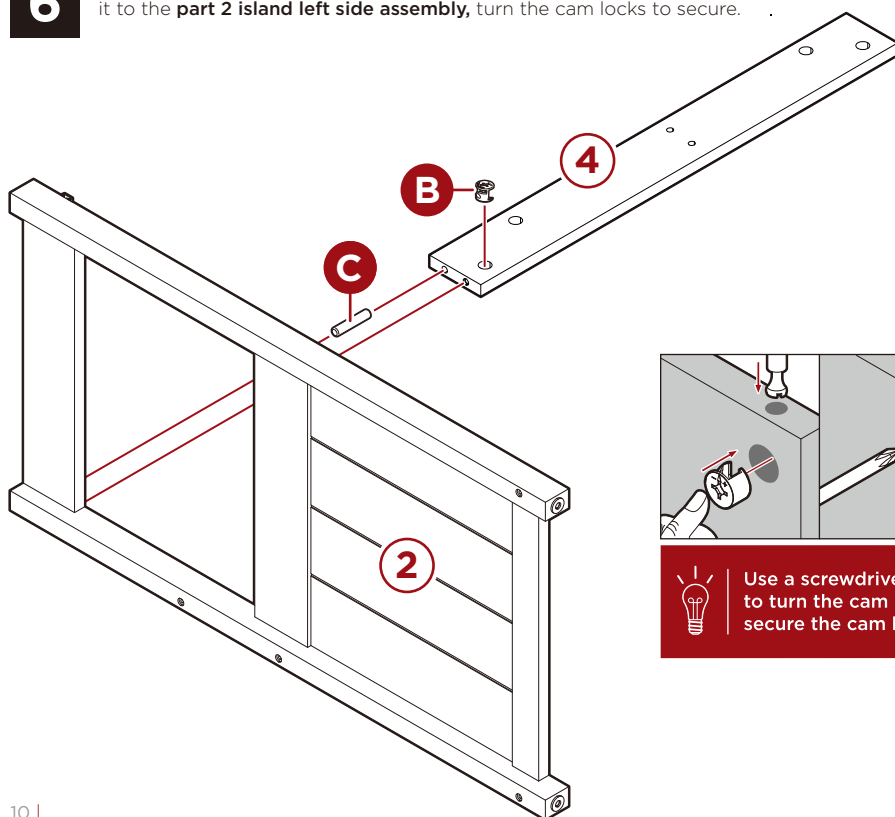


Use a screwdriver to turn the cam lock to secure the cam bolt.

PRODUCT ASSEMBLY

7

Insert one **part C** dowel each into the **part 8** lower back support, and **part 22** lower front support, two dowels total.



 
Insert two **part B** cam locks into the **part 25** lower middle support, then attach it to the **part 8** & **22** lower supports, turn the cam locks to secure.

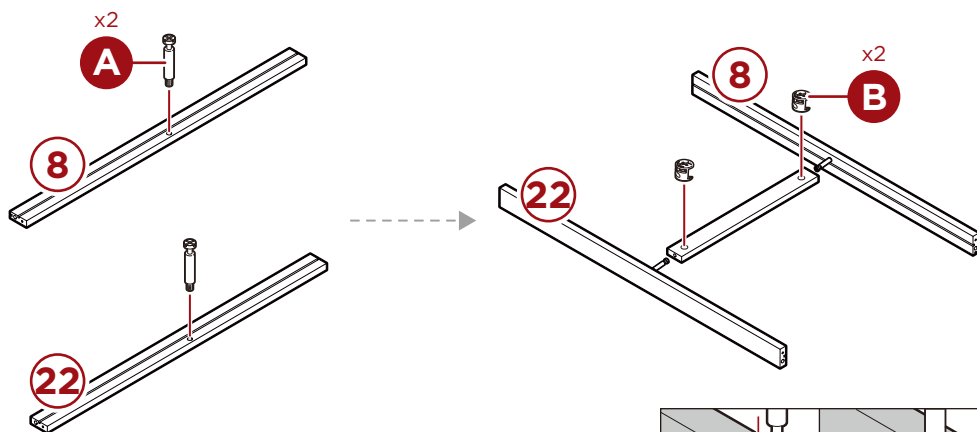

8

Attach the support panels to the **part 2** island left side assembly with three **part M** screws, one screw per support.

  
 
Insert one **part B** cam lock into the **part 24** upper front panel, then attach it to the **part 2** island left side, turn the cam locks to secure.

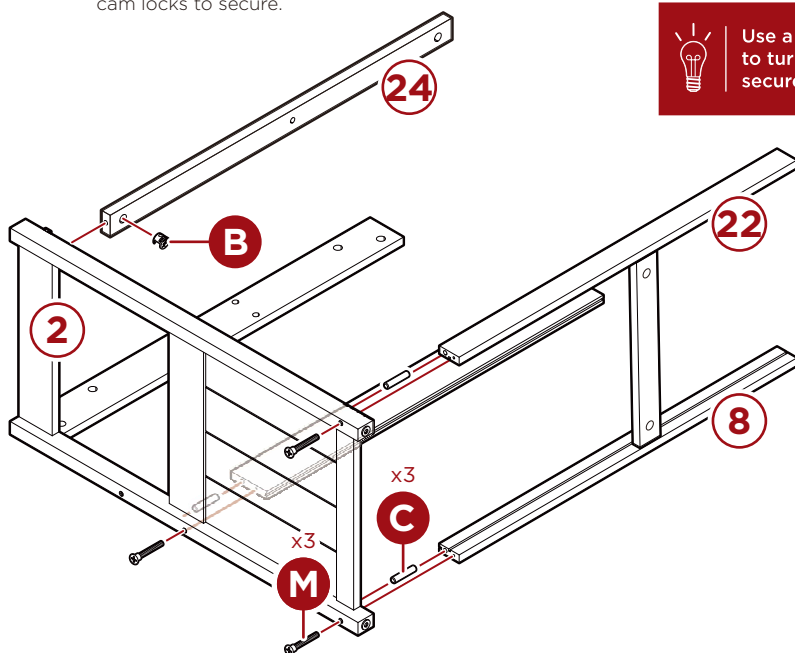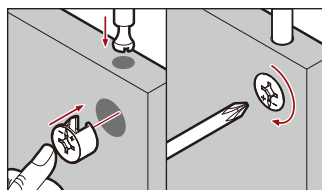

PRODUCT ASSEMBLY

9

  Attach one **part J** magnetic flashing to the **part 9** cabinet top panel with two **part K** screws.

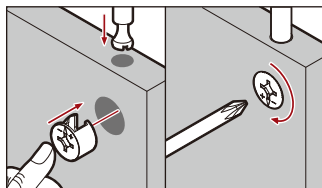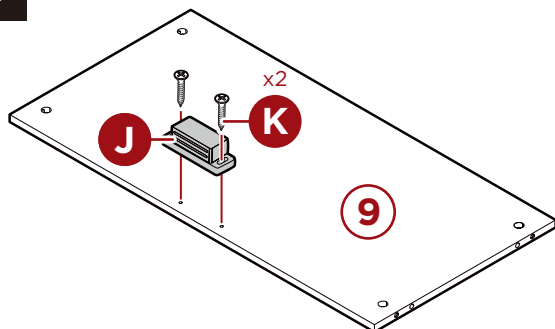


Use a screwdriver to turn the cam lock to secure the cam bolt.

10

Insert two **part C** dowels into the **part 5** power strip mount, then attach it to the **part 2** island left side assembly with one **part M** screw.

 Insert two **part B** cam locks and two **part C** dowels into the **part 9** cabinet top panel, then attach it to the **part 2** island left side assembly, turn the cam locks to secure.

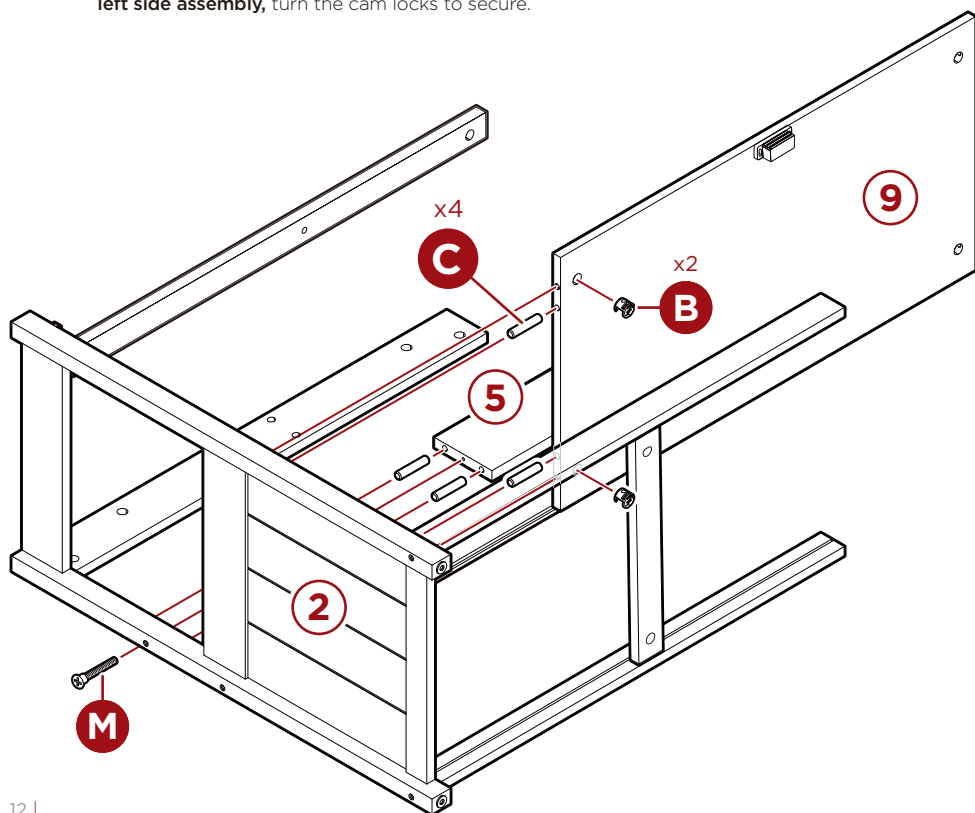


PRODUCT ASSEMBLY

11

Slide the **part 7 back panel** into the grooves between the **part 6** and **8 back supports**.

Slide the **part 10 bottom panel** into the grooves between the **part 8 lower back support** and **part 22 lower front support**.

 
Attach the **part 23 drawer divider** to the **part 4 top back support** and **part 24 upper front panel** with three **part D screws**.

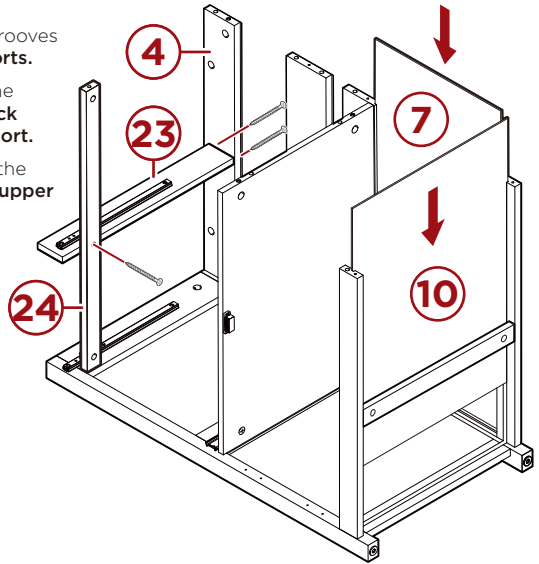

12

Insert two **part C dowels** each into the **part 5 power strip mount** and **part 9 cabinet top panel**, four dowels total.

 Insert one **part C dowel** each into the **part 4 top back support**, **part 6 center back support**, **part 8 lower back support**, and **part 22 lower front support**, four dowels total.

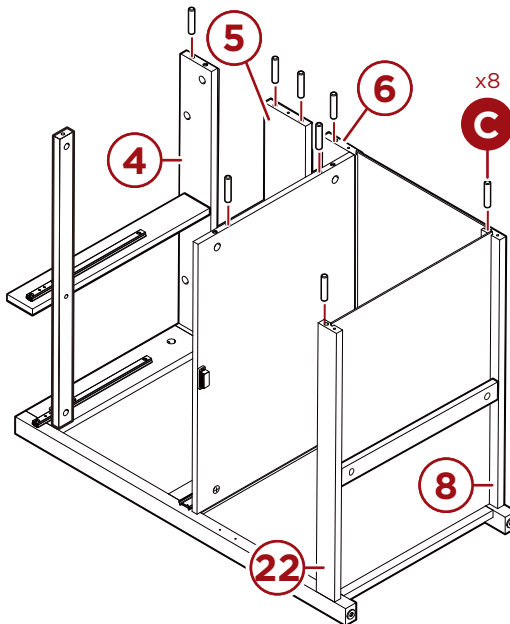


PRODUCT ASSEMBLY

13


Insert two **part B** cam locks into the **part 9** cabinet top panel, then insert one **part B** cam lock each into the **part 4** top back panel and **part 24** upper front panel.

 Attach the **part 3** island right side assembly to the **part 4** top back panel, **part 6** center back support, **part 8** lower back support, **part 5** power strip mount, and **part 11** lower front support with four **part M** screws, then turn the cam locks in **part 4** and **part 9** to secure.

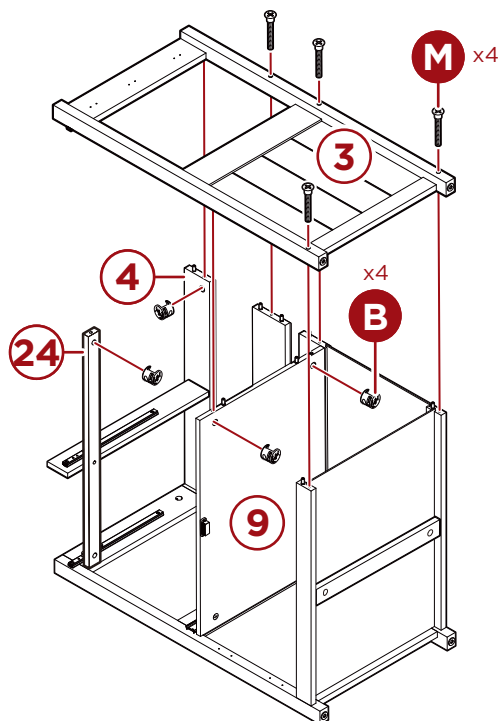

14

 Insert eight **part A** cam bolts into the **part 1** island top.


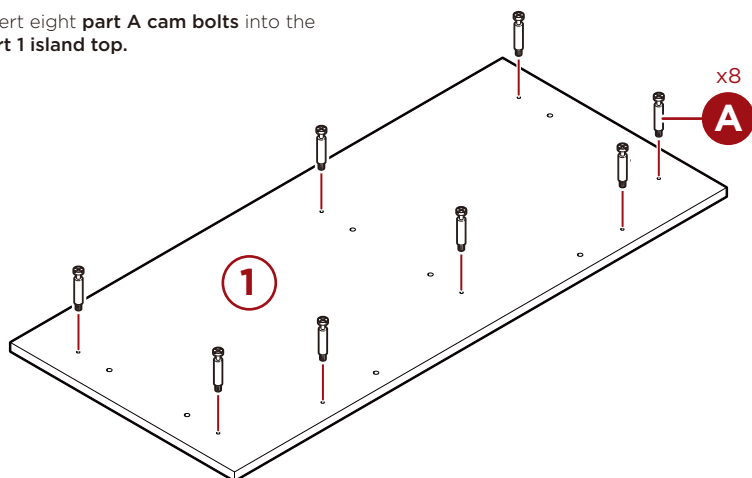


PRODUCT ASSEMBLY

15

Insert two **part B** cam locks and two **part C** dowels each into the **part 2** island left side, **part 3** island right side, **part 4** top back panel, and **part 23** drawer divider, eight locks and dowels total.

  Attach the **part 1** island top, then turn the camlocks to secure.

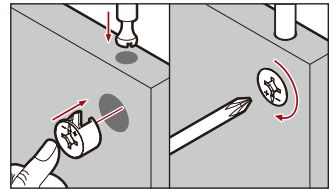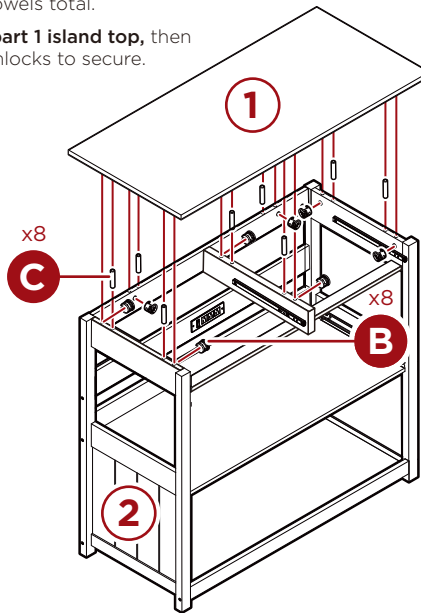


Use a screwdriver to turn the cam lock to secure the cam bolt.

16

Use the included wrench to attach one **part P** locking caster and one **part Q** caster to the bottom of the **part 2** island left side.

Repeat to attach one **part P** locking caster and one **part Q** caster to the bottom of the of the **part 3** island right side.

 NOTE: When installing, make sure the **part P** locking casters installed in perpendicular corners.

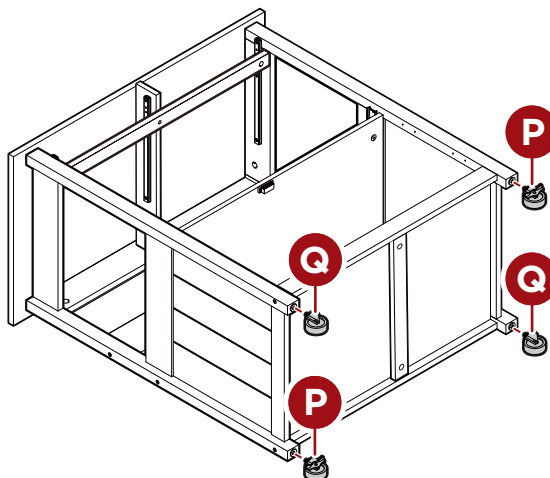


PRODUCT ASSEMBLY

17

Attach two **part G** hinges to the **part 11 left cabinet door** with four **part H** screws, two screws per hinge. Attach the **part I** metal plate to the **part 12 cabinet door** with the included screw, then attach one **part E** handle with two **part F** screws.

 
Repeat to assemble the **part 12 right cabinet door**.

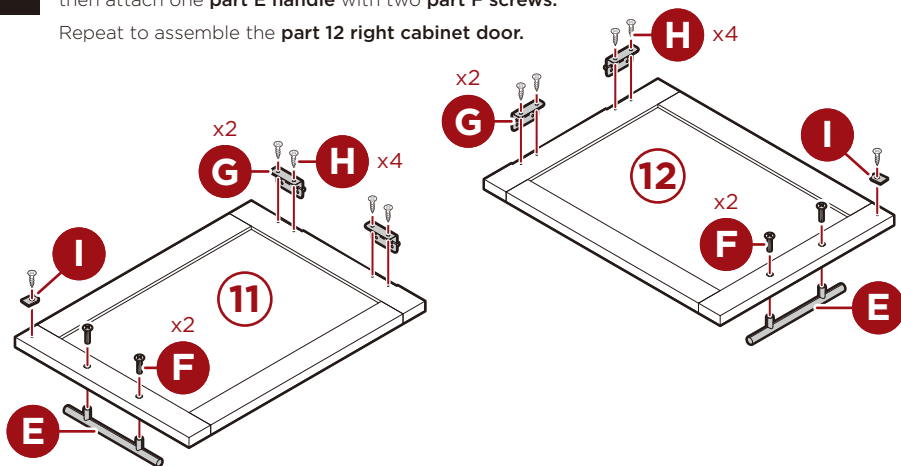

18

Attach the **part 11 left cabinet door** to the **part 2 island left side** by securing the **part G** hinges with four **part H** screws, two screws per hinge.

 Attach the **part 12 cabinet door** to the **part 3 island right side** by securing the **part G** hinges with four **part H** screws, two screws per hinge.

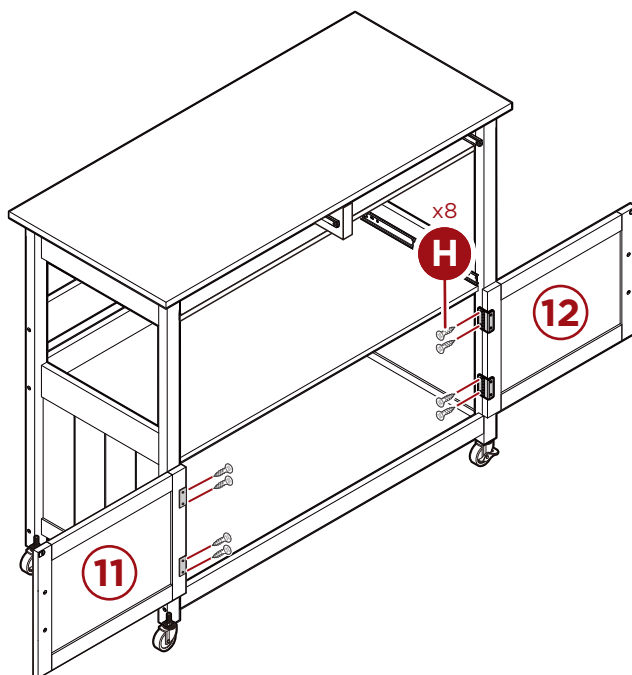


PRODUCT ASSEMBLY

19

Locate the two rail sections of **part N drawer runners** (see step 1) then attach one each to the **part 15 tray left side** and **part 16 tray right side** with four **part H screws**, two screws per side.

 
Insert two **part A cam bolts** into the **part 13 tray front**.

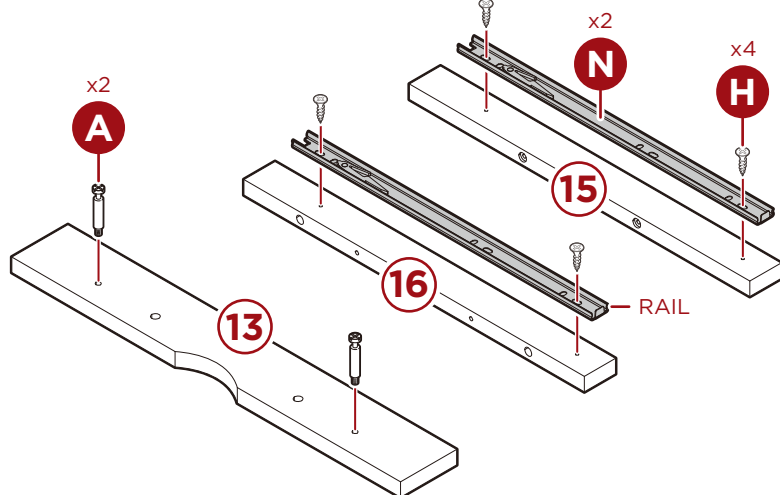


20

Insert two **part C dowels** each into the **part 15 and 16 tray sides**, then attach them to the **part 14 tray support** with four **part D screws**.

 Insert two **part B cam locks** and two **part C dowels** into the **part 14 tray bottom**, then attach the **part 13 tray front**. Turn the cam locks to secure.

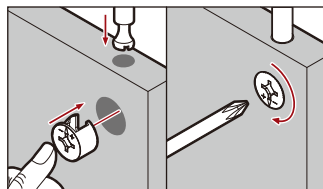

 
Use a screwdriver to turn the cam lock to secure the cam bolt.

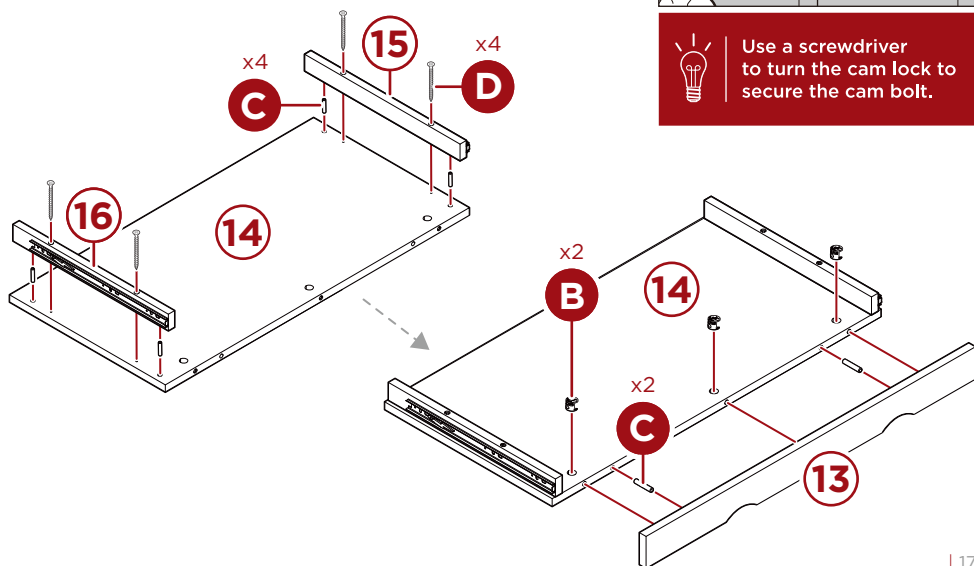

PRODUCT ASSEMBLY

21

 Slide the tray assembly into its designated space along the guide sections of the **part N** drawer runners.

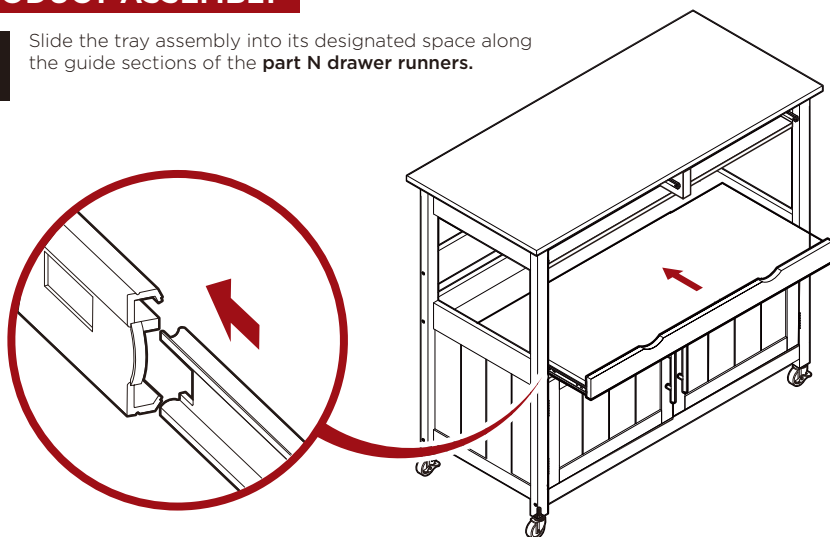


22

Attach one **part E** handle to the **part 17** drawer front with two **part F** screws.

Attach the **part 19** drawer right side to the **part 17** drawer front and **part 20** drawer back with four **part L** screws.

 
Slide the **part 21** drawer bottom between the drawer front and back, then attach the **part 18** drawer left side with four **part L** screws.

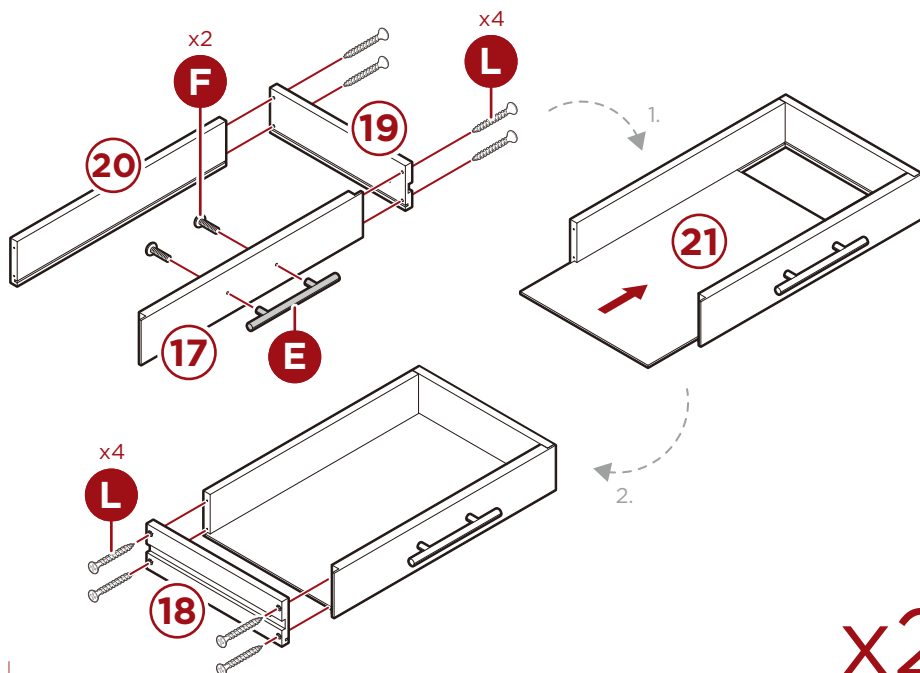

PRODUCT ASSEMBLY


23

 2 PERSON ASSEMBLY: Slide the drawers assembly into its designated space, then insert four **part U** screws on the **part 18** and **19** drawer sides to secure the **part O** drawer runners.

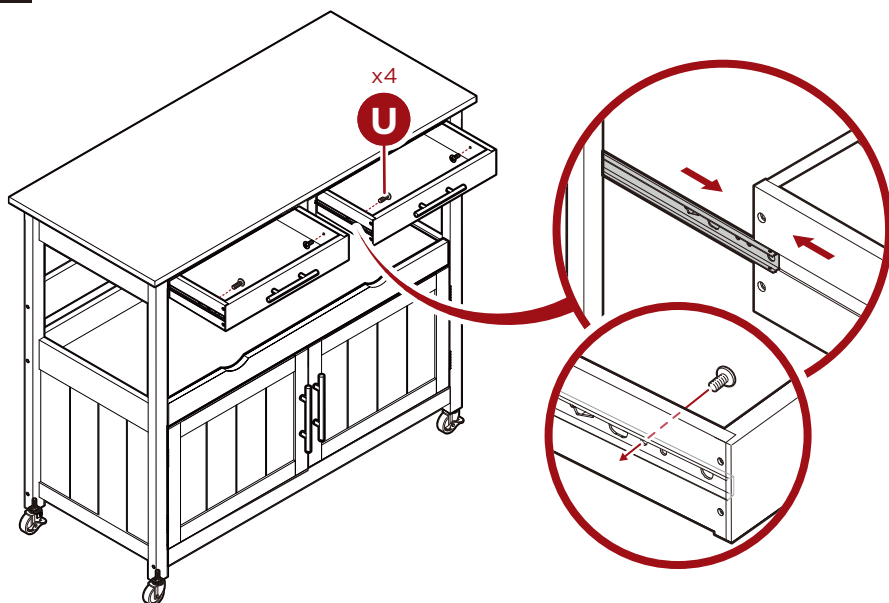

24

 Attach three **part R** side hooks to the **part 3** island right side with six **part S** screws, two screws per hook.

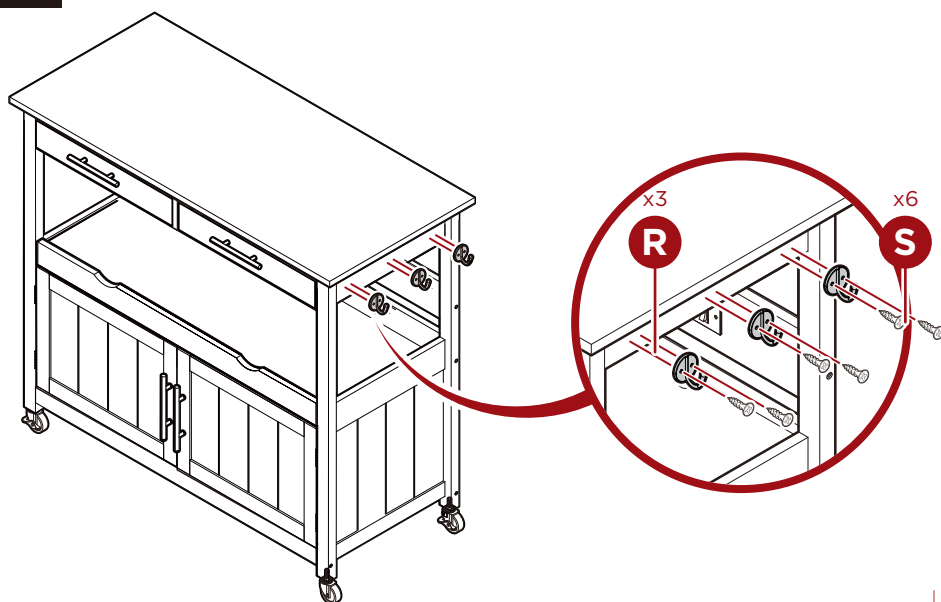



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.