


Securely tightening the battery cap on Aimpoint® Micro™ series sights



If the red dot has disappeared, there might be insufficient contact between the battery and contact surfaces in the battery compartment. Follow the procedure below for securely tightening the battery cap to ensure that the battery has sufficient contact.

PLEASE NOTE: Ensure that a battery (CR2032) is present and correctly positioned with the positive end (+) toward the battery cap before attempting the following procedure! See the user manual for battery installation instructions.

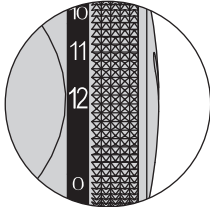


Step 1

Set the rotary switch to the maximum intensity setting (12).

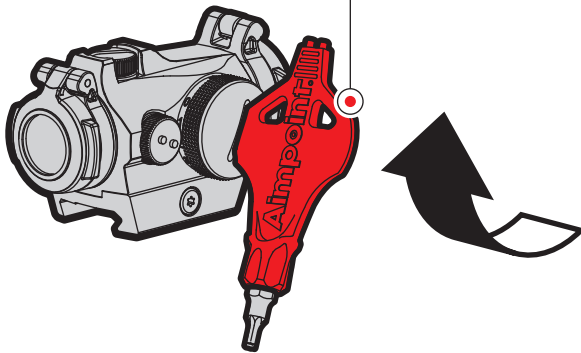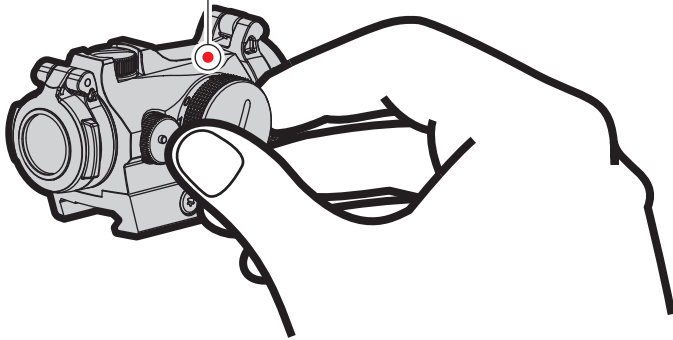


Step 2

Use the Aimpoint® Tool to firmly tighten the battery cap. When resistance is encountered, proceed to tighten until the battery cap comes to a **stop**.

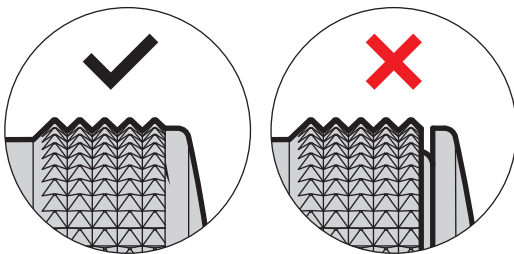

Step 3

Verify that the battery cap is completely closed. It is very important that there is **zero** gap between the battery cap and the battery compartment.

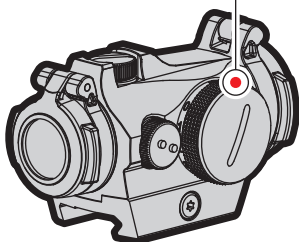

Aimpoint®

THE FUTURE IN SIGHT