

ASSEMBLY INSTRUCTION

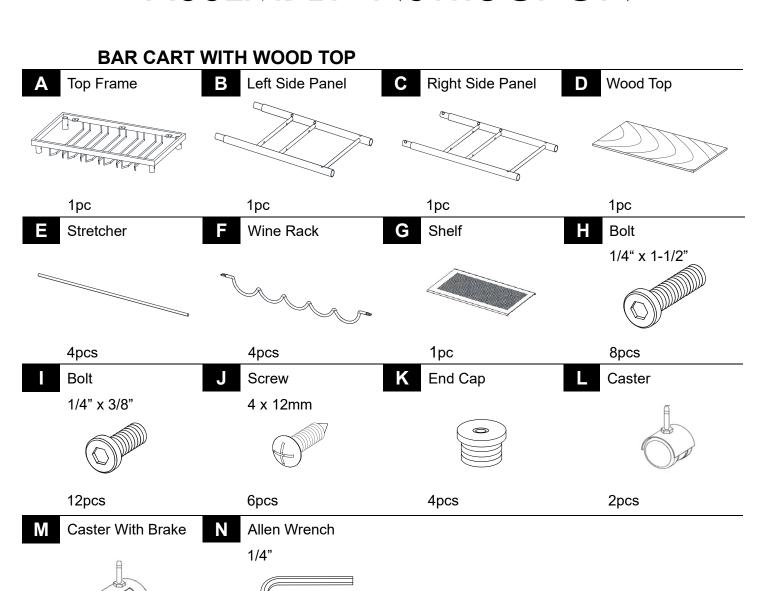

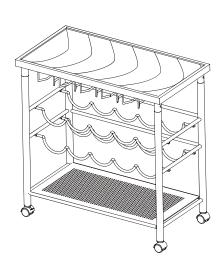


1pc

2pcs


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Attach Top Frame (A) to corresponding holes on the back of Wood Top (D) by using Screw (J) as shown.

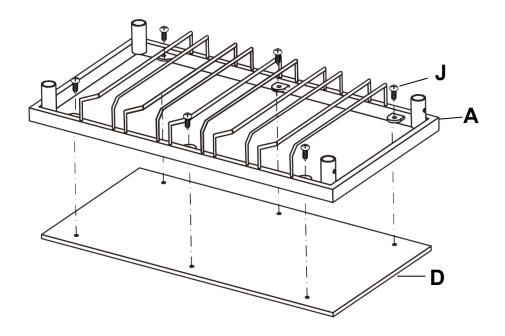


2

Attach Left Side Panel (B), Stretcher (E) and Right Side Panel (C) together by using Bolt (H) and Allen Wrench (N). Attach Top Frame (A) to Left & Right Side Panel (B & C) by using Bolt (I) and Allen Wrench (N) as shown.

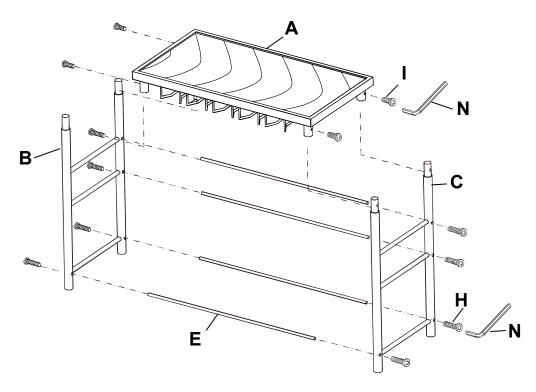


Attach Wine Rack (F) to Left & Right Side Panel (B & C) by using Bolt (I) and Allen Wrench (N), then attach End Cap (K) to the bottom of Left & Right Side Panel (B & C).

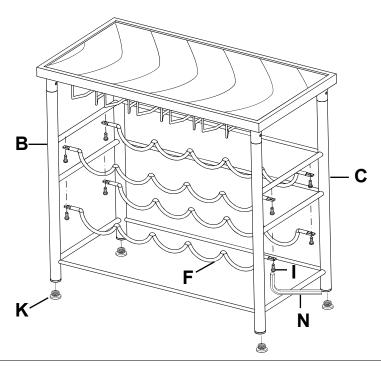

4

Put Shelf (G) on the bottom frame, then attach Caster (L) and Caster With Brake (M) to the bottom of Left & Right Side Panel (B & C) as shown.

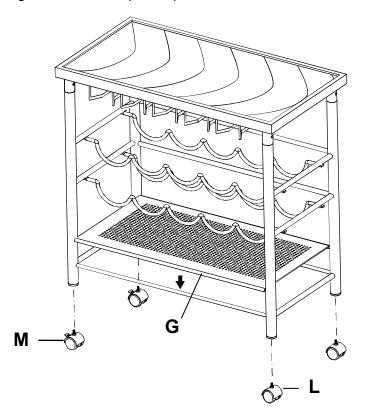

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.