



GE APPLIANCES

Single-Zone Ductless Multi-Split Heat Pumps



Model Lineup:

Outdoor Models

Appearances vary by model



**1G09AD2BEA
1G12AD2BEA**



**1G15AD2BEA
1G18AD2BEA**



**1G24AD2BEA
1G3036AD2BEA**

Indoor Models

Appearances vary by model



Wall Mount - Highwall

**GS09WB2BEA
GS12WB2BEA
GS18WB2BEA
GS24WB2BEA
GS30WB2BEA
GS36WB2BEA**



4-Way Cassette

**US09CB2BEA
US12CB2BEA
US18CB2BEA
US24LB2BEA
US30LB2BEA
US36LB2BEA**



One-Way Cassette

**US09AB2BEA
US12AB2BEA
US18AB2BEA**



Mid-Static Ducted

**US09MB2BEA
US12MB2BEA
US18MB2BEA
US24MB2BEA
US30MB2BEA
US36MB2BEA**



Console

**US09FB2BEA
US12FB2BEA
US18FB2BEA**

Before troubleshooting or servicing equipment, review equipment installation guides and confirm ALL installation requirements & specifications have been met. Including, but not limited to: wiring, clearance, ducting (where applicable), power, and line set requirements. Correct any installation issues before continuing.



GE APPLIANCES
a Haier company

AIR&WATER
SOLUTIONS



TABLE OF CONTENTS

Introduction.....	A1
Outdoor Units	B1
Highwalls	C1
4-Way Cassettes.....	D1
One-Way Cassettes	E1
Console.....	F1
Mid-Static Ducted.....	G1
Troubleshooting And Reference	H1

10-16-25: *Edition release.*

04-26: *One-way cassettes added. Troubleshooting fault code updates.*

TABLE OF CONTENTS

SAFETY & PRECAUTIONS	A2
SPECIFICATIONS	A3
Highwall Indoor	A3
Cassette Indoor	A4
Console Indoor	A6
Ducted Indoor	A7
OVERVIEW	A8
Introduction to System	A8
Specifications for Proper Operation	A8
System Fundamentals	A8
System Power	A8
FUNCTIONS AND CONTROL	A9
Cooling Operation Mode	A9
Heating Operation Mode	A10
Auto Mode	A11
Dry Mode	A11
Defrost Operation	A12
Protection Functions	A12
Special Functions	A13



FOLLOW ALL WARNINGS, CAUTIONS, AND PRECAUTIONS BELOW, AND INDUSTRY BEST SAFETY PRACTICES AND STANDARDS. FAILURE TO DO SO MAY RESULT IN EQUIPMENT DAMAGE OR FAILURE, AND SERIOUS PERSONAL INJURY OR DEATH.

WARNINGS

Service should be performed by the dealer or another professional.

Improper service may cause water leakage, electrical shock, or fire.

Use only the supplied or specified service parts.

Use of other parts may cause the unit to come loose, water leakage, electrical shock, or fire.

The heat pump must be installed on a solid base that can support the unit's weight.

An inadequate base or incomplete installation may cause injury in the event the unit falls off the base.

Electrical work should be carried out in accordance with the manual and national/local electrical wiring codes and rules of practice.

Insufficient capacity or incomplete electrical work may cause electrical shock or fire.

A dedicated power circuit must be used. The power supply should NEVER be shared by another appliance.

Wiring cable must be long enough to cover the entire distance with no splices.

Do not use an extension cord. Do not put other loads on the power supply, use a dedicated power circuit.

Failure to do so may cause abnormal heat, electric shock or fire.

Only the specified wire types may be used for electrical connections between the indoor and outdoor units.

Firmly clamp the interconnecting wires so they receive no external stresses. Incomplete connections or clamping may cause terminal overheating or fire.

Wiring must not put undue stress or tension on the electrical covers or panels.

Install covers over the wires. Incomplete cover installation may cause terminal overheating, electrical shock, or fire.

If any refrigerant has leaked out during service work, ventilate the room.

The refrigerant produces a toxic gas if exposed to flame.

After all service is complete, check for and repair any system refrigerant leaks.

The refrigerant produces a toxic gas if exposed to flames.

When servicing or relocating the system, keep the refrigerant circuit free from substances other than the specified refrigerant (R454B), such as air or moisture

The presence of air or other foreign substance in the refrigerant circuit causes an abnormal pressure rise or rupture, resulting in injury.

During pump-down, stop the compressor before removing the refrigerant piping.

If the compressor is still running, and the stop valve is open during pump-down, air will be sucked into the system while the compressor is running. This will cause abnormal pressure and noncondensables added to the system.

Unit must NOT be grounded to a utility pipe, arrester, or telephone line ground.

An complete ground may cause electrical shock, or fire. A high surge current from lightning or other sources may cause damage to the heat pump.

CAUTIONS

The heat pump must not be installed in a place where there is danger of exposure to flammable gas.

If the gas builds up around the unit, it may catch fire.

Drain piping must comply with installation guidelines.

Inadequate piping may cause flooding.

Tighten flare nuts according to the specified torque using a torque wrench.

If flare nuts are overtightened, they may eventually crack and cause refrigerant leakage.

Ensure proper clearances around unit per installation guidelines.

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.



	Outdoor Unit	1G09AD2BEA	1G12AD2BEA	1G15AD2BEA	1G18AD2BEA	1G24AD2BEA	1G3036AD2BEA	1G3036AD2BEA
	Indoor Unit	GS09WB2BEA	GS12WB2BEA	GS15WB2BEA	GS18WB2BEA	GS24WB2BEA	GS30WB2BEA	GS36WB2BEA
Cooling	Rated Capacity Btu/hr	9,000	11,800	13,500	17,000	24,000	28,400	32,400
	Capacity Range Btu/hr	3,100-11,000	3,400-13,000	4,000-16,000	4,500-19,000	4,500-26,000	6,000-31,000	6,000-33,500
	SEER2	23	21	21	20	18	18	18
	EER2	12	12	11.7	12	12	12	9.8
	Moisture Removal Pt./hr	2.6	2.7	3.2	3.6	4.9	5.2	7.3
Heating	Rated Heating Capacity 47°F Btu/hr	10,000	13,000	17,000	19,000	24,000	31,000	36,000
	Heating Capacity Range Btu/hr	3,100-11,000	3,200-14,000	3,500-18,000	4,000-20,000	4,000-26,000	6,500-32,500	6,500-37,000
	HSPF2 (IV)	9.5	9.5	9.5	9.5	9.5	9.5	9.5
	Rated Heating Capacity 5°F Btu/hr	8,000	10,400	13,600	15,200	19,200	26,000	24,000
	Heating Capacity at 5°F / Capacity at 47°F	80%	80%	80%	80%	80%	84%	67%
Operating Range	COP 5°F	1.8	1.8	1.8	1.8	1.8	1.8	1.8
	Cooling (Without Wind Baffle or Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle or Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
Power Supply	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Fuse Size A	10	10	20	20	30	35	35
Outdoor Unit	Minimum Circuit Amp A	9	9	14	15	20	25	25
	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	55	55	58	58	61	64	64
Indoor Unit	Dimension: H x W x D in (mm)	21 3/4 x 34 x 11 (553 x 863 x 280)	21 3/4 x 34 x 11 (553 x 863 x 280)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)
	Weight (Net/Ship) - lbs (kg)	70.17/82.96 (31.8/37.6)	70.17/82.96 (31.8/37.6)	88.15/100.4 (39.95/45.5)	90.47/103.26 (41/46.8)	121.36/147.84 (55/67)	147.84/166.59 (67/75.5)	147.84/166.59 (67/75.5)
	Basepan Heater	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto	5 + Auto	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	360/290/260/230/210	360/300/272/240/210	410/370/280/210/170	570/520/480/420/330	800/730/630/535/440	800/725/650/510/430	840/765/690/550/470
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	350/290/250/220/200	350/290/260/230/200	420/390/350/310/180	570/520/450/380/310	800/730/630/535/440	800/725/650/510/430	840/765/690/550/470
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	44/38/35/32/27	44/39/36/33/27	46/45/40/33/26	50/46/44/40/35	54/50/47/44/38	55/53/49/44/40	56/54/50/44/40
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	42/36/32/28/26	42/36/32/29/25	44/43/40/37/23	48/46/41/38/33	54/50/47/44/38	55/53/49/44/40	56/54/50/44/40
	Auto Up-Down Louver	Yes	Yes	Yes	Yes	Yes	Yes	Yes
	Auto Left-Right Louver	No	No	No	No	No	No	No
	Drain Pipe Size O.D in	5/8	5/8	5/8	5/8	5/8	5/8	5/8
	Dimension: H x W x D in (mm)	11 7/8 x 34 1/4 x 7 3/4 (301 x 870 x 196)	11 7/8 x 34 1/4 x 7 3/4 (301 x 870 x 196)	12 1/4 x 36 1/8 x 8 3/8 (312 x 918 x 213)	12 7/8 x 39 3/8 x 8 3/4 (327 x 999 x 223)	13 1/2 x 44 1/2 x 9 1/8 (343 x 1129 x 232)	14 3/8 x 52 3/4 x 10 3/4 (365 x 1341 x 274)	14 3/8 x 52 3/4 x 10 3/4 (365 x 1341 x 274)
	Weight (Net/Ship) - lbs (kg)	21.84/26.92 (9.9/12.2)	21.84/26.92 (9.9/12.2)	24.49/30.45 (11.1/13.8)	27.8/34.64 (12.6/15.7)	34.86/43.03 (15.8/19.5)	46.34/56.27 (21/25.5)	46.34/56.27 (21/25.5)
Refrigerant Lines	Factory-Installed Refrigerant Detection Sensor (RDS)	No	No	No	No	No	No	No
	Refrigerant Detection Sensor (RDS) Compatible	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)
	WiFi*	Built-in	Built-in	Built-in	Built-in	Built-in	Built-in	Built-in
	Refrigerant	R454B	R454B	R454B	R454B	R454B	R454B	R454B
	Connections	Flare	Flare	Flare	Flare	Flare	Flare	Flare
	Liquid O.D. in	1/4	1/4	1/4	1/4	1/4	3/8	3/8
Refrigerant Lines	Suction O.D. in	3/8	3/8	3/8	1/2	1/2	5/8	5/8
	Factory Charge Oz	36.5	36.5	50.09	45.9	67.0	88.2	88.2
	Maximum Line Length Ft / m	66/20	66/20	66/20	83/25	165/50	165/50	165/50
	Maximum Height Ft / m	33/10	33/10	33/10	50/15	100/30	100/30	100/30

*WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

INTRODUCTION

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.



	Outdoor Unit	1G09AD2BEA	1G12AD2BEA	1G18AD2BEA
	Indoor Unit	US09CB2BEA	US12CB2BEA	US18CB2BEA
	Panel (required, sold separately)	QACCP01WA	QACCP01WA	QACCP01WA
Cooling	Rated Capacity Btu/hr	9,000	12,000	16,000
	Capacity Range Btu/hr	3,100-11,000	3,400-13,000	4,500-17,000
	SEER2	20	19.8	18.5
	EER2	12.2	12	11.7
	Moisture Removal Pt./hr	2.5	3.2	3.8
Heating	Rated Heating Capacity 47°F Btu/hr	10,000	12,500	18,000
	Heating Capacity Range Btu/hr	3,100-11,000	3,200-14,000	4,000-20,000
	HSPF2 (IV)	9.5	9.5	9.1
	Rated Heating Capacity 5°F Btu/hr	7,500	9,000	14,400
	Heating Capacity at 5°F / Capacity at 47°F	77%	73%	80%
	COP 5°F	1.8	1.8	1.8
Operating Range	Cooling (Without Wind Baffle or Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle or Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
Power Supply	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Fuse Size A	10	10	20
	Minimum Circuit Amp A	9	9	15
Outdoor Unit	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	55	55	58
	Dimension: H x W x D in (mm)	21 3/4 x 34 x 11 (553 x 863 x 280)	21 3/4 x 34 x 11 (553 x 863 x 280)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)
	Weight (Net/Ship) - lbs (kg)	70.17/82.96 (31.8/37.6)	70.17/82.96 (31.8/37.6)	90.47/103.26 (41/46.8)
	Basepan Heater	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	440/387/351/320/290	440/387/351/320/290	458/425/387/345/302
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	440/387/351/320/290	440/387/351/320/290	479/441/387/345/302
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	41/39/34/31/23	44/43/40/34/31	45/40/35/30/29
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	41/39/34/30/23	43/41/39/33/30	44/40/35/30/28
	Auto Up-Down Louver	Yes	Yes	Yes
	Auto Left-Right Louver	No	No	No
	Dimension: H x W x D in (mm)	10 1/4 x 22 3/4 x 22 3/4 (260 x 575 x 575)	10 1/4 x 22 3/4 x 22 3/4 (260 x 575 x 575)	10 1/4 x 22 3/4 x 22 3/4 (260 x 575 x 575)
	Weight (Net/Ship) - lbs (kg)	32.41/47.4 (14.7/21.5)	32.41/47.4 (14.7/21.5)	32.41/47.4 (14.7/21.5)
	Drain Pipe Size O.D in	1*	1*	1*
	Condensate Pump	Built-In	Built-In	Built-In
	Max. Drain-Lift Height in (mm)	47 1/4 (1200)	47 1/4 (1200)	47 1/4 (1200)
	Factory-Installed Refrigerant Detection Sensor (RDS)	No	No	No
	Refrigerant Detection Sensor (RDS) Compatible	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)
	WiFi**	Built-in	Built-in	Built-in
Refrigerant Lines	Refrigerant	R454B	R454B	R454B
	Connections	Flare	Flare	Flare
	Liquid O.D. in	1/4	1/4	1/4
	Suction O.D. in	3/8	3/8	1/2
	Factory Charge Oz	36.5	36.5	45.9
	Maximum Line Length Ft / m	66/20	66/20	83/25
	Maximum Height Ft / m	33/10	33/10	50/15

*Condensate drain adapter shipped with the indoor unit is designed to accept a 3/4" PVC pipe.

**WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.



Outdoor Unit		1G24AD2BEA	1G3036AD2BEA	1G3036AD2BEA
Indoor Unit		US24LB2BEA	US30LB2BEA	US36LB2BEA
Panel (required, sold separately)		QALCP01WA	QALCP01WA	QALCP01WA
Cooling	Rated Capacity Btu/hr	23,000	30,000	33,800
	Capacity Range Btu/hr	4,500-25,000	6,000-31,000	6,000-34,000
	SEER2	19.5	19	18.8
	EER2	11.7	11.2	10.6
	Moisture Removal Pt./hr	6.9	9.8	9.8
Heating	Rated Heating Capacity 47°F Btu/hr	25,000	30,000	35,000
	Heating Capacity Range Btu/hr	4,000-25,000	6,500-32,000	6,500-36,000
	HSPF2 (IV)	9.5	10	9.3
	Rated Heating Capacity 5°F Btu/hr	20,000	24,000	26,000
	Heating Capacity at 5°F / Capacity at 47°F	80%	86%	74%
COP 5°F		1.8	1.8	1.8
Operating Range	Cooling (Without Wind Baffle or Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle or Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
Power Supply	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Fuse Size A	30	35	35
	Minimum Circuit Amp A	20	25	25
Outdoor Unit	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	61	64	64
	Dimension: H x W x D in (mm)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)
	Weight (Net/Ship) - lbs (kg)	121.36/147.84 (55/67)	147.84/166.59 (67/75.5)	147.84/166.59 (67/75.5)
	Basepan Heater	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	1033/873/858/640/400	1247/1200/1033/873/650	1247/1200/1033/873/650
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	1033/873/858/640/400	1247/1200/1033/873/650	1247/1200/1033/873/650
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	49/47/45/39/35	58/56/51/46/44	59/57/52/47/45
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	48/47/45/38/34	57/55/50/45/43	58/56/51/46/44
	Auto Up-Down Louver	Yes	Yes	Yes
	Auto Left-Right Louver	No	No	No
	Dimension: H x W x D in (mm)	9 3/4 x 33 x 33 (248 x 840 x 840)	9 3/4 x 33 x 33 (248 x 840 x 840)	9 3/4 x 33 x 33 (248 x 840 x 840)
	Weight (Net/Ship) - lbs (kg)	56.22/85.32 (25.5/38.7)	56.22/85.32 (25.5/38.7)	56.22/85.32 (25.5/38.7)
	Drain Pipe Size O.D. in	1*	1*	1*
	Condensate Pump	Built-In	Built-In	Built-In
	Max. Drain-Lift Height in (mm)	39 3/8 (1000)	39 3/8 (1000)	39 3/8 (1000)
	Factory-Installed Refrigerant Detection Sensor (RDS)	No	No	No
	Refrigerant Detection Sensor (RDS) Compatible	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)
	WiFi**	Built-in	Built-in	Built-in
Refrigerant Lines	Refrigerant	R454B	R454B	R454B
	Connections	Flare	Flare	Flare
	Liquid O.D. in	3/8 (use 1/4" to 3/8" adapter shipped with outdoor unit)	3/8	3/8
	Suction O.D. in	5/8 (use 1/2" to 5/8" adapter shipped with outdoor unit)	3/4 (use 5/8" to 3/4" adapter shipped with outdoor unit)	3/4 (use 5/8" to 3/4" adapter shipped with outdoor unit)
	Factory Charge Oz	67.0	88.2	88.2
	Maximum Line Length Ft / m	165/50	165/50	165/50
	Maximum Height Ft / m	100/30	100/30	100/30

*Condensate drain adapter shipped with the indoor unit is designed to accept a 3/4" PVC pipe.

**WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

INTRODUCTION

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.



	Outdoor Unit	1G09AD2BEA	1G12AD2BEA	1G18AD2BEA
	Indoor Unit	US09AB2BEA	US12AB2BEA	US18AB2BEA
	Panel (required, sold separately)	GAABP0718A	GAABP0718A	GAABP0718A
Cooling	Rated Capacity Btu/hr	9,000	12,000	17,000
	Capacity Range Btu/hr	3,900-9,000	3,800-12,000	4,600-17,000
	SEER2	23	23	19
	EER2	14	12.4	11.2
	Moisture Removal Pt./hr	2	2.5	4
Heating	Rated Heating Capacity 47°F Btu/hr	10,000	12,500	18,000
	Heating Capacity Range Btu/hr	2,800-10,000	2,800-12,500	6,400-18,000
	HSPF2 (IV)	10.6	10.2	9.5
	Rated Heating Capacity 5°F Btu/hr	9,000	10,500	15,000
	Heating Capacity at 5°F / Capacity at 47°F	90%	84%	83%
	COP 5°F	1.8	1.8	1.8
Operating Range	Cooling (Without Wind Baffle and Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle and Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
Power Supply	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Over-Current Protection (MOP) A	15	15	20
	Minimum Circuit Amp A	9	9	15
	Recommended Breaker Size	15	15	15
Outdoor Unit	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	55	55	58
	Dimension: H x W x D in (mm)	21 3/4 x 34 x 11 (553 x 863 x 280)	21 3/4 x 34 x 11 (553 x 863 x 280)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)
	Weight (Net/Ship) - lbs (kg)	70.17/82.96 (31.8/37.6)	70.17/82.96 (31.8/37.6)	90.47/103.26 (41/46.8)
	Basepan Heater	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	365/325/285/245/205	375/335/295/255/215	415/370/330/290/250
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	385/345/310/280/240	415/400/360/320/280	440/420/390/355/315
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	40/39/36/32/28	40/39/36/33/29	45/43/40/37/34
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	42/39/37/35/30	42/39/37/36/32	46/44/43/40/37
	Auto Up-Down Louver	Yes	Yes	Yes
	Auto Left-Right Louver	Yes	Yes	Yes
	Dimension: H x W x D in (mm)	7 1/4 x 50 1/4 x 13 1/4 (185 x 1277 x 335)	7 1/4 x 50 1/4 x 13 1/4 (185 x 1277 x 335)	7 1/4 x 50 1/4 x 13 1/4 (185 x 1277 x 335)
	Weight (Net/Ship) - lbs (kg)	41.4/76.7 (18.8/34.8)	42.1/78.9 (19.1/35.8)	42.1/78.9 (19.1/35.8)
	Drain Pipe Size O.D in	1*	1*	1*
	Condensate Pump	Built-In	Built-In	Built-In
	Max. Drain-Lift Height in (mm)	47 1/4 (1200)	47 1/4 (1200)	47 1/4 (1200)
	Factory-Installed Refrigerant Detection Sensor (RDS)	No	No	No
	Refrigerant Detection Sensor (RDS) Compatible	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)	Yes (UALS01A, sold separately)
Refrigerant Lines	WiFi**	Built-In	Built-In	Built-In
	Refrigerant	R454B	R454B	R454B
	Connections	Flare	Flare	Flare
	Liquid O.D. in	1/4	1/4	1/4
	Suction O.D. in	3/8	3/8	1/2
	Factory Charge Oz	36.5	36.5	45.9
	Maximum Line Length Ft / m	66/20	66/20	83/25
	Maximum Height Ft / m	33/10	33/10	50/15

*Condensate drain adapter shipped with the indoor unit is designed to accept a 3/4" PVC pipe.

**WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.



	Outdoor Unit	1G09AD2BEA	1G12AD2BEA	1G18AD2BEA
	Indoor Unit	US09FB2BEA	US12FB2BEA	US18FB2BEA
Cooling	Rated Capacity Btu/hr	9,000	12,000	16,000
	Capacity Range Btu/hr	3,100-11,000	3,400-13,000	4,300-18,000
	SEER2	20	19	17
	EER2	12	9.5	8.6
	Moisture Removal Pt./hr	2.16	3.4	3.8
Heating	Rated Heating Capacity 47°F Btu/hr	10,000	12,500	17,000
	Heating Capacity Range Btu/hr	3,100-11,000	3,200-13,000	3,600-15,000
	HSPF2 (IV)	9.5	9.2	7.8
	Rated Heating Capacity 5°F Btu/hr	8,500	9,500	12,600
	Heating Capacity at 5°F / Capacity at 47°F	91%	71%	75%
	COP 5°F	1.8	1.8	1.75
Operating Range	Cooling (Without Wind Baffle or Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle or Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
Power Supply	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Fuse Size A	10	10	20
	Minimum Circuit Amp A	9	9	15
Outdoor Unit	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	55	55	58
	Dimension: H x W x D in (mm)	21 3/4 x 34 x 11 (553 x 863 x 280)	21 3/4 x 34 x 11 (553 x 863 x 280)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)
	Weight (Net/Ship) - lbs (kg)	70.17/82.96 (31.8/37.6)	70.17/82.96 (31.8/37.6)	90.47/103.26 (41/46.8)
	Basepan Heater	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	290/218/205/176/147	314/226/210/195/175	345/300/280/218/210
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	312/206/205/176/147	311/223/200/195/175	328/296/263/206/200
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	44/40/36/32/28	48/41/37/33/30	49/44/43/38/35
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	44/38/33/28/26	48/41/37/33/30	49/43/42/37/35
	Auto Up-Down Louver	Yes	Yes	Yes
	Auto Left-Right Louver	No	No	No
	Drain Pipe Size O.D in	5/8	5/8	5/8
	Dimension: H x W x D in (mm)	23 5/8 x 27 1/2 x 8 3/4 (600 x 700 x 220)	23 5/8 x 27 1/2 x 8 3/4 (600 x 700 x 220)	23 5/8 x 27 1/2 x 8 3/4 (600 x 700 x 220)
	Weight (Net/Ship) - lbs (kg)	32.6/43.2 (14.8/19.6)	32.6/43.2 (14.8/19.6)	32.6/43.2 (14.8/19.6)
	Factory-Installed Refrigerant Detection Sensor (RDS)	Yes	Yes	Yes
	WiFi*	Built-in	Built-in	Built-in
Refrigerant Lines	Refrigerant	R454B	R454B	R454B
	Connections	Flare	Flare	Flare
	Liquid O.D. in	1/4	1/4	1/4
	Suction O.D. in	3/8	3/8	1/2
	Factory Charge Oz	36.5	36.5	45.9
	Maximum Line Length Ft / m	66/20	66/20	83/25
	Maximum Height Ft / m	33/10	33/10	50/15


*WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

INTRODUCTION

SPECIFICATIONS

NOTE

Our continued commitment to quality products may mean a change in specifications without notice.
Visit GEAppliancesAirandWater.com to access current specification tables online.

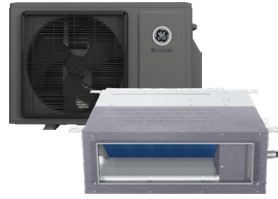

Outdoor Unit		1G09AD2BEA	1G12AD2BEA	1G18AD2BEA	1G24AD2BEA	1G3036AD2BEA	1G3036AD2BEA
Indoor Unit		US09MB2BEA	US12MB2BEA	US18MB2BEA	US24MB2BEA	US30MB2BEA	US36MB2BEA
Cooling	Rated Capacity Btu/hr	9,000	12,000	17,000	24,000	30,000	33,000
	Capacity Range Btu/hr	3,100-11,000	3,400-13,000	4,500-19,000	4,500-26,000	6,000-31,000	6,000-33,500
	SEER2	17.8	17	17.3	18	17	16
	EER2	11.7	10.3	10.8	10	10.3	9.5
	Moisture Removal Pt./hr	2.5	2.7	3.6	4.9	5.2	8
Heating	Rated Heating Capacity 47°F Btu/hr	10,000	13,000	19,000	24,800	32,000	36,000
	Heating Capacity Range Btu/hr	3,100-11,000	3,200-14,000	4,000-20,000	4,000-26,000	6,500-32,500	6,500-37,000
	HSPF2 (IV)	9.4	9.4	9	9.4	9.4	9
	Rated Heating Capacity 5°F Btu/hr	8,000	9,100	15,200	20,000	25,000	25,200
	Heating Capacity at 5°F / Capacity at 47°F	77%	70%	79%	81%	79%	70%
	COP 5°F	1.8	1.8	1.8	1.8	1.8	1.8
Operating Range	Cooling (Without Wind Baffle or Top Cover)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)	23~115°F (-5~46°C)
	Cooling (With Wind Baffle or Top Cover)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)	-40~115°F (-40~46°C)
	Heating	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)	-15~75°F (-26~24°C)
Power Supply	Voltage, Cycle, Phase (V/Hz/-)	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1	208-230/60/1
	Maximum Fuse Size A	10	10	20	30	35	35
	Minimum Circuit Amp A	9	9	15	20	25	25
Outdoor Unit	Compressor Type	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary	DC Inverter Rotary
	Outdoor Noise Level dB	55	55	58	61	64	64
	Dimension: H x W x D in (mm)	21 3/4 x 34 x 11 (553 x 863 x 280)	21 3/4 x 34 x 11 (553 x 863 x 280)	25 1/4 x 35 3/8 x 12 (642 x 898 x 306)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)	32 1/8 x 40 3/8 x 14 5/8 (815 x 1024 x 370)
	Weight (Net/Ship) - lbs (kg)	70.17/82.96 (31.8/37.6)	70.17/82.96 (31.8/37.6)	90.47/103.26 (41/46.8)	121.36/147.84 (55/67)	147.84/166.59 (67/75.5)	147.84/166.59 (67/75.5)
	Basepan Heater	Yes	Yes	Yes	Yes	Yes	Yes
Indoor Unit	Fan Speed Stages	5 + Auto	5 + Auto	5 + Auto	5 + Auto	5 + Auto	5 + Auto
	Airflow CFM: Cooling (Turbo/High/Med/Low/Quiet)	353/286/200/150/141	409/350/308/158/148	620/517/332/214/203	927/844/667/564/482	1236/1130/953/812/688	1236/1130/953/812/688
	Airflow CFM: Heating (Turbo/High/Med/Low/Quiet)	358/292/208/155/145	412/355/311/163/152	627/523/337/217/205	927/844/667/564/482	1236/1130/953/812/688	1236/1130/953/812/688
	Indoor Sound Level dB: Cooling (Turbo/High/Med/Low/Quiet)	44/43/38/35/34	44/43/38/35/34	49/46/42/39/38	47/46/41/38/37	47/46/42/39/36	47/46/42/39/36
	Indoor Sound Level dB: Heating (Turbo/High/Med/Low/Quiet)	44/43/38/36/35	44/43/38/35/35	48/45/41/39/37	46/45/40/38/36	48/47/41/38/35	48/47/41/38/35
	Dimension: H x W x D in (mm)	9 3/4 x 31 3/4 x 27 1/2 (248 x 805 x 700)	9 3/4 x 31 3/4 x 27 1/2 (248 x 805 x 700)	9 3/4 x 47 1/2 x 27 1/2 (248 x 1207 x 700)	9 3/4 x 47 1/2 x 27 1/2 (248 x 1207 x 700)	9 3/4 x 59 x 27 1/2 (248 x 1500 x 700)	9 3/4 x 59 x 27 1/2 (248 x 1500 x 700)
	Weight (Net/Ship) - lbs (kg)	62.17/86.86 (28.2/39.4)	62.17/86.86 (28.2/39.4)	87.74/123.46 (39.8/56)	87.74/123.46 (39.8/56)	115.08/158.29 (52.2/71.8)	115.08/158.29 (52.2/71.8)
	Drain Pipe Size O.D in	1*	1*	1*	1*	1*	1*
	Max. External Static Pressure in.W.G (Pa)	0.6 (150)	0.6 (150)	0.6 (150)	0.6 (150)	0.6 (150)	0.6 (150)
	Condensate Pump	Built-in	Built-in	Built-in	Built-in	Built-in	Built-in
	Max. Drain-lift height in (mm)	27 1/2 (700)	27 1/2 (700)	27 1/2 (700)	27 1/2 (700)	27 1/2 (700)	27 1/2 (700)
	Factory-Installed Refrigerant Detection Sensor (RDS)	Yes	Yes	Yes	Yes	Yes	Yes
	WiFi**	Built-in	Built-in	Built-in	Built-in	Built-in	Built-in
Refrigerant Lines	Refrigerant	R454B	R454B	R454B	R454B	R454B	R454B
	Connections	Flare	Flare	Flare	Flare	Flare	Flare
	Liquid O.D. in	1/4	1/4	1/4	3/8 (use 1/4" to 3/8" adapter shipped with outdoor unit)	3/8	3/8
	Suction O.D. in	3/8	3/8	1/2	5/8 (use 1/2" to 5/8" adapter shipped with outdoor unit)	3/4 (use 5/8" to 3/4" adapter shipped with outdoor unit)	3/4 (use 5/8" to 3/4" adapter shipped with outdoor unit)
	Factory Charge Oz	36.5	36.5	45.86	67.02	88.18	88.18
	Maximum Line Length Ft / m	66/20	66/20	83/25	165/50	165/50	165/50
	Maximum Height Ft / m	33/10	33/10	50/15	100/30	100/30	100/30

*Condensate drain adapter shipped with the indoor unit is designed to accept a 3/4" PVC pipe.

**WiFi includes SmartHQ™ Home and SmartHQ™ Service compatibility.

Introduction to System

Single Zone Ductless Split System Heat Pumps feature a wall mounted indoor fan/evaporator unit that receives refrigerant from an inverter driven variable speed outdoor condensing unit. The system operation is controlled with a remote control.

The outdoor unit features a variable speed rotary compressor, EEV metering device and DC fan motor. These systems use R454B refrigerant and PVE oil. The outdoor units are 208/230 volt rated systems.

The indoor units are wall mounted. They feature a DC blower motor and a DC louver motor. The unit has a room temperature sensor and an evaporator tube temperature sensor. The wall unit is powered by voltage from the outdoor unit.

Specifications for Proper Operation

The systems are designed to operate in temperature ranges of 23~115 °F in cooling mode and -4~75 °F in heat mode.

PVE oil is non-reactive to water and will not go into hydrolysis. There is no need to add a refrigeration drier when servicing or installing this system.

The indoor wall mounted unit receives operating voltage and communication data signals on #14 AWG wire that connects between the indoor and outdoor units. There should not be any splices in the field wiring that goes between terminals 1, 2, 3 GND. A splice in these wires may cause the system to lose communication between the indoor and outdoor units.

The field-supplied refrigerant tubing connects using flare type fittings at both the indoor and outdoor units. Tubing must be sized per the specifications. Both lines must be insulated. The only method of checking charge or adjusting charge is by weight method explained in this manual (no exceptions).

The condensate system is a gravity type. A field installed condensate pump may be added to the system. Always follow the manufacturer's installation instructions when installing a condensate pump.

Proper clearances at both indoor and outdoor units must be maintained. Improper clearances cause incorrect refrigerant pressures and coil freezing.

System Fundamentals

The indoor unit will sense room temperature at the point where the wall unit is installed. The indoor fan will run continuously when placed in heating or cooling mode and will not cycle on and off with the outdoor unit. If it did, room temperature could not be sensed or maintained.

The inverter compressor system in the outdoor unit will vary the refrigerant flow and indoor air volume levels to match the comfort requirement inside the conditioned space. If an abnormal condition is detected by the system's sensors, the system has the ability to take reactive measures. The amount of refrigerant flow and associated capacity generated by the system will be determined by how fast the system's variable speed rotary compressor is pumping. The compressor operating speed is determined by the difference between the conditioned space temperature and the set point.

If a large amount of capacity is needed, the compressor will operate at a high speed. As the need for capacity reduces and the temperature of the room nears set point, the compressor will slow down. When set point has been reached, the compressor will shut off while the fan continues to operate. When a difference in temperature is sensed between the set point and room, the compressor will restart at a new calculated speed.

If a system sensor determines there is a need to adjust the frequency signal to prevent a system malfunction, the compressor frequency may be over ridden and a new frequency established. It should be noted that the frequency signal level that is sent to the compressor cannot be determined by a servicing technician.

System Power

The 208/230 Volt AC power for the system connects to terminals 1, 2, and ground of the outdoor unit terminal block. This terminal block also has terminals to connect power to the indoor unit.

The voltage reading between terminals 1 and 2 should be 230VAC.

One additional connection on the terminal block (3) is for the communication wire between the indoor and outdoor units.

NOTE: Miswiring of these connections may cause improper operation or damage to system components.

Cooling Operation Mode

Overview

The temperature control range in cooling mode is 23°F to 115°F. The temperature set by the remote control and the indoor unit ambient temperature sensor will determine if a call for cooling is needed. If a call for operation is communicated from the indoor unit to the outdoor unit. The indoor unit louver will open using a stepper motor, and the indoor fan will operate at the speed last set. The outdoor unit will determine the position of the EEV and speed frequency of the compressor. There can be a delay of up to 3 minutes before the outdoor unit fan and compressor start.

The speed of the indoor fan can be controlled manually by the user or automatically by the system. The speed can be changed between LOW, MEDIUM, and HIGH.

The predetermined conditions for cool mode automatic fan speed control are follows:

Fan Speed	Ambient Indoor Air Temperature
Low	1.8°F and lower below setpoint
Medium	Between 1.7°F below setpoint and 5.3°F above setpoint
High	5.4°F and higher above setpoint

There will be a 3 minute delay when switching from high speed fan to low speed fan. There will be no delay when switching from low speed fan to high speed fan.

The outdoor unit temperature sensors: outdoor ambient, defrost, suction line, and compressor discharge, used in conjunction with the indoor temperature sensors, indoor ambient and coil, provide information to the outdoor control board to monitor the system and regulate the frequency of the compressor, the EEV, and outdoor fan speed, to achieve the desired room temperature.

When the call for cooling has been satisfied, the compressor will turn off, followed by the outdoor fan. The indoor unit fan will continue to run. If the system detects a malfunction, it may shut down or show an error code. This code will be shown on the indoor display board or a flashing LED will appear on the outdoor PCB.

Indoor Unit

To enter the cool mode, point the infrared remote control at the indoor unit and press the power button, then press the COOL mode button if not already set to cool mode. The signals received by the infrared receiver are relayed to the main board of the indoor unit to turn the system on and set it to cool mode. The indoor unit PCB will illuminate the display, indicating the set temperature and current status of the unit. The PCB will signal the stepper motor to open the louver to either a stationary position, or one of several oscillating modes.

As the louver opens, the indoor unit main board will power up the indoor fan motor, operating the fan at the speed last set. The indoor fan motor has a feedback circuit which provides the indoor unit main board with information for controlling the speed of the fan motor.

Temperature Sensors

The indoor unit has two sensors that provide temperature information to the main board. The sensors: an indoor ambient temperature sensor, and pipe temperature sensor, are used for controlling the system during cool mode. The resistance values of the sensors will vary with temperature. The resistance to temperature values can be found to the sensor being checked.

Communication

The indoor and outdoor unit main boards communicate via a digital signal on the wire connected to terminal 3 of each unit. A splice or break in this wire will cause a communication error. When a command is received from the remote control, the indoor unit main board communicates with the outdoor unit main board to perform the requested function.

Outdoor Unit

Upon a request for cooling, the outdoor unit main board applies power to the outdoor fan motor and compressor. Depending on system cycling, there may be up to a 3 minute wait period before the compressor and outdoor fan start. **WARNING:** Do not measure compressor voltages as damage to the meter may result.

Temperature Sensors

Four temperature sensors located in the outdoor unit provide temperature information to the outdoor unit main board for control of the system during cool mode.

The outdoor ambient temperature sensor provides the temperature of the air drawn into the condenser coil.

The defrost temperature sensor provides the temperature sensed at the output of the condenser coil.

The suction line temperature sensor provides the temperature sensed at the incoming suction line pipe.

The compressor discharge sensor provides the temperature sensed at the discharge pipe of the compressor.

Call to Terminate Cooling

The system will terminate cooling when the indoor ambient temperature sensor is equal to or lower than 2°F of the room set temperature. The indoor control board will communicate to the outdoor control board to de-energize the compressor.

The outdoor fan will run for 60 seconds before stopping. The indoor fan motor and louver will continue operating after cooling has been terminated.

To stop cool mode, press the power button to turn the system off, or change to another mode.

Freeze Protection Function

When the compressor operates continuously for 10 seconds and the temperature of the indoor coil has been below 35.6°F for 10 seconds, the compressor will stop. The indoor unit fan will continue to operate.

When the temperature of the indoor coil rises to 50°F for more than 3 minutes the compressor will restart and the system will continue functioning.

Heating Operation Mode

Overview

The temperature control range in heating mode is -4°F to 75°F. The temperature set by the remote control and the indoor unit ambient temperature sensor will determine if a call for heat is needed. If a call for heat is justified, a temperature compensation adjustment is automatically added to the operating parameter and the call is communicated from the indoor unit to the outdoor unit.

The indoor unit louver will open using a stepper motor. The indoor fan will not operate at this time.

The outdoor unit will shift the 4-way valve to the heat mode position and determine the position of the EEV and speed (frequency) of the compressor. There can be a delay of up to 3 minutes before the outdoor unit fan and compressor start.

The predetermined conditions for automatic control are follows:

Note: The heating mode has a temperature compensation of 4 °C, resulting in the actual ambient temperature being subtracted from the calculation by approximately 7 °F.


As the indoor ambient temperature falls, the change of fan speed follows the following temperature conditions:

Fan Speed	Ambient Indoor Air Temperature
Stop	8.8°F and higher above setpoint
Low	Between 5.9°F and 8.7°F above setpoint
Medium	Between 3.6°F and 5.8°F above setpoint
High	Below setpoint and up to 3.5°F above setpoint

There will be a 3 minutes delay when switching from high speed fan to low speed fan. There will be no delay when switching from low speed fan to high speed fan.

Cold Air Proof Operation

At initial start of heat mode, indoor blower will not be turned on immediately until indoor coil temperature senses a minimum temperature. This prevents cold air from being blown until the coil is heated.

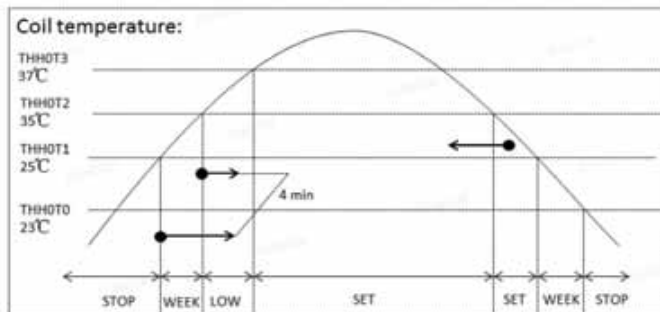

The indoor fan is controlled based on the coil temperature, as shown in the figure above.

When the coil temperature rises, the fan speed is judged according to the coil temperature:

1. At the end of heating or defrosting after the first power on, the fan stops when the coil temperature is lower than 25°C/ 77°F;
2. Coil temperature between 25°C/ 77°F and 35°C/ 96°F fan speed is weak;
3. Coil temperature between 35°C/ 96°F and 37°C/ 100°F fan speed is weak;
4. Coil temperature is higher than 37°C/ 100°F, fan speed according

to the set operation.

5. When the coil temperature drops, the fan speed is judged according to the hot cross temperature:
 - Coil temperature is higher than 35°C, fan speed according to the set operation.
 - Coil temperature between 37°C and 35°C fan speed is mid
 - Coil temperature between 35°C and 25°C fan speed is low
 - Coil temperature between 25°C and 23°C fan speed is weak
 - The fan stops when the coil temperature is lower than 23°C

Residual heat sending: the indoor fan will operate on low speed until the coil temperature reaches 73°F or stop after 50 seconds.

The outdoor unit temperature sensors: outdoor ambient, defrost, suction line, and compressor discharge, used in conjunction with the indoor coil and room temperature sensors, provide information to the outdoor control board to monitor the system and regulate the speed of the compressor, the EEV and outdoor fan speed to achieve the desired room temperature.

When heating has been satisfied, the compressor will turn off first, followed by the outdoor fan. The 4-way valve will de-energize 2 minutes after compressor stops.

To save energy, The indoor unit fan will continue to run at minimum speed until indoor coil temperature reaches a minimum temperature, when it will turn off.

If the system detects a malfunction, it may shut down or show an error code on the indoor unit display board and/or outdoor unit main board LED.

Defrost

When the system initiates a call for defrost, the indoor fan motor stops. The indoor unit display will not change. Any indoor unit malfunctions will be ignored at this time. The system will cycle through the defrost operation. Any indoor unit malfunctions will be ignored until the compressor restarts and has been operating for 30 seconds. At the conclusion of the defrost cycle, the indoor fan will enter the cold air proof operation. Heat mode resumes.

Automatic Heating Temperature Compensation

When the system is in heating mode, a temperature compensation adjustment is added to the sensed temperature. This is intended to adapt for temperature stratification in the conditioned environment relative to the installation location of the indoor head.

Indoor Unit

To enter the heat mode, point the infrared remote controller at the indoor unit and press the power button, then press the HEAT mode button if not already set to heat mode.

The signals received by the infrared receiver are relayed to the main board of the indoor unit to turn the system on and set it to heat mode.

The indoor unit PCB will activate the display of the indoor unit, illuminating the display and indicating the set temperature and current status of the unit.

The indoor unit PCB will signal the stepper motor to open the louver to a stationary position.

The PCB will power up the indoor fan motor after the outdoor unit has started and heating of the indoor coil has taken place (see cold air proof operation). The motor has a feed-back circuit which provides information for controlling the speed of the fan motor.

Temperature Sensors

The indoor unit has two sensors that provide temperature information to the indoor unit main board. The sensors: a room temperature sensor, and pipe temperature sensor, are used for controlling the system during heat mode.

The resistance values of the sensors will vary with temperature. The resistance to temperature values can be found using a temperature/resistance chart specific to the sensor being checked.

Communication

The indoor and outdoor unit main boards communicate via a digital signal on the wire connected to terminal 3 of each unit. A splice or break in this wire will cause a communication error.

When a command is received from the remote control, the indoor unit main board communicates with the outdoor unit to perform the requested function.

Outdoor Unit

Upon a request for heat mode, the outdoor unit main board applies power to the fan motor and compressor. Depending on system cycling, there may be up to a 3 minute wait period before the compressor and outdoor fan start.

WARNING: Do not measure compressor voltages, damage to the meter may result.

The outdoor unit PCB also controls the position of the EEV (Electronic Expansion Valve) to regulate the flow of refrigerant to the indoor unit evaporator coil.

Temperature Sensors

Four temperature sensors located in the outdoor unit provide information to the outdoor unit PCB for control of the system during dry mode.

The outdoor ambient temperature sensor provides the temperature of the air drawn into the condenser coil.

The defrost temperature sensor provides the temperature sensed at the output of the condenser coil.

The suction line temperature sensor provides the temperature sensed at the incoming suction line pipe.

The compressor discharge sensor provides the temperature sensed at the discharge pipe of the compressor.

To stop dry mode, press the power button to turn the system off, or change to another mode.

Call to Terminate Heating

The system will call to terminate heating when the indoor temperature is equal to or higher than 2°F above the room set temperature. The indoor control board will communicate to the outdoor control board to de-energize the compressor. The outdoor fan will run for 60 seconds before stopping. The 4-way valve will de-energize 2 minutes after the compressor stops.

To stop heat mode, press the power button to turn the system off, or change to another mode.

Auto Mode

With the system turned on, press the AUTO button on the remote control. The system will change to the auto mode of operation.

As the room is cooled or heated, the system will automatically switch between cool mode, fan mode, and heat mode. There is a minimum 15 minute operating time between mode changes.

Dry Mode

Overview

The temperature control range is 60°F - 86°F. This mode is used for dehumidification.

Tr = room temperature Ts = set temperature

When $Tr > Ts + 4^{\circ}\text{F}$, the compressor will turn on and the indoor fan will operate at the set speed.

When $Ts \leq Tr \leq Ts + 4^{\circ}\text{F}$, the compressor will operate at the high dry frequency for 10 minutes, then at the low dry mode for 6 minutes. The indoor fan will operate at low speed.

When $Tr < Ts$, the outdoor unit will stop, and the indoor fan will stop for 3 minutes, then operate at the low speed option.

Automatic fan speed:

- When $Tr > Ts + 9^{\circ}\text{F}$, High speed
- When $Ts + 5.4^{\circ}\text{F} \leq Tr < Ts + 9^{\circ}\text{F}$, Medium speed
- When $Ts + 3.6^{\circ}\text{F} \leq Tr < Ts + 5.4^{\circ}\text{F}$, Low speed
- When $Tr < Ts + 3.6^{\circ}\text{F}$, Light speed

Note: TURBO and QUIET mode must be set using the remote controller.

If the outdoor fan is stopped, the indoor fan will pause for 3 minutes.

If the outdoor fan is stopped for more than 3 minutes, and the compressor is still operating, the system will change to light speed mode.

Indoor Unit

To enter the dry mode, point the infrared remote control at the indoor unit and press the power button, then press the DRY mode button if not already set to dry mode.

The signals received by the infrared receiver are relayed to the main board of the indoor unit to turn the system on and set it to dry mode.

The indoor unit main board will illuminate the display, indicating the set temperature and current status of the unit.

The PCB will then signal the louver stepper motor to open the louver to either a stationary position, or one of several oscillating modes.

As the louver opens, the indoor fan motor will operate at the speed last set. The fan motor has a feedback circuit which provides the main board with information for controlling the speed of the fan motor.

NOTE: It is recommended that Dry mode is not used for longer than a 4-hour period to minimize overflowing the condensate drain pipe.

Temperature Sensors

The indoor unit has two sensors that provide temperature information to the PCB. An ambient temperature sensor and pipe temperature sensor are used for controlling the system during dry mode. The resistance values of the sensors will vary with temperature. The resistance to temperature values can be found using a temperature/resistance chart specific to the sensor being checked.

Communication

The indoor and outdoor unit main boards communicate via a digital signal on the wire connected to terminal 3 of each unit. A splice or break in this wire will cause a communication error.

When a command is received from the remote control, the indoor unit main board communicates with the outdoor unit main board via the terminal 3 wire to perform the requested function.

Outdoor Unit

Upon a request for dry mode, the outdoor unit main board applies power to the fan motor and compressor. Depending on system cycling, there may be up to a 3 minute wait period before the compressor and outdoor fan start.

WARNING: Do not measure compressor voltages, damage to the meter may result.

The outdoor unit PCB also controls the position of the EEV (Electronic Expansion Valve) to regulate the flow of refrigerant to the indoor unit evaporator coil.

Temperature Sensors

Four temperature sensors located in the outdoor unit provide information to the outdoor unit PCB for control of the system during dry mode.

The outdoor ambient temperature sensor provides the temperature of the air drawn into the condenser coil.

The defrost temperature sensor provides the temperature sensed at the output of the condenser coil.

The suction line temperature sensor provides the temperature sensed at the incoming suction line pipe.

The compressor discharge sensor provides the temperature sensed at the discharge pipe of the compressor.

To stop dry mode, press the power button to turn the system off, or change to another mode.

Defrost Operation

To activate a defrost cycle, several operational conditions must be met. First, the system must be in heating mode. The system must accumulate a minimum of 30 minutes of run time and 1 minute of consecutive run time. Readings are then taken from the indoor coil and indoor ambient temperature sensors, as well as the defrost temperature sensor and ambient temperature sensors on the outdoor unit. These values are used in our proprietary algorithm to determine if a defrost cycle should run and for how long.

If the Timed defrost is activated, the same sensor readings will be used, but there are stricter conditions on how often the cycles occur and the minimum run times of each cycle. If there is any defrost issues, validating these sensors should be the first diagnostic step as well as assessing environmental exposures. The system will adjust successive defrost cycles depending upon how long and how successful prior defrost cycles were. Therefore, performance may vary from one cycle to the next.

Upon exiting the defrost cycle, the following conditions will take place:

1. The compressor will stop.
2. The outdoor fan will operate at high speed.
3. 25 seconds later the 4-way valve will shift to the heating mode.
4. 30 seconds later the compressor will start, and the system resumes normal operation.


Protection Functions

These functions limit the operation of the system when encountering the normal operating limits of the equipment.

Compressor High Temperature

The compressor discharge pipe sensor (exhaust temp) senses the temperature of the refrigerant exiting the compressor. The sensed temperature received from the sensor by the control circuitry will cause the compressor frequency to increase or decrease (see chart below). If a temperature of $\geq 230^{\circ}\text{F}$ is sensed for 2 seconds, an exhaust overheating protection error code will be indicated at the outdoor unit.

TTC

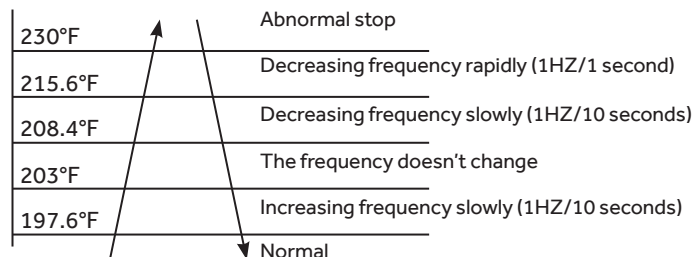

Overheating Protection for Indoor Unit

A sensor monitors coil temperature in both heating and cooling modes, and causes the compressor to speed up, slow down, or stop.

Compressor Over-Current Protection

If the current draw of the compressor at startup is greater than the values listed on the chart below for approximately 5 seconds, the compressor will stop. After 3 minutes the compressor will restart. If the over-current condition occurs 3 times in 20 minutes, the system will lock-out, and a code will be indicated at the outdoor unit. It will be necessary to remove power to the system to reset the lock-out condition.

Model	Cooling Increase Point	Cooling Decrease Point	Heating Increase Point	Heating Decrease Point	Stop Point
09K	5.5A	6.5A	7A	8A	10.5A
12K	5.5A	6.5A	7A	8A	10.5A
18K	12A	12A	13A	13A	14A
24K	14A	15A	14A	15A	16A

Compressor frequencies:

Model	Cooling	Heating
09K	15-71 Hz	20-102 Hz
12K	15-81 Hz	20-102 Hz
15K	10-85 Hz	12-118 Hz
18K	13-48 Hz	13-81 Hz
24K	15-75 Hz	20-105 Hz
30K	12-69 Hz	12-88 Hz
36K	15-70 Hz	20-88 Hz

Indoor Coil Anti-Freeze Protection


The temperature sensed by the coil sensor is used to determine at what speed the compressor is to run to avoid the coil temperature being too cold.

TCI_Indoor: Indoor unit pipe sensor temperature

tS: Outdoor unit Suction Line sensor temperature

- When $\text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) < \text{TCI1}$, the frequency of the compressor decreases at the rate of 1HZ / 1 second.
- When $\text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) < \text{TCI2}$, the frequency of the compressor decreases at the rate of 1HZ / 10 second.
- When TCI_indoor begins to rise again, and $\text{TCI2} \leq \text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) \leq \text{TCI3}$, the frequency of the compressor does not change.
- When $\text{TCI3} < \text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) < \text{TCI4}$, the frequency of the compressor increases at the rate of 1HZ / 10 second.

Example: if $\text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) \leq 32^\circ\text{F}$ sustains for 2 minutes, the outdoor unit will stop and indicate an underload malfunction code at the outdoor unit. The compressor stops for a minimum of 3 minutes. When $\text{Min}(\text{TCI_indoor}, (\text{TCI_indoor} + \text{tS})/2) > \text{TCI4}$, the compressor will restart.

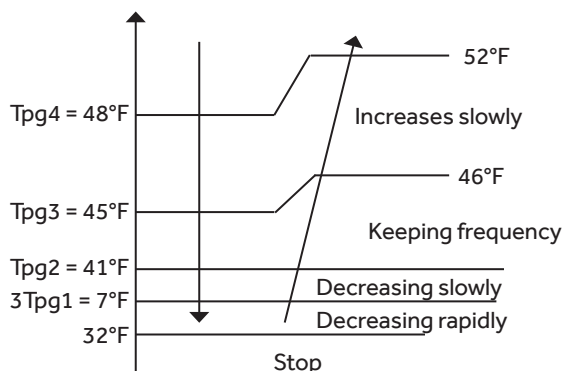

Base Pan Heater

To keep condensate water from freezing inside the cabinet, a base pan heater is installed at the factory.

Operation condition:

- It will start while defrosting process is running.
- If AC is not in defrost process, it will work refer to the chart below for the operating parameters.

Outdoor Temperature	Pan Heater
$> 37^\circ\text{F}$ (3°C)	OFF
28°F (-2°C) to 34°F (1°C)	OFF 20min, ON 10min
10°F (-12°C) to 25°F (-4°C)	OFF 15min, ON 15min
$< 10^\circ\text{F}$ (-12°C)	ON

Special Functions

Auto Restart

When this is enabled, the following functions will automatically resumes after a power loss:

- ON/OFF State, Mode of Operation, Fan Speed, Temperature Setpoint, Louver Swing settings.
- If there was a timer set, it will be canceled upon restart.

Enhanced/Timed Defrost

via Remote Controller

Setting method:

- Set to HEAT Mode
- Set to $30^\circ\text{C}/86^\circ\text{F}$
- Set High Fan Speed
- Press Temperature+ Button 10 times within 7 seconds
- Unit will Beep 7 times to Confirm.

Cancel method:

Same process as Setting Method. Hear Unit Beep 5 times to confirm of cancel function.

Indoor Temperature Display

This function will allow you to set the display to show either the Ambient temperature or the setpoint:

Set temperature:

- Press the Light button 10 times within 5 second. Unit will Beep 4 times to confirm.


Ambient temperature:

- Press the Light button 10 times within 5 second. Unit will Beep 2 times to confirm.

Crankcase (Compressor) Heater

Operation logic:

- If outdoor ambient temperature is 5°C , compressor heater is OFF.
- If outdoor ambient temperature is $< 3^\circ\text{C}$, compressor heater functions as shown:

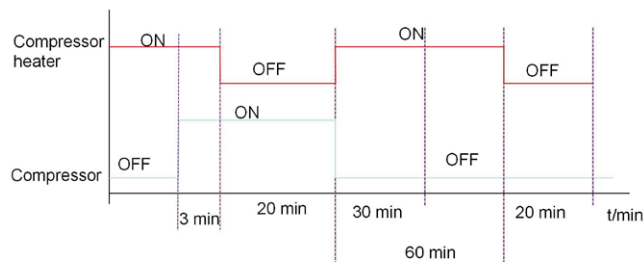

Temperature Compensation


Set Temperature:

1. Apply power to the unit.
2. Set to Cooling Mode or Heating Mode
3. Set the temperature to 24°C.
4. Press the SLEEP button 7 times within 5 seconds. Indoor PCB will beep 2 times to confirm.
5. 24°C will be the starting/reference point for the Temperature Compensation.
6. Press ▲ or ▼ on the controller to adjust compensation temperature value. Temperature Compensation can be adjusted from -8°C to +6 °C. (Example: if you want to set the Temperature Compensation value by 4°C, then set the temperature to 28°C.)
7. Once the desired value has been selected, turn OFF the unit to save the compensation settings.

Timed Defrost

Logic:

1. After receiving the defrost signal, the compressor will stop.
2. 40 seconds later, the four-way valve is reversed and the outdoor fan stops.
3. The compressor gradually increases frequency to the highest defrosting frequency.
4. After defrosting completes, the outdoor fan motor starts, the compressor stops, and the four-way valve is opened after 25 seconds.
5. The compressor will start after 5 seconds.

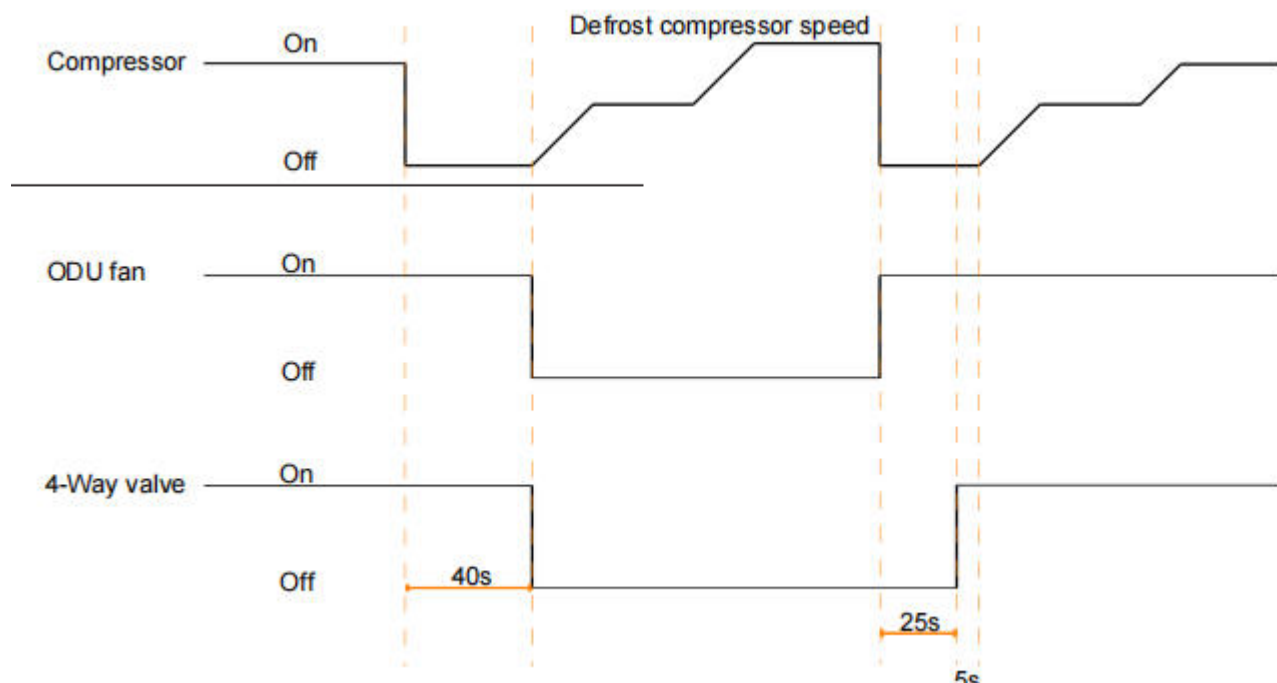

[This page left intentionally blank]



1G09AD2BEA
1G12AD2BEA
1G15AD2BEA
1G18AD2BEA
1G24AD2BEA
1G3036AD2BEA

TABLE OF CONTENTS




COMPONENTS	B2
Outdoor Component Identification	B2
Terminal Block	B3
Power Factor Reactor	B3
Compressor	B3
Fan Motor	B3
Temperature Sensors	B4
4-Way Valve	B4
Electronic Expansion Valve	B4
Accumulator	B5
Refrigerant Strainers	B5
Compressor Heater	B5
Base Pan Heater	B5
Outdoor Unit Control Board	B6
WIRING DIAGRAM	B8
DIP SWITCH SETTINGS	B9
SERVICE PROCEDURES	B10
Checking the Outdoor Unit Sensors	B10
Checking the Reversing Valve Coil	B10
Checking the Compressor Windings	B10
Checking the EEV Coil	B10
Checking the Outdoor DC Fan motor	B10
Checking the Compressor Heater	B10
Checking the Base Pan Heater	B11
Checking the Reactor	B11

COMPONENTS


The outdoor unit has a PCB that integrates the control functions and power functions into one PCB. Sensors monitor key temperatures throughout the system to manage operational decisions.

Outdoor Component Identification: 1G09AD2BEA , 1G12AD2BEA

- 1 4-Way Valve
- 2 Accumulator
- 3 Compressor
- 4 Defrost Temperature Sensor
- 5 Discharge Temperature Sensor
- 6 Electronic Expansion Valve
- 7 Refrigerant Strainers
- 8 Ambient Temperature Sensor
- 9 Fan Motor
- 10 Power Factor Reactor
- 11 Terminal Block
- 12 Power Control Board (PCB)
- 13 Fan Blade
- 14 Compressor Heater
- 15 Base Pan Heater

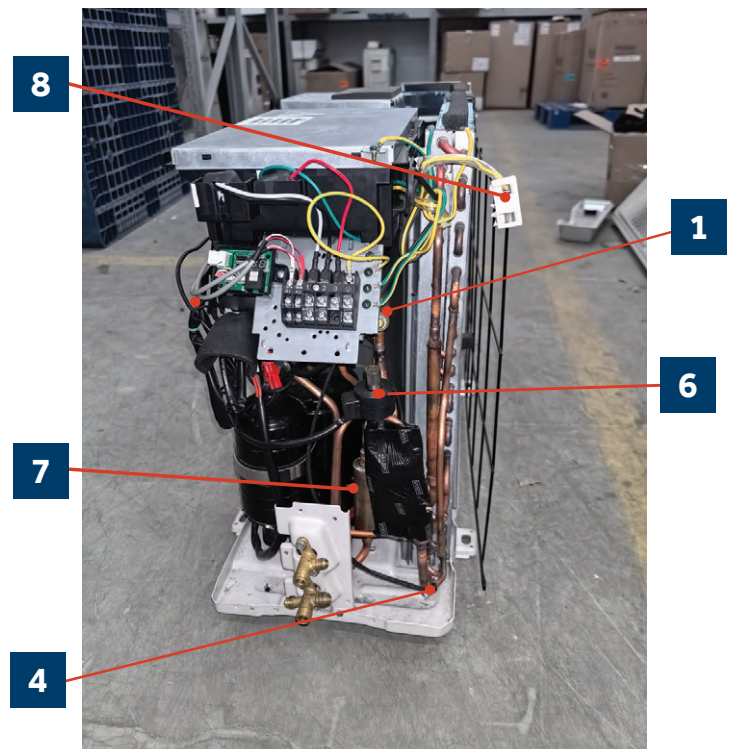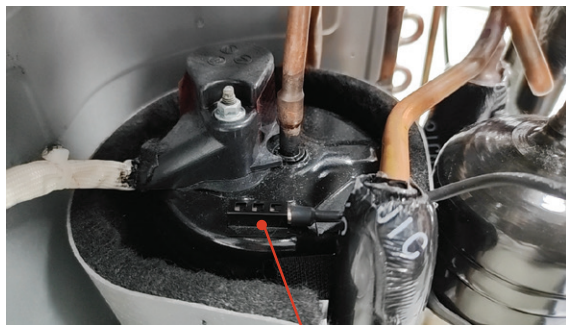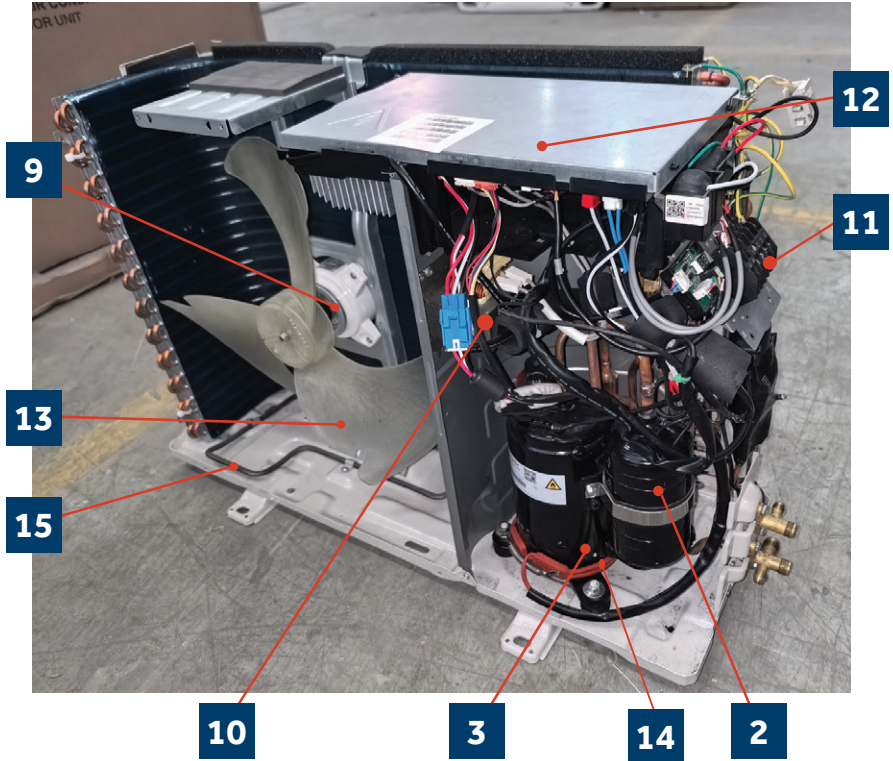

Terminal Block

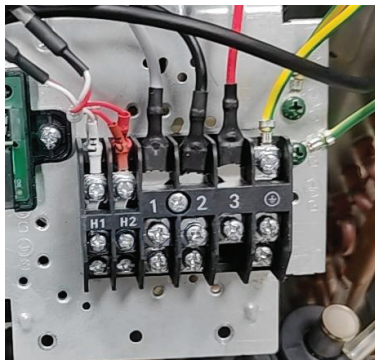

The outdoor unit is powered by 208/230 volt single phase electricity connected at the terminal block.


Terminals 1 and 2 connect this voltage to the system.

The number 3 terminal is communication that connects wiring between the indoor and outdoor units. A ground terminal connects the outdoor unit to the line voltage power source.

The indoor unit is also powered by the same electrical supply as the outdoor unit. Only AWG 14-4 stranded copper wire is allowed connected to the Terminal Block block at the outdoor unit and is run to the same terminals on the indoor terminal block.

When installing the field supplied wiring, make certain the wire gauge is correct. There should not be any electrical wiring splices between the indoor unit and outdoor unit wire connection 3. This wire is used to carry communication data between the indoor and outdoor units. A wiring splice where wires are twisted in a wire nut may cause deformation of the communication signal. If communication is lost between the indoor and outdoor units, an ERROR CODE E7 will occur.

Power Factor Reactor

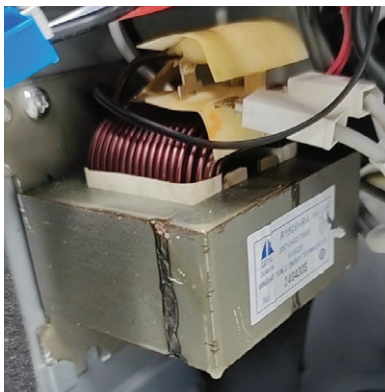

The Reactor is a power filter. It is unlikely to ever have an electrical failure of this component.

The Reactor of all outdoor units is electrically connected to the IPM on terminal connections CN-5 and CN-6 .

Compressor



The compressor is a three phase DC inverter driven rotary type, capable of variable speed operation. The compressor operating frequency will be determined by the temperature difference between set point and room temperature.

The compressor of all outdoor units is electrically connected to the IPM on terminal connections CN-7, CN-8 and CN-9.

Protection of the compressor will be provided by the discharge temperature sensor, the suction line temperature sensor, and the over current protection parameter in the PCB.

Fan Motor



The fan motor is a variable speed DC motor. The required speed is calculated by the PCB. The motor is electrically connected to the PCB via PLUG CN-10.

In cool mode, the motor will slow down as outdoor air temperature falls. In heat mode, the motor will increase speed as the outdoor air temperature falls.

Discharge Temperature Sensor



The Discharge Temperature Sensor is a negative coefficient thermistor that senses the temperature of the compressor hot gas. The PCB monitors the temperature of the compressor hot gas and will make inverter speed changes in response to input from this device.

This sensor connects to the Power Control Board at PLUG CN-15.


Defrost Temperature Sensor



The Defrost Temperature Sensor is a negative coefficient thermistor that will change resistance in response to outdoor coil temperature changes. The PCB monitors the temperature of the outdoor coil to determine when the system should perform a defrost cycle. The sensor also monitors coil temperature during defrost cycles to determine termination conditions.

This sensor connects to the Power Control Board at PLUG CN-15.

Outdoor Ambient Temperature Sensor

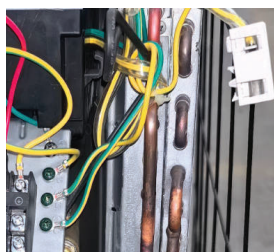

The Ambient Temperature Sensor is a negative coefficient thermistor that will change resistance in response to outdoor air temperature changes. The PCB monitors the temperature of the outdoor air to determine fan speed requirements and inverter speed. The sensor also plays a role in calculation of required defrost conditions.

This sensor connects to the Power Control Board at PLUG CN-15

4-Way Valve



The 4-Way Valve redirects the flow of refrigerant in the piping circuit to allow the system to reverse the functions of the indoor and outdoor coils. When de-energized in COOL MODE, the valve will direct the refrigerant hot gas to the outdoor coil. When energized in HEAT MODE, the valve will direct the hot gas to the indoor coil.

The valve flow direction capability is controlled by an electrical solenoid. When energized with 208/230 VAC, the solenoid will magnetically move an internal slide within the 4-Way Valve to change the direction of refrigerant flow.

The 4-Way Valve is electrically connected to the Power Control Board at PLUG CN-11.

Electronic Expansion Valve



The metering device is an electronic expansion valve. The valve consists of an electrical operator and a valve body with internal variable size orifice. When operating, the PCB will send pulses of voltage to the electrical operator. The operator will then magnetically move the position of the metering orifice pin to vary refrigerant flow.

The metering device position is determined by input from a Discharge Temperature Sensor. The EEV will change the internal orifice size to maintain an acceptable level of superheat.

During COOL MODE the valve meters low pressure refrigerant to the indoor coil. During HEAT MODE the valve meters low pressure refrigerant to the outdoor coil.

The electrical expansion valve is electrically connected to the Power Control Board at PLUG CN-16.

Accumulator



The Accumulator is located in the suction line circuit at the entrance to the compressor. The accumulator helps prevent liquid refrigerant from entering the compressor during run operation.

Compressor Heater




The Compressor heater is used to preheat the compressor and assist the start of the compressor at low temperature. The Compressor Heater is electrically connected to the Power Control Board at PLUG CN-13 and energized with 208/230 VAC.

Refrigerant Strainers




The system has debris-catching strainers that protect internal system components from contaminants in the refrigerant. The strainer is a permanent part that is not typically replaced.

Base Pan Heater

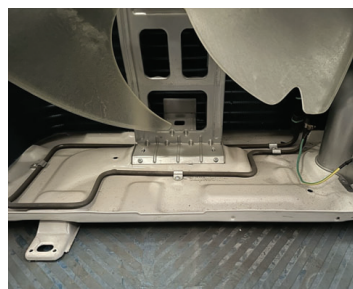


To keep condensate water from freezing inside the cabinet, a base pan heater is installed at the base pan. The Base Pan Heater is electrically connected to the Power Control Board at PLUG CN-12 and energized with 208/230 VAC.

Outdoor Unit Control Board

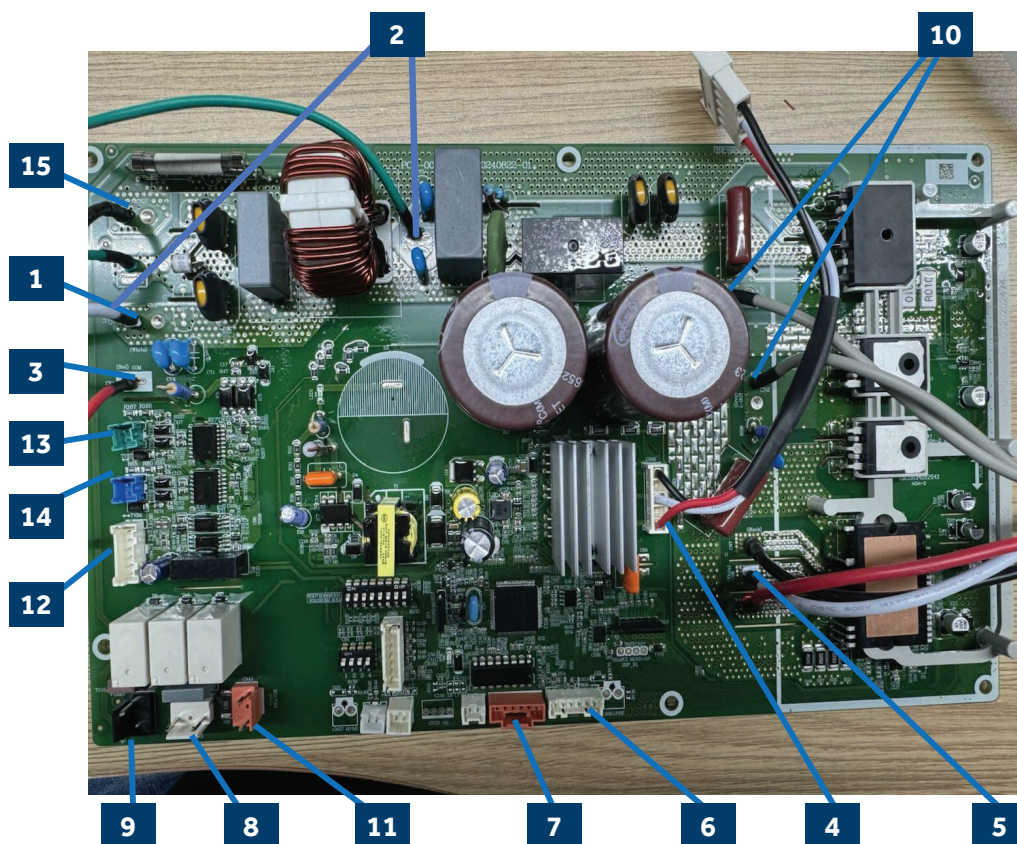

- 1** **CN1:** 230VAC power from terminal block connections 1(L1)
- 2** **CN3,CN30:** Connector for GND
- 3** **CN4:** Communication connection between the indoor board and the outdoor board
- 4** **CN10:** Connector for the fan motor
- 5** **CN7, CN8, CN9:** Compressor U, V, W connections
- 6** **CN15:** Connections for temperature sensors
- 7** **CN16:** Connector for the electronic expansion valve

- 8** **CN11:** Connector for four way valve coil
- 9** **CN12:** Connector for the base pan heater
- 10** **CN5, CN6:** Connector for the reactor
- 11** **CN13:** Connector for the compressor heater
- 12** **CN19:** Connector for the RJ45
- 13** **CN24:** Connector for the OTA
- 14** **CN14:** Connector for the centralized controller
- 15** **CN2:** 230VAC power from terminal block connections 2(L2)

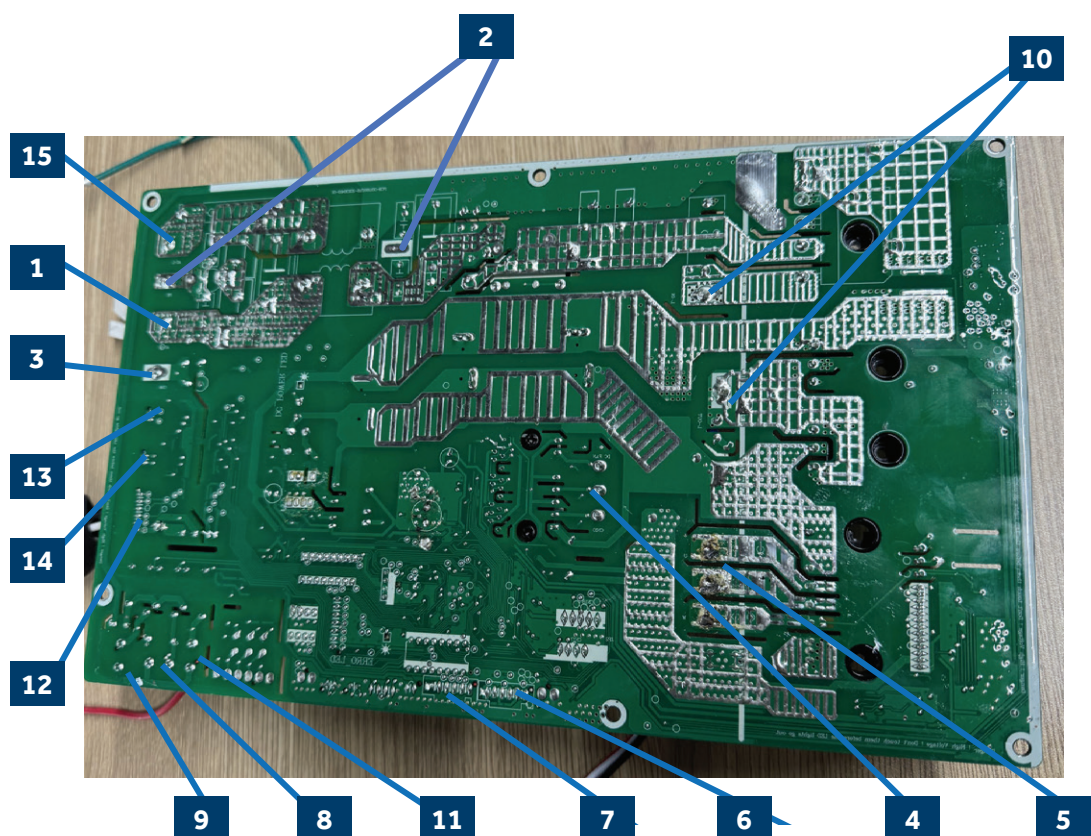

1 **CN1:** 230VAC power from terminal block connections 1(L1)

2 **CN3,CN30:** Connector for GND

3 **CN4:** Communication connection between the indoor board and the outdoor board

4 **CN10:** Connector for the fan motor

5 **CN7, CN8, CN9:** Compressor U, V, W connections

6 **CN15:** Connections for temperature sensors

7 **CN16:** Connector for the electronic expansion valve

8 **CN11:** Connector for four way valve coil

9 **CN12:** Connector for the base pan heater

10 **CN5, CN6:** Connector for the reactor


11 **CN13:** Connector for the compressor heater


12 **CN19:** Connector for the RJ45

13 **CN24:** Connector for the OTA

14 **CN14:** Connector for the centralized controller

15 **CN2:** 230VAC power from terminal block connections 2(L2)

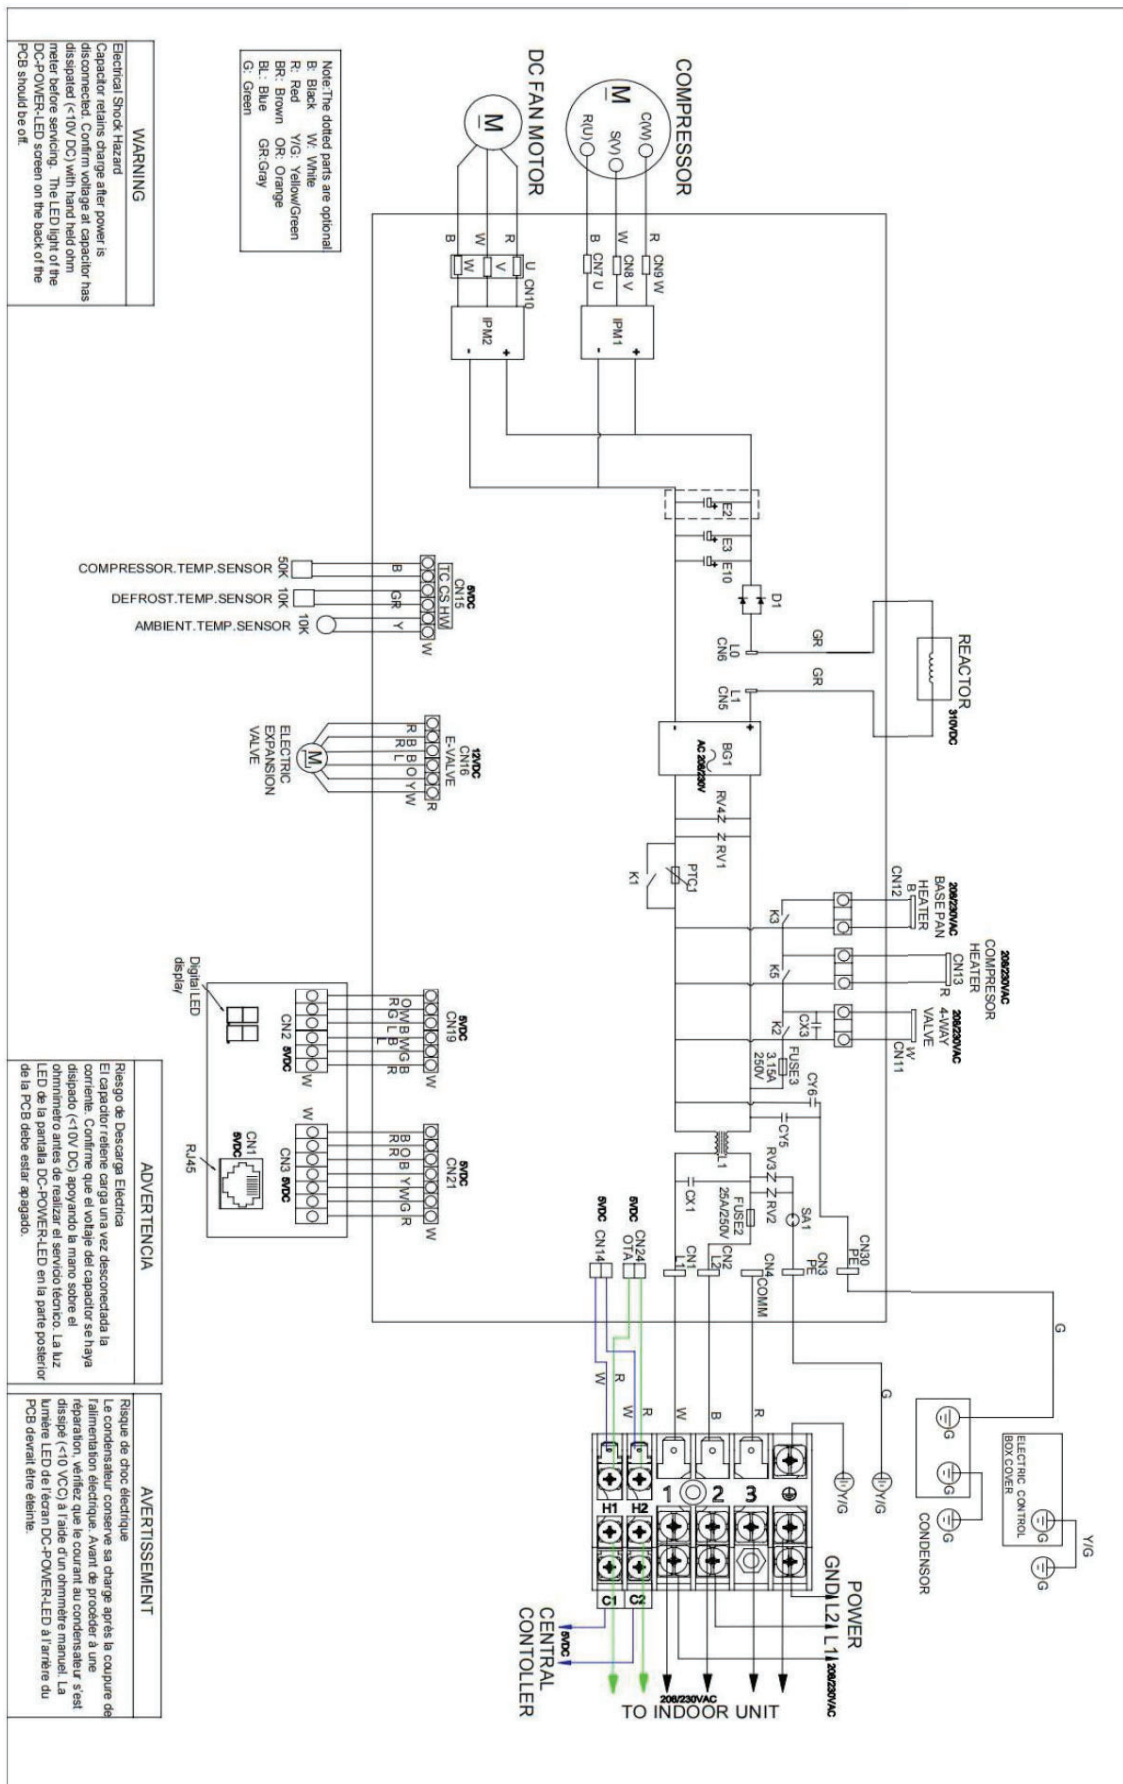

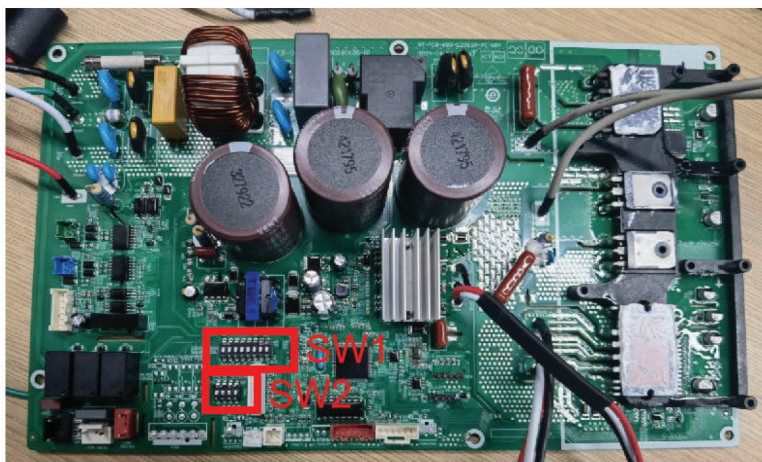

DIP SW1

SW1-1	SW1-2	SW1-3	SW1-4	SW1-5	SW1-6	SW1-7	SW1-8	Setting	Description
OFF	----	----	----	----	----	----	----	AC Loop Communications	Default
ON	----	----	----	----	----	----	----	24V Communication	
----	OFF	----	----	----	----	----	----	Central Controller Protocol	Default
----	ON	----	----	----	----	----	----	BMS Protocol	
----	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Central Controller Address 1	Default
----	OFF	OFF	OFF	OFF	OFF	OFF	ON	Central Controller Address 2	
----	OFF	----	----	----	----	----	----	--	
----	OFF	ON	ON	ON	ON	ON	ON	Central Controller Address 64	
----	ON	OFF	OFF	OFF	OFF	OFF	OFF	BMS protocol Address 1	
----	ON	OFF	OFF	OFF	OFF	OFF	ON	BMS protocol Address 2	
----	ON	----	----	----	OFF	----	----	--	
----	ON	ON	ON	ON	ON	ON	ON	BMS Controller Address 64	

DIP SW2

SW2-1	SW2-2	SW2-3	SW2-4	Setting	Description
OFF	OFF	ON	ON	Altitude 9K	
OFF	ON	OFF	OFF	Altitude 12K	
OFF	ON	OFF	ON	Altitude 15K	
OFF	ON	ON	OFF	Altitude 18K	
OFF	ON	ON	ON	Altitude 24K	
ON	OFF	OFF	OFF	Altitude 30K	
ON	OFF	OFF	ON	Altitude 36K	
ON	OFF	ON	OFF	Reserved	
ON	OFF	ON	ON	Reserved	
ON	ON	OFF	OFF	Reserved	
ON	ON	OFF	ON	Reserved	
ON	ON	ON	OFF	Reserved	
ON	ON	ON	ON	Reserved	

NOTE: Component resistance readings shown in this section are for reference only. Actual resistance values may vary based on model being tested.

Testing of the following components requires the use of needle probes. Avoid testing the connector end of the plug, as damage to the internal sections of the plug can occur.

Checking the Outdoor Unit Sensors

NOTE: Use respective temperature / sensor chart for sensor type being tested.

- Compressor discharge sensor
- Suction sensor
- Defrost temperature sensor
- Ambient sensor

Step 1

Disconnect the sensor plug from the control board for this test. Failure to do so may provide inaccurate readings.

Step 2

Using k-type temperature probe, determine the temperature of the sensor being tested.

Step 3

Using an ohmmeter, check the resistance value of the sensor.

Step 4

Referring to the temperature / resistance table for the sensor being checked, verify the resistance value corresponds to the temperature checked in Step 2. Replace the sensor if the reading is open, shorted, or outside

Step 5

Re-seat the plug on the connector at the conclusion of the test.

Checking the Reversing Valve Coil

Step 1

Disconnect the reversing valve plug from the PCB for this test. Failure to do so may provide inaccurate readings.

Step 2

Using an ohmmeter, check the resistance value of the coil. The resistance value of the coil should be 1.2 kilo ohms to 1.8 kilo ohms. Replace the valve coil if the reading is significantly different, or if the coil shows open or shorted.

Step 3

Re-seat the plug on the connector at the conclusion of the test.

Checking the Compressor Windings

Step 1

Disconnect wiring from terminals U, V and W of the IPM.

Step 2

Using an Ohmmeter, check the resistance value of the compressor windings. Measure between wires U and V, U and W, and V, and W.

The resistance value of the windings should be balanced (equal +/-20%). If the resistance values are not equal, verify the wiring and connections to the compressor as well as the compressor itself. Repair or replace as needed.

Step 3

Reconnect the wiring to the IPM at the conclusion of the test.

Checking the EEV Coil

Step 1


Disconnect the EEV coil from the PCB for this test. Failure to do so may provide inaccurate readings.

Step 2

Measure the resistance between 6 and 4, 6 and 2, 5 and 3, 5 and 1, and the resistance between them is roughly the same, all less than 100 Ohm.

Step 3

Re-seat the plug on the connector at the conclusion of the test.

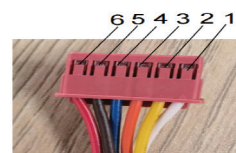

Outdoor Fan Motor

Check that the wiring and plug connections are in good condition.

If the outdoor unit fan motor does not run, or the Service Monitor Board indicates an error code of 09, check the following voltages at connector CN11 on the outdoor unit PCB. Set the meter to read DC volts with a minimum voltage range of 350 volts. All voltage values are approximate. Initiate forced cooling.

1. DC voltage between the Red and Black wire, White and Black, and Red and Black wire connections should read 310 ~ 334 VDC.



If the outdoor fan initially runs, increases speed, then stops, and the Service Monitor Board indicates an error code of 09, the feedback circuit is not functioning. Check that the wiring and plug connections are in good condition.

Checking the Compressor Heater

Use a multimeter to measure the resistance at both ends of the heating wire harness terminal of the compressor. The resistance value is 2400Ω ±5%.



Checking the Basepan Heater


Use a multimeter to measure the resistance at both ends of the heating wire harness terminal. The resistance value is $352.6\Omega \pm 5\%$.



Checking the Reactor

Use a multimeter to test the resistance between two terminals of a reactor. The maximum resistance is $130m\Omega$.



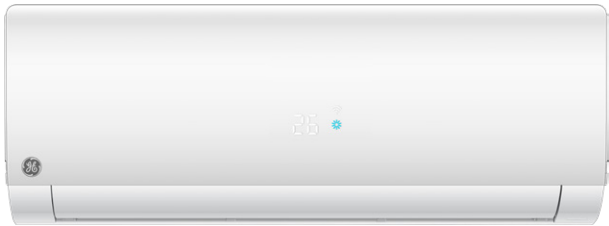

GS09WB2BEA
GS12WB2BEA
GS18WB2BEA
GS24WB2BEA
GS30WB2BEA
GS36WB2BEA

TABLE OF CONTENTS

COMPONENTS C2

Indoor Component Identification.....C2

Terminal Block.....C3

DisplayC3

Ambient Temperature SensorC3

Piping Temperature SensorC3

Louver Stepper MotorC4

Fan MotorC4

Emergency Button.....C4

Indoor Unit Control BoardC5

WIRING DIAGRAM.....C7

DIP SWITCH SETTINGS C8

SERVICE PROCEDURES C9

Checking the Indoor Unit Sensors.....C9

Checking the Stepper Motors.....C9

The indoor unit is mounted high on the wall to provide comfort and air movement within the conditioned space. Features of the system include: Variable speed blower operation that speeds up and slows down with changes in demand, moving louvers to direct air, indoor air temperature sensing, evaporator coil temperature sensing, a status display, evaporator coil with metering device located in outdoor unit, and an emergency operation button.

Indoor Component Identification

1 Ambient Temperature Sensor

2 Display Panel

3 Fan Motor




4 Louver Motors

5 Power Control Board (PCB)

6 Piping Temperature Sensor

7 Terminal Block

8 R454B Leakage sensor

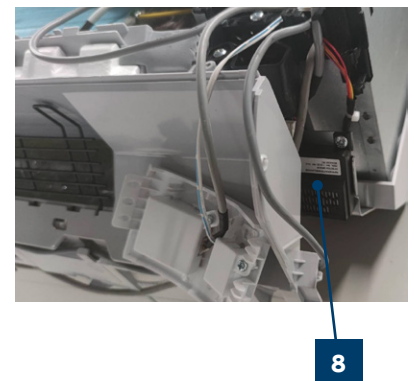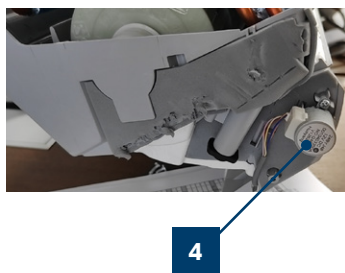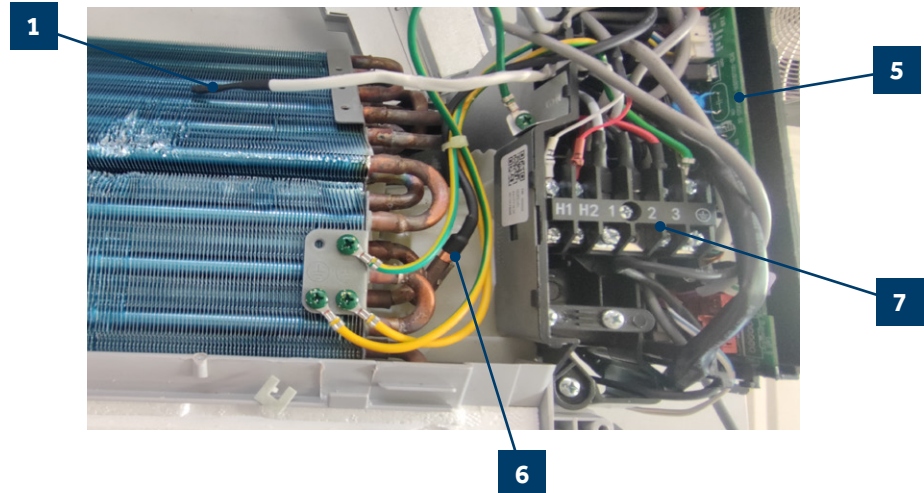


Terminal Block



The unit terminal block receives electrical power from the outdoor unit. There are 4 connections for electrical wires. Terminals 1 and 2 are connected to terminals 1 and 2 of the outdoor unit. This wiring supplies power to the indoor unit.

Terminal 3 is a communication wire. The indoor unit sends indoor air temperature, coil temperature and temperature setpoint information to the outdoor unit on this wire. If a splice or break in this wire is present, the indoor unit will not be able to communicate with the outdoor unit. The ERROR CODE will be an E7.


Display

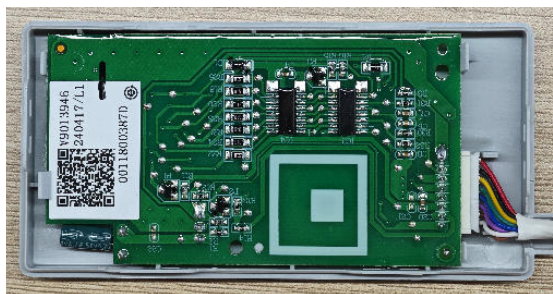

The indoor display has an infrared communication circuit that receives The indoor display has an infrared communication circuit that receives operating commands from the remote control. This display will indicate operating modes, error codes, indoor air temperature, timer status, and power status.

The display board connects to the control board at Plug CN-7.

Ambient Temperature Sensor

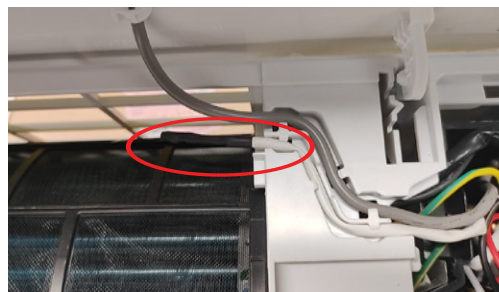

The Ambient (room) Temperature Sensor is a negative coefficient thermistor that will decrease in resistance with increases in room air temperature. The sensor is located on a clip mounted in the return air stream.

The sensor connects to the control board at Plug CN-6.

Piping Temperature Sensor



The Piping Temperature Sensor is a negative coefficient thermistor that will decrease in resistance with increases in coil temperature. The sensor is located in a socket soldered to the surface of the indoor coil.

This sensor will monitor the temperature of the indoor coil in both cooling and heating modes of operation. Should abnormally cold or hot coil temperature be detected by this sensor, the system will take steps to correct the condition or report an ERROR CODE.

The sensor connects to the control board at Plug CN-6.


Louver Stepper Motor

The motor moves the louver side to side depending upon selections made at the remote control.

These motors are connected at CN-5.

Emergency Button


If the remote control is non-functional, the Emergency Button can be used. 73 -78°F will be maintained, until commands are received via the remote control.

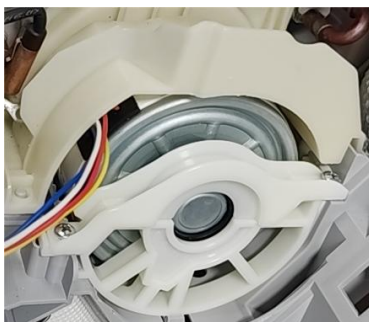Fan Motor


The Fan Motor is a variable speed motor. Fan speed will vary depending upon the temperature variation from set point, or can be set with the remote control to maintain a single set speed.

The Fan Motor is connected to the indoor control board via PLUG CN-9.

Indoor Unit Control Board

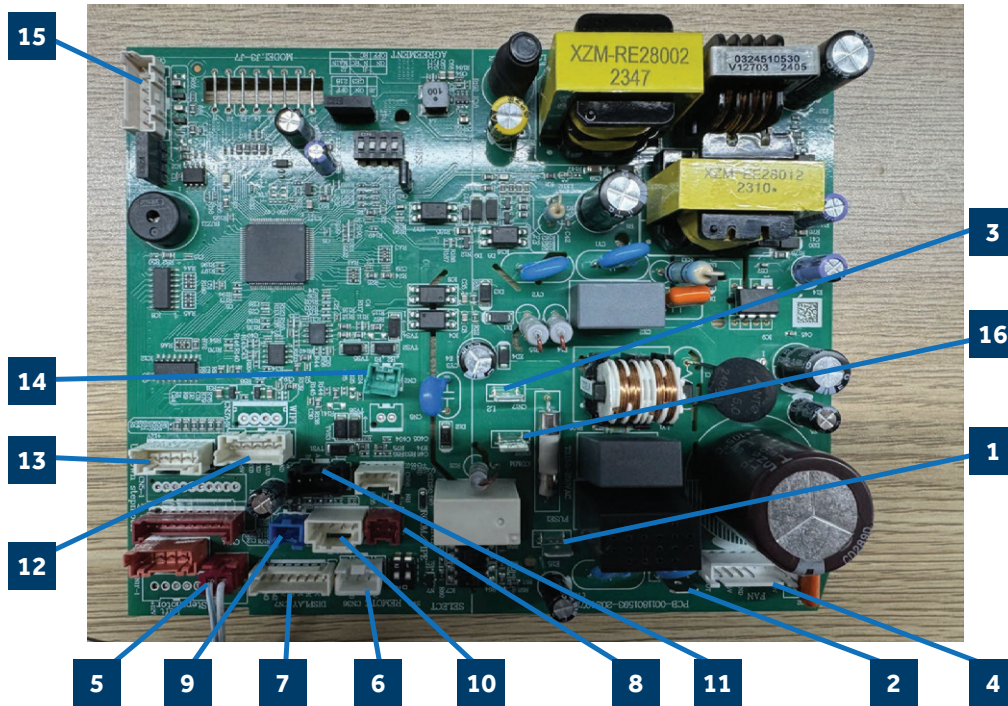


- | | |
|--|--|
| 1 CN21: 208/230 AC power from terminal block connections 1(L1) | 9 CN51: Connector for the room cord |
| 2 CN27: Connector for GND | 10 CN6: Connector for the temperature sensor |
| 3 CN23: Communication connection between the indoor board and the outdoor board | 11 CN3: Connector for the leakage sensor |
| 4 CN9: Connector for fan motor | 12 CN35: Connector for the WIFI |
| 5 CN14: Connector for emergency switch | 13 CN5: Connector for the up-down step motor |
| 6 CN36: Connector for the centralized controller | 14 CN2: Connector for the OTA |
| 7 CN7: Connector for the display board | 15 CN38: Connector for the RJ45 |
| 8 CN1: Connector for non-polar wire controller | 16 CN17: 208/230 AC power from terminal block connections 2(L2) |

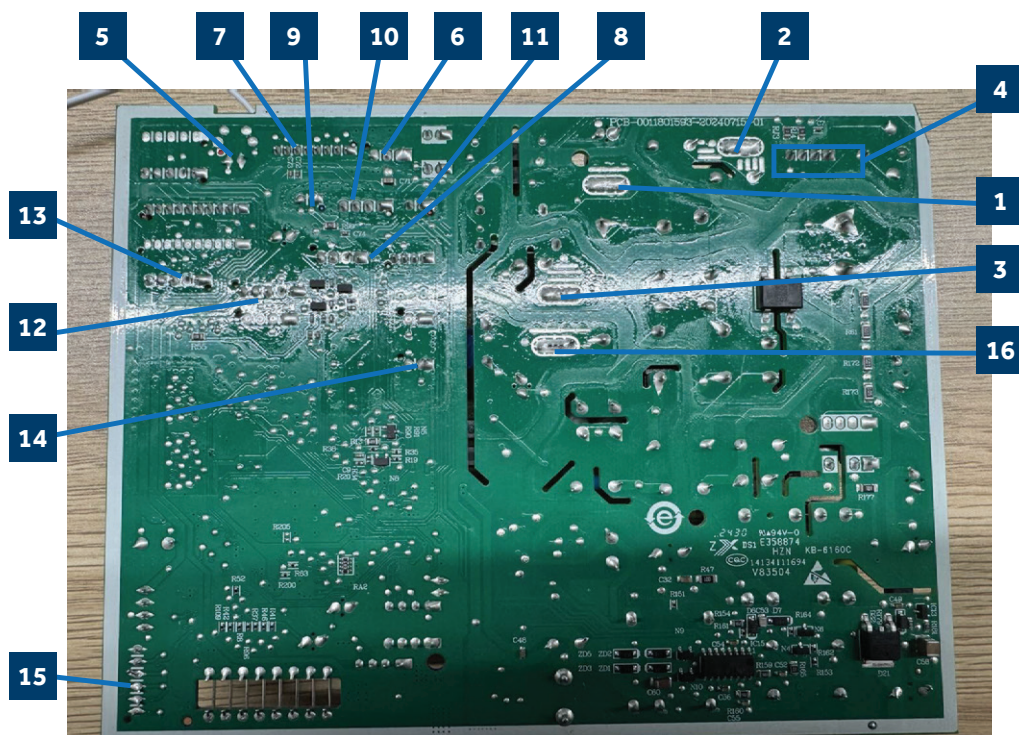


- | | |
|--|--|
| 1 CN21: 208/230 AC power from terminal block connections 1(L1) | 9 CN51: Connector for the room cord |
| 2 CN27: Connector for GND | 10 CN6: Connector for the temperature sensor |
| 3 CN23: Communication connection between the indoor board and the outdoor board | 11 CN3: Connector for the leakage sensor |
| 4 CN9: Connector for fan motor | 12 CN35: Connector for the WIFI |
| 5 CN14: Connector for emergency switch | 13 CN5: Connector for the up-down step motor |
| 6 CN36: Connector for the centralized controller | 14 CN2: Connector for the OTA |
| 7 CN7: Connector for the display board | 15 CN38: Connector for the RJ45 |
| 8 CN1: Connector for non-polar wire controller | 16 CN17: 208/230 AC power from terminal block connections 2(L2) |

INDOOR UNIT WIRING DIAGRAM

0011534809D

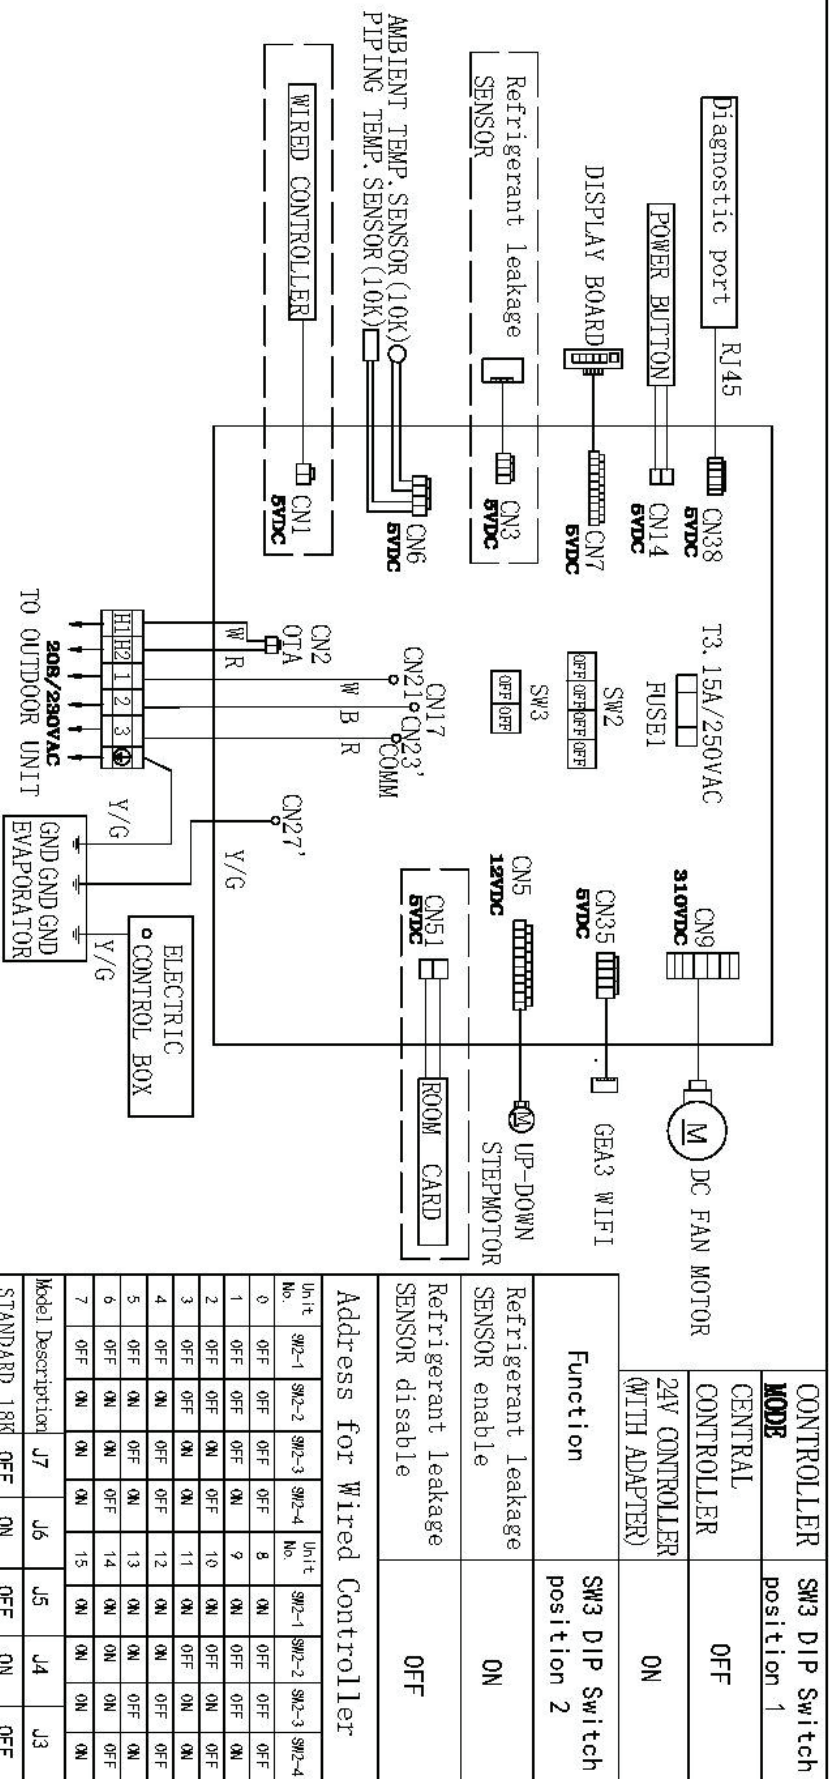

Note: Before replacing the board, ensure the jumper wires are cut to match the model description.	Remarque: avant de remplacer la carte, assurez-vous que les fils de raccordement sont coupés pour correspondre à la description du modèle ci-dessous.	Nota: antes de reemplazar la placa, asegúrese de que los cables puente estén cortados para que coincidan con la descripción del modelo a continuación.	W: WHITE Y/G: YELLOW/GREEN R: RED B: BLACK	Notes: 1. The dotted parts are optional. 2. The two pins of CN51 should be shorted, when the J1 is cut. 3. Before replacing the board, it is necessary to ensure that the machine is matched with the board code.
---	---	--	---	--

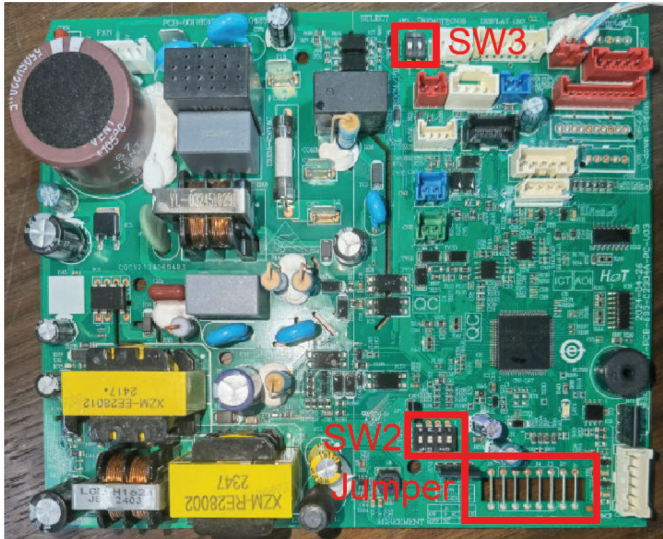

DIP SW2

SW2-1	SW2-2	SW2-3	SW2-4	Setting	Description
OFF	OFF	OFF	OFF	0#	Default
OFF	OFF	OFF	ON	1#	
OFF	OFF	ON	OFF	2#	
OFF	OFF	ON	ON	3#	
OFF	ON	OFF	OFF	4#	
OFF	ON	OFF	ON	5#	
OFF	ON	ON	OFF	6#	
OFF	ON	ON	ON	7#	
ON	OFF	OFF	OFF	8#	
ON	OFF	OFF	ON	9#	
ON	OFF	ON	OFF	10#	
ON	OFF	ON	ON	11#	
ON	ON	OFF	OFF	12#	
ON	ON	OFF	ON	13#	
ON	ON	ON	OFF	14#	
ON	ON	ON	ON	15#	

DIP SW3

SW3-1	SW3-2	Setting	Description
OFF	--	Central Controller	Default
ON	--	24v Controller	
--	OFF	Refrigerant Leak Detector Disable	Default
--	ON	Refrigerant Leak Detector Enable	

Jumpers J1, J2, J8

J1	J2	J8	J4	Setting	Description
OFF	--	--	--	Room Card Valid	
ON	--	--	--	Room Card Invalid	Default
--	OFF	--	--	Sub	
--	ON	--	--	Main	Default
--	--	OFF	--	WiFi 2.18 Protocol	
--	--	ON	--	WiFi GE3 Protocol	Default

Jumpers J3-J7

J7	J6	J5	J4	J3	Setting
OFF	OFF	ON	ON	OFF	Altitude 06K
OFF	OFF	ON	ON	ON	Altitude 09K
OFF	OFF	OFF	OFF	OFF	Altitude 12K
OFF	ON	OFF	OFF	ON	Altitude 15K
OFF	ON	OFF	ON	OFF	Altitude 18K
OFF	ON	OFF	ON	ON	Altitude 24K
OFF	ON	ON	OFF	OFF	Altitude 30K
OFF	ON	ON	OFF	ON	Altitude 36K
OFF	ON	ON	ON	OFF	Reserved
OFF	ON	ON	ON	ON	Reserved
ON	OFF	OFF	OFF	OFF	Reserved
ON	OFF	OFF	OFF	ON	Reserved
ON	OFF	OFF	ON	OFF	Reserved
--	--	--	--	--	Reserved
ON	ON	ON	ON	ON	Reserved

Testing of the following components requires the use of an ohmmeter and k-type temperature probe.

NOTE: When using the test probes, probe the back or side contacts of the plug to obtain the reading. Do not try to probe the connector end of the plug, as this may damage the contacts.

Checking the Indoor Unit Sensors

NOTE: Use respective temperature / sensor chart for sensor type being tested.

- Coil sensor
- Ambient sensor

Step 1

Disconnect the sensor from the PCB for this test. Failure to do so may provide inaccurate readings.

Step 2

Determine the temperature of the sensor being tested.

Step 3

Check the resistance value of the sensor.

Step 4

Referring to the temperature / resistance table for the sensor being checked, verify the resistance value corresponds to the temperature checked in step 2.

Replace the sensor if the reading is open, shorted, or outside

Step 5

Re-seat the plug on the PCB at the conclusion of the test.

Checking the Stepper Motors

Step 1

Disconnect the Stepper Motor plug PCB for the test. Failure to do so may provide inaccurate readings.

Step 2

Refer to the chart shown below for plug pin combinations and resistance values.

	Red
Blue	200 Ω
Violet	200 Ω
Yellow	200 Ω
Orange	200 Ω

Step 3

Re-seat the plug on the connector at the conclusion of the test.



US09CB2BEA
US12CB2BEA
US18CB2BEA
US24LB2BEA
US30LB2BEA
US36LB2BEA

TABLE OF CONTENTS

COMPONENTSD2

Indoor Component Identification..... D2

Terminal Block..... D3

Blower Motor..... D3

Display D3

Blower Assembly D3

Louver Motors..... D3

Piping Temperature Sensor D3

Ambient Temperature Sensor D3

Control Board..... D4

Condensate Pump & Float Switch D4

WiFi..... D4

Refrigerant Leakage Detector D4




PCB Overview D5

WIRING DIAGRAM.....D6

DIP SWITCH & JUMPER SETTINGSD7

Indoor Component Identification

US09CB2BEA / US12CB2BEA / US18CB2BEA / US24LB2BEA / US30LB2BEA / US36LB2BEA

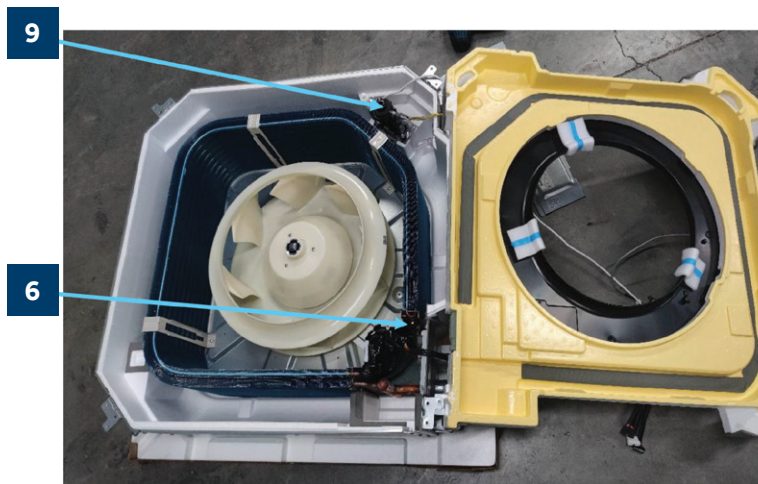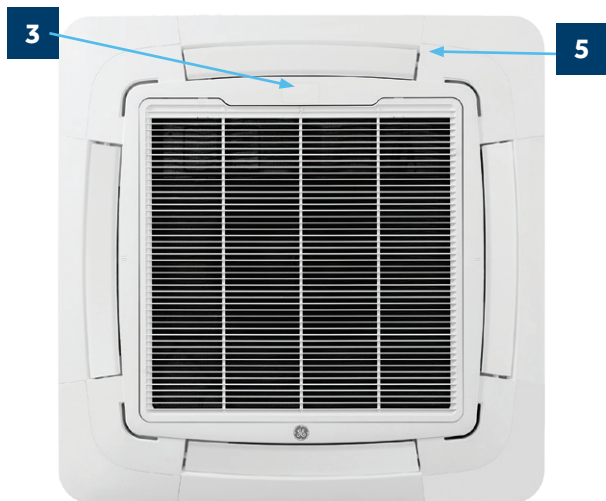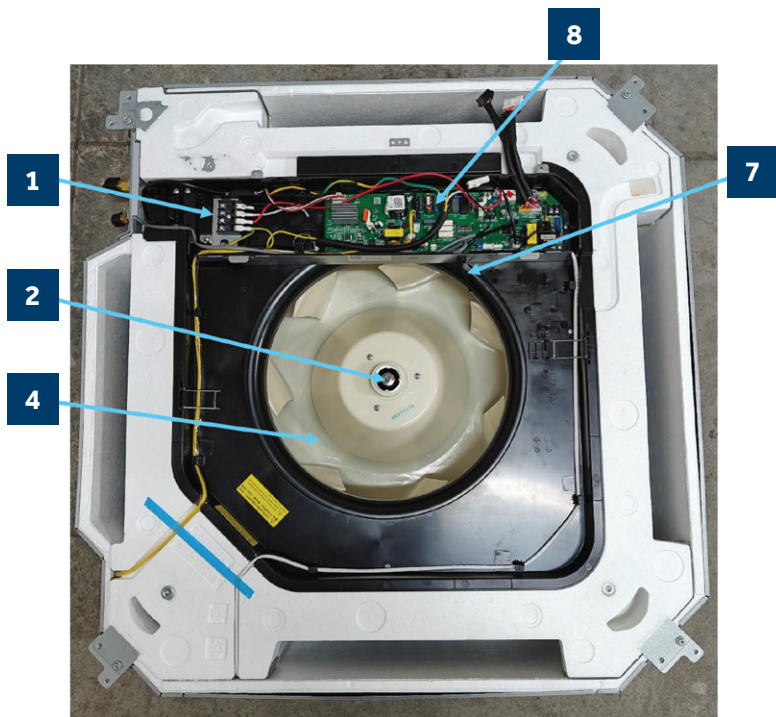

1 Terminal Block

Power to operate the indoor unit comes from the line voltage terminal block at the outdoor unit. The wiring includes 4 wires: 1, 2, 3 and ground. Wires 1 and 3 complete the data path. These wires should always be 14 gauge AWG stranded cooper, non-shielded type wire. Splices in wires 1 or 3 may cause communication errors.

2 Blower Motor

The multi-speed blower motor will change speed to match the capacity demand from the outdoor unit. The blower motor is controlled by both the remote control and by commands from the outdoor unit ECU. The indoor blower motor is connected to the indoor unit control board. The wiring from the motor to the indoor board consists of four wire connected to pins Common, Low, Medium, and High speeds. During normal operation, the indoor control board will energize the indoor blower motor and request proper speed. The motor has a run capacitor that is located in the cassette unit's control box. The run capacitor connects to the motor via two orange wires. The capacitor is field-replaceable.

3 Display

The indoor unit has a display that communicates system mode. The indoor unit does not display temperatures or diagnostic codes. When a wired controller is used, this information is displayed on the wired controller. It is recommended to use a wired controller with the cassette unit. When servicing a diagnostic error, ALWAYS refer to the outdoor unit code to make diagnostic decision

4 Blower Assembly

The blower assembly consists of a plastic blower wheel that is connected to a PSC indoor blower motor. A set screw holds the blower wheel to the blower motor.

5 Louver Motors

The louver motors are stepper type motors that move the louvers up/down. The motors are controlled by pulsed voltage that cannot be measured. If the louver does not move when it should, check for a bind in the louvers.


6 Piping Temperature Sensor

The Piping Temperature Sensor senses indoor coil temperature in the cooling mode and in the heating mode. This sensor is used for Anti Freezing and Anti Cold Blow cycles. The sensor also provides critical temperature information to the ECU that may be used in frequency adjustments.

7 Ambient Temperature Sensor

The Ambient Temperature Sensor senses room temperature. This sensor provides room temperature information to the ECU for calculation of inverter capacity and temperature control. Both sensors are negative temperature coefficient type that reduce electrical resistance as temperature rises.

8 Control Board

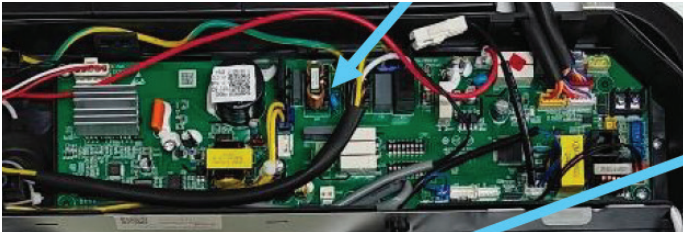

The indoor unit circuit board controls the switching functions of the indoor unit. All control decisions are made by the outdoor unit ECU. The indoor board has some limited diagnostic capability which will be covered in this manual.

9 Condensate Pump & Float Switch



In cooling mode (including automatic cooling operation and emergency switch setting cooling mode and dehumidification mode), the pump operates when the compressor is on, and the pump 5 minutes after. For other modes such as conversion heating pump, it also continues to operate for 5 minutes after.

Cooling standby, heating and fan mode, the pump does not run. When the float switch is opened, the water tank is full.

After the controller detects this signal for 2 seconds, the pump starts to work. After the float recovers, the pump continues to work 5 for an additional minutes.

Continuous detection of water full signal for more than 5 minutes, will stop the compressor. The pump continues to operate for 5 minutes. If the float switch is still open or disconnected, the drainage system is reported to be faulty. After the fault, the pump continues to operate until it is detected that the float switch is closed or for 5 minutes.

10 WiFi



Receives and sends wireless signals to enable APP control of system operation

11 Refrigerant Leakage Detector



Detects the concentration of refrigerant in the air. When the refrigerant leakage sensor detects a concentration = 10% of lower flammability limit, an alarm is triggered.

bA No refrigerant leakage detector is installed.

1. The sensor is not detected.
2. If the bA fault is still reported, the refrigerant sensor is abnormal.

AA LFL leakage higher than X% is detected.

1. Cut off the refrigerant, whether Ab is displayed after the refrigerant drops. If so, the sensor is normal; If Ab is not displayed consistently after the refrigerant concentration decreases, the detector is abnormal and needs to be replaced.

AC Communication failure.

1. Check wiring connections. If the fault persists, replace the sensor cable.

Ad Self-check fault.

1. The refrigerant sensor is missing (open circuit), install a new detector.
2. Detector bypass (short circuit). Replace the detector wiring harness. If the fault persists, replace the detector.
3. Detector output exceeds the declared range of the sensor or the expected state is abnormal, replace the refrigerant sensor.

AE/AF Detector life warning


1. The fault is cleared after a new sensor is installed. If the fault persists, it may be a drive board fault.

Dip Switch SW1-5:

- 0: Refrigerant leakage detector function valid
- 1: Refrigerant leakage detector function invalid

PCB Overview

0151800985

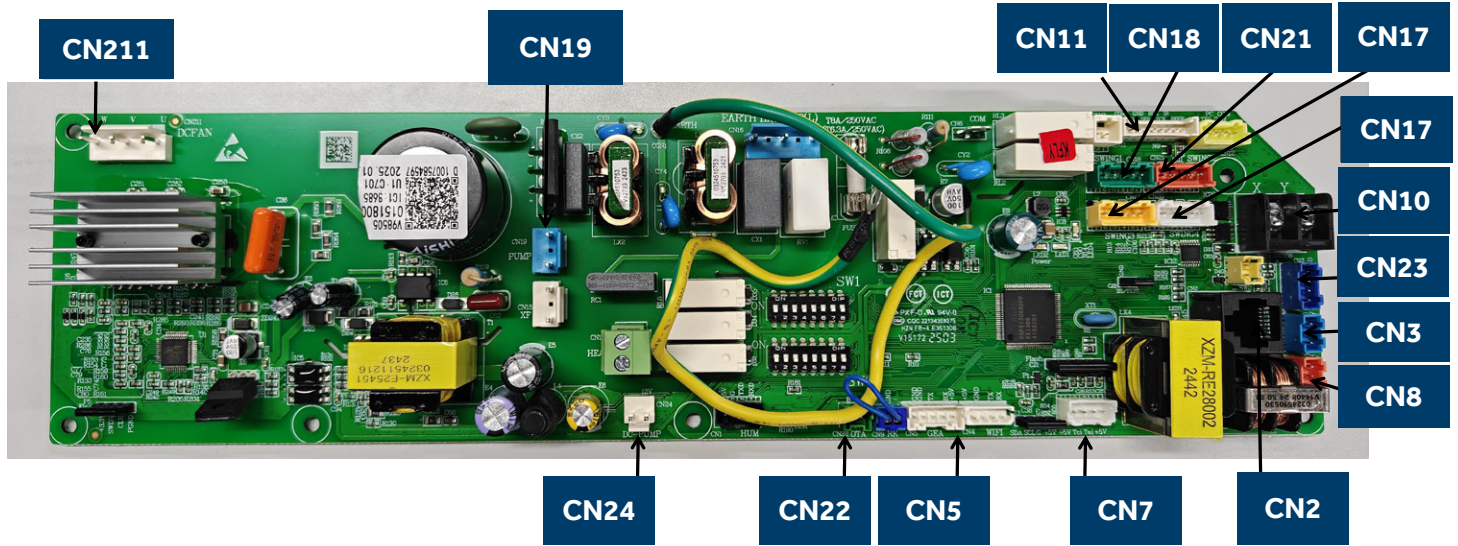


CN2	RJ45 Communication
CN3	Remote Control
CN5	WiFi
CN7	Sensor
CN8	Float Switch
CN10	Wired Controller
CN11	Light Board
CN17	Swing Motor
CN18	Swing Motor
CN19	AC Drain Pump
CN20	Swing Motor
CN21	Swing Motor
CN22	OTA485 Communication
CN23	Refrigerant Sensor
CN24	DC Drain Pump
CN211	Fan Motor

WIRING DIAGRAM

US09CB2BEA / US12CB2BEA / US18CB2BEA / US24LB2BEA / US30LB2BEA US36LB2BEA

0150577394

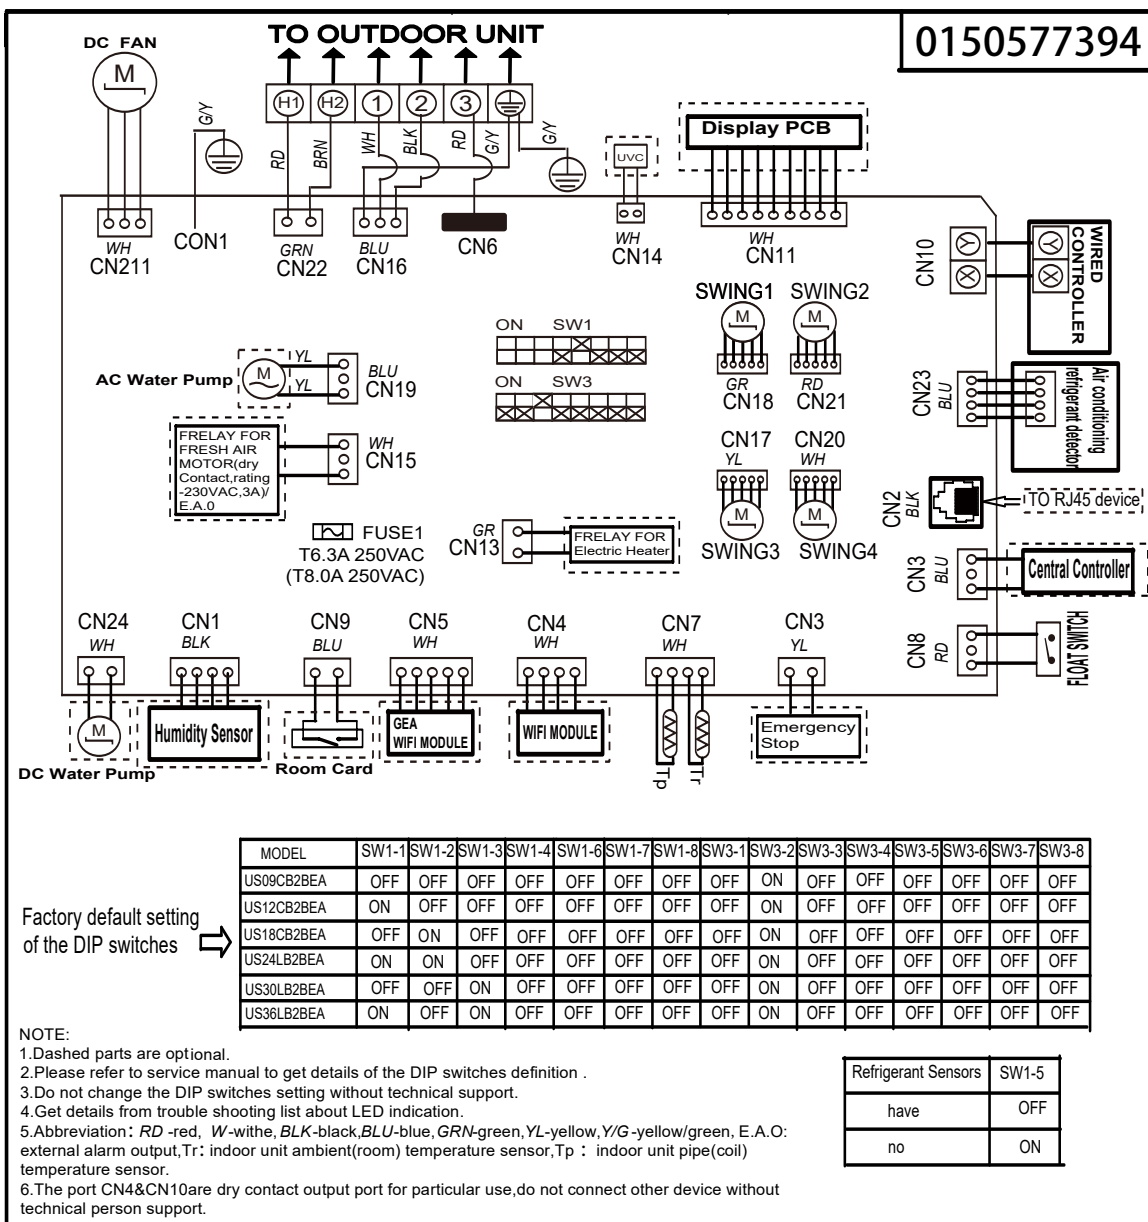

DIP SW1

SW1-1	SW1-2	SW1-3	SW1-4	SW1-5	SW1-6	SW1-7	SW1-8	Description
OFF	OFF	OFF	-	-	-	-	-	09K
ON	OFF	OFF	-	-	-	-	-	12K
OFF	ON	OFF	-	-	-	-	-	18K
ON	ON	OFF	-	-	-	-	-	24K
OFF	OFF	ON	-	-	-	-	-	30K
ON	OFF	ON	-	-	-	-	-	36K
-	-	-	OFF	-	-	-	-	Room Card Valid
-	-	-	ON	-	-	-	-	Room Card Invalid
-	-	-	-	OFF	-	-	-	Refrigerant Detector Functional
-	-	-	-	ON	-	-	-	The Refrigerant Detector Invalid
-	-	-	-	-	OFF	-	-	Fresh Air
-	-	-	-	-	ON	-	-	Fault Alarm
-	-	-	-	-	-	OFF	-	None - Filter Alarm Reminder + Refrigeration Fan Stops
-	-	-	-	-	-	ON	-	Filter Alarm Reminder + Refrigeration Fan Does Not Stop
-	-	-	-	-	-	-	OFF	Us Models
-	-	-	-	-	-	-	ON	Non-Us Models

DIP SW3

SW3-1	SW3-2	SW3-3	SW3-4	SW3-5	SW3-6	SW3-7	SW3-8	Description
OFF	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Valid
ON	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Invalid
-	OFF	-	-	-	-	-	-	Cassette Single Swing Wind - Synchronized Swing Of Swing Blades
-	ON	-	-	-	-	-	-	Cassette Unit Four Swing Wind - Four Swing Blades Swing At Different Angles, Misaligned Swing
-	-	OFF	-	-	-	-	-	Electrical Heating: Invalid
-	-	ON	-	-	-	-	-	Electrical Heating: Valid
-	-	-	OFF	-	-	-	-	Model: Ultra-Slim Ducted Unit With 4-Level Static Pressure
-	-	-	ON	-	-	-	-	Model: Medium Static Pressure Duct With 10-Level Static Pressure Adjustment
-	-	-	-	OFF	OFF	OFF	OFF	0# (Wired Control Main) (Default)
-	-	-	-	OFF	OFF	OFF	ON	1# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	OFF	2# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	ON	3# (Line-Controlled Sub Machine)
-	-	-	-	-	-	-	-	--
-	-	-	-	ON	ON	ON	ON	15# (Line-Controlled Sub Machine)

SW3_1 The fan selection function in cooling mode is only applicable to duct and slim duct.


SW3_4 Only applicable to slim duct

Jumper Settings - Model Identification

RJ1	RJ2	RJ3	SW3-2	SW3-3	Description
OFF	OFF	OFF	OFF	OFF	Crane
OFF	OFF	OFF	OFF	ON	Cassette With 1 Oscillating Wind
OFF	OFF	OFF	ON	OFF	Cassette With Four-Way Oscillating Wind
OFF	OFF	OFF	ON	ON	Cassette With Light Panel
OFF	OFF	ON	OFF	OFF	Console
OFF	ON	OFF	OFF	OFF	Small Duct
OFF	ON	OFF	OFF	ON	High-Capacity Duct
-	-	-	-	-	Reserve

Suitable for convertible, 2HP cassette (matched with single swing wind), 2HP cassette (matched with four swing wind), 3HP cassette (equipped with display board). For example, if the convertible has 0 0 0 0, the resistance should be welded RJ1/RJ2/RJ3. Simultaneously dial the second digit of code BM3 to OFF and the third digit to OFF. The same setup method is used for other models.

[This page left intentionally blank]

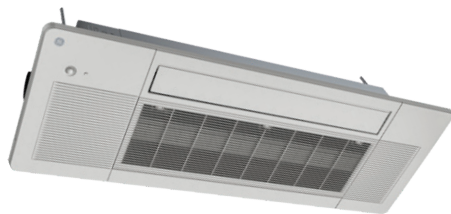

US09AB2BEA
US12AB2BEA
US18AB2BEA

TABLE OF CONTENTS





COMPONENTS	E2
Indoor Component Identification.....	E2
Ambient Temperature Sensor	E3
Display	E3
Fan Motor	E3
Louver Stepper Motors	E3
Power Control Board (PCB)	E3
Piping Temperature Sensor	E3
Terminal Block	E4
Refrigerant Leakage Detector	E4
Wifi.....	E4
Condensate Pump & Float Switch.....	E4
Emergency Button.....	E4
PCB Overview	E5
WIRING DIAGRAMS.....	E7
DIP SWITCH & JUMPER SETTINGS	E9
SERVICE PROCEDURES	E10
Checking the Indoor Unit Sensors.....	E10
Checking the Louver Stepper Motor	E10

COMPONENTS


The indoor unit is installed with screws on ceiling joists or hung up in the ceiling with suspension bolts to provide comfort and air movement within the conditioned space. Features of the system include: Variable speed blower operation that speeds up and slows down with changes in demand, moving louvers to direct air, indoor air temperature sensing, evaporator coil temperature sensing, a status display, evaporator coil with metering device located in indoor unit, and an emergency operation button.

Indoor Component Identification

- 1 Ambient Temperature Sensor
- 2 Display
- 3 Fan Motor
- 4 Louver Motors (Up&Down)
- 5 Power Control Board (PCB)
- 6 Piping Temperature Sensor
- 7 Terminal Block
- 8 R454B Leakage Sensor (if necessary)
- 9 Wifi
- 10 Condensate Pump & Float Switch
- 11 Emergency Button
- 12 Louver Motors (Left&Right)

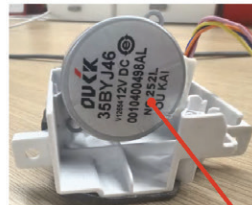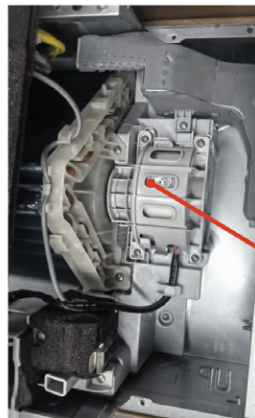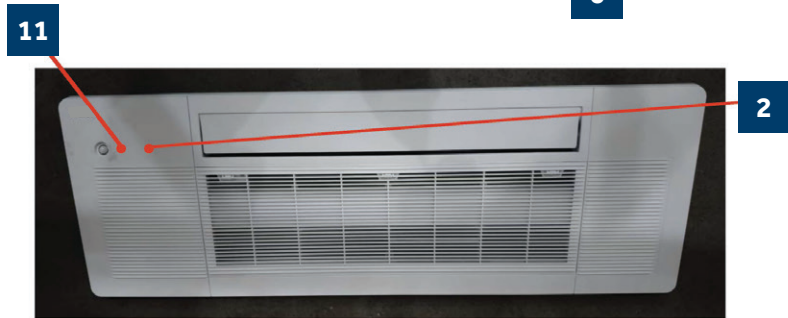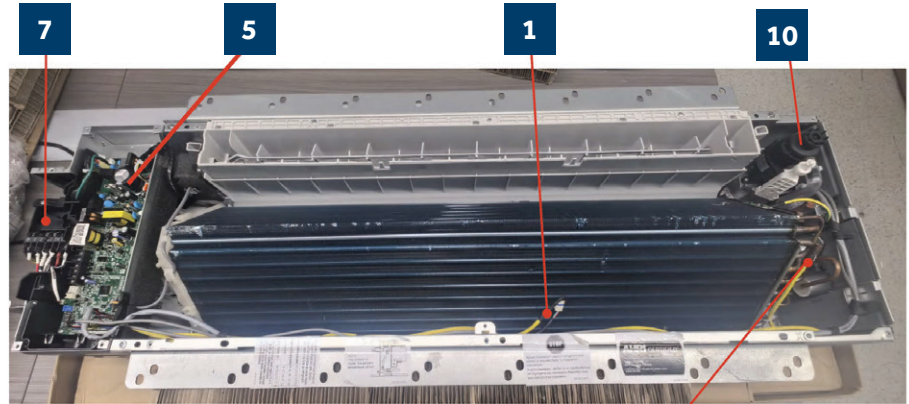

1 Ambient Temperature Sensor

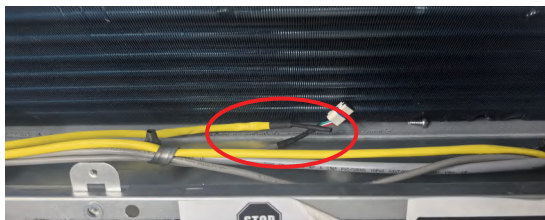

The Ambient (Room) Temperature Sensor is a negative coefficient thermistor that will decrease in resistance with increases in room air temperature. The sensor is located on a clip mounted in the return air stream.

The sensor connects to the control board at Plug CN-6.


2 Display



The indoor display has an infrared communication circuit that receives operating commands from the remote control. This display will indicate operating modes, error codes, indoor air temperature, timer status, and power status.

The display board connects to the control board at Plug CN-4.

3 Fan Motor

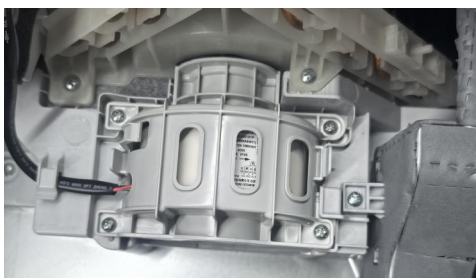

The Fan Motor is a variable speed motor. Fan speed will vary depending upon the temperature variation from set point, or can be set with the remote control to maintain a single set speed.

The Fan Motor is connected to the indoor control board via Plug CN-9.

4 12 Louver Stepper Motors




Up & Down Louver Motors
Plug CN5



Left & Right Louver Motors
Plug CN11

The motors moves the louver side to side depending upon selections made at the remote control.

5 Power Control Board (PCB)

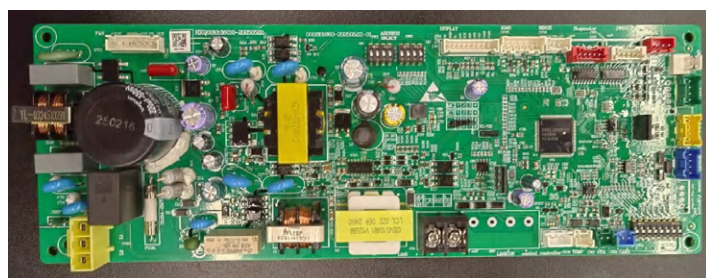

The indoor unit circuit board controls the switching functions of the indoor unit. All control decisions are made by the outdoor unit ECU. The indoor board has some limited diagnostic capability which will be covered in this manual.

6 Piping Temperature Sensor



The Piping Temperature Sensor is a negative coefficient thermistor that will decrease in resistance with increases in coil temperature. The sensor is located in a socket soldered to the surface of the indoor coil.

This sensor will monitor the temperature of the indoor coil in both cooling and heating modes of operation. Should abnormally cold or hot coil temperature be detected by this sensor, the system will take steps to correct the condition or report an ERROR CODE.

The sensor connects to the control board at Plug CN-6.

7 Terminal Block



The unit terminal block receives electrical power from the outdoor unit. There are 4 connections for electrical wires. Terminals 1 and 2 are connected to terminals 1 and 2 of the outdoor unit. This wiring supplies power to the indoor unit.

Terminal 3 is a communication wire. The indoor unit sends indoor air temperature, coil temperature and temperature set point information to the outdoor unit on this wire. If a splice or break in this wire is present, the indoor unit will not be able to communicate with the outdoor unit.

The ERROR CODE will be an E7.

8 Refrigerant Leakage Detector



Detect the concentration of refrigerant in the air. When the refrigerant leakage sensor detects a concentration $\geq 10\%$, an alarm is triggered

bA No refrigerant leakage detector is installed. 1. Whether the refrigerant leakage detector is normal after being installed. If so, the sensor is normal. 2. If the bA fault is still reported, the refrigerant sensor is abnormal.

AA LFL leakage higher than X% is detected. 1. Cut off the refrigerant, whether Ab is displayed after the refrigerant drops. If so, the sensor is normal; If Ab is not displayed consistently after the refrigerant concentration decreases, the detector is abnormal and needs to be replaced.

AC Communication failure. 1. The cable is loose, re-plug. If the fault persists, replace the sensor cable.

Ad Self-check fault. 1. If the refrigerant sensor is missing (open circuit), install a new detector. 2. Detector bypass (short circuit), replace the detector wiring harness. If the fault persists, replace the detector. 3. Detector output exceeds the declared range of the sensor or the expected state is abnormal, replace the refrigerant sensor.

AE/AF Detector life warning. 1 The fault is cleared after the new available sensor. If it couldn't be eliminated, it may be an abnormality of the drive board.

Dip Switch SW2-2:

ON Refrigerant leakage detector function valid

OFF Refrigerant leakage detector function invalid

9 Wifi



Receive and send signals, use the APP to control the air conditioning.

Connects to the control board at Plug CN37

10 Condensate Pump & Float Switch



Cooling mode (including automatic cooling operation and emergency switch setting cooling mode) and dehumidification mode, the pump works when the compressor is on and the pump lags behind for 5 minutes. For other modes such as conversion heating pump, it also continues to operate for 5 minutes according to the relevant order of the mode.

Cooling standby, heating and fan mode, the pump does not run when the float switch is closed. When the water tank is full, the float switch is opened, and after the controller detects this signal for 2 seconds, the pump starts to work. After the float recovers, the pump continues to work with a lag of 5 minutes.

Continuous detection of water full signal for more than 5 minutes, the compressor stops working: After the press stops, the pump continues to operate for 5 minutes. If the float switch is still disconnected, the drainage system is reported to be faulty. After the fault, the pump continues to operate until it is detected that the float switch is closed with a lag of 5 minutes and the pump turns to normal operation mode.

The Condensate Pump connects to the control board at Plug CN20
The Float Switch connects to the control board at Plug CN13


11 Emergency Button



If the remote control is non-functional, the Emergency Button can be used. AUTO mode will be set, until commands are received via the remote control.

Press once (1 beep)	AUTO mode
Press and hold (until 2 beeps)	Forced COOL mode
Press and hold (until 3 beeps)	Error Code Enquiry

PCB Overview

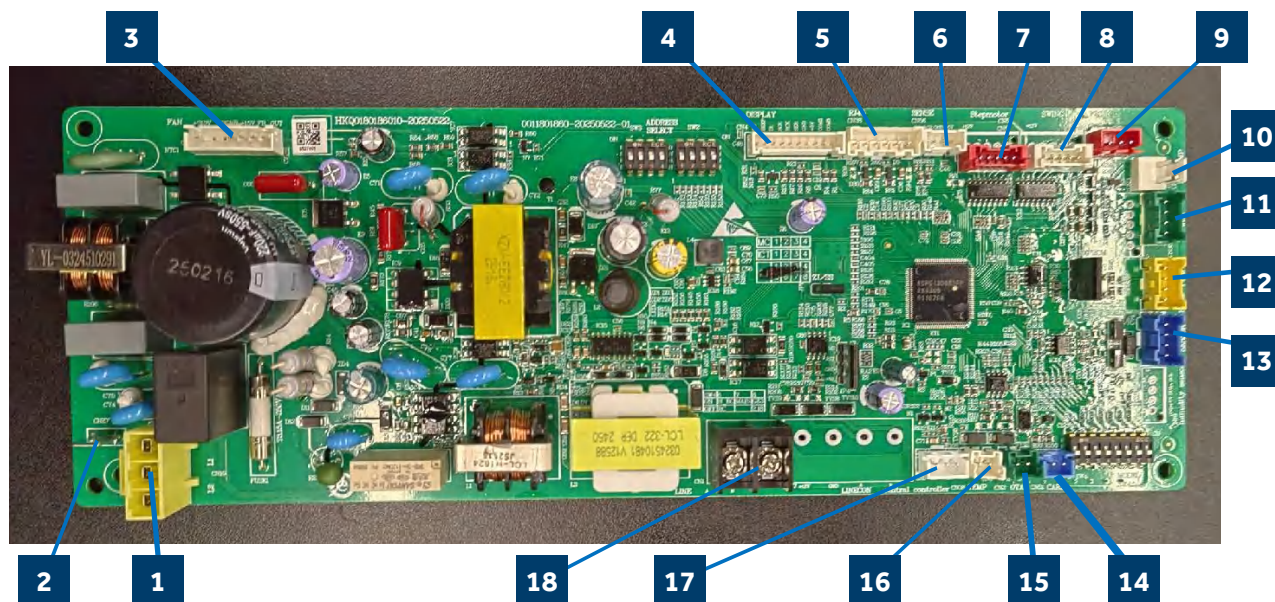

1 CN10: 208/230AC power from terminal block connections 1(L1/L 2/S)

2 CN27: Connector for GND

3 CN9: Connect for the fan motor

4 CN4: Connector for the display board

5 CN38: Connector for the RJ45

6 CN56: Connector for the motion sensor

7 CN5: Connector for the up-down step motor

8 CN11: Connector for the right-left step motor

9 CN13: Connector for the float

10 CN20: Connector for the DC-pump

11 CN37: Connector for the WIFI

12 CN6: Connector for the temperature sensor (room ambient&evaporator pipe)

13 CN3: Connector for the refrigerant leakage sensor


14 CN51: Connector for the room card

15 CN2: Connector for the OTA

16 CN8: Connector for the outlet air temperature sensor

17 CN36: Connector for the central controller

18 CN1: Connector for non-polar wired controller

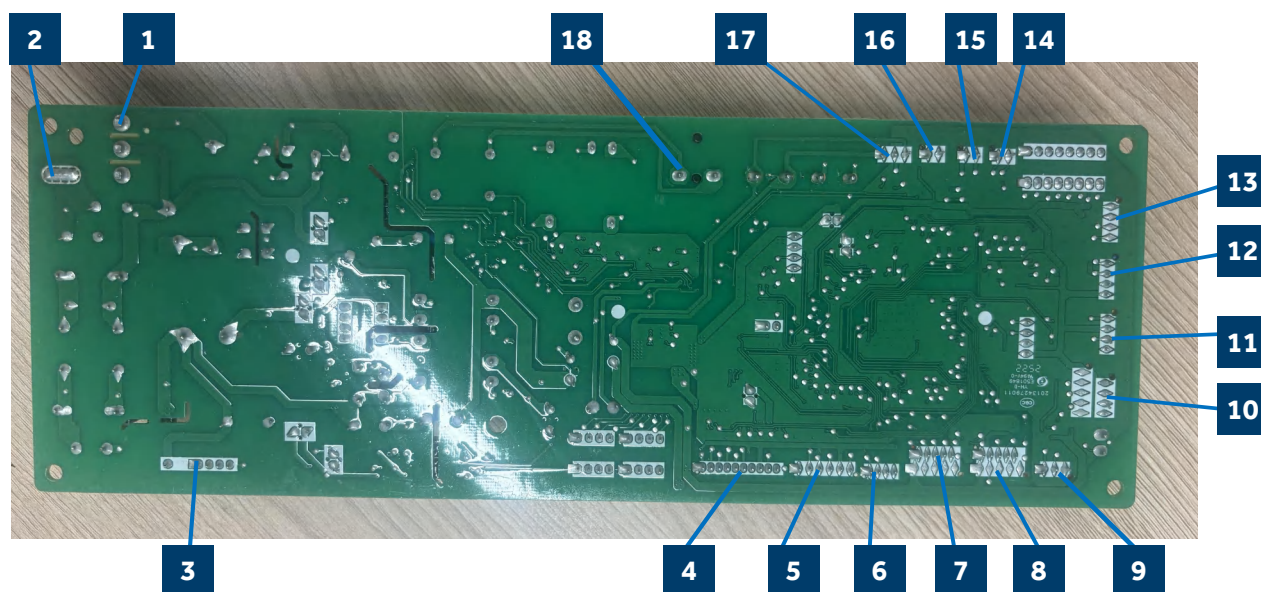

1 CN10: 208/230AC power from terminal block connections 1(L1/L 2/S)

2 CN27: Connector for GND

3 CN9: Connect for the fan motor

4 CN4: Connector for the display board

5 CN38: Connector for the RJ45

6 CN56: Connector for the motion sensor

7 CN5: Connector for the up-down step motor

8 CN11: Connector for the right-left step motor

9 CN13: Connector for the float

10 CN20: Connector for the DC-pump

11 CN37: Connector for the WIFI

12 CN6: Connector for the temperature sensor (room ambient&evaporator pipe)

13 CN3: Connector for the refrigerant leakage sensor

14 CN51: Connector for the room card

15 CN2: Connector for the OTA

16 CN8: Connector for the outlet air temperature sensor

17 CN36: Connector for the central controller

18 CN1: Connector for non-polar wired controller

[illegible]

	1	2	3	4
SW2	RESERVE	REFRIGERANT LEAKAGE SENSOR	HIGH CEILING MODE*	RESERVE
ON	/	AVAILABLE	AVAILABLE	/
OFF	/	UNAVAILABLE	UNAVAILABLE	/

*If the installation height of the unit exceeds 9 feet, it is suggested to set SW2-3 to ON in order to activate the high ceiling mode. For more information, please check the installation manual.

	6	7	8
SW4	ROOM CARD	MASTER-SLAVE SELECTION	RESERVE
ON	AVAILABLE	SUB	/
OFF	UNAVAILABLE	MAIN	/

Description	SW4-1	SW4-2	SW4-3	SW4-4	SW4-5
07K	OFF	OFF	OFF	OFF	OFF
09K	ON	OFF	OFF	OFF	OFF
12K	OFF	ON	OFF	OFF	OFF
18K	ON	ON	OFF	OFF	OFF

Address for Wired Controller									
Unit No.	SW-1	SW-2	SW-3	SW-4	Unit No.	SW-1	SW-2	SW-3	SW-4
0	OFF	OFF	OFF	OFF	8	ON	OFF	OFF	OFF
1	OFF	OFF	OFF	ON	9	ON	OFF	OFF	ON
2	OFF	OFF	ON	OFF	10	ON	OFF	ON	OFF
3	OFF	OFF	ON	ON	11	ON	OFF	ON	ON
4	OFF	ON	OFF	OFF	12	ON	OFF	OFF	OFF
5	OFF	ON	OFF	ON	13	ON	ON	OFF	ON
6	OFF	ON	ON	OFF	14	ON	ON	ON	OFF
7	OFF	ON	ON	ON	15	ON	ON	ON	ON

Note: Before replacing the board, ensure the DIP switch are set to the correct position to match the model description.	Remarque: Avant de remplacer la carte, assurez-vous que les interrupteurs DIP sont réglés à la bonne position pour
---	--

Remarque: Avant de remplacer la carte, assurez-vous que les interrupteurs DIP sont réglés à la bonne position pour correspondre à la description du modèle.	Nota: antes de cambiar la placa, asegúrese de que el interruptor de inmersión está en la posición correcta para que coincida con la descripción del modelo.	Y/G: YELLOW/GREEN R: RED P: PURPLE B: BLACK P: PINK G: GREEN GR: GRAY BL: BLUE BR: BROWN Y: YELLOW O: ORANGE
---	---	--

1. The dotted parts are optional.
2. The two pins of CN54 should be shorted, when the SM4-6 is ON.
3. Before replacing the board, it is necessary to ensure that the machine is matched with the board code.

E8





DIP SW3

SW3-1	SW3-2	SW3-3	SW3-4	Setting	Description
OFF	OFF	OFF	OFF	0#	Default
OFF	OFF	OFF	ON	1#	
OFF	OFF	ON	OFF	2#	
OFF	OFF	ON	ON	3#	
OFF	ON	OFF	OFF	4#	
OFF	ON	OFF	ON	5#	
OFF	ON	ON	OFF	6#	
OFF	ON	ON	ON	7#	
ON	OFF	OFF	OFF	8#	
ON	OFF	OFF	ON	9#	
ON	OFF	ON	OFF	10#	
ON	OFF	ON	ON	11#	
ON	ON	OFF	OFF	12#	
ON	ON	OFF	ON	13#	
ON	ON	ON	OFF	14#	
ON	ON	ON	ON	15#	

DIP SW4

SW4-1	SW4-2	SW4-3	SW4-4	SW4-5	Setting
ON	OFF	OFF	OFF	OFF	09K
OFF	ON	OFF	OFF	OFF	12K
ON	ON	OFF	OFF	OFF	18K
OFF	OFF	ON	OFF	OFF	Reserved
ON	OFF	ON	OFF	OFF	Reserved
OFF	ON	ON	OFF	OFF	Reserved
ON	ON	ON	OFF	OFF	Reserved
OFF	OFF	OFF	ON	OFF	Reserved
ON	OFF	OFF	ON	OFF	Reserved
OFF	ON	OFF	ON	OFF	Reserved
ON	ON	OFF	ON	OFF	Reserved
OFF	OFF	ON	ON	OFF	Reserved
ON	OFF	ON	ON	OFF	Reserved
OFF	ON	ON	ON	OFF	Reserved
...	...	...	...	...	Reserved
ON	ON	ON	ON	ON	Reserved

DIP SW2

SW2-2	SW2-3	Setting	Description
OFF	--	Refrigerant Leakage Sensor Invalid	Default
ON	--	Refrigerant Leakage Sensor Valid	
--	OFF	High Ceiling Mode Invalid	Default
--	ON	High Ceiling Mode Valid	

SW4-6	SW4-7	SW4-8	Setting	Description
OFF	--	--	Room Card Invalid	Default
ON	--	--	Room Card Valid	
--	OFF	--	Main	Default
--	ON	--	Sub	
--	--	OFF	-	Default
--	--	ON	-	

SET FAN SPEED	Actual Fan Speed	
	High Ceiling Mode Deactivated	High Ceiling Mode Activated
Super-Low	Super-low	Low
Low	Low	Medium
Medium	Medium	High
High	High	Turbo
Turbo	Turbo	Turbo
Auto	Auto	1 Level Higher than Auto

Applicable operating modes: Heat, Cool, Dry, Fan, AUTO

Testing of the following components requires the use of an ohmmeter and k-type temperature probe.

NOTE: When using the test probes, probe the back or side contacts of the plug to obtain the reading. Do not try to probe the connector end of the plug, as this may damage the contacts.

Checking the Indoor Unit Sensors

NOTE: Use respective temperature / sensor chart for sensor type being tested.

- Coil sensor
- Ambient sensor

Step 1

Disconnect the sensor from the PCB for this test. Failure to do so may provide inaccurate readings.

Step 2

Determine the temperature of the sensor being tested.

Step 3

Check the resistance value of the sensor.

Step 4

Referring to the temperature / resistance table for the sensor being checked, verify the resistance value corresponds to the temperature checked in step 2.

Replace the sensor if the reading is open, shorted, or outside.

Step 5

Re-seat the plug on the PCB at the conclusion of the test.

Checking the Louver Stepper Motor

Step 1

Disconnect the motor plug PCB for the test. Failure to do so may provide inaccurate readings.

Step 2

Refer to the chart shown below for plug pin combinations and resistance values (+/- 10%).

	Red
Blue	200Ω
Violet	200Ω
Yellow	200Ω
Orange	200Ω

Step 3

Re-seat the plug on the connector at the conclusion of the test.



US09FB2BEA
US12FB2BEA
US18FB2BEA

TABLE OF CONTENTS

COMPONENTS F2

Louver Motor F2

Flap..... F2

Step Motor F2

Electrical Box..... F3

Pipe Bushing..... F3

Joint Connector..... F3

Flap..... F3

Fan Guard F3

Fan Wheel F3


Fan Motor F3

PCB Overview F4

WIRING DIAGRAM..... F5

DIP SWITCH & JUMPER SETTINGS F6


US09FB2BEA / US12FB2BEA / US18FB2BEA

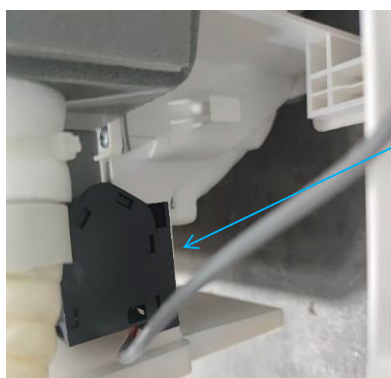

1

1 Louver Motor

The louver motors are stepper type motors that move the louvers up/down. The motors are controlled by pulsed voltage that cannot be measured. If the louver does not move when it should, check for a bind in the louvers.

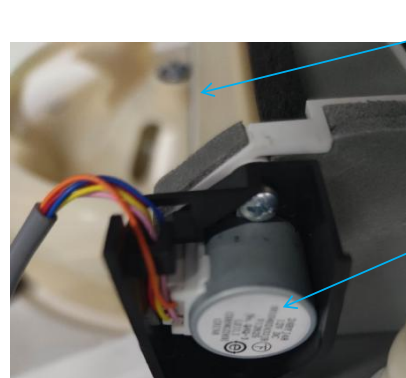


2

3

2 Flap

3 Step Motor

An electric device turning electrical pulses into precise mechanical motions, rotating a fixed angle per pulse, used for accurate control.

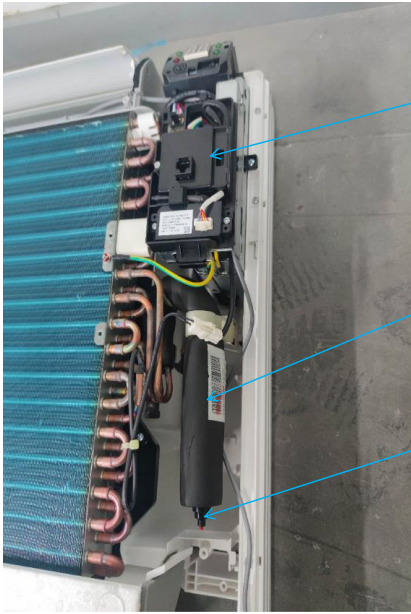

4


5

6

4 Electrical Box


5 Pipe Bushing

6 Joint Connector

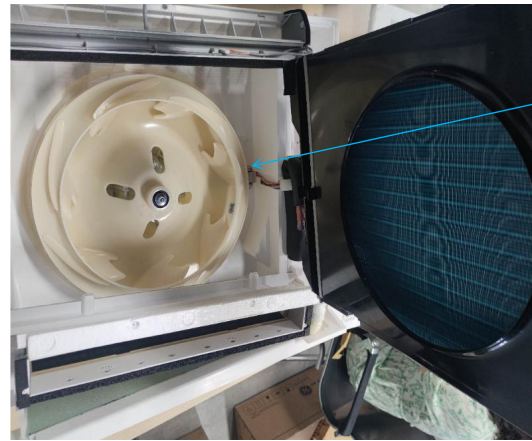

9

9 Fan Wheel

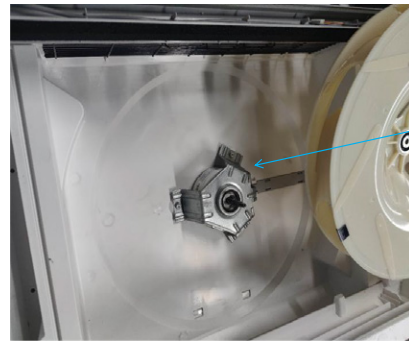

10

10 Fan Motor



7

8

7 Flap


8 Fan Guard

COMPONENTS

PCB Overview


0151800987

US09FB2BEA / US12FB2BEA / US18FB2BEA

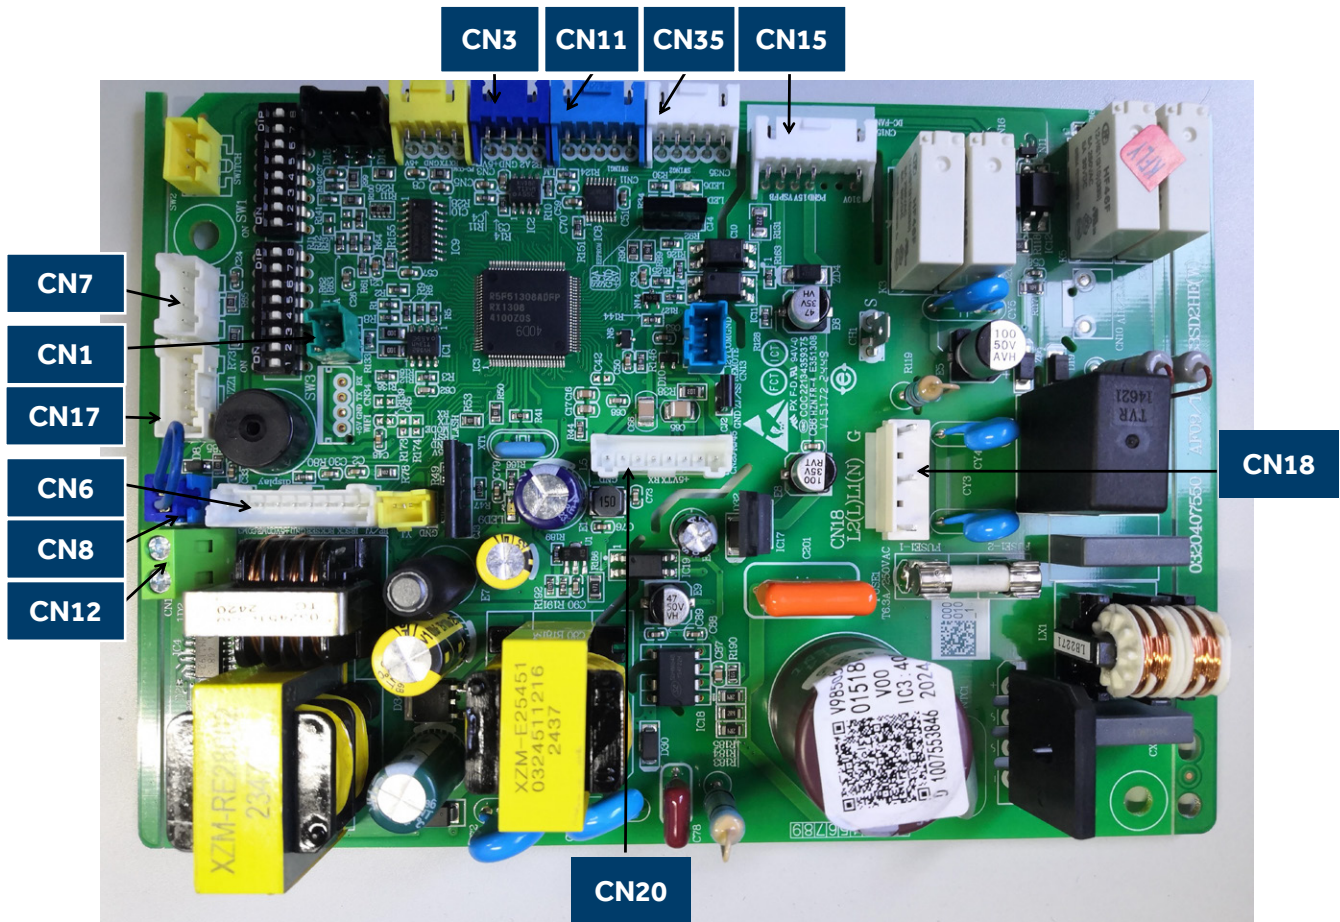

CN1	OTA
CN3	Refrigerant Sensor
CN6	Display Board
CN7	Sensor
CN8	Room Card
CN11	Left and Right Swing
CN12	Wired Controller
CN15	Fan Motor
CN17	WiFi
CN18	Power Supply
CN20	RJ45 Communication CN35 Up-and-Down Swing Motor

US09FB2BEA / US12FB2BEA / US18FB2BEA

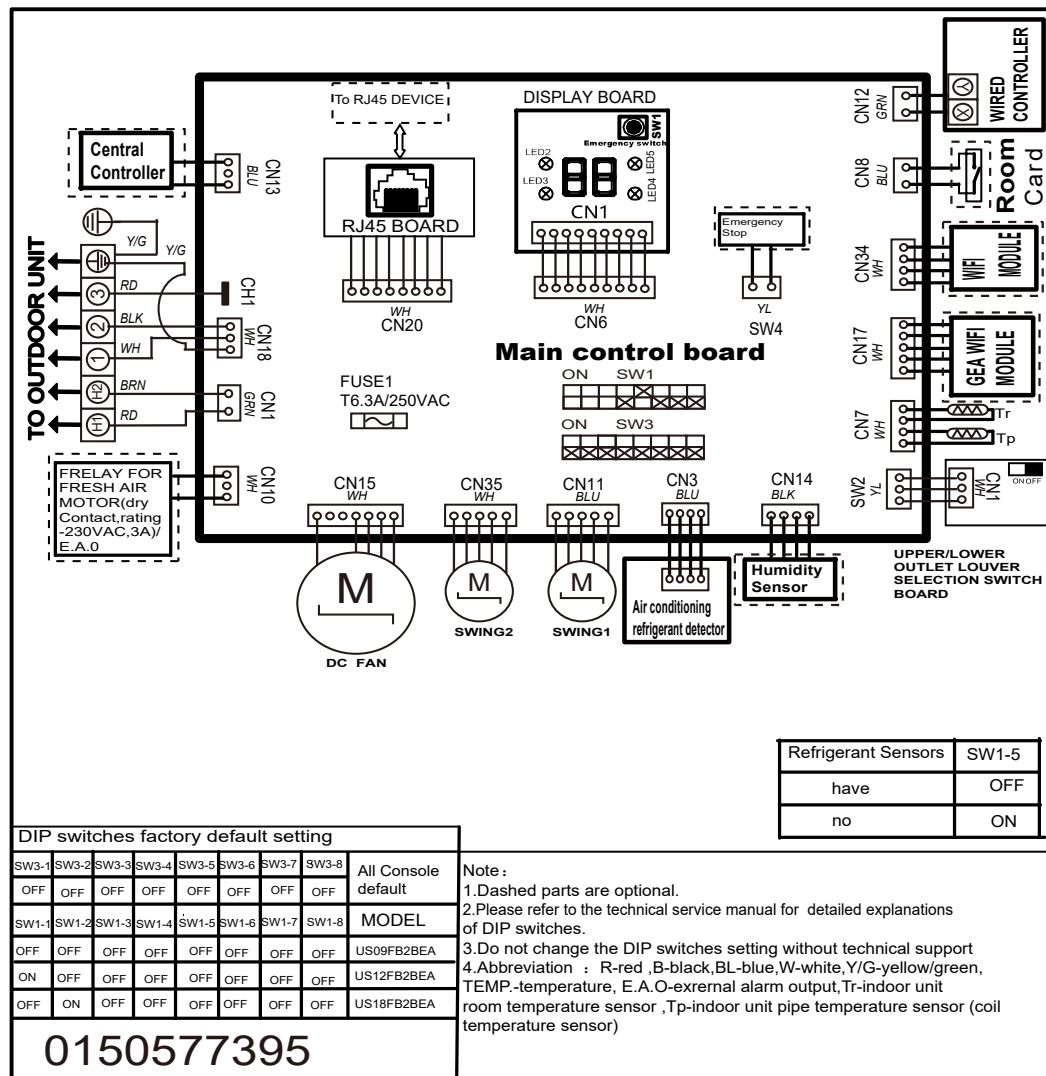

DIP SWITCH & JUMPER SETTINGS

DIP SW1

SW1-1	SW1-2	SW1-3	SW1-4	SW1-5	SW1-6	SW1-7	SW1-8	Description
OFF	OFF	OFF	-	-	-	-	-	09K
ON	OFF	OFF	-	-	-	-	-	12K
OFF	ON	OFF	-	-	-	-	-	18K
-	-	-	OFF	-	-	-	-	Room Card Valid
-	-	-	ON	-	-	-	-	Room Card Invalid
-	-	-	-	OFF	-	-	-	Refrigerant Detector Functional
-	-	-	-	ON	-	-	-	The Refrigerant Detector Invalid
-	-	-	-	-	OFF	-	-	Fresh Air
-	-	-	-	-	ON	-	-	Fault Alarm
-	-	-	-	-	-	OFF	-	None - Filter Alarm Reminder + Refrigeration Fan Stops
-	-	-	-	-	-	ON	-	Filter Alarm Reminder + Refrigeration Fan Does Not Stop
-	-	-	-	-	-	-	OFF	Us Models
-	-	-	-	-	-	-	ON	Non-Us Models

DIP SW3

SW3-1	SW3-2	SW3-3	SW3-4	SW3-5	SW3-6	SW3-7	SW3-8	Description
OFF	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Valid
ON	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Invalid
-	OFF	-	-	-	-	-	-	Cassette Single Swing Wind - Synchronized Swing Of Swing Blades
-	ON	-	-	-	-	-	-	Cassette Unit Four Swing Wind - Four Swing Blades Swing At Different Angles, Misaligned Swing
-	-	OFF	-	-	-	-	-	Electrical Heating: Invalid
-	-	ON	-	-	-	-	-	Electrical Heating: Valid
-	-	-	OFF	-	-	-	-	Model: Ultra-Slim Ducted Unit With 4-Level Static Pressure
-	-	-	ON	-	-	-	-	Model: Medium Static Pressure Duct With 10-Level Static Pressure Adjustment
-	-	-	-	OFF	OFF	OFF	OFF	0# (Wired Control Main) (Default)
-	-	-	-	OFF	OFF	OFF	ON	1# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	OFF	2# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	ON	3# (Line-Controlled Sub Machine)
-	-	-	-	-	-	-	-	--
-	-	-	-	ON	ON	ON	ON	15# (Line-Controlled Sub Machine)

SW3_1 The fan selection function in cooling mode is only applicable to duct and slim duct.

SW3_4 Only applicable to slim duct

Jumper Settings - Model Identification

RJ1	RJ2	RJ3	SW3-2	SW3-3	Description
OFF	OFF	OFF	OFF	OFF	Crane
OFF	OFF	OFF	OFF	ON	Cassette With 1 Oscillating Wind
OFF	OFF	OFF	ON	OFF	Cassette With Four-Way Oscillating Wind
OFF	OFF	OFF	ON	ON	Cassette With Light Panel
OFF	OFF	ON	OFF	OFF	Console
OFF	ON	OFF	OFF	OFF	Small Duct
OFF	ON	OFF	OFF	ON	High-Capacity Duct
-	-	-	-	-	Reserve

Suitable for convertible, 2HP cassette (matched with single swing wind), 2HP cassette (matched with four swing wind), 3HP cassette (equipped with display board). For example, if the convertible has 0000, the resistance should be welded RJ1/RJ2/RJ3. Simultaneously dial the second digit of code BM3 to OFF and the third digit to OFF. The same setup method is used for other models.



US09MB2BEA
US12MB2BEA
US18MB2BEA
US24MB2BEA
US30MB2BEA
US36MB2BEA

TABLE OF CONTENTS

COMPONENTSG2

Evaporator Coil G2

Blower Assembly G2

3 Terminal Block G2

Control Board..... G2

Ambient Temperature Sensor G2

Piping Temperature Sensor G2

Condensate Pump G3

Gravity Drain Ports G3

PCB Overview G3

WIRING DIAGRAM.....G4

DIP SWITCH & JUMPER SETTINGSG5

US09MB2BEA / US12MB2BEA / US18MB2BEA / US24MB2BEA / US30MB2BEA
US36MB2BEA / US42MB2BEA / US48MB2BEA



1 Evaporator Coil

2 Blower Assembly

The indoor unit features a DC variable speed blower motor that will change speed to match the capacity demand from the outdoor unit. The motor powers blower assembly.

The blower assembly consists of 2 plastic blowers. A set screw holds each blower wheel to the blower motor.

The indoor blower motor is connected to the indoor unit control board. The wiring from the motor to indoor board consists of 3 wires connected to pins that deliver line voltage.

During normal operation, the indoor control board will energize the indoor blower motor and request proper speed.

3 Terminal Block

Power to operate the indoor unit comes from the electrical line voltage terminal block at the outdoor unit. The wiring includes 4 wires, 1, 2, S and ground. Wires 1 and S complete the data path. These wires should always be 14 gauge AWG stranded cooper, non-shielded type wire. Splices in wires 1 or S may cause communication errors.

4 Control Board



Located under the electrical control box cover.

5 Ambient Temperature Sensor

The Ambient Temperature Sensor senses room temperature. This sensor provides room temperature information to the ECU for calculation of inverter capacity and temperature control. Both sensors are negative temperature coefficient type that reduce electrical resistance as temperature rises.

6 Piping Temperature Sensor

The Piping Temperature Sensor senses indoor coil temperature in the cooling mode and in the heating mode. This sensor is used for Anti Freezing and Anti Cold Blow cycles. The sensor also provides critical temperature information to the ECU that may be used in frequency adjustments.

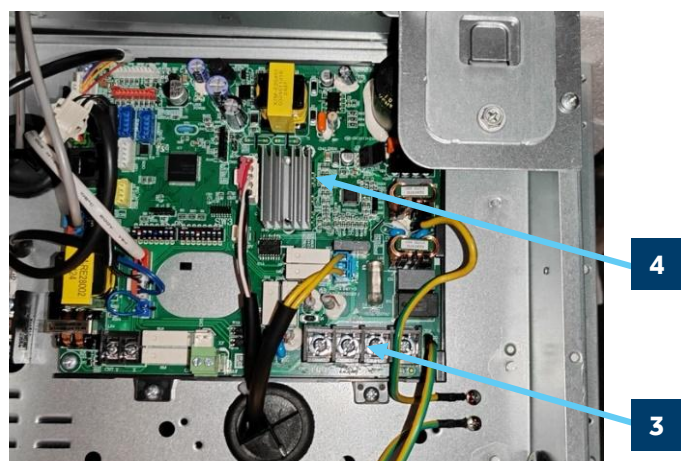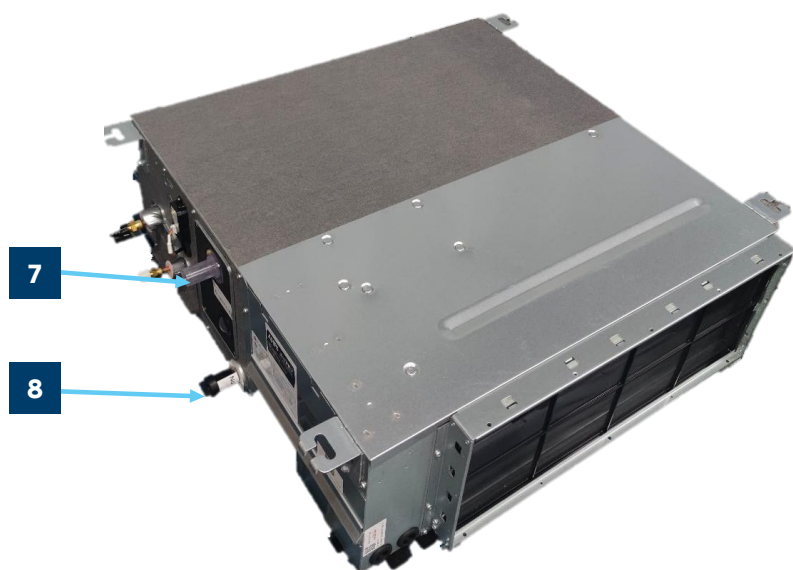

7 Condensate Pump


The Duct unit has a built-in condensate pump. The pump is connected to the circuit board. The pump is energized whenever the Float Switch indicates that water needs to be pumped from the cassette. The float switch connects onto the circuit board.

The float switch and pump are located behind the removable insulated cover next to the electrical control box. The pump is hermetically sealed and requires no maintenance. The float switch is a normally closed switch, that opens as water rises. The float switch requires no maintenance.

PCB Overview

0151800986

US09MB2BEA / US12MB2BEA / US18MB2BEA / US24MB2BEA / US30MB2BEA / US36MB2BEA

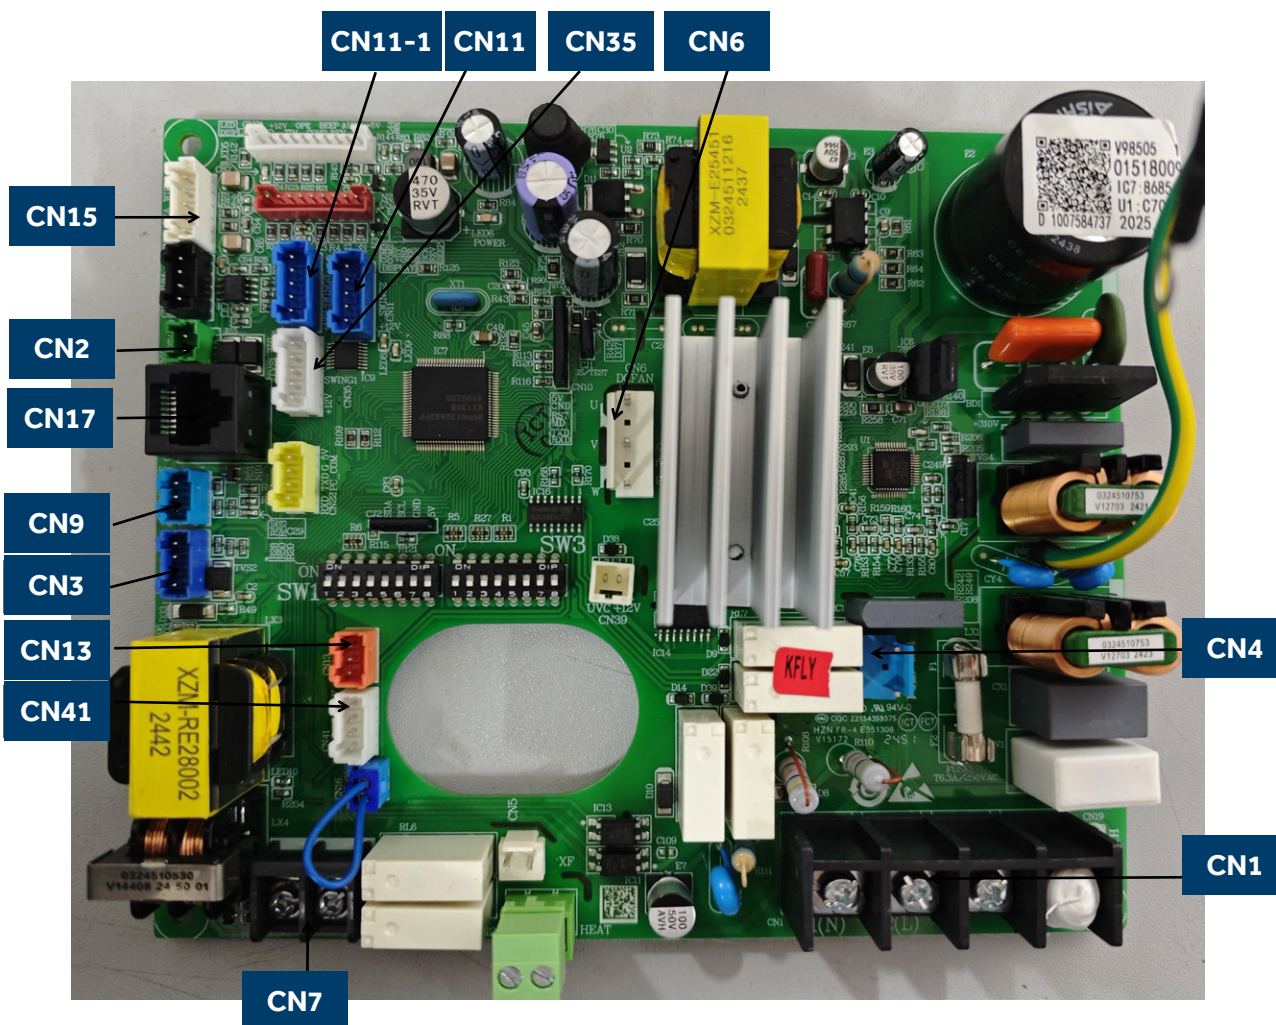

CN1 Power Supply

CN2 OTA

CN3 Refrigerant Sensor

CN4 Drain Pump

CN6 Fan Motor

CN7 Wired Controller

CN9 Remote Communication

CN11-1 Up-and-Down Swing

CN13 Float Switch

CN15 WiFi

CN17 RJ45 Communication

CN35 Left and Right Swing


CN41 Sensor

8 Gravity Drain Ports

The indoor units have the option for either gravity drain systems or the use of an internal condensate pump with float switch. If high lift is required, the water from the duct unit should be pumped to a field condensate pump that is capable of high lift.

WIRING DIAGRAM

US09MB2BEA / US12MB2BEA / US18MB2BEA / US24MB2BEA / US30MB2BEA / US36MB2BEA

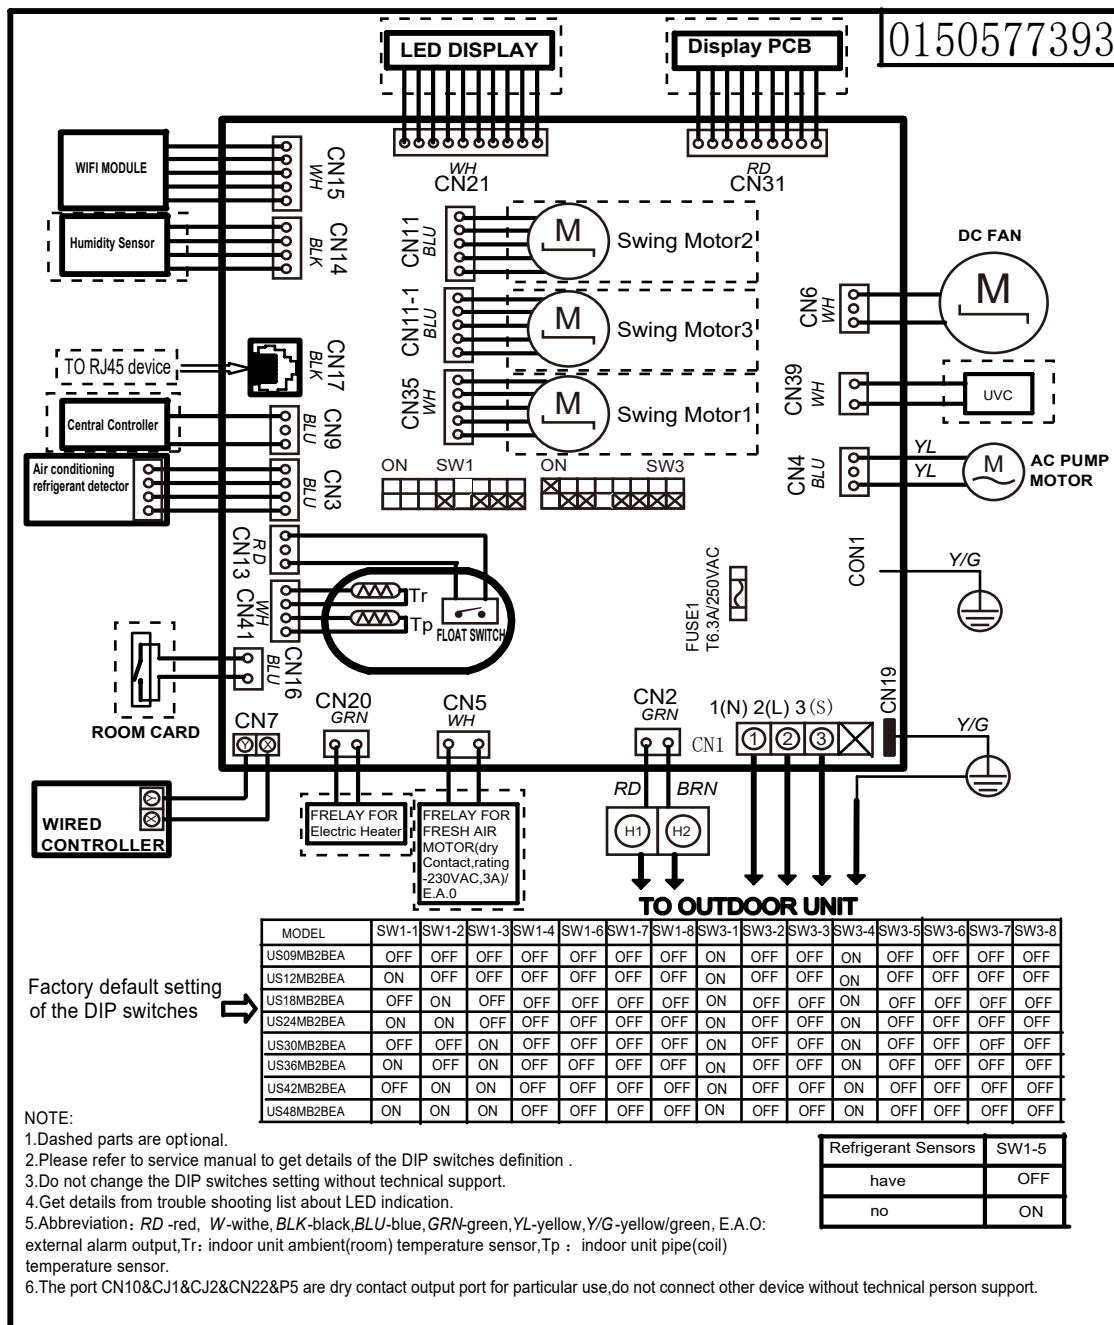

DIP SWITCH & JUMPER SETTINGS

DIP SW1

SW1-1	SW1-2	SW1-3	SW1-4	SW1-5	SW1-6	SW1-7	SW1-8	Description
OFF	OFF	OFF	-	-	-	-	-	09K
ON	OFF	OFF	-	-	-	-	-	12K
OFF	ON	OFF	-	-	-	-	-	18K
ON	ON	OFF	-	-	-	-	-	24K
OFF	OFF	ON	-	-	-	-	-	30K
ON	OFF	ON	-	-	-	-	-	36K
-	-	-	OFF	-	-	-	-	Room Card Valid
-	-	-	ON	-	-	-	-	Room Card Invalid
-	-	-	-	OFF	-	-	-	Refrigerant Detector Functional
-	-	-	-	ON	-	-	-	The Refrigerant Detector Invalid
-	-	-	-	-	OFF	-	-	Fresh Air
-	-	-	-	-	ON	-	-	Fault Alarm
-	-	-	-	-	-	OFF	-	None - Filter Alarm Reminder + Refrigeration Fan Stops
-	-	-	-	-	-	ON	-	Filter Alarm Reminder + Refrigeration Fan Does Not Stop
-	-	-	-	-	-	-	OFF	Us Models
-	-	-	-	-	-	-	ON	Non-Us Models

DIP SW3

SW3-1	SW3-2	SW3-3	SW3-4	SW3-5	SW3-6	SW3-7	SW3-8	Description
OFF	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Valid
ON	-	-	-	-	-	-	-	Special Fresh Air Selection For Duct Unit: Invalid
-	OFF	-	-	-	-	-	-	Cassette Single Swing Wind - Synchronized Swing Of Swing Blades
-	ON	-	-	-	-	-	-	Cassette Unit Four Swing Wind - Four Swing Blades Swing At Different Angles, Misaligned Swing
-	-	OFF	-	-	-	-	-	Electrical Heating: Invalid
-	-	ON	-	-	-	-	-	Electrical Heating: Valid
-	-	-	OFF	-	-	-	-	Model: Ultra-Slim Ducted Unit With 4-Level Static Pressure
-	-	-	ON	-	-	-	-	Model: Medium Static Pressure Duct With 10-Level Static Pressure Adjustment
-	-	-	-	OFF	OFF	OFF	OFF	0# (Wired Control Main) (Default)
-	-	-	-	OFF	OFF	OFF	ON	1# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	OFF	2# (Line-Controlled Sub Machine)
-	-	-	-	OFF	OFF	ON	ON	3# (Line-Controlled Sub Machine)
-	-	-	-	-	-	-	-	--
-	-	-	-	ON	ON	ON	ON	15# (Line-Controlled Sub Machine)

SW3_1 The fan selection function in cooling mode is only applicable to duct and slim duct.

SW3_4 Only applicable to slim duct

Jumper Settings - Model Identification

RJ1	RJ2	RJ3	SW3-2	SW3-3	Description
OFF	OFF	OFF	OFF	OFF	Crane
OFF	OFF	OFF	OFF	ON	Cassette With 1 Oscillating Wind
OFF	OFF	OFF	ON	OFF	Cassette With Four-Way Oscillating Wind
OFF	OFF	OFF	ON	ON	Cassette With Light Panel
OFF	OFF	ON	OFF	OFF	Console
OFF	ON	OFF	OFF	OFF	Small Duct
OFF	ON	OFF	OFF	ON	High-Capacity Duct
-	-	-	-	-	Reserve

Suitable for convertible, 2HP cassette (matched with single swing wind), 2HP cassette (matched with four swing wind), 3HP cassette (equipped with display board). For example, if the convertible has 0 0 0 0, the resistance should be welded RJ1/RJ2/RJ3. Simultaneously dial the second digit of code BM3 to OFF and the third digit to OFF. The same setup method is used for other models.

[This page left intentionally blank]



TABLE OF CONTENTS

ERROR CODES	H2
TROUBLESHOOTING FLOWCHARTS	H3
IDU DC Fan Motor	H4
E1/LED1: No Flash	H5
E2/LED1: No Flash	H5
F21/LED1: 10 Flash	H5
F25/LED1: 13 Flash	H5
F6/LED1: 12 Flash	H5
E4	H6
F12/ LED1: 1 Flash	H6
F20/LED1: 5 Flash	H6
E14	H7
F1/LED1: 2Flash	H8
F8/LED1: 9Flash	H9
F19/LED1: 6 Flash	H10
F27/LED1: 21 Flash	H10
F22/LED1: 3 Flash	H11
F2/LED1: 25 Flash	H11
F4/LED1: 8 Flash	H12
E7/LED1: 15 Flash	H13
F11/LED1: 18 or 19 Flash	H14
LED1: 21 Flash	H14
LED1: 28 Flash	H15
E22/LED1: 21 Flash	H15
F2/LED1: 24 Flash	H16
bA	H17
AA and Ab	H18
Ac	H19
Ad	H20
AE	H21
AF	H22
SENSOR RESISTANCE VALUES	H21

ERROR CODES

OUTDOOR UNITS	FAULT DESCRIPTION	INDOOR UNIT
LED DISPLAY		DIGITAL DISPLAY
1	OUTDOOR EEPROM FAILURE	F12
2	IPM OVERCURRENT OR SHORT CIRCUIT	F1
3	OUTDOOR ALTERNATING CURRENT, OVER CURRENT PROTECTION	F22
5	MODULE OPERATED OVERLOAD (COMPRESSOR OVERLOAD PROTECTION)	F20
6	MODULE LOW OR HIGH VOLTAGE	F19
7	COMPRESSOR CURRENT SAMPLING CIRCUIT FAULT	F27
8	OVERHEAT PROTECTION FOR DISCHARGE TEMPERATURE	F4
9	MALFUNCTION OF THE DC FAN MOTOR	F8
10	MALFUNCTION OF DEFROST TEMPERATURE SENSOR	F21
12	AMBIENT TEMPERATURE SENSOR FAILURE	F6
13	DISCHARGE TEMPERATURE SENSOR FAILURE	F25
24	COMPRESSOR START FAILURE, OVER-CURRENT	F2
25	PHASE CURRENT PROTECTION (IPM)	F23

GS07WB2BEA, GS09WB2BEA, GS12WB2BEA, GS15WB2BEA, GS18WB2BEA, GS24WB2BEA

OUTDOOR UNITS	FAULT DESCRIPTION	INDOOR UNIT
LED DISPLAY		DIGITAL DISPLAY
/	INDOOR AMBIENT TEMPERATURE SENSOR FAILURE	E1
/	INDOOR COIL TEMPERATURE SENSOR FAILURE	E2
/	INDOOR PCB EEPROM FAILURE	E4
15	COMMUNICATION FAILURE BETWEEN THE INDOOR & OUTDOOR UNIT	E7
/	INDOOR FAN MOTOR MALFUNCTION	E14
21	IDU ANTI-FROSTING PROTECTION (COOLING MODE ONLY)	/
21	INDOOR UNIT OVERLOAD PROTECTION, HEATING MODE ONLY.	/
28	LACK OF REFRIGERANT OR DISCHARGING	/
/	REFRIGERANT LEAK FAULT >10% LFL	AA
/	REFRIGERANT LEAK FAULT <8% LFL	Ab
/	LEAK SENSOR COMMUNICATION FAULT	Ac
/	LEAKAGE SENSOR SELF-CHECK FAULT - SELF CHECK FAULT	Ad
/	SENSOR REACHING END OF LIFE WARNING	AE
/	SENSOR REACHING END OF LIFE	AF
/	DIP SWITCH ENABLED, NO SENSOR DETECTED	bA

US09FB2BEA / US12FB2BEA / US18FB2BEA

PANEL DISPLAY	WIRED CONTROLLER DISPLAY (YR-E17)	DESCRIPTION	POSSIBLE CAUSES
E1	1	INDOOR UNIT AMBIENT TEMPERATURE SENSOR MALFUNCTION	SENSOR DISCONNECTED, OR BROKEN, OR AT WRONG POSITION, OR SHORT CIRCUIT
E2	2	INDOOR UNIT PIPING TEMPERATURE SENSOR MALFUNCTION	SENSOR DISCONNECTED, OR BROKEN, OR AT WRONG POSITION OR SHORT CIRCUIT
E4	4	INDOOR PCB EEPROM WRONG	EEPROM CHIP DISCONNECTED OR BROKEN OR WRONG PROGRAM - MED OR PCB BROKEN
E7	7	ABNORMAL COMMUNICATION BETWEEN INDOOR AND OUTDOOR UNITS	WRONG CONNECTION, WIRES DISCONNECTED, WRONG ADDRESS SETTING OF INDOOR UNIT, FAULTY POWER SUPPLY, OR FAULTY PCB
EB	07 FLASHING ON THE UPPER RIGHT CORNER	ABNORMAL COMMUNICATION BETWEEN WIRED CONTROLLER AND INDOOR UNIT	WRONG CONNECTION, WIRED CONTROLLER BROKEN, OR PCB FAULTY.
E12	OC	DRAIN SYSTEM MALFUNCTION	PUMP MOTOR DISCONNECTED OR AT WRONG POSITION, FLOAT SWITCH DISCONNECTED, WRONG POSITION, OR SHORT CIRCUIT BRIDGE DISCONNECTED
E13	OD	ZERO CROSS SIGNAL WRONG	ZERO CROSS SIGNAL DETECTED WRONG.
E14	OE	INDOOR UNIT DC FAN MOTOR ABNORMAL	DC FAN MOTOR DISCONNECTED, FAN BROKEN, OR CIRCUIT BROKEN
F1-- F45	OUTDOOR ERROR CODE+20 CORRESPOND HEX CODE	OUTDOOR UNIT ERROR	SEE CORRESPOND OUTDOOR UNIT ERROR TROUBLE SHOOTING. REMARK: F1 MEANS OUTDOOR ERROR CODE 1, F2 MEANS OUTDOOR ERROR CODE 2, AND SO ON.

US09CB2BEA / US12CB2BEA / US18CB2BEA / US24LB2BEA / US30LB2BEA / US36LB2BEA


US09MB2BEA / US12MB2BEA / US18MB2BEA / US24MB2BEA / US30MB2BEA / US36MB2BEA

LED2 FLASH TIMES		PANEL DISPLAY	WIRED CONTROLLER DISPLAY	DESCRIPTION	POSSIBLE CAUSES
TENS PLACE	ONES PLACE				
0	1	E1	1	INDOOR UNIT AMBIENT TEMPERATURE SENSOR MALFUNCTION	SENSOR DISCONNECTED, BROKEN, AT WRONG POSITION, OR SHORT CIRCUIT.
0	2	E2	2	INDOOR UNIT PIPING TEMPERATURE SENSOR MALFUNCTION	SENSOR DISCONNECTED, BROKEN, AT WRONG POSITION, OR SHORT CIRCUIT.
0	4	E4	4	INDOOR PCB EEPROM WRONG	EEPROM CHIP DISCONNECTED, BROKEN, WRONG PROGRAMMED, OR PCB BROKEN.
0	7	E7	7	ABNORMAL COMMUNICATION BETWEEN INDOOR AND OUTDOOR UNITS	WRONG CONNECTION, WIRES DISCONNECTED, WRONG ADDRESS SETTING OF INDOOR UNIT, FAULTY POWER SUPPLY, OR FAULTY PCB
0	8	E8	07 FLASHING ON THE UPPER RIGHT CORNER	ABNORMAL COMMUNICATION BETWEEN WIRED CONTROLLER AND INDOOR UNIT	WRONG CONNECTION, WIRED CONTROLLER BROKEN, OR PCB FAULTY.
0	12	E12	0C	DRAIN SYSTEM MALFUNCTION	PUMP MOTOR DISCONNECTED OR AT WRONG POSITION, FLOAT SWITCH DISCONNECTED, WRONG POSITION, OR SHORT CIRCUIT BRIDGE DISCONNECTED
0	13	E13	0D	ZERO CROSS SIGNAL WRONG	ZERO CROSS SIGNAL DETECTED WRONG.
0	14	E14	0E	INDOOR UNIT DC FAN MOTOR ABNORMAL	DC FAN MOTOR DISCONNECTED, FAN BROKEN, OR CIRCUIT BROKEN
M(≥2)	N(≥0)	F1-F45	OUTDOOR ERROR CODE +20 CORRESPOND HEX CODE	OUTDOOR UNIT ERROR	SEE CORRESPOND OUTDOOR UNIT ERROR TROUBLESHOOTING. REMARK: F1 MEANS OUTDOOR ERROR CODE 1, F2 MEANS OUTDOOR ERROR CODE 2, AND SO ON.
18	6	bA	BA	THE REFRIGERANT DETECTOR IS NOT INSTALLED	NO REFRIGERANT DETECTOR IS INSTALLED
17	0	AA	AA	REFRIGERANT LEAKAGE	FAULT "AA" CANNOT BE CLEARED. ONLY THE LEAKAGE CONCENTRATION DECREASES AND THE FAULT IS TURNED TO "AB". SEE THE TECHNICAL MANUAL FOR ELIMINATION
17	2	Ac	AC	THE COMMUNICATION OF THE REFRIGERANT SENSOR IS FAULTY	WHEN THE AIR CONDITIONER IS RUNNING, THE CABLE HARNESS OF THE REFRIGERANT SENSOR FALLS OFF.
17	3	Ad	AD	THE REFRIGERANT SENSOR SELF CHECK IS FAULTY	THE REFRIGERANT SENSOR IS FAULTY.
17	4	AE	AE	REFRIGERANT SENSOR LIFE THRESHOLD	REFRIGERANT SENSOR LIFE THRESHOLD REMINDER
17	5	AF	AF	THE REFRIGERANT SENSOR EXPIRES	REFRIGERANT SENSOR LIFE THRESHOLD, NEED TO BE REPLACED

Note:



1. For more details about the outdoor unit failure, please refer to the outdoor unit troubleshooting list.
2. SW1-5 OFF: Start the refrigerant sensor function. SW1-5 ON: Disable the refrigerant sensor function.

IDU DC Fan Motor

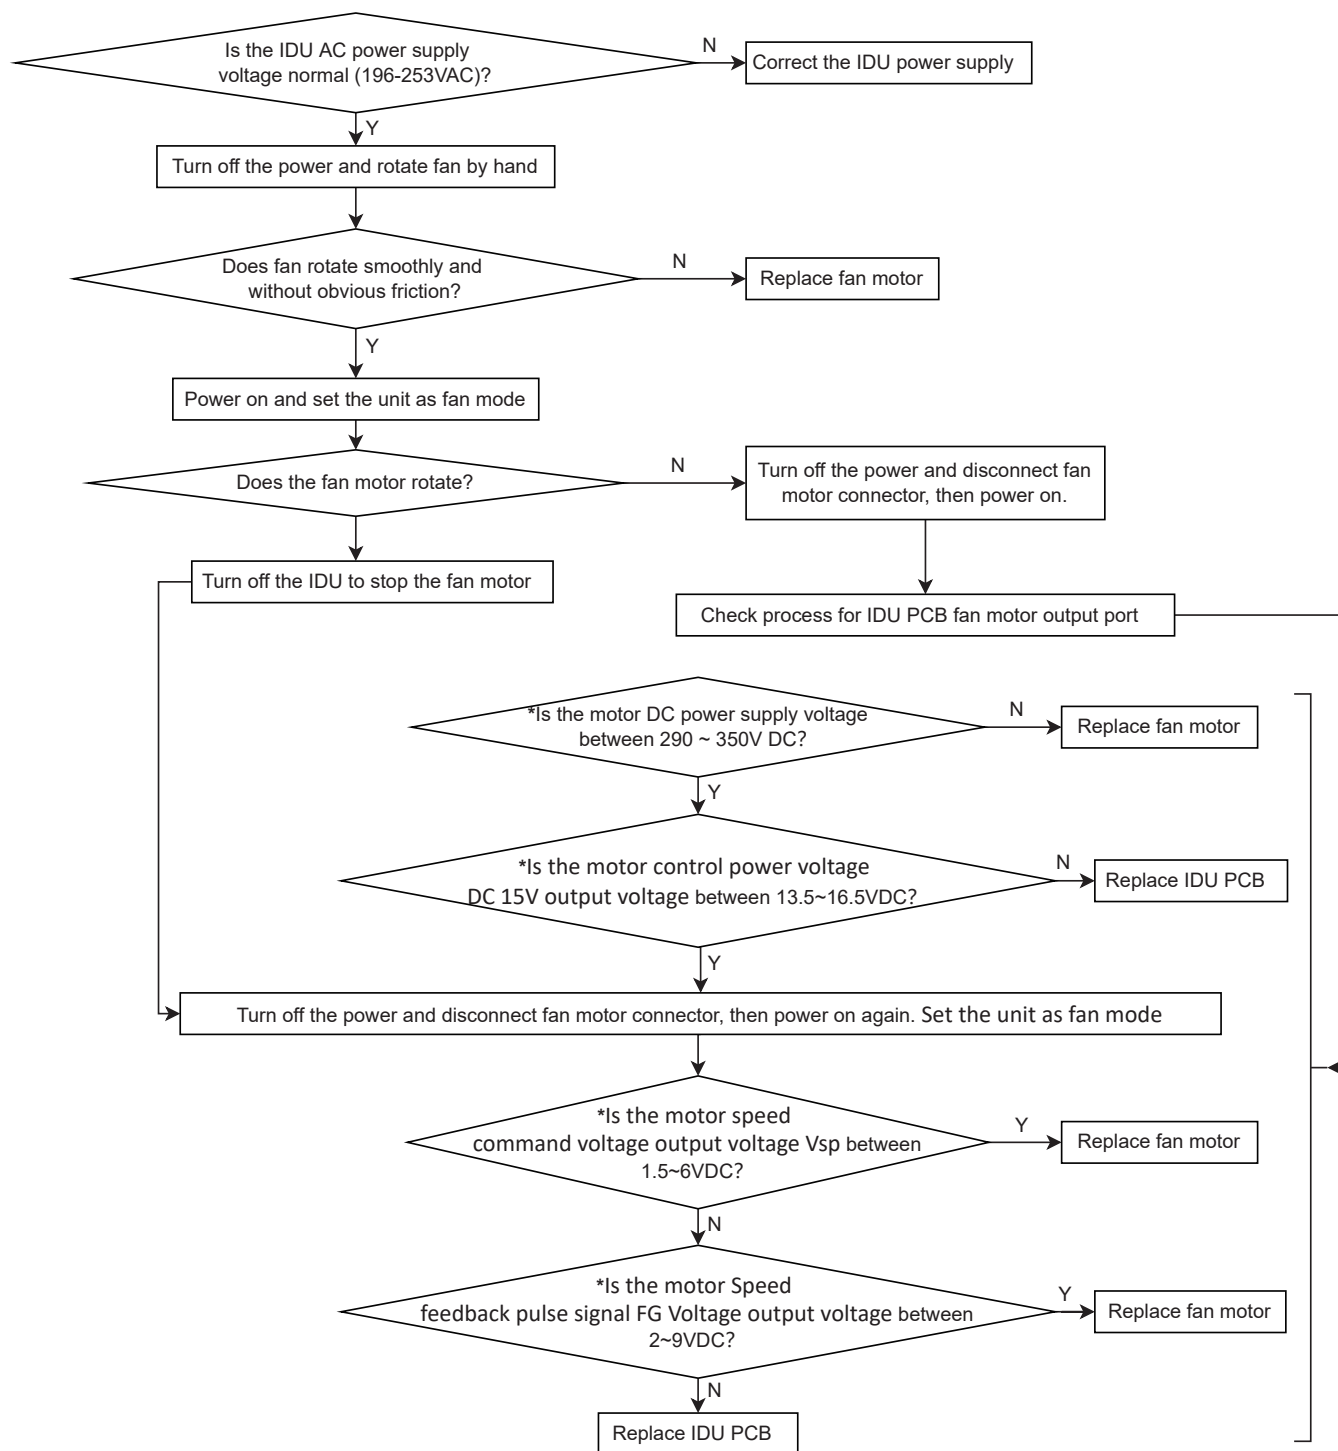


Error Codes (Indoor/Outdoor)**E1/LED1: No Flash***Room Temperature Sensor Failure***E2/LED1: No Flash***Indoor Coil Temperature Sensor Failure***F21/LED1: 10 Flash***Defrost Temperature Sensor Failure***F25/LED1: 13 Flash***Discharge Temperature Sensor Failure***F6/LED1: 12 Flash***Ambient Temperature Sensor Failure***Detection Conditions:***Thermistor input is more than 4.92V or less than 0.08V during compressor operation.***Possible Causes:**

- Faulty connector connection
- Faulty thermistor
- Faulty PCB

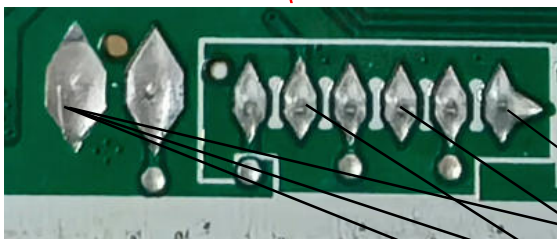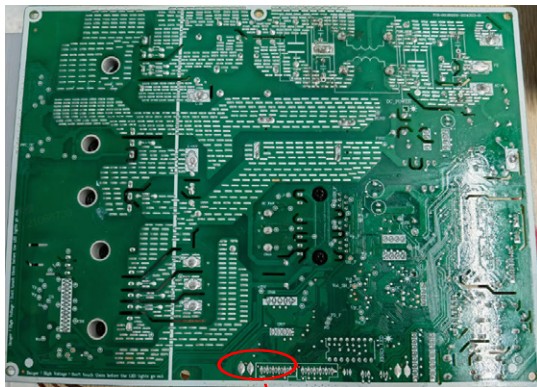

- 5V Discharge Temperature Sensor
- 5V Defrost Temperature Sensor
- 5V Ambient Temperature Sensor

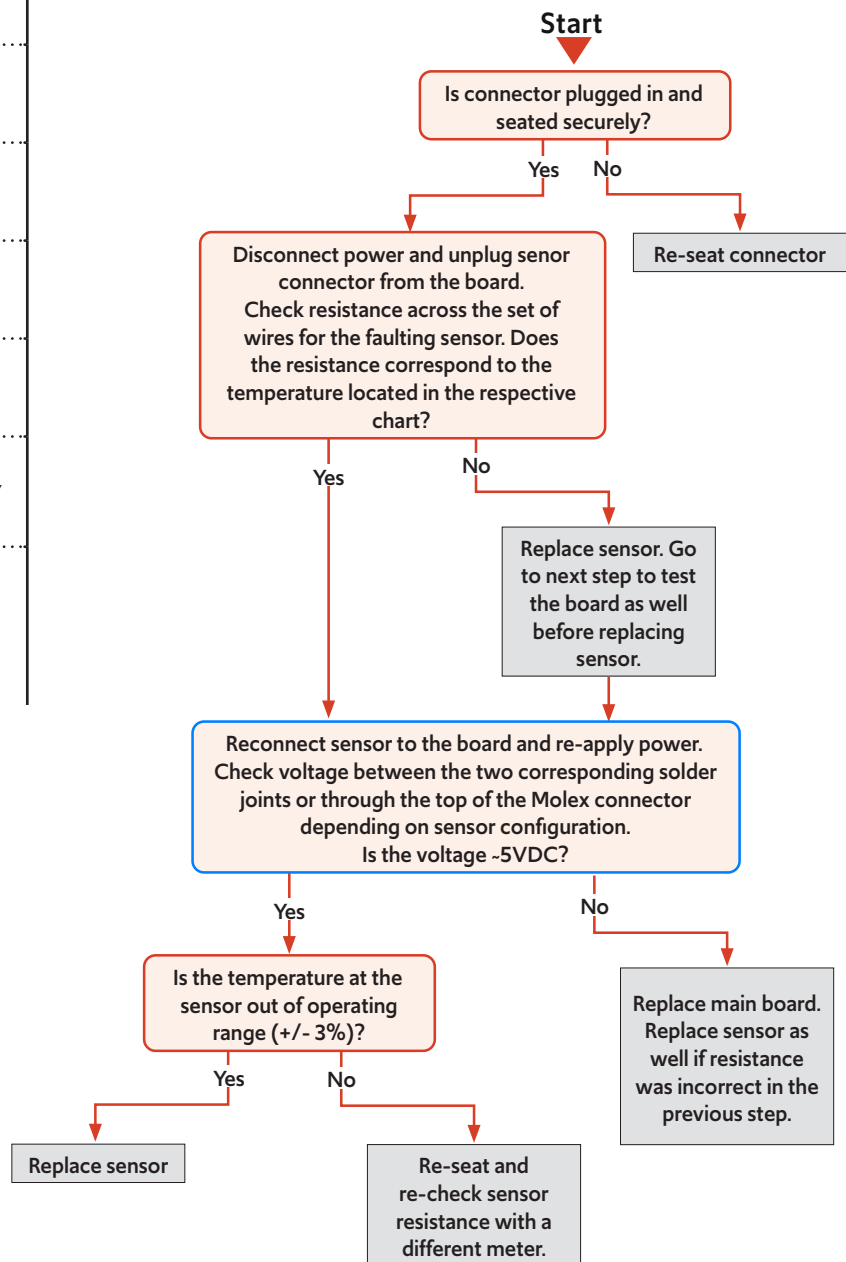


Error Codes (Indoor/Outdoor)

E4**Indoor EEPROM Error****F12/ LED1: 1 Flash****Outdoor EEPROM Error****Detection Conditions:**

EEPROM data error or the EEPROM is damaged

Possible Causes:

- Faulty EEPROM data
- Faulty EEPROM
- Faulty PCB

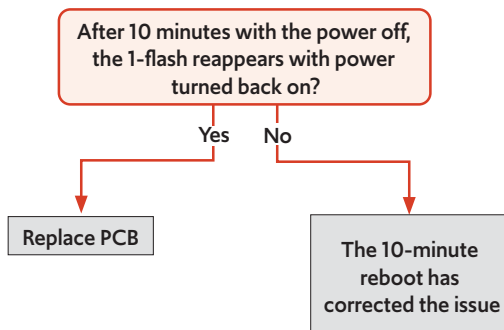



Error Codes (Indoor/Outdoor)

F20/LED1: 5 Flash**Module operated overload
(compressor overload protection)****Detection Conditions:**

The compressor phase current exceeds the limit and maintains for 30 seconds

Possible Causes:

- Electronic Expansion Valve is bad
- Electronic Expansion Valve terminal is bad
- Lack of refrigerant

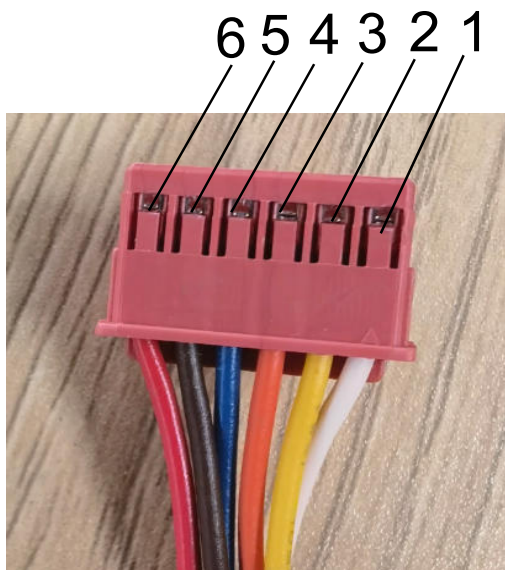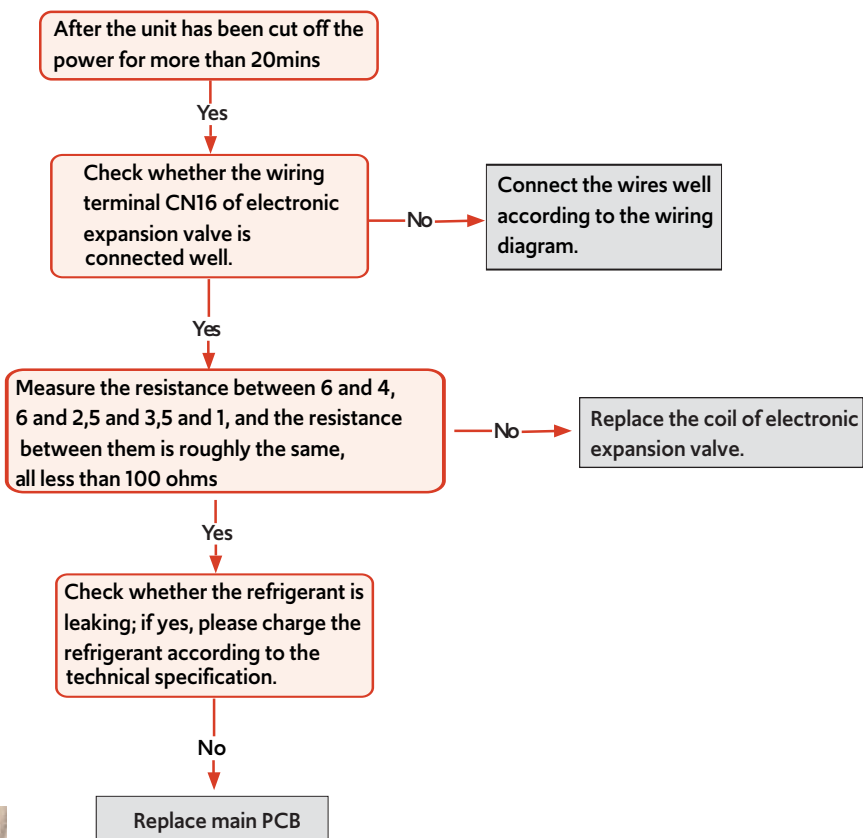


Error Code (Indoor)**E14****Indoor Fan Motor Failure****Detection Conditions:**

No rotation feedback signal detected for 2 minutes

Possible Causes:

- Faulty fan motor
- Fan motor overheat protection
- Detection error due to faulty indoor unit PCB

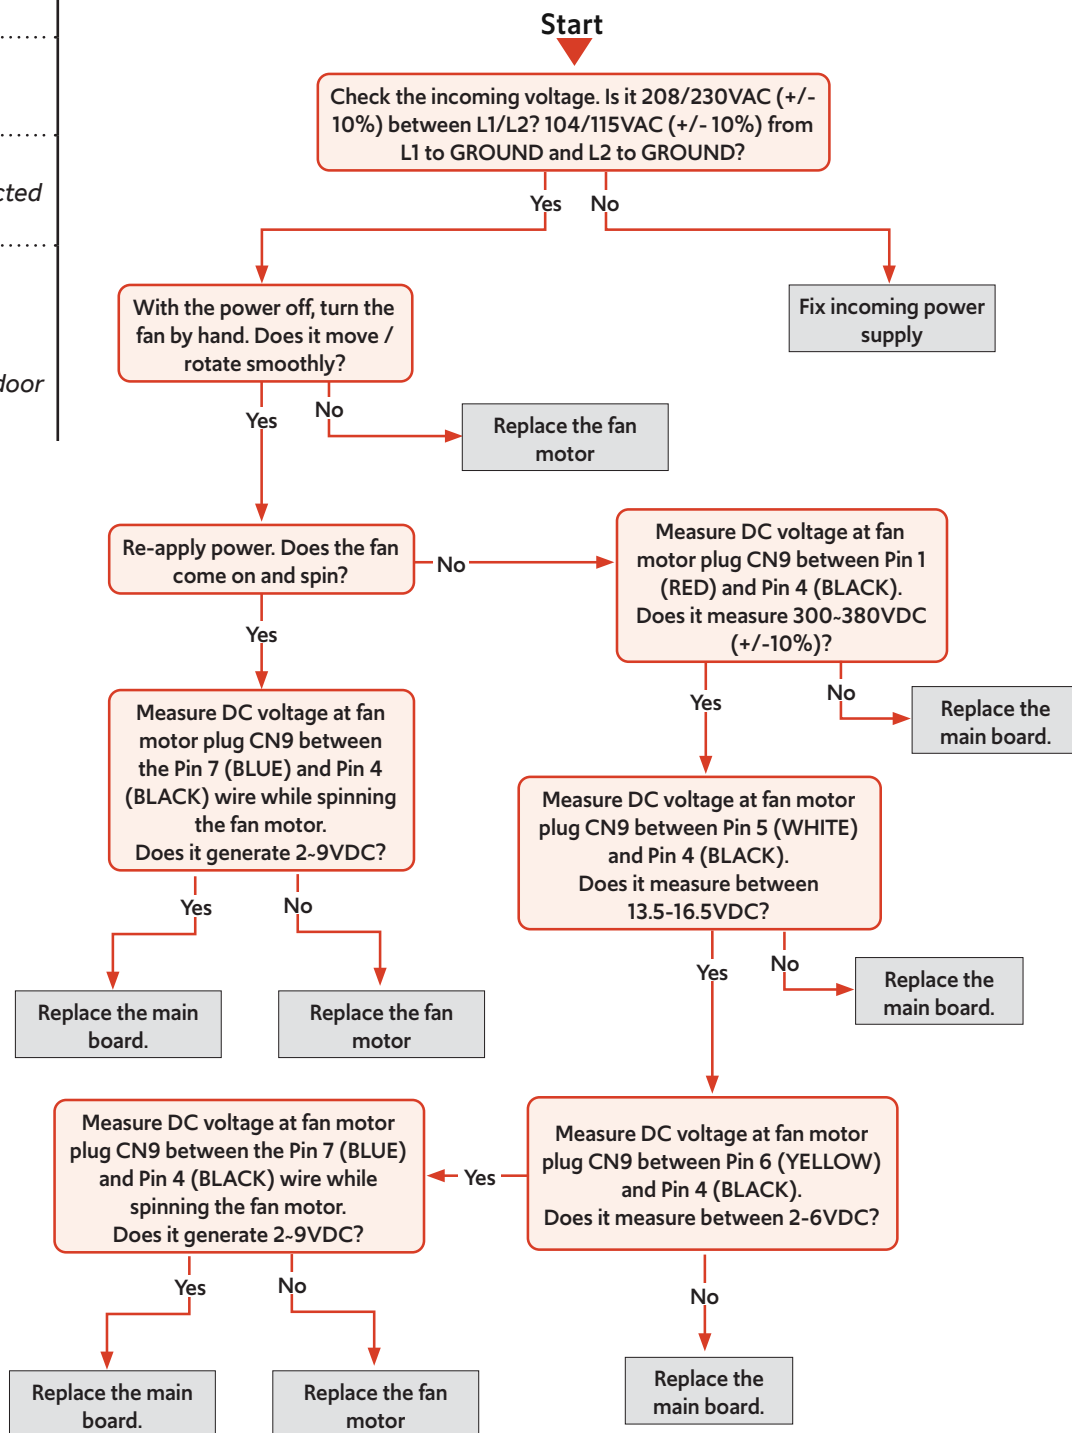






Error Codes (Indoor/Outdoor)

F1/LED1: 2 Flash**IPM Power Module Failure****(PM power module protection)****Detection Conditions:**

Amp limit hot 3 times in 30 minutes


Possible Causes:

- IPM bad
- Loose compressor wire
- Bad compressor

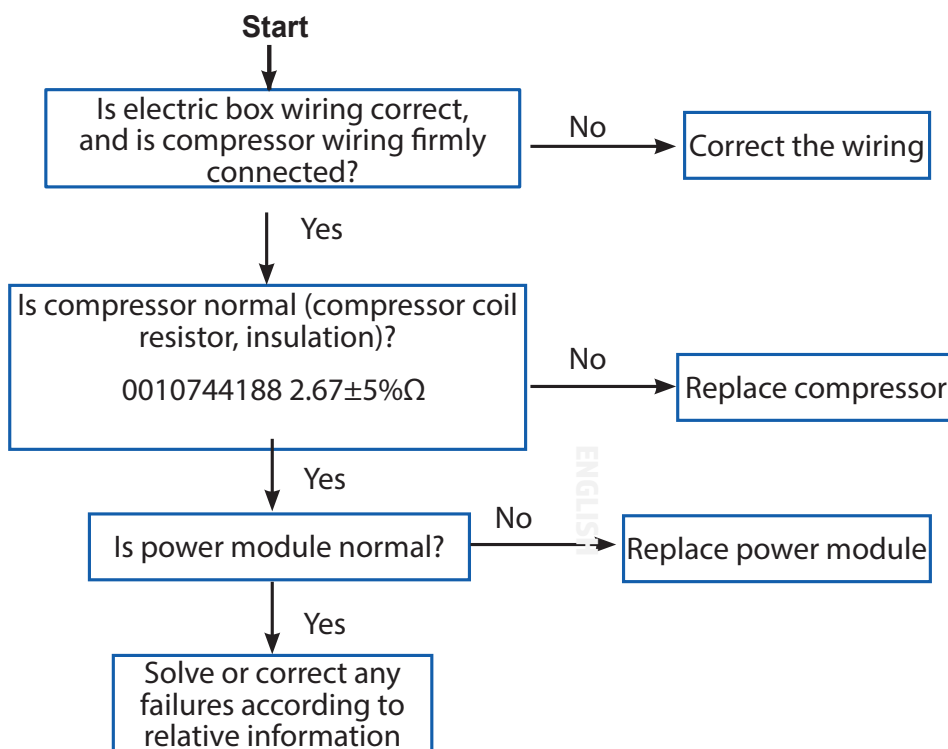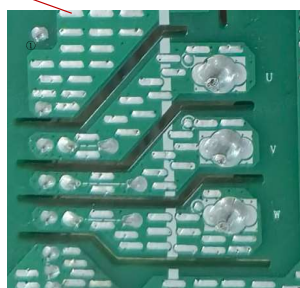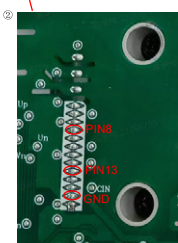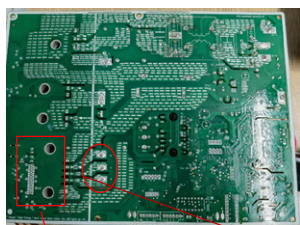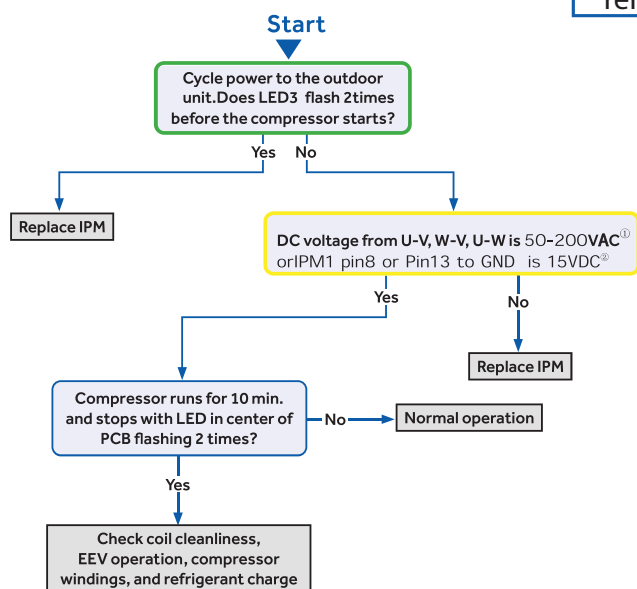**IPM Detect Process Below:**

Trigger condition:






The abnormal resistance value of R010 was collected, resulting in F1 fault occurrence.

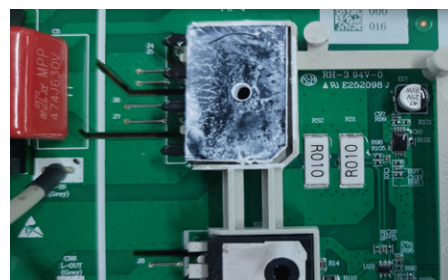

Error Codes (Indoor/Outdoor)

F8/LED1: 9 Flash**Outdoor DC Fan Motor Fault****Detection Conditions:**

Resistance values between any two wire harness connections is $101 \pm 8\% \Omega$

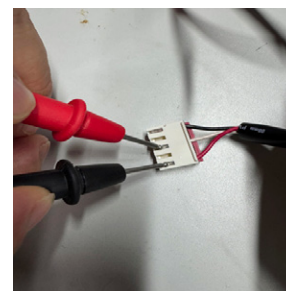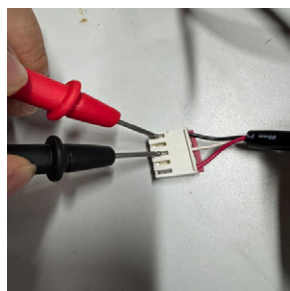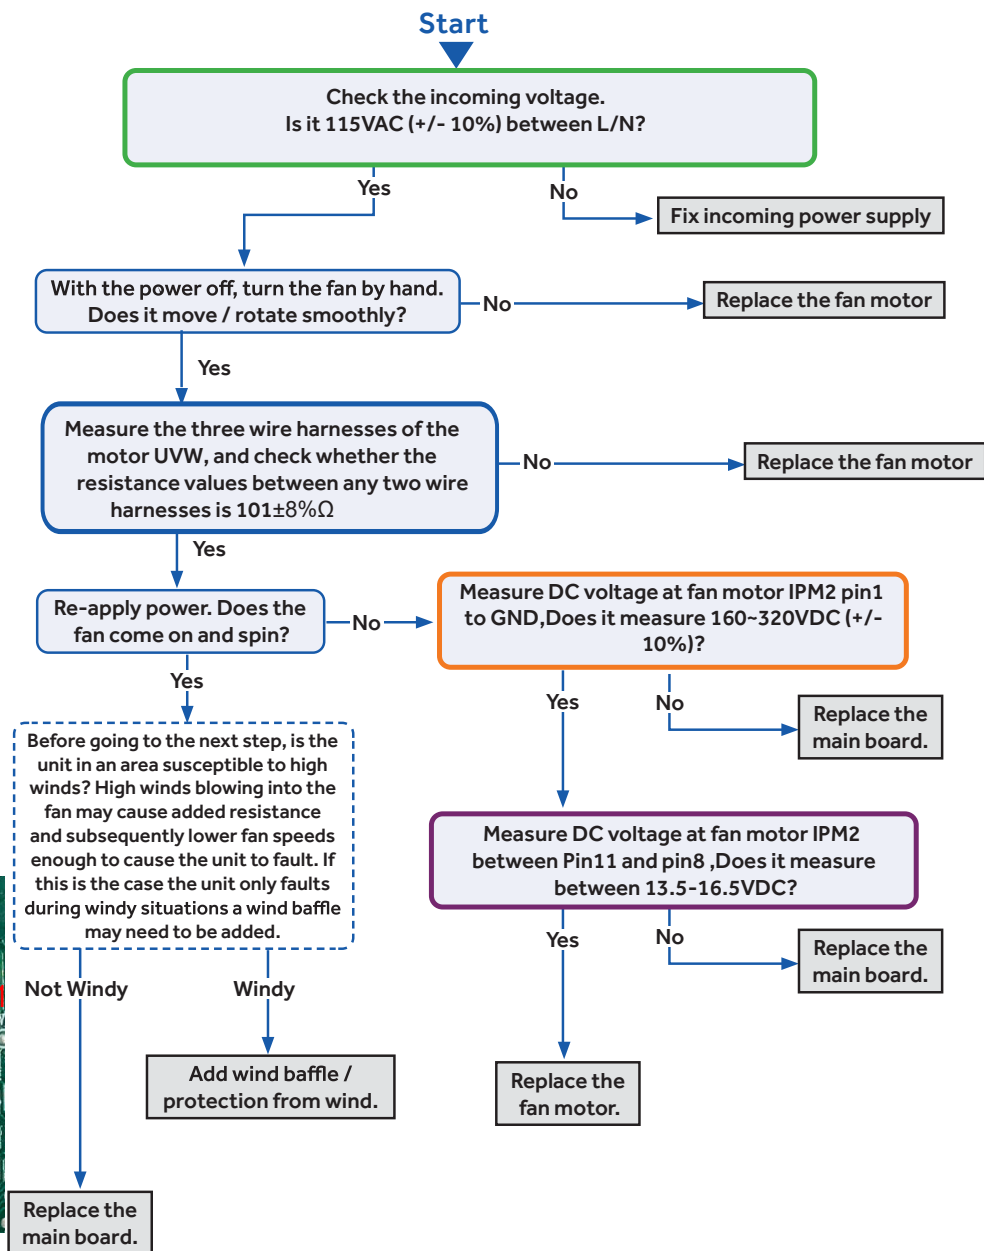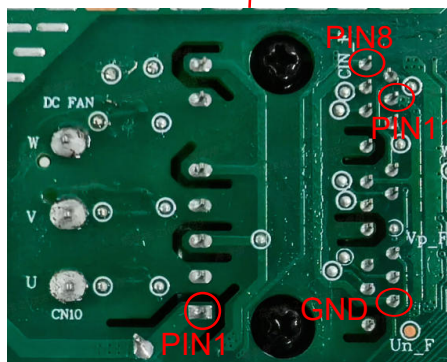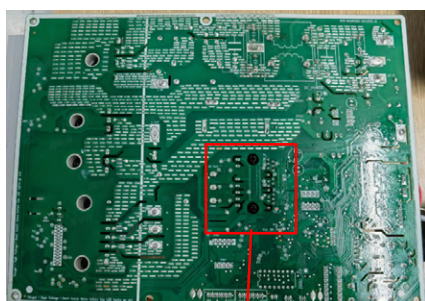

Error Codes (Indoor/Outdoor)

F19/LED1: 6 Flash


Power supply is over voltage or under voltage

Detection Conditions:

Abnormal voltage detection.
Run capacitor(s) P&N terminals are more than 390V or less than 140 VDC measured at P & N test points 3 minutes after the compressor starts operation.

Possible Causes:

- Supply voltage not as specified
- Faulty IPM module
- Faulty outdoor PCB

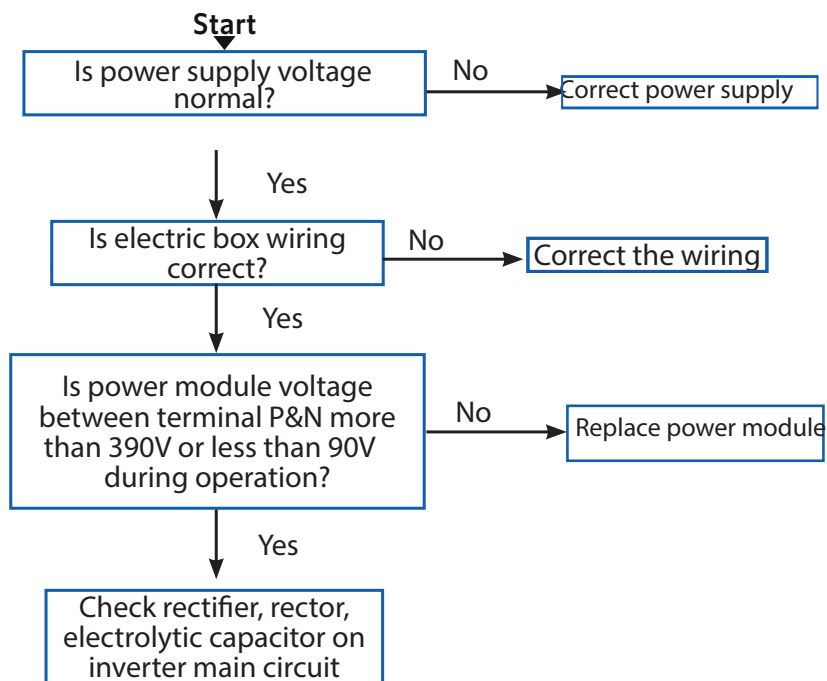

Error Codes (Indoor/Outdoor)

F27/LED1: 21 Flash**Compressor Block Fault**


It is compressor block fault, the compressor will not work when this fault happen. It also can be self recovery when this fault happen.

Detection Conditions:

Capacitor(s) P&N terminals are less than 90 VDC measured at P & N test points. The time window to test P&N DC voltage is 3 minutes after the compressor starts operation.

Possible Causes:

- Ambient temperature is too low
- Compressor damage

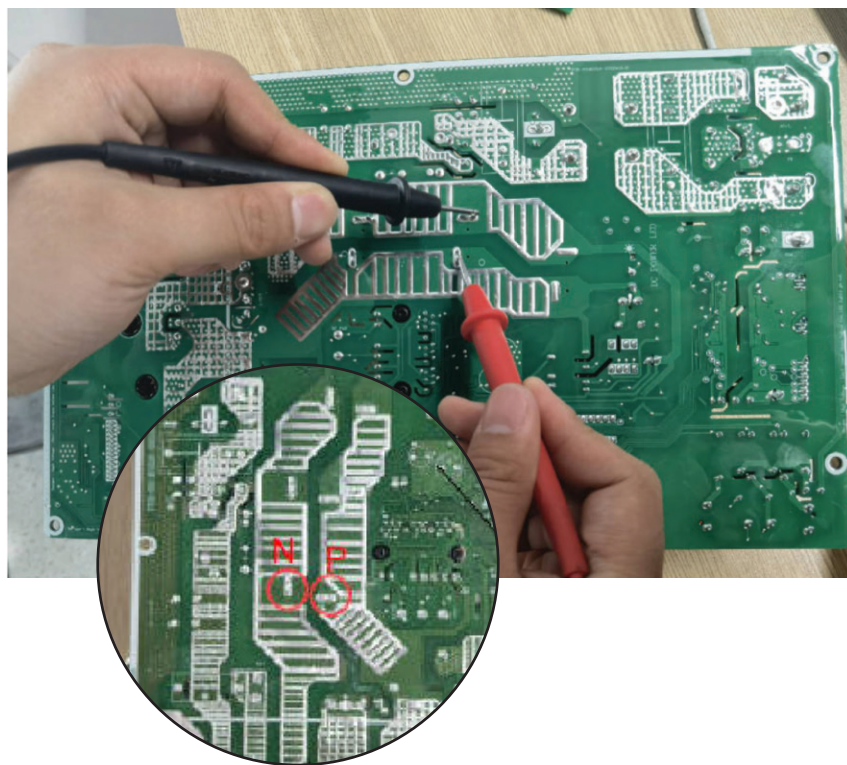

Error Codes (Indoor/Outdoor)**F22/LED1: 3 Flash****AC current overload****Detection Conditions:**



Current value is over 14.4A

F23/LED1: 35 Flash**Phase current protection****Detection Conditions:**

Current value is over 10.4A

Possible Causes:

- Incorrect compressor wiring
- The power module is bad
- The compressor is bad

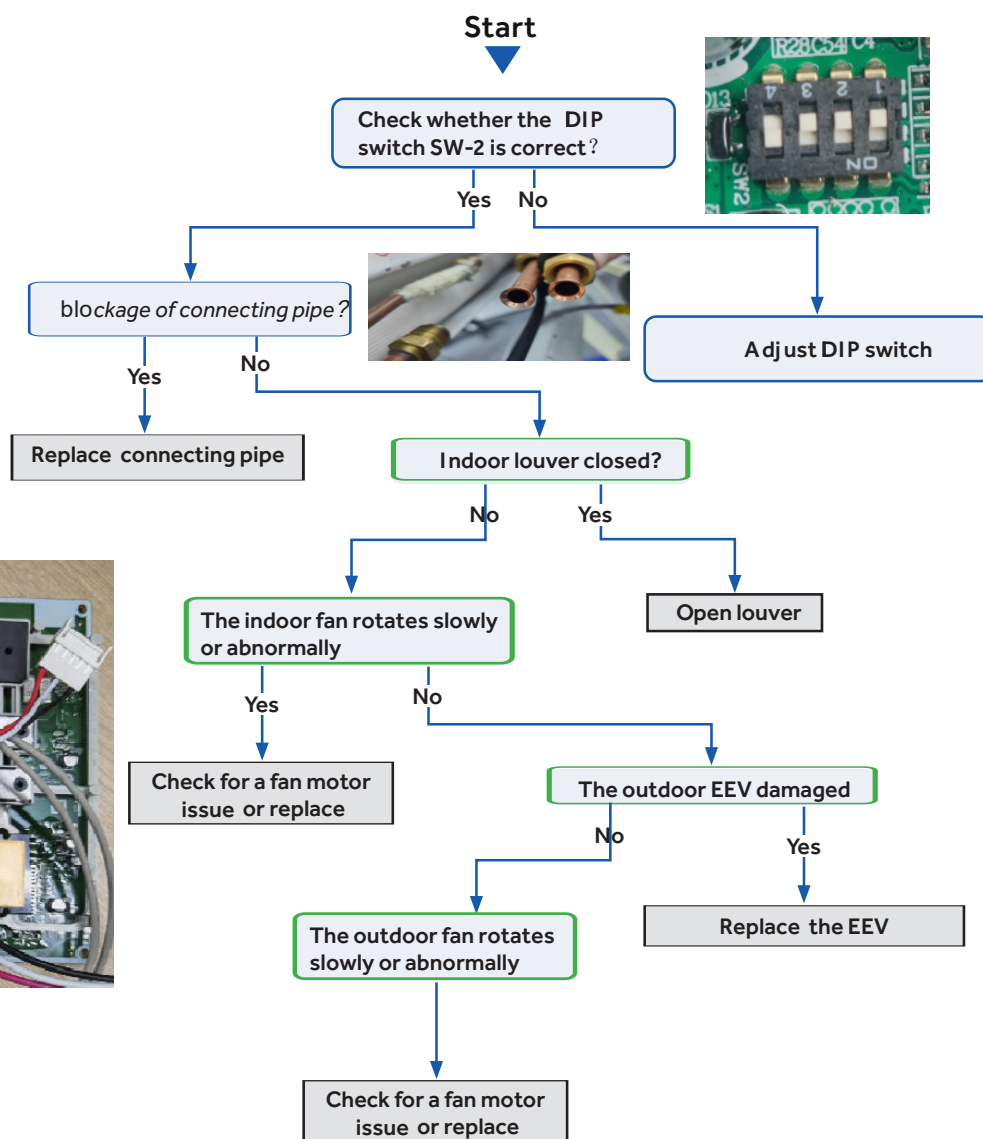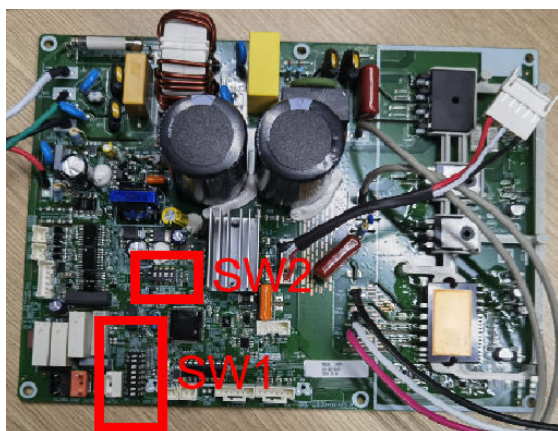



Error Codes (Indoor/Outdoor)

F4/LED1: 8 Flash**Overheat Protection for Discharge Temperature****Detection Conditions:**

Compressor discharge temperature above 110°C

Possible Causes:

- Faulty electronic expansion valve
- Faulty thermistor
- Faulty PCB

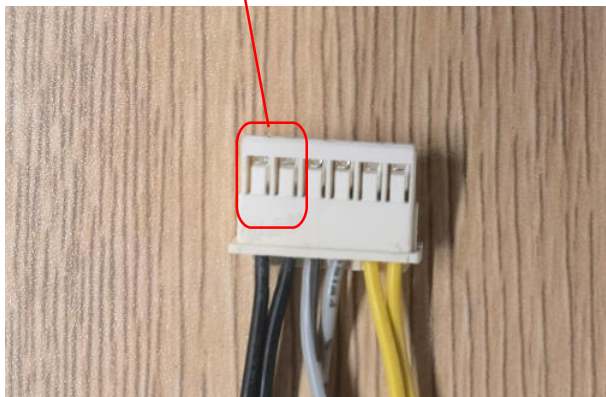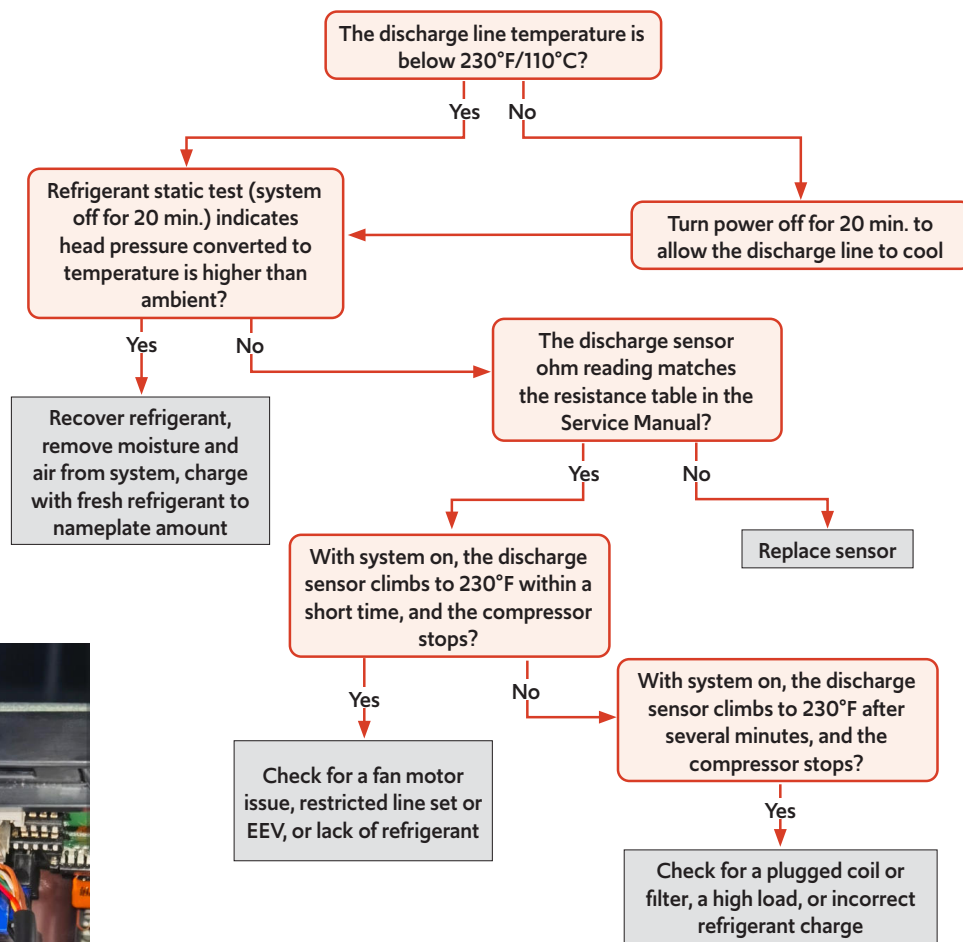

Mesure this two wire to check resistance



Error Codes (Indoor/Outdoor)**E7/LED1: 15 Flash****ID and OD Loss of Communication****Detection Conditions:**

Outdoor PCB communication failure

• Indoor PCB communication failure

Possible Causes:

- Communication wiring disconnected
- Faulty indoor PCB
- Faulty outdoor PCB
- Faulty Outdoor Fan (may cause communication signal interference)

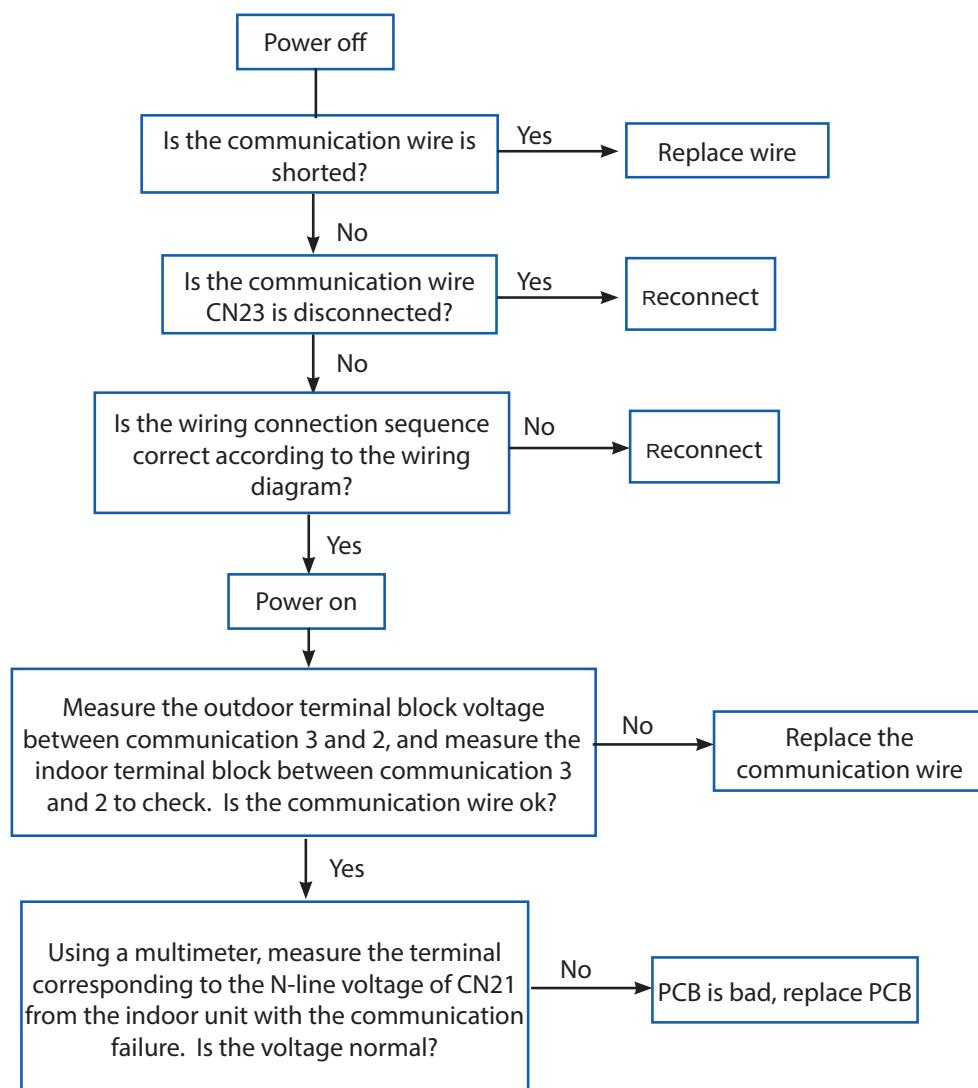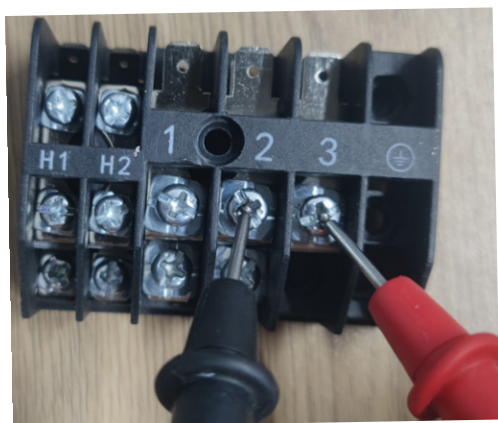**outdoor terminal****indoor terminal**


Error Codes (Indoor/Outdoor)

F11/LED1: 18 or 19 Flash**Loss of Compressor Synchronization****Detection Conditions:**

When the phase difference between the rotor electrical angle and the stator reference electrical angle exceeds the allowable limit (3.75 degrees).

Possible Causes:

- Faulty wiring
- Faulty compressor
- Faulty PCB

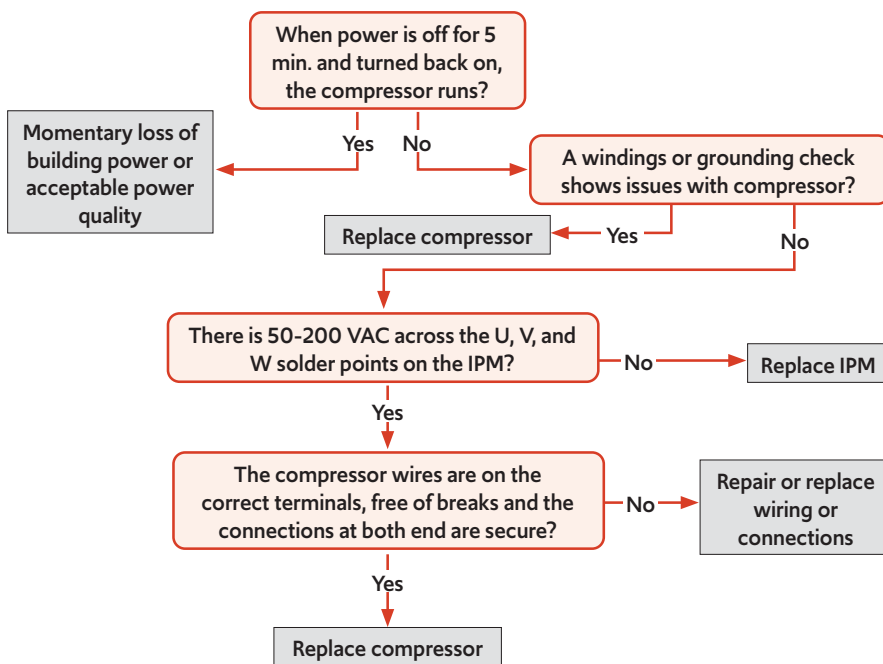

Error Codes (Outdoor)


LED1: 21 Flash**Indoor Unit Over Temperature (Heating Mode Only)****Detection Conditions:**

Activated when the temperature being sensed by the heat exchanger pipe sensor rises above 149°F twice in 30 minutes.

Possible Causes:

- Faulty electronic expansion valve
- Dirty heat exchanger
- Faulty heat-exchange sensor
- Refrigerant undercharge

Note: this is a resetting fault that will not lockout operation.

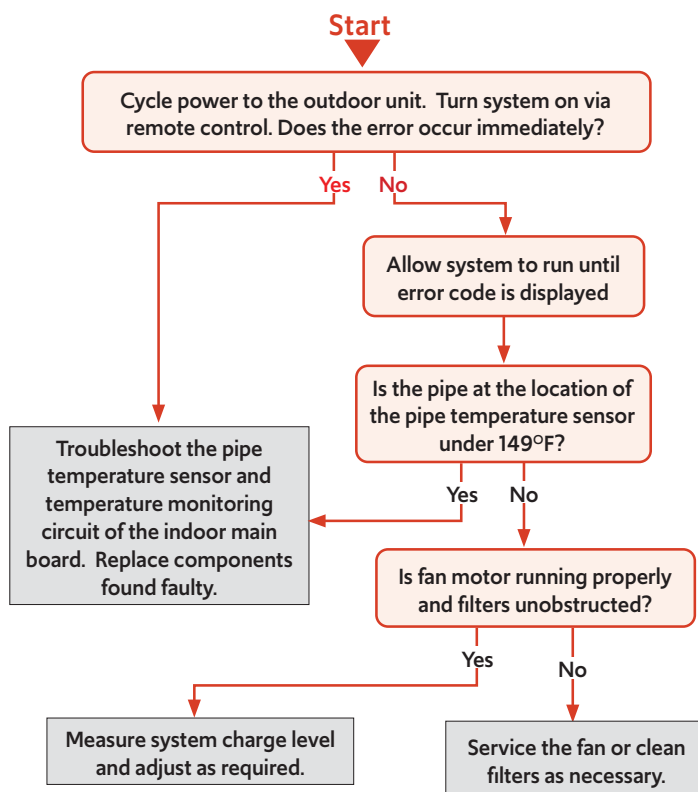


Error Codes (Indoor/Outdoor)**LED1: 28 Flash****Lack of Refrigerant or Discharging****Detection Conditions:**

Compressor operation frequency more than 46Hz, the current between 0.6A and 2.5A

Possible Causes:

- Coil leakage
- Discharge refrigerant

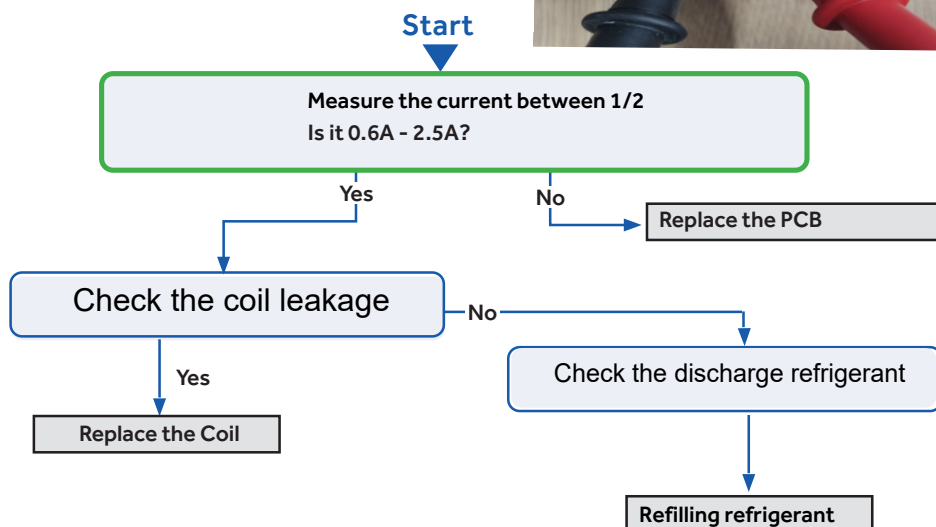
**Error Codes (Indoor)****E22/LED1: 21 Flash****Indoor Unit Anti-frosting Protection (Cooling Mode Only)****Detection Conditions:**

Activated when the temperature being sensed by the heat exchanger pipe sensor rises under 36°F twice in 30 minutes.

Possible Causes:

- Faulty electronic expansion valve
- Dirty heat exchanger
- Faulty heat-exchange sensor
- Refrigerant undercharge

Note: this is a resetting fault that will not lockout operation.

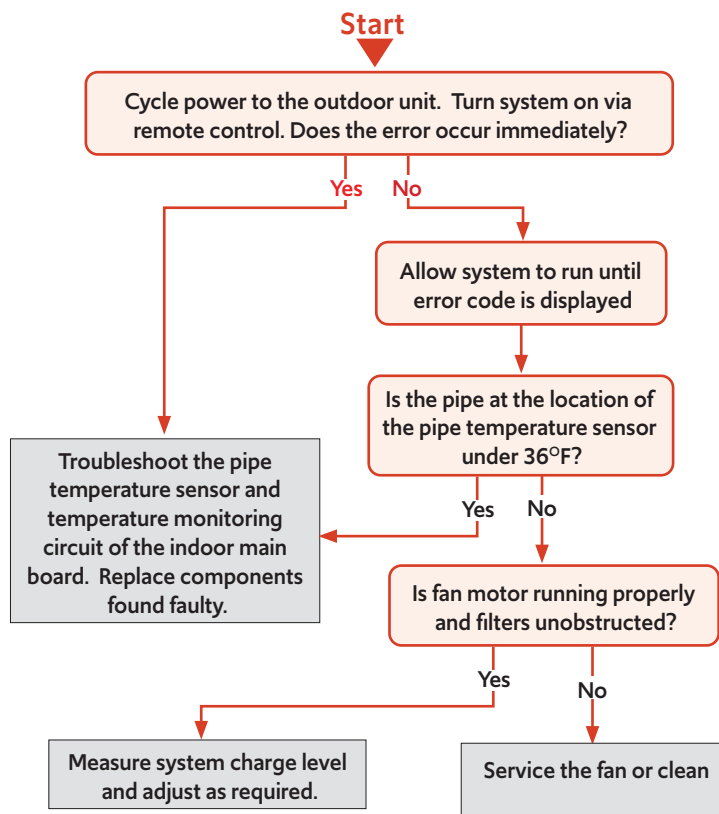



Error Codes (Indoor/Outdoor)

F2/LED1: 24 Flash**Module Operated Over Current
(Compressor Startup Failure)****Detection Conditions:**

The unit operation current exceeds the preset limit by 135%.


Possible Causes:

- The power supply is abnormal
- Incorrect compressor wiring
- The power module is bad
- The compressor is bad
- System overload

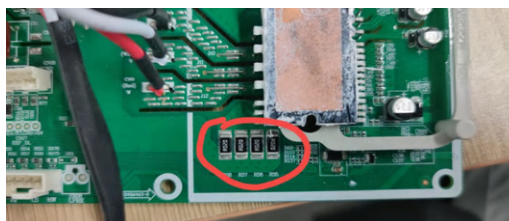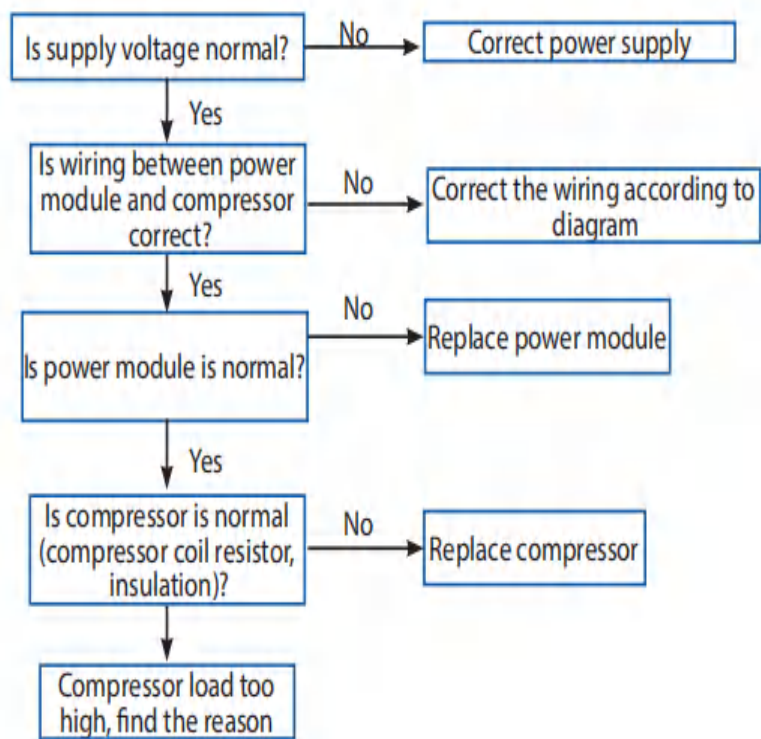

Error Codes (Indoor)**bA****DIP Switch Enabled, No Sensor Detected****Detection Conditions:***DIP Switch Enabled, No Sensor Detected***Possible Causes:**

- Loose wiring terminals
- Damaged wiring harness
- The leakage sensor is not connected
- PCB damage

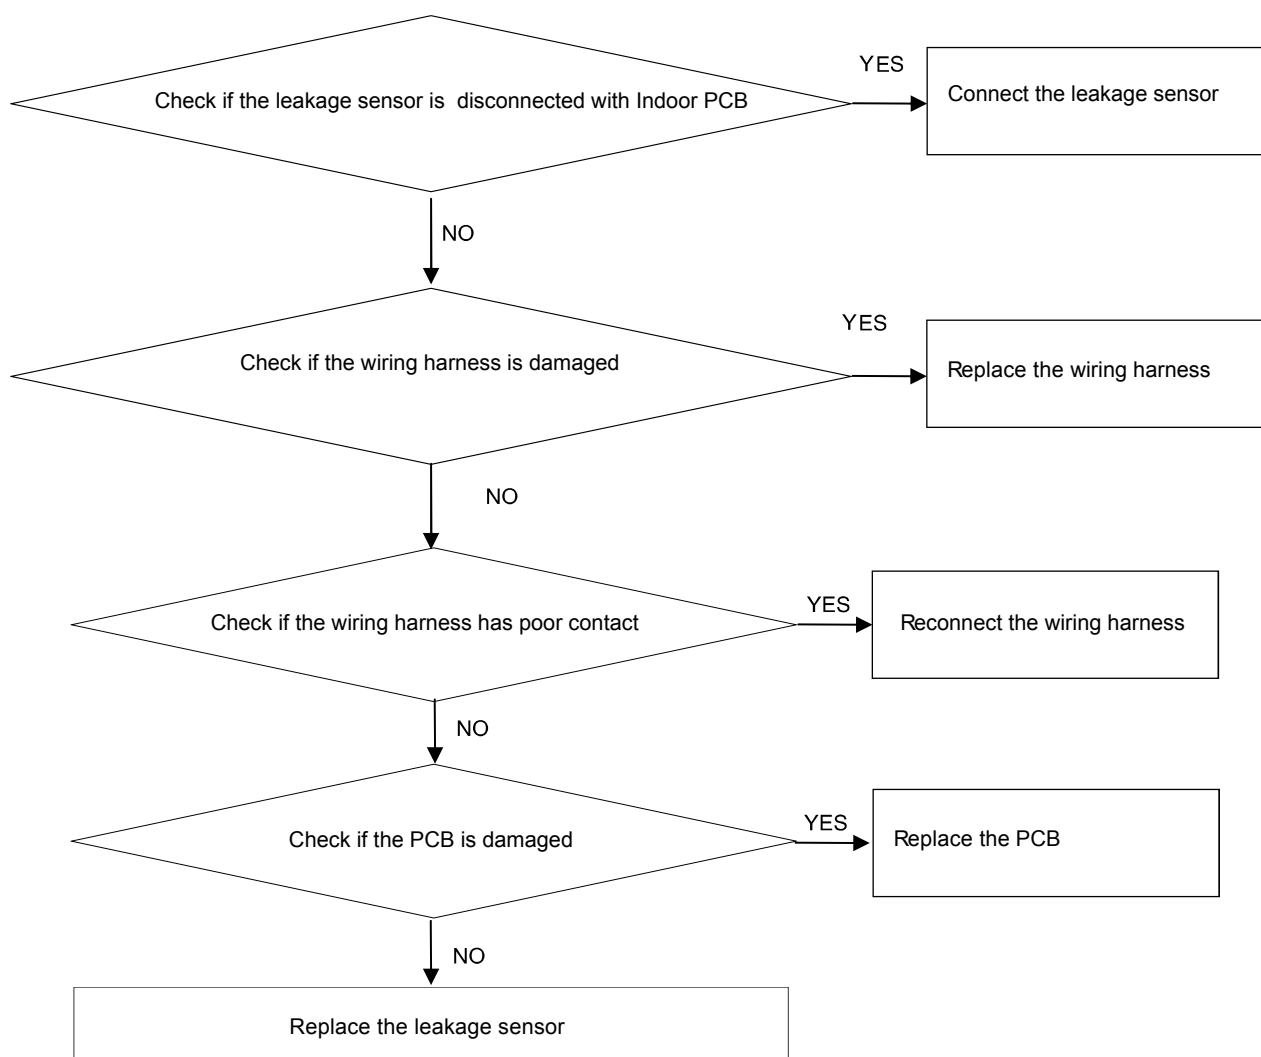*** Caution***Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.*

Error Codes (Indoor)

AA and Ab

Refrigerant Leakage Fault

Detection Conditions:


- AA: Refrigerant concentration over 10% LFL
- Ab: AA display after 5 minutes and refrigerant concentration of less than 8% LFL detected

Possible Causes:

- Pipe cracking
- The union nut is not secured

* Caution

Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

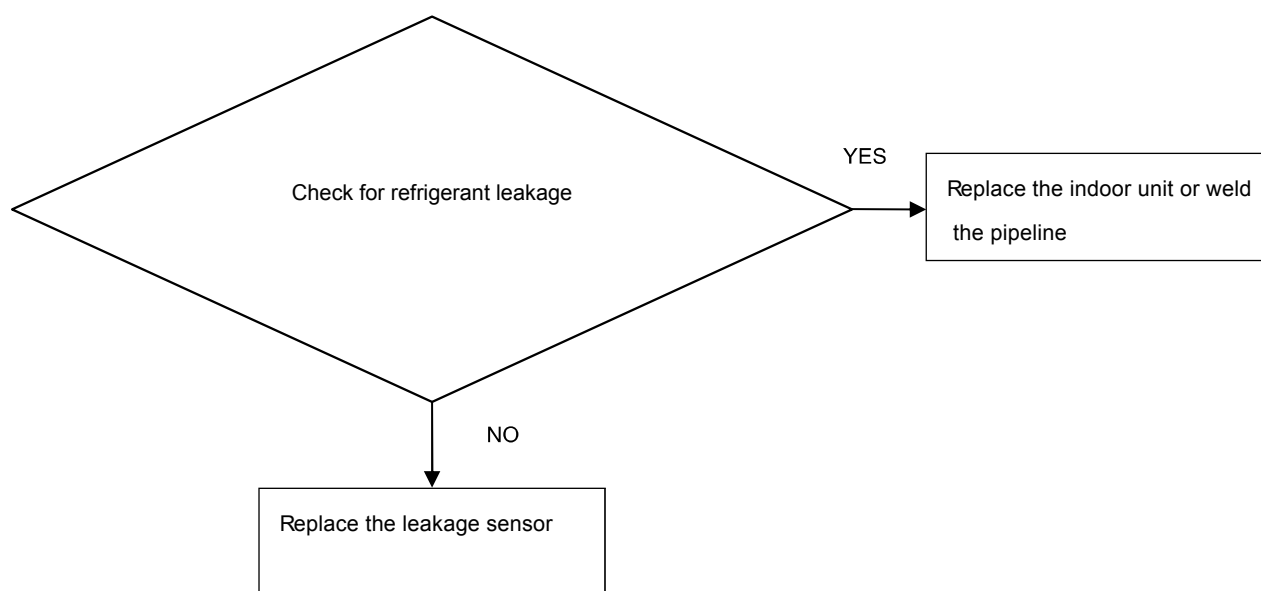

Error Codes (Indoor)**Ac****Leakage Sensor Communication Fault****Detection Conditions:**


The communication between the leakage sensor and the PCB is faulty

Possible Causes:

- Loose wiring terminals
- Damaged wiring harness
- PCB damage

*** Caution**

Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

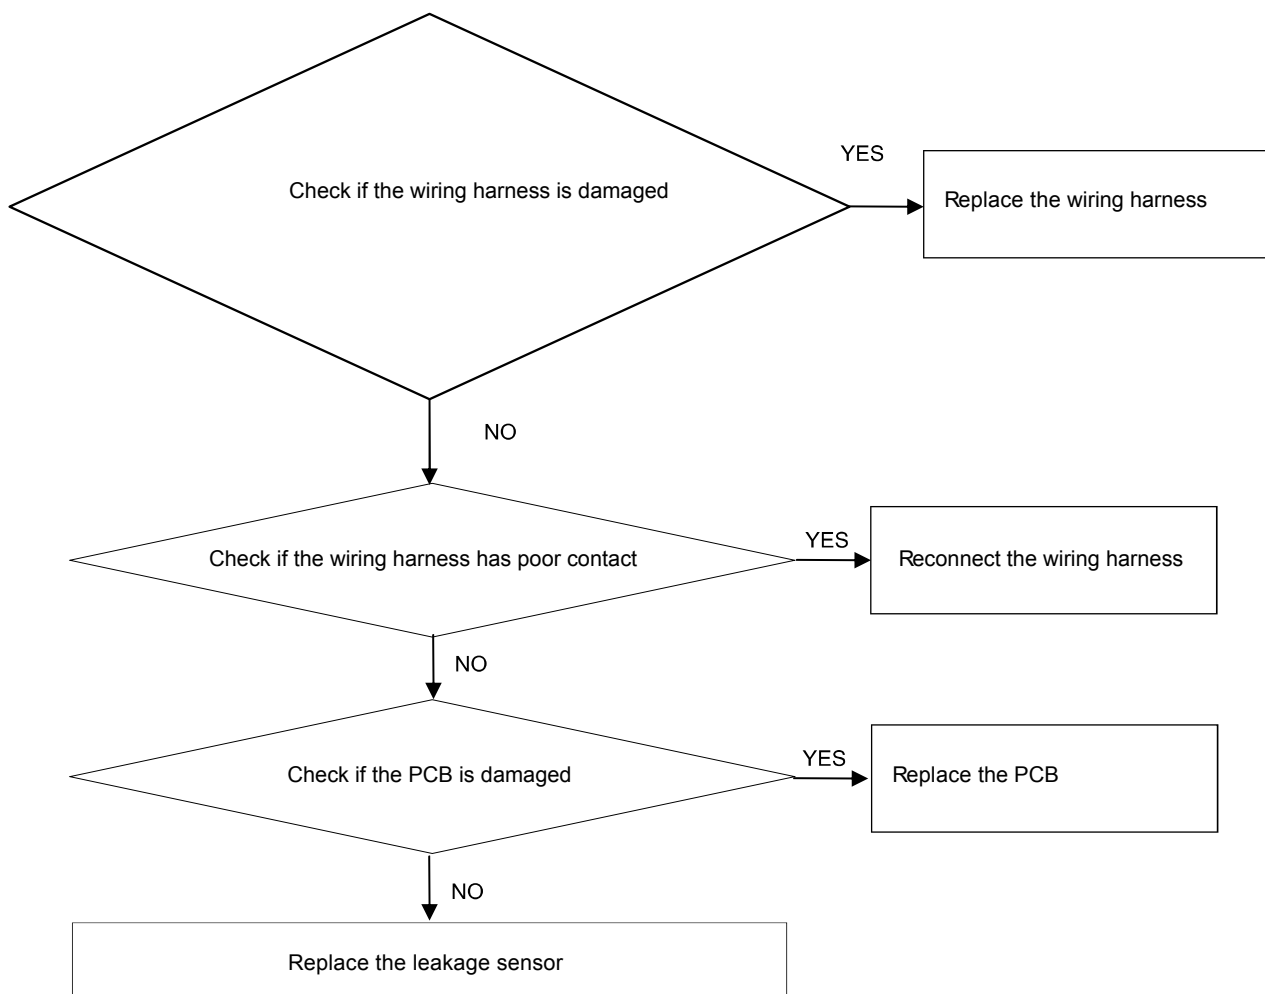

Error Codes (Indoor)

Ad


Leakage Sensor Self-Check Fault

Detection Conditions:

Leakage sensor self-test failed

Possible Causes:

- Power supply overvoltage and undervoltage (5VDC)
- The temperature value detected by the leakage sensor exceeds the limit value
- Internal sensor error

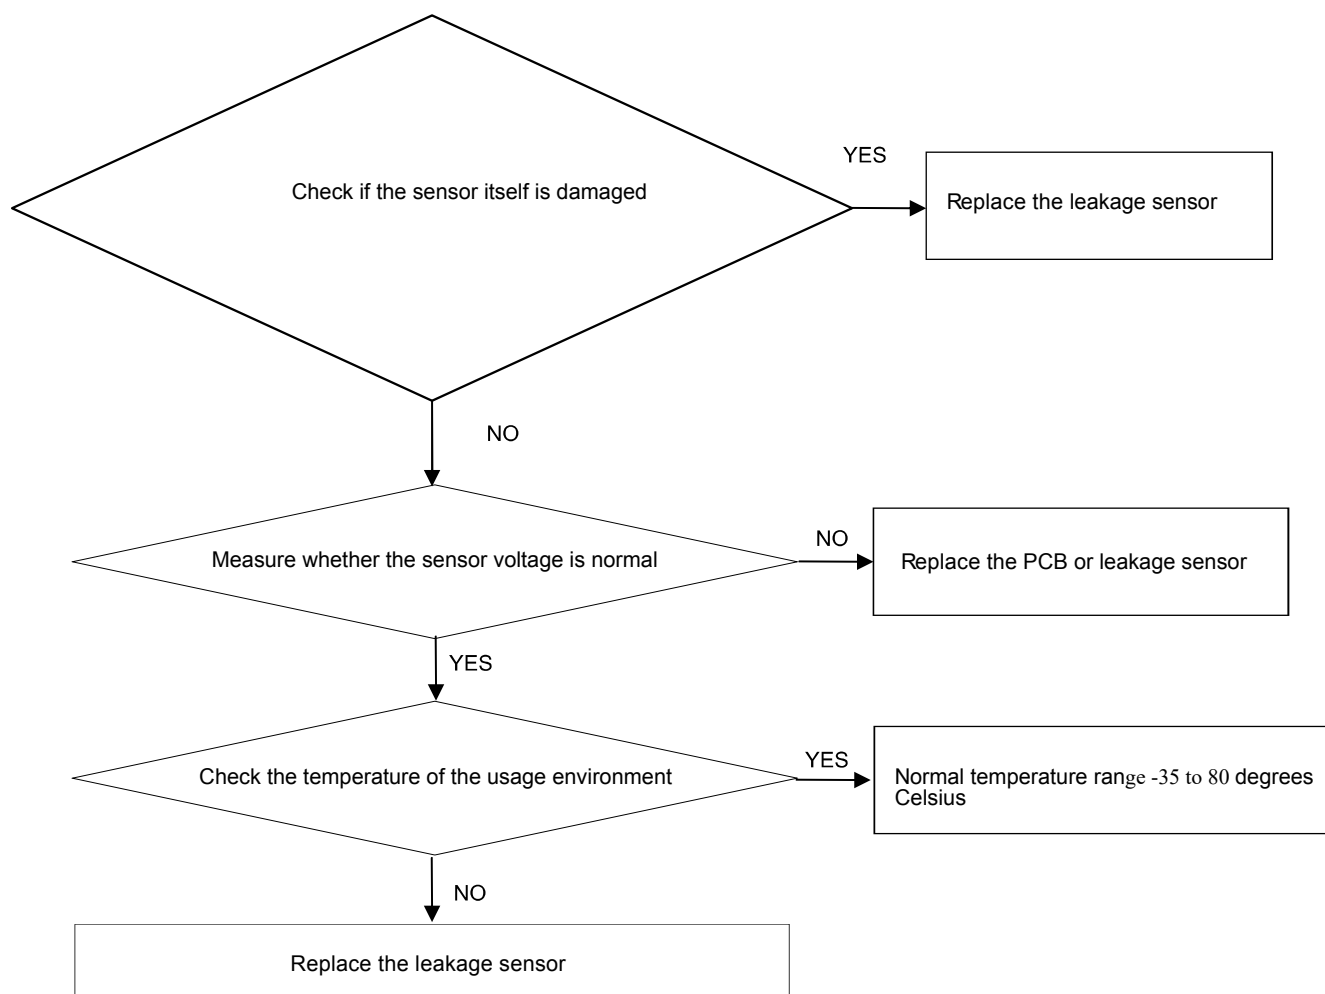*** Caution***Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.*

Error Codes (Indoor)**AE****Leakage Sensor Reaching-End-of-Life Warning****Detection Conditions:**


The sensor is 6 months away from the end of its life

Possible Causes:

- The sensor approaching the end of life
- End of life counting error of sensor

*** Caution**

Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

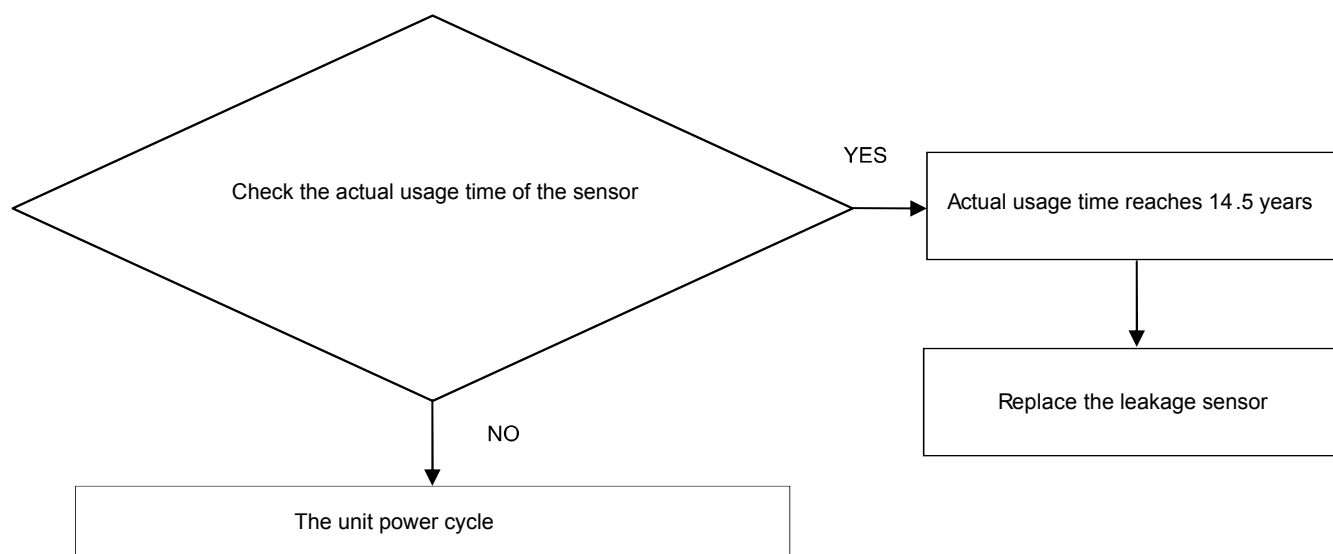

Error Codes (Indoor)

AF

Leakage Sensor End- Of- Life

Detection Conditions:


The sensors have reached the end of life

Possible Causes:

- The sensor approaching the end of life
- End of life counting error of sensor

* Caution

Be sure to turn off power switch before connect or disconnect connector, or else parts damage may be occurred.

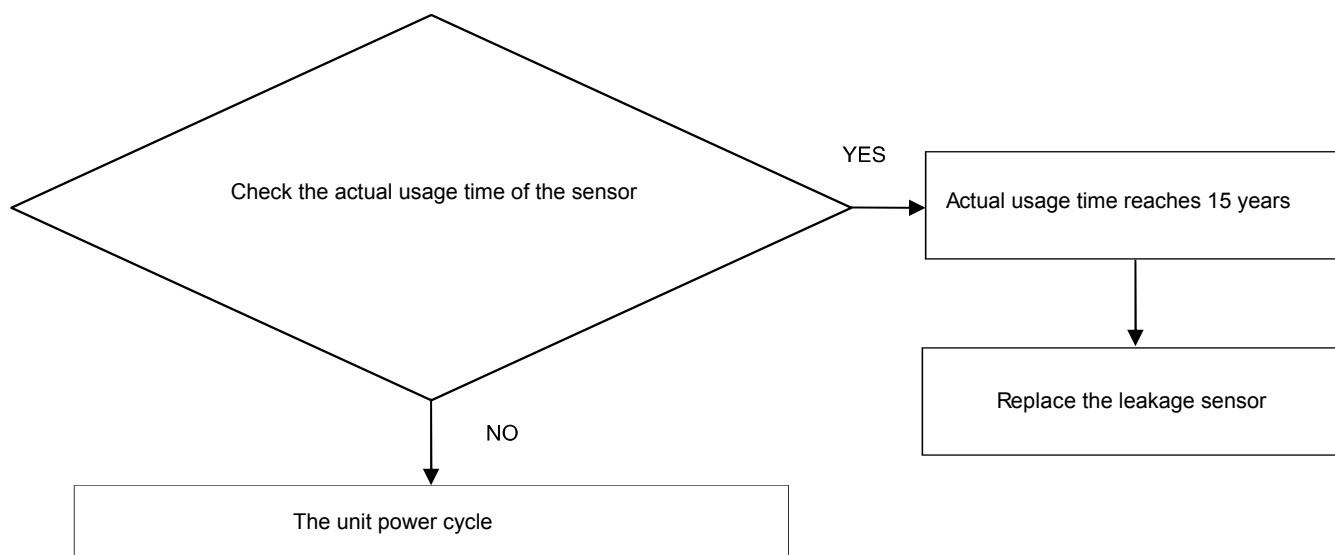

SENSOR RESISTANCE VALUES

Abbr.	Definition	Type
tAo	Temperature of outdoor ambient	10K
tc	Temperature of outdoor condenser	10K
td	Temperature of outdoor discharge	50K
tE	Temperature of outdoor defrost	10K
tS	Temperature of outdoor suction	10K
tdr	Temperature of compressor driver module	10K
ldr	Current of the compressor	10K

Abbr.	Definition	Type
tAI	Temperature of indoor ambient	10K
TCI	Temperature of indoor condenser	10K
Toci	Hot Gas Leaving the 4-Way Valve	10K
Tc2	EEV Liquid Sensor	10K
Tc1	EEV Gas Sensor	10K
Tm	Module Temp Sensor	10K
TAI	Temperature of indoor ambient (9K/12K Tempo & All CAC)	23K

10K Sensors: Ambient (all except ducted, cassette, and 9K-12K Tempo) suction, gas, defrost, and pipe sensors.

23K Sensors: Ambient sensors for ducted, cassette, and 9K-12K Tempo

50K Sensors: Discharge sensors

°F	°C	Normal (KΩ)		
		10K SENSORS	23K SENSORS	50K SENSORS
-22	-30	147.95	513.115	12061.74
-20.2	-29	139.56	478.894	11267.87
-18.4	-28	131.70	447.408	10531.37
-16.6	-27	124.34	418.379	9847.72
-14.8	-26	117.44	391.564	9212.81
-13	-25	110.96	366.751	8622.85
-11.2	-24	104.89	343.754	8074.38
-9.4	-23	99.19	322.407	7564.22
-7.6	-22	93.83	302.567	7089.47
-5.8	-21	88.80	284.105	6647.45
-4	-20	84.07	266.905	6235.71
-2.2	-19	79.62	250.866	5851.99
-0.4	-18	75.44	235.895	5494.21
1.4	-17	71.50	221.911	5160.46
3.2	-16	67.79	208.838	4849.00
5	-15	64.30	196.609	4558.19
6.8	-14	61.01	185.163	4286.55
8.6	-13	57.91	174.443	4032.71
10.4	-12	54.99	164.399	3795.39
12.2	-11	52.23	154.983	3573.43
14	-10	49.62	146.153	3365.73
15.8	-9	47.17	137.87	3171.31
17.6	-8	44.85	130.096	2989.25
19.4	-7	42.65	122.799	2818.67
21.2	-6	40.58	115.946	2658.81
23	-5	38.62	109.51	2508.91
24.8	-4	36.77	103.462	2368.32
26.6	-3	35.01	97.779	2236.39
28.4	-2	33.36	92.437	2112.55
30.2	-1	31.78	87.415	1996.25
32	0	30.30	82.691	1887.00
33.8	1	28.89	78.248	1784.33
35.6	2	27.55	74.067	1687.81
37.4	3	26.29	70.133	1597.04
39.2	4	25.09	66.43	1511.65
41	5	23.95	62.943	1431.28
42.8	6	22.87	59.659	1355.62
44.6	7	21.84	56.566	1284.36
46.4	8	20.87	53.651	1217.23
48.2	9	19.94	50.904	1153.96
50	10	19.06	48.314	1094.32
51.8	11	18.23	45.872	1038.07
53.6	12	17.43	43.569	985.01
55.4	13	16.68	41.395	934.94
57.2	14	15.96	39.343	887.68
59	15	15.28	37.406	843.05
60.8	16	14.63	35.577	800.89
62.6	17	14.01	33.848	761.06
64.4	18	13.42	32.215	723.41
66.2	19	12.86	30.671	687.82
68	20	12.32	29.21	654.16
69.8	21	11.81	27.828	622.32
71.6	22	11.33	26.521	592.18
73.4	23	10.86	25.283	563.66
75.2	24	10.42	24.111	536.65
77	25	10.00	23	511.08
78.8	26	9.60	21.947	486.94
80.6	27	9.21	20.949	464.05

°F	°C	Normal (KΩ)		
		10K SENSORS	23K SENSORS	50K SENSORS
82.4	28	8.85	20.003	442.35
84.2	29	8.50	19.104	421.77
86	30	8.16	18.252	402.24
87.8	31	7.84	17.442	383.72
89.6	32	7.54	16.674	366.13
91.4	33	7.25	15.943	349.43
93.2	34	6.97	15.249	333.58
95	35	6.70	14.588	318.52
96.8	36	6.45	13.96	304.22
98.6	37	6.20	13.362	290.62
100.4	38	5.97	12.794	277.70
102.2	39	5.75	12.252	265.41
104	40	5.53	11.736	253.73
105.8	41	5.33	11.244	242.62
107.6	42	5.13	10.776	232.04
109.4	43	4.94	10.329	221.98
111.2	44	4.76	9.904	212.41
113	45	4.59	9.497	203.29
114.8	46	4.43	9.11	194.61
116.6	47	4.27	8.74	186.34
118.4	48	4.11	8.387	178.46
120.2	49	3.97	8.05	170.95
122	50	3.83	7.728	163.80
123.8	51	3.69	7.421	156.97
125.6	52	3.57	7.127	150.47
127.4	53	3.44	6.846	144.26
129.2	54	3.32		138.35
131	55	3.21		132.70
132.8	56	3.10		127.31
134.6	57	2.99		122.16
136.4	58	2.89		117.25
138.2	59	2.79		112.56
140	60	2.70		108.08
141.8	61	2.61		103.80
143.6	62	2.52		99.70
145.4	63	2.44		95.79
147.2	64	2.36		92.06
149	65	2.28		88.48
150.8	66	2.21		85.06
152.6	67	2.14		81.79
154.4	68	2.07		78.66
156.2	69	2.00		75.67
158	70	1.94		72.80
159.8	71	1.88		70.06
161.6	72	1.82		67.43
163.4	73	1.76		64.91
165.2	74	1.71		62.50
167	75	1.65		60.19
168.8	76	1.60		57.98
170.6	77	1.55		55.86
172.4	78	1.51		53.82
174.2	79	1.46		51.87
176	80	1.41		50.00
177.8	81	1.37		48.21
179.6	82	1.33		46.48
181.4	83	1.29		44.83
183.2	84	1.25		43.25
185	85	1.22		41.72

°F	°C	Normal (KΩ)		
		10K SENSORS	23K SENSORS	50K SENSORS
186.8	86	1.18		40.26
188.6	87	1.14		38.85
190.4	88	1.11		37.50
192.2	89	1.08		36.21
194	90	1.05		34.96
195.8	91	1.02		33.77
197.6	92	0.99		32.62
199.4	93	0.96		31.51
201.2	94	0.93		30.45
203	95	0.91		29.42
204.8	96	0.88		28.44
206.6	97	0.86		27.50
208.4	98	0.83		26.59
210.2	99	0.81		25.71
212	100	0.79		24.87
213.8	101	0.76		24.06
215.6	102	0.74		23.28
217.4	103	0.72		22.52
219.2	104	0.70		21.80
221	105	0.68		21.10
222.8	106	0.67		20.43
224.6	107	0.65		19.78
226.4	108	0.63		19.16
228.2	109	0.61		18.56
230	110	0.60		17.98
231.8	111	0.58		17.42
233.6	112	0.57		16.88
235.4	113	0.55		16.36
237.2	114	0.54		15.85
239	115	0.52		15.37
240.8	116	0.51		14.90
242.6	117	0.50		14.45
244.4	118	0.48		14.01
246.2	119	0.47		13.59
248	120	0.46		13.19
249.8	121			12.80
251.6	122			12.42
253.4	123			12.05
255.2	124			11.70
257	125			11.35
258.8	126			11.02
260.6	127			10.70
262.4	128			10.40
264.2	129			10.10
266	130			9.81
267.8	131			9.53
269.6	132			9.26
271.4	133			9.00
273.2	134			8.74
275	135			8.50
276.8	136			8.26
278.6	137			8.03
280.4	138			7.81
282.2	139			7.60
284	140			7.39



GE APPLIANCES
a Haier company

AIR&WATER
SOLUTIONS

Ductless Technical Support

Phone: 866.814.3633

Email: HVACSupport@GEAppliances.com

Online: GEAppliancesAirAndWater.com



Rev. 04-08-26

©Copyright 2026 GE Appliances, a Haier Company.
Our continued commitment to quality products may
mean a change in specifications without notice.