

ASSEMBLY INSTRUCTIONS

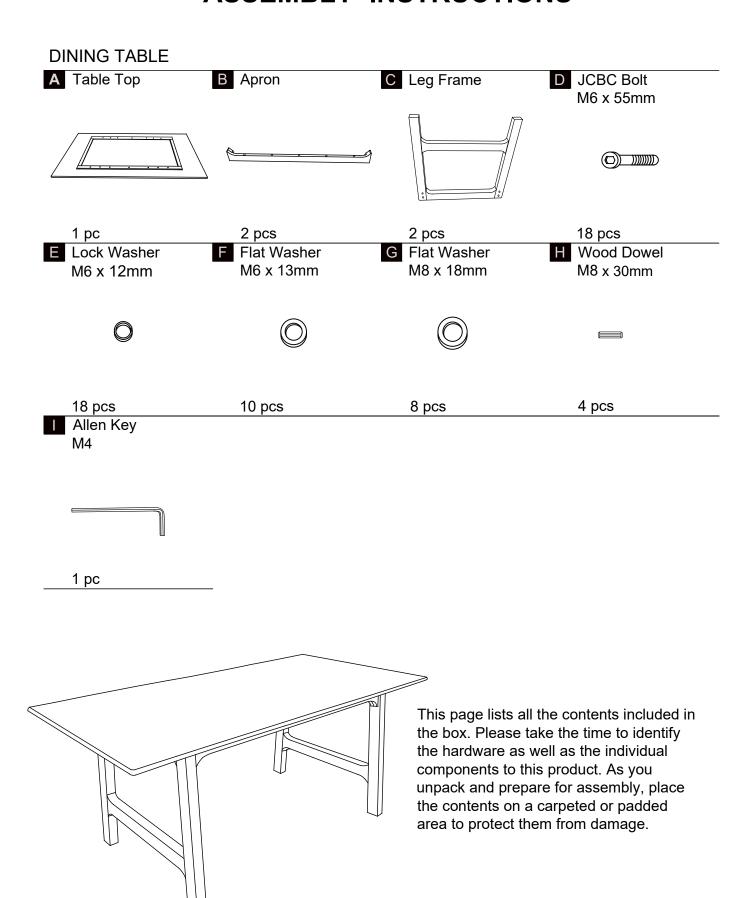


Place the Table Top (A) on a protective surface. Insert Wood Dowel (H) into the Apron (B). Then, attach the Apron (B) to the Table Top (A) using JCBC Bolt (D), Lock Washer (E) and Flat Washer (F) with the Allen Key (I).

**Do not fully tighten the bolts until all bolts are attached.

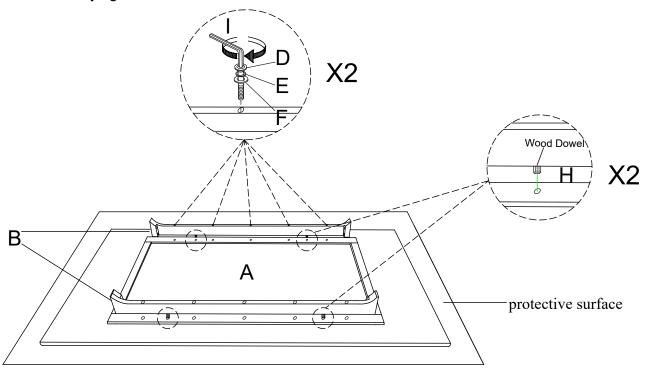

Attach the Leg Frame (C) to the Apron (B) using JCBC Bolt (D), Lock Washer (E) and Flat Washer (G) with the Allen Key (I).

**Do not fully tighten the bolts until all bolts are attached.

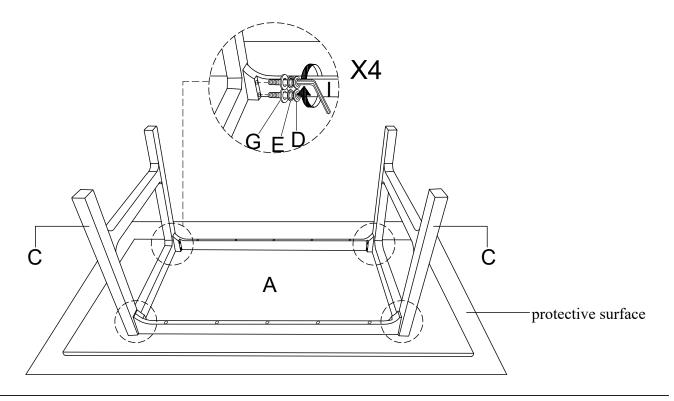

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.