



bestchoiceproducts

Standing
ANIMATRONIC SCARECROW



SOUND
ACTIVATED




TOUCH
ACTIVATED



INDOOR/
COVERED PORCH

bestchoiceproducts.com

SKY6240

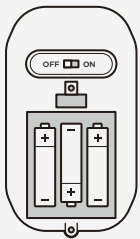

BATTERY BOX INSTALLMENT

1. Locate the battery box in the back of the animatronic
2. Unscrew the battery cover and insert 3 AA batteries

BATTERY BOX FUNCTION

AUTOMATIC MODE: Turn the switch ON to activate touch sensor

MANUAL MODE. Turn the switch OFF. Press the button to activate the animatronic



BUTTON



Questions about your product? We're here to help.

Scan the QR code or visit us at:

help.bestchoiceproducts.com

SKY6240

REQUIRES

- #0 or #1 Mini Screwdriver (Not Included)
- 3 AA Batteries (Not Included)

STAND ASSEMBLY

1. Insert poles into connectors to build stand
2. Slide four legs into base connector
3. Attach figure to top of stand

