




BEST CHOICE
PRODUCTS

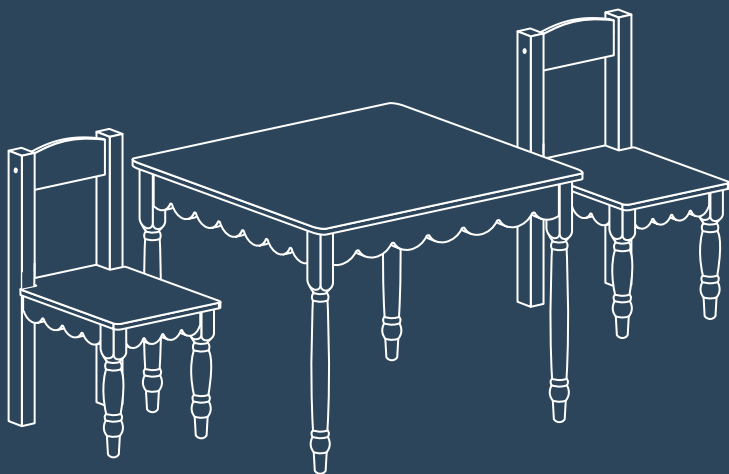

INSTRUCTION MANUAL

Kids Table and Chair Set

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.







ⓘ NOTICE | Please retain these instructions for future reference.

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- Be aware that some parts are heavy or have sharp edges.
- This product is intended for residential use only.

TOOLS REQUIRED




HARDWARE

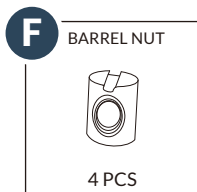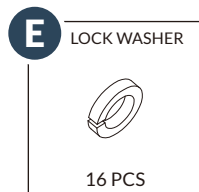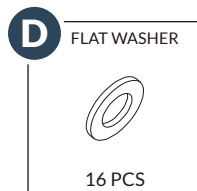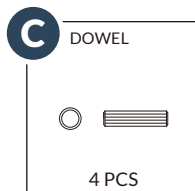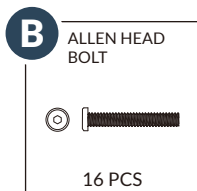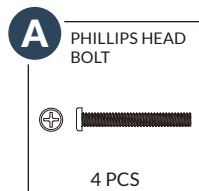

PARTS

1

 
TABLETOP



1 PC

2


TABLE LEG

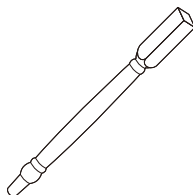

4 PCS

3


BACK LEFT CHAIR LEG

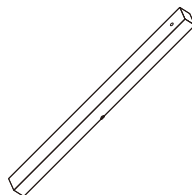

2 PCS

4

BACK RIGHT CHAIR LEG

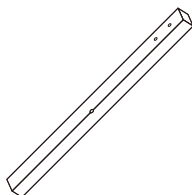

2 PCS

5


CHAIR BACK



2 PCS

6

CHAIR FRONT LEG

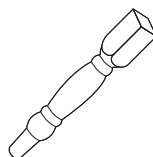

4 PCS

7

CHAIR SEAT




2 PCS

PRODUCT ASSEMBLY

1

Use the provided allen wrench to tighten two **part B** allen head bolts with two **part D** flat washers and two **part E** lock washers through **part 1** tabletop and into **part 2** table leg.
Repeat for each table leg.

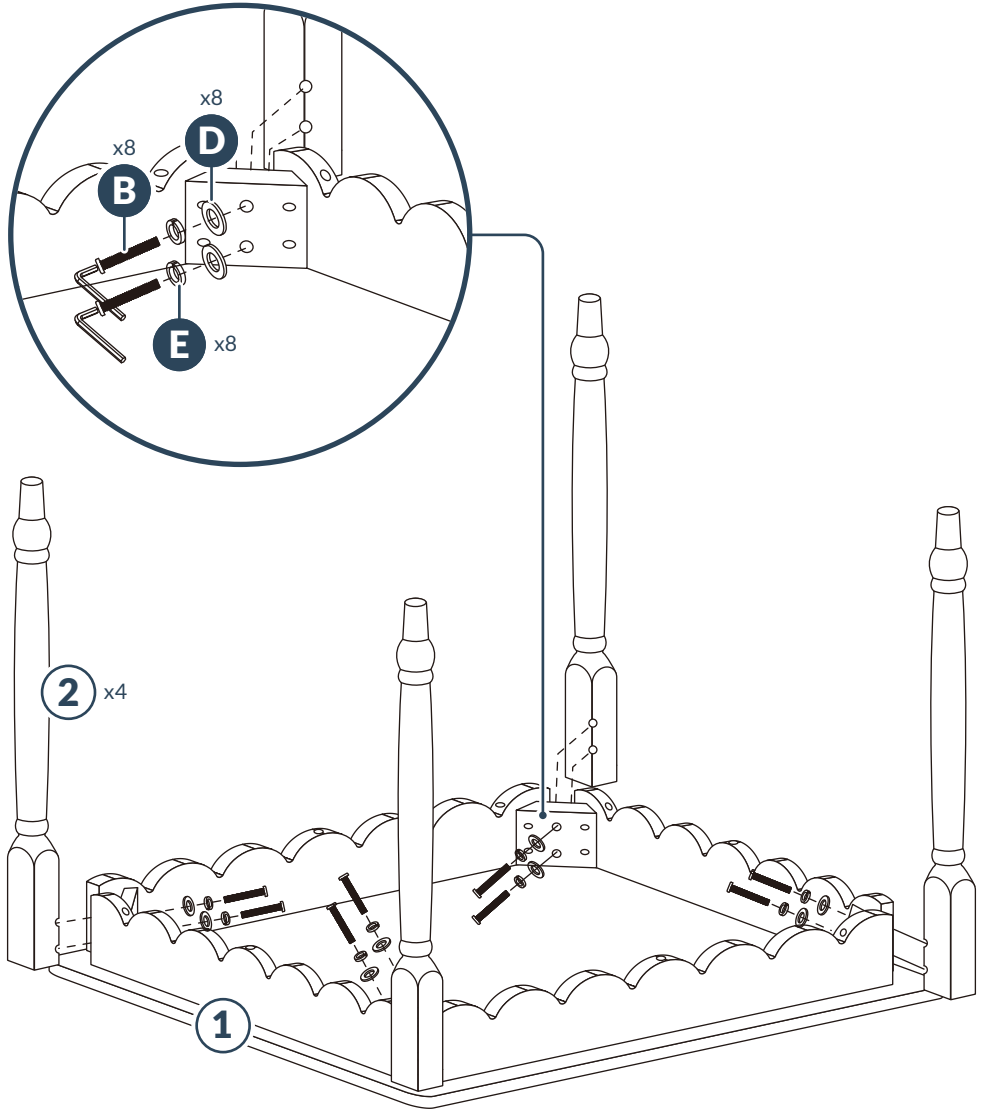

2



Insert two **part C** dowels and two **part F** barrel nuts into **part 5** chair back.

Attach **part 4** back right chair leg into **part 5** chair back with one **part A** phillips head bolt.


Attach **part 3** back left chair leg into **part 5** chair back with one **part A** phillips head bolt.

Repeat for second chair.

x2

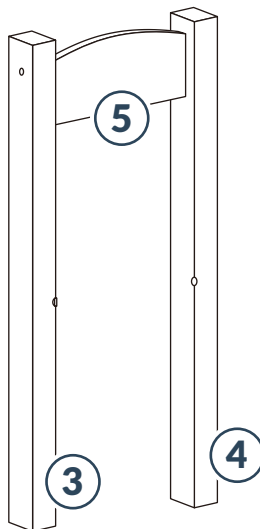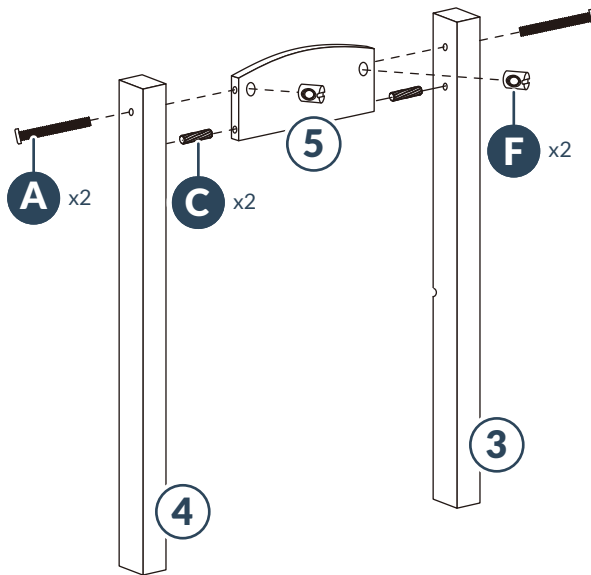

- 3** | Use the provided allen wrench to tighten one **part B** allen head bolts with one **part E** flat washer and one **part E** lock washer through **part 7** chair seat and into **part 6** chair front leg.
- Repeat to attach the remaining **part 6** chair front leg to **part 7** chair seat.

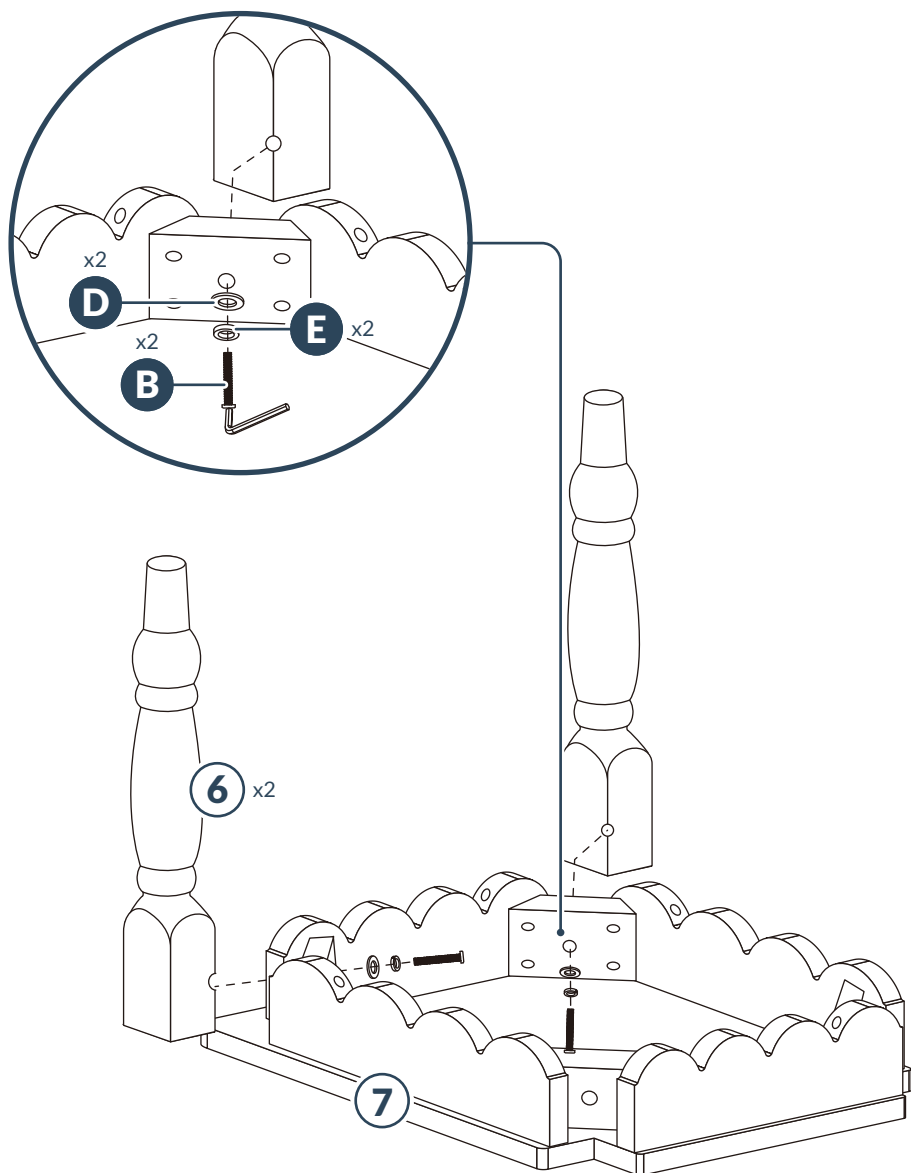

x2


4

Attach **part 7** chair seat to **part 3** back left chair leg and **part 4** back right chair leg with two **part B** allen head bolts, two **part E** lock washers, and two **part D** flat washers.

Tighten **part B** allen head bolts with the provided allen wrench.

Repeat for second chair.

x2

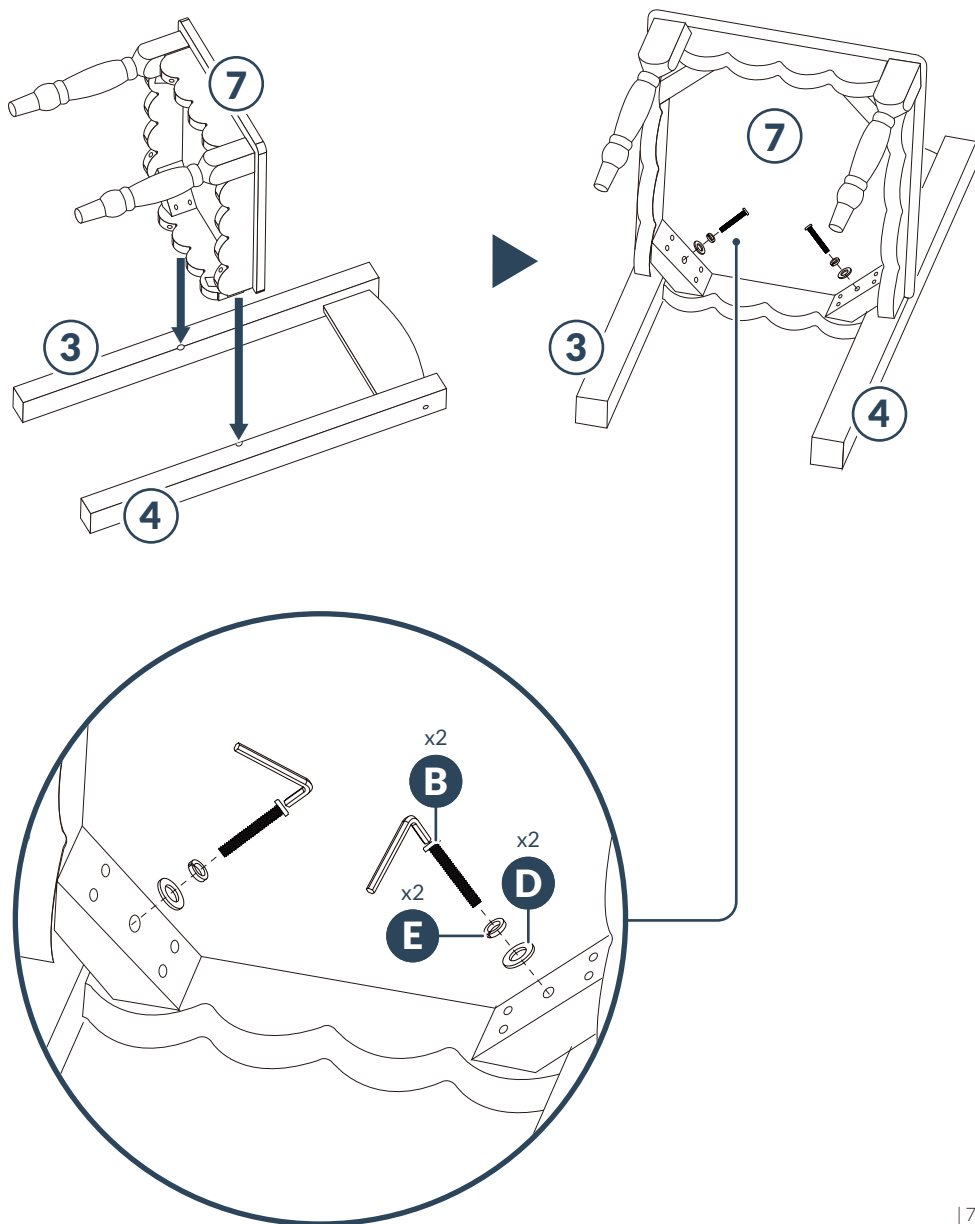



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.