



Staying Houseproud
SINCE 1923

HEATED UNDER BLANKET



3 HEAT
SETTINGS



MACHINE
WASHABLE

INSTRUCTION MANUAL

THREE HEAT SETTINGS WITH ONE CONTROLLER



Please retain instructions for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should not use this product due to their inability to react to overheating.

Children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use the product only if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.

This is not a toy. Children should be supervised to ensure they do not play with the product.

Particular attention should be given where children and vulnerable people are concerned.

This product must not be used by persons insensitive to heat or by other vulnerable persons unable to react to overheating.

Always unplug the product and allow to cool fully after use and before any cleaning or maintenance. If storing, allow to cool fully before folding the blanket and store without items on top of the blanket to avoid damage from creasing.

Nominal voltage is still present in this product as long as the product is connected to the electrical source.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.

This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.

Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.

Do not immerse the control box or plug in water or any other liquid.

Do not operate the product with wet hands.

Do not leave the product unattended whilst connected to the mains power supply or when in use.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the product for anything other than its intended use.

Do not use this product outdoors.

Do not attempt to move the product whilst it is in use.

Do not put objects into any of the openings.

Do not insert pins into the product.

Do not use the product folded or tucked in – regularly check that the blanket and cord do not become trapped or rucked.

Do not use this product on an adjustable bed.

Do not pinch, flex or expose the heating wire, as overheating and/or personal injury may occur.

Do not use the product when it is wet.

Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product.

This product is intended for domestic use only. It should not be used for commercial purposes or medical use in hospitals.

**DO:**

Examine frequently for signs of damage or wear.

Use only as an under blanket only.

Only use with the detachable control unit provided.

Only use the lowest heat setting when the bed is occupied.

Only use the blanket with the control box supplied.

DON'T:

Use if damaged.

Leave the product plugged in.

Operate overnight or while sleeping.

Use this product for extended periods of time – a build-up of heat could cause overheating of the body (heatstroke).

Clean the product with abrasive chemicals or materials, such as scourers, as they may damage the product and impair future function. (This includes insecticide and chemical solvents. Wash the blanket according to the instructions on the care label.)

Use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use an extension cord with the product.

Thermal Cut-out Device

This product is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the product start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens return the product to the manufacturer.

Care and Maintenance

Before attempting any cleaning or maintenance, switch off the blanket and unplug it from the mains power supply. Disconnect the controller from the blanket using the retaining clip on the connector.

Do not immerse the controller in water or any other liquid. The blanket has waterproof heating elements, making it safe to immerse in water and wash either by hand or by machine.

NOTE: Check the wiring between the two stickers. If there is any damage, stop using the blanket immediately.

CAUTION: Before washing, always remove the controller; do not allow any part of the controller to be immersed in water or any other liquid.

WARNING: Do not dry clean the blanket.

 
Checking for Wear and Damage

Check the blanket regularly for signs of wear or damage. Return the blanket to the supplier who will advise on whether it is still safe to use.

WARNING: If the blanket shows any of the following signs of wear or damage, stop using immediately:

- Fraying fabric
- Scorch marks
- Exposed elements or internal parts
- Creasing or folding (which pose a risk of the blanket overheating)
- Soiling
- Damp/wet patches
- Tie down strings damaged or missing
- Worn flex cable or damage to plug
- Loose electrical connections

Description of Parts

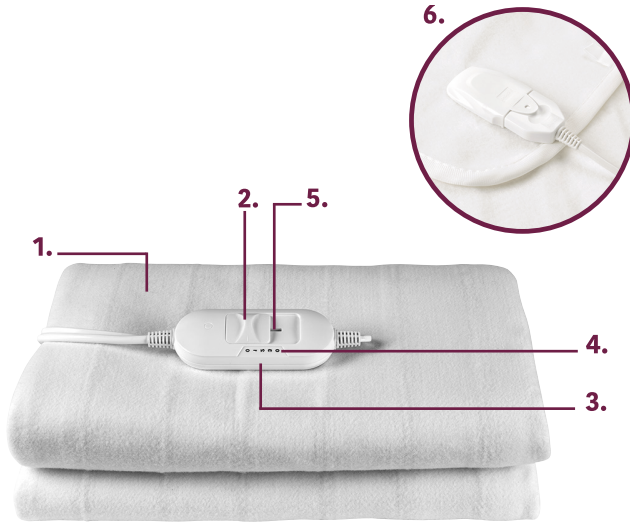

- | | |
|-----------------------------------|-------------------------|
| 1. Heated Under Blanket main unit | 4. 3 heat settings |
| 2. Temperature control switch | 5. Heat indicator light |
| 3. Temperature control box | 6. Connector |

Instructions for Use

STEP 1: Remove the bed sheets, duvet and pillows from the bed and place the blanket onto the bed with the controller positioned at the bedhead end. The blanket should be placed as close to the mattress as possible; beneath mattress protectors but above mattress toppers.

STEP 2: Smooth the blanket so that there are no creases or folds and then secure it by tightening and tying the strings provided. Take care not to overtighten the strings.

STEP 3: Secure the control box to the blanket using the connector, and then connect the blanket to the mains power supply. Check for satisfactory operation and replace the bedding.

STEP 4: To operate the blanket, select the low heat setting '1', the medium heat setting '2' or the high heat setting '3' by sliding the temperature control switch on the controller to the relevant marked indicator. The selected heat setting will also be indicated via the power indicator light.

		Suggested Use
0	Off	Sleeping
1	Low heat	Reading in bed
2	Medium heat	Preheating the bed to a warm temperature
3	High heat	Preheating the bed to a hot temperature

STEP 5: Allow the blanket to preheat the bed. Once heated, switch off the blanket by sliding the thermostat control switch to the off position '0'.

STEP 6: Unplug the blanket from the mains power supply.

WARNING: Do not have the controller set to a high heat setting whilst the bed is occupied; always switch it to the low heat setting. The high heat setting should only be used to preheat the bed.

Unplug the blanket from the mains power supply when it is not in use.

Washing and Drying the Heated Under Blanket

The controller must be disconnected from the blanket before it is washed or dried.

Hand-washing the Heated Under Blanket

Immerse the blanket in water mixed with a hand-wash detergent and wash gently by hand.

CAUTION: Always remove the controller first; do not allow any part of the controller to be immersed in water or any other liquid.

Machine Washing the Heated Under Blanket

Wash the blanket on a 'Wool' or 'Delicates' cycle, or according to the washing machine manufacturer's instructions, with a neutral detergent or mild soap powder at a maximum temperature of 40 °C.

CAUTION: Do not use high speed or extra spin cycles to clean the blanket.

Drying the Heated Under Blanket

Drape the blanket over a clothing line and allow it to dry naturally; do not use pegs to secure the blanket in place.

CAUTION: Never use any form of direct heat to dry the blanket, such as radiators, heaters, hairdryers or tumble driers. Make sure that the blanket is completely dry before reconnecting the controller and refitting back onto the bed.

Troubleshooting

Problem	Cause	Solution
The blanket is not heating up.	The fuse may have blown.	Check the fuse by replacement.

Storage

When the blanket is not in use, it should be lightly folded and stored in a cool, dry place.

Do not place items on top of the blanket whilst it is in storage, as this may damage it.

Specifications

Product code: KL1286

King: 120 x 130 cm – 70 W

Supply: 220–240V ~ 50 Hz

Control: TWK-1/T4E

Notes:

UK PLUGS ONLY

Connection to the mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked N or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked L or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

 
If in doubt consult a qualified electrician who will be pleased to do this for you.

Non-rewireable mains plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug - **DISCONNECT IT FROM THE MAINS** and then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

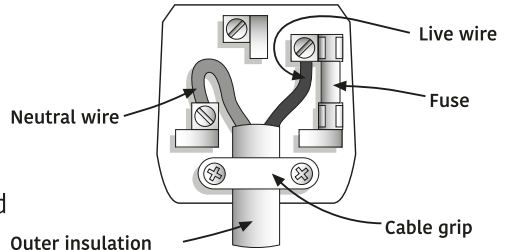

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.
Edmund-Rumpler Straße 5, 51149 Köln. Germany.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.kleeneze.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Kleeneze will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment.

This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

To be eligible for the extended guarantee,
go to **guarantee.upgs.com/kleeneze** and register
your product within 30 days of purchase.

Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

©Kleeneze Trademark. All rights reserved.

CD040716/MD170123/V6






Manchester
OL9 0DD
United Kingdom
www.upgs.com

**ULTIMATE PRODUCTS
HOME OF BRANDS**

Artworker:	Shelley Huang
Date:	08/02/2023
Project Name:	HCC230017 UPG KL1286 Kleeneze
Type of Artwork:	Instruction Manual
Size:	A5 12 PP BOOKLET
Software Used:	Indesign CC23
Typefaces:	Kohinoor Devanagari

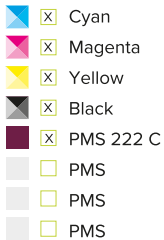 

Artwork Version 1

Artwork Scale 1:1

©2023 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY