 




bestchoiceproducts

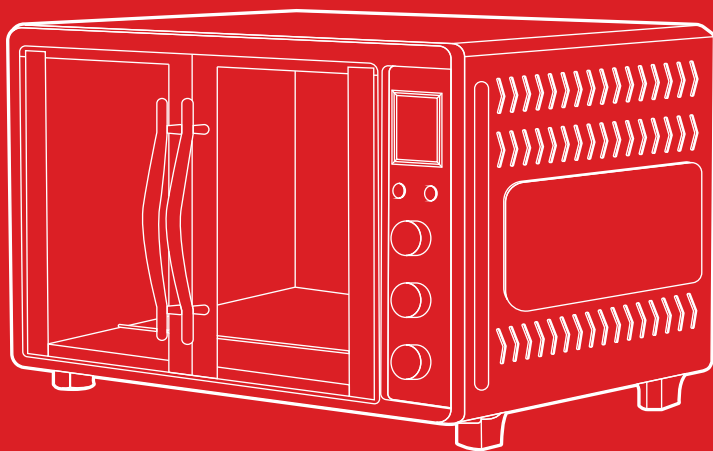

INSTRUCTION MANUAL

58-Quart XL Toaster Oven



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

NOTICE

 
Please retain these instructions for future reference.

- Do not allow children to operate this appliance. Keep appliance out of reach of children.
- Place appliance on a stable and level surface.
- Appliance is intended for indoor, household use only.
- Switch off and unplug appliance if left unattended and before cleaning.
- Ensure that your voltage is consistent with specifications. Only connect to properly grounded outlets.
- Do not use an extension cord as it may overheat and cause a risk of fire.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

WARNING

- Do not leave oven unattended during operation in case of fire.
- Keep appliance away from direct sunlight and other sources of heat (stove, heater, oven, etc.).
- Do not run power cord over sharp edges/corners or a hot surface.
- Make sure power cord is not taut, bent, or tangled, and is arranged so it cannot be tripped over unintentionally.
- Do not pull or carry appliance by the power cord.
- Never cover the appliance during operation.
- Do not obstruct vents and openings during operation.
- Do not place items on top of the appliance during operation.
- Do not use the appliance if there is damage to the plug, main cord, or appliance.
- Do not immerse this appliance in water, rinse under tap, spray with water, or keep in wet/humid areas.
- Do not spill water on the electrical components or connectors.
- Do not pull out the plug if hands are wet.
- Do not move or shake the appliance during operation.
- Do not touch hot surfaces with bare hands; use handles, knobs, or oven mitts.
- Do not operate this appliance with an external timer or remote-control system.
- Do not use any accessory or fitting other than original accessories and fittings.
- Do not operate unless plug is properly plugged into a wall outlet.
- Do not use this product if you notice any problems during operation.
- Do not share an outlet with other appliances or risk damaging the outlet or causing a fire.
- After finishing operation of this appliance, make sure it is turned off and unplugged.

MAIN DIAGRAM

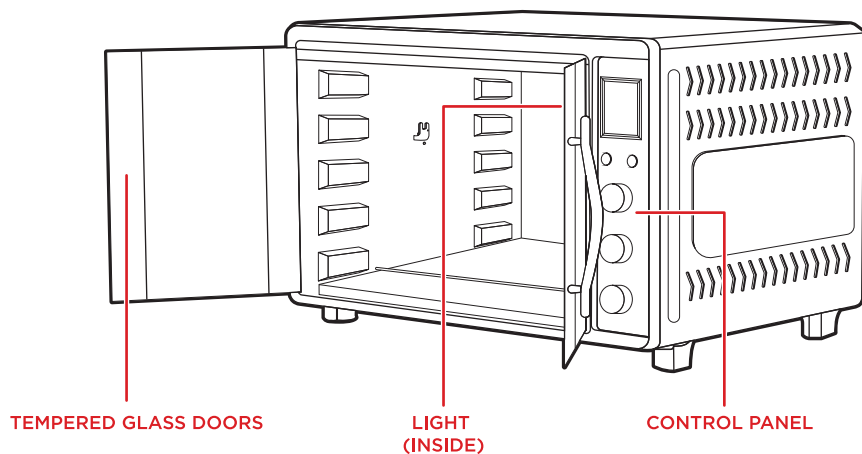


ACCESSORIES


WIRE RACK (2)



 BAKING PAN

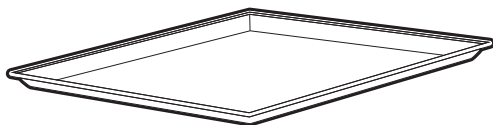

CRUMB TRAY

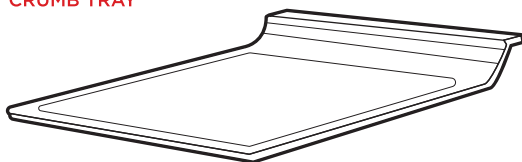 


PAN HANDLE:

Use to pull out the baking pan




ROTISSERIE HANDLE:

 Use to pull out the rotisserie shaft/forks

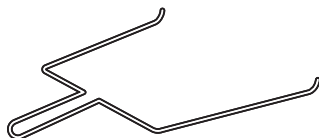


ROTISSERIE SHAFT/FORKS:

 Use with the rotisserie presets




CONTROL PANEL

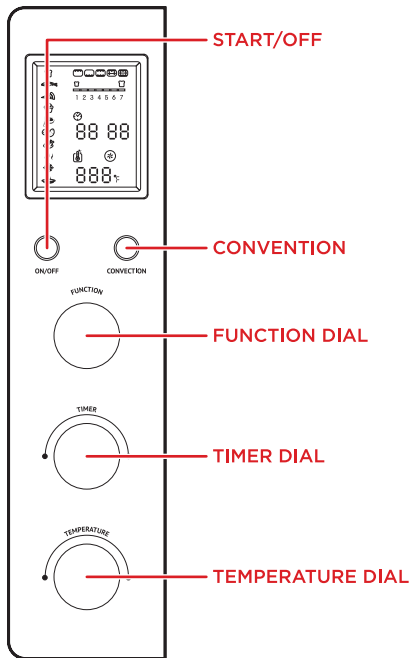 

- **START/OFF:** Press to start cooking or turn off
- **CONVECTION:** Toggle convection function on/off
- Convection function is only available in certain presets
- **FUNCTION DIAL:** Rotate to turn oven on and cycle through cooking, oven, and toast presets
- **TIMER DIAL:** Adjust cook time; further adjust toast preset from light (1) to dark (7)

 DIGITAL DISPLAY

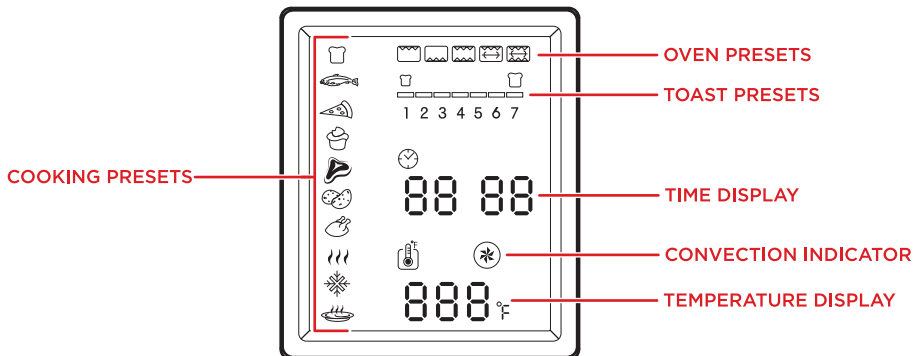

- **OVEN PRESETS:** Indicates oven heating and rotisserie presets
- **TOAST PRESETS:** Indicates light (1) to dark (7) toast presets
- Temp. and time cannot be adjusted in toast presets

PREPARATION

- Remove all packaging materials.
- Place appliance on a stable and level surface and plug it into a wall outlet.
- Clean accessories with hot water, mild detergent, and a non-abrasive sponge.
- Wipe interior and exterior of oven with a clean cloth.
- Leave at least **4 inches** of clearance around the appliance during operation.
- Make sure power cord has enough length to reach the socket comfortably.
- Place appliance away from edges or drops.
- Do not use appliance outdoors or near water.
- Do not use appliance in a hot environment or in the vicinity of flammable materials (e.g. curtains, drapes, walls, etc.)

USAGE TIPS

 
- Be aware that appliance will still operate if doors are open.
- Do not open appliance during operation. Cancel cooking operation before opening doors.
- Do not touch glass doors during operation as it will be extremely hot.
- Do not place utensils or lean anything against the glass doors during operation.
- Do not place hands or face close to the glass doors during operation.
- Avoid scratching or nicking glass door.
- Always use protective, insulated oven mitts when inserting or removing items from the oven.
- Be careful when handling pans, trays, racks, or grease from oven as they are extremely hot.
- Be careful when opening oven as steam may be released.
- Use extreme caution when emptying trays and allow liquids to fully cool before handling.
- Only use containers made of metal, glass, or ceramic in the oven.
- Do not place paper, cardboard, or plastic inside the oven.
- **Dehydrate function:** It is recommended that you open the doors every **30 minutes** to release humidity.

OPERATING INSTRUCTIONS

1. Slide the crumb tray into the bottom floor of the oven.
2. Place ingredients onto desired racks/pan and slide into the designated slots.
3. Rotate the function dial to turn oven on and select a preset.
 - If necessary, adjust the cook time/temperature with the timer and temperature dials.
4. Press the **START** button to begin cooking.
5. The oven will beep when cooking is finished. Press the **OFF** button to turn off. Carefully remove racks/pan with the pan handle or oven mitts.






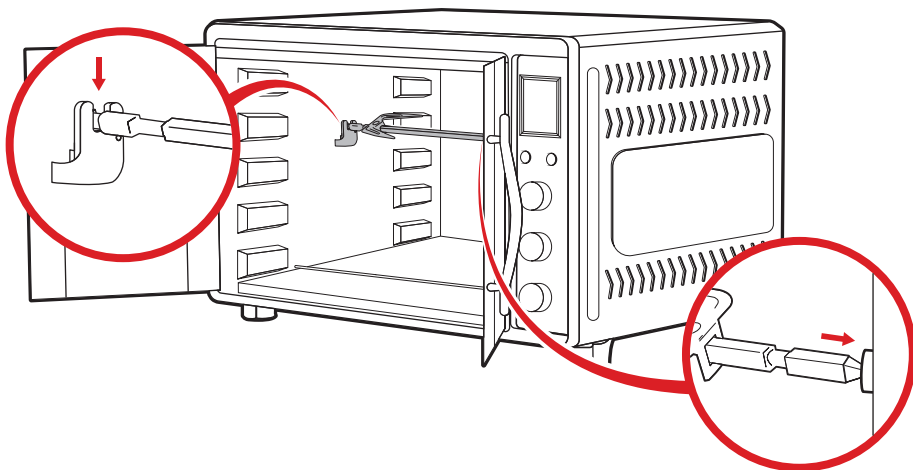




ROTISSERIE FUNCTION

 1. Slide the crumb tray into the bottom floor of the oven.
2. Properly clean protein and pat dry with paper towels. Slide the rotisserie shaft through the center of the protein. Make sure the shaft is centered and even on both sides.
3. Slide the rotisserie forks onto the shaft, one on each side. Tighten the screws to secure the forks and hold the protein in place.
4. Cut several lengths of kitchen twine and tie the protein. Make sure all openings are closed and protein is secure.
5. Within the oven, insert the right side of the rotisserie shaft into the designated hole. Hook the left side onto the slot.








6. Close the doors. Select one of the rotisserie presets and press the **START** button to begin cooking.
7. The oven will beep when cooking is finished. Press the **OFF** button to turn off. Carefully remove the rotisserie shaft with the rotisserie handle. Tug the handle left to release the accessory and pull it out.

PRESETS

PRESET	HEATING ELEMENT	DEFAULT TIME	DEFAULT TEMP. (°F)	TIME RANGE	TEMP. RANGE	CONVECTION	ROTISSERIE
 Toast	Upper & Lower	0:02, 0:04, 0:05, 0:06, 0:07, 0:08, 0:11	-	-	-	-	-
 Fish	Upper & Lower	0:20	340	0:01-3:00	150-450	Optional	-
 Pizza	Upper & Lower	0:20	400	0:01-3:00	150-450	Yes	-
 Bake	Upper & Lower	0:30	350	0:01-3:00	150-450	Optional	-
 Meat	Upper & Lower	0:20	440	0:01-2:00	150-450	Optional	-
 Potatoes	Lower	0:50	425	0:01-2:00	150-450	Yes	-
 Chicken	Upper & Lower	1:00	380	0:01-3:00	150-450	Optional	Yes
 Dehydrate	Lower	6:00	130	0:01-24:00	86-130	-	-
 Defrost	Upper & Lower	0:30	140	0:01-3:00	140-185	Optional	-
 Keep Warm	Upper & Lower	0:25	150	0:01-12:00	95-180	Optional	-

PRESETS

PRESET	HEATING ELEMENT	DEFAULT TIME	DEFAULT TEMP. (°F)	TIME RANGE	TEMP. RANGE	CONVECTION	ROTISSERIE
 Upper Heating	Upper	0:30	360	0:01-2:00	150-450	Optional	-
 Lower Heating	Lower	0:30	350	0:01-2:00	150-450	Optional	-
 Upper & Lower Heating	Upper & Lower	0:30	400	0:01-2:00	150-450	Optional	-
 Upper & Rotisserie	Upper	0:40	380	0:01-2:00	150-450	Optional	Yes
 Upper, Lower, & Rotisserie	Upper & Lower	0:30	420	0:01-2:00	150-450	Optional	Yes

TECHNICAL SPECIFICATIONS

Rated Voltage	120V
Rated Frequency	60Hz
Power	1550 watts

CLEANING AND STORAGE

NOTE: Never submerge the appliance in water or any other liquid.

- Unplug and let appliance cool before disassembly, cleaning, or storage.
- Wipe exterior of the appliance with a slightly moist cloth.
- Clean accessories with warm water and mild detergent.
- Do not use strong, abrasive, or corrosive cleaners to clean this appliance.
- Do not clean with metal scouring pads.
- Make sure appliance and accessories are completely dry before operating again.
- Store appliance in a cool, dry place away from direct sunlight.



bestchoiceproducts

Check out more great products:

bestchoiceproducts.com

Earn points while you shop. Join today!

bestchoiceproducts **rewards**

Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.