



bestchoiceproducts



INSTRUCTION MANUAL

Pre-Lit Nativity Scene
Yard Decoration



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.







- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

! WARNING

To reduce the risk of injury, adult supervision is required. Never use on roadways, near motor vehicles, on or near steep inclines or steps, swimming pools or other bodies of water; always wear shoes, and never allow more than one rider.

- Do not plug into a wall outlet until item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Unplug item before removing or changing bulbs.
- This product contains glitter, do not assemble indoors to avoid unintended property damage and cleanup.
- Do not allow glitter to contact your eyes or face as this may result in skin irritation or injury.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure this item.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- Replace burned-out bulbs immediately. Make sure to purchase bulbs of the same rated voltage and wattage.

HARDWARE

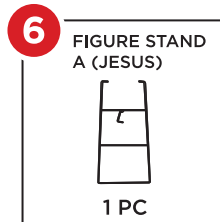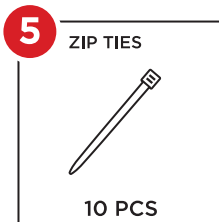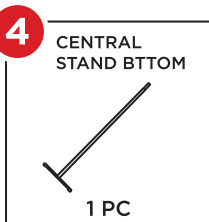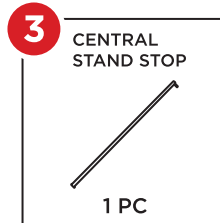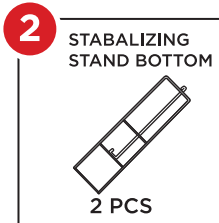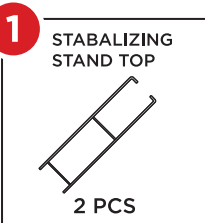

HARDWARE

7 FIGURE STAND
B (MARY)



1 PC

8 FIGURE STAND
C (JOSEPH)



1 PC

9 GROUND
STAKES



12 PCS

10 COTTER PIN



1 PC

PARTS

A MANGER PART A



1 PC

B MANGER PART B



1 PC

C MANGER PART C



1 PC

D MANGER STAR
(PART D)



1 PC

E MANGER PART E



1 PC

F MANGER PART F



1 PC

G MANGER PART G



1 PC

H JESUS FIGURE



1 PC

I MARY FIGURE
TOP



1 PC

J MARY FIGURE
BOTTOM



1 PC

K JOSEPH FIGURE
TOP



1 PC

L JOSEPH FIGURE
BOTTOM



1 PC




Be careful when handling as parts are loosely connected by electric wires. This product is intended for outdoor use, assemble outdoors only.

MANGER ASSEMBLY

1

Carefully remove any protective packaging or covers. Do not use a knife as it may result in damage to the product or personal injury.


Locate the three figures (parts H - L) and set aside

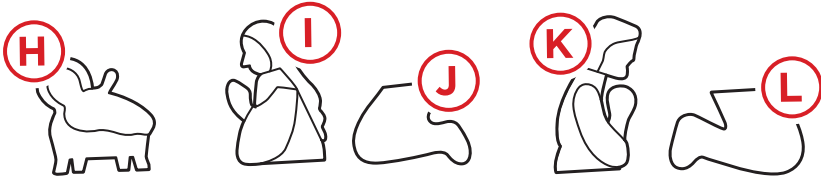

2

Locate the Manger Assembly (parts A - G) and untangle any kinks or overlaps. Locate the vertical connector hooks on each piece and assemble in the following order:


- Connect part A vertical hooks to part B connector ports
- Connect part B vertical hooks to part C connector ports
- Connect part C horizontal hooks to part the E horizontal connector ports
- Connect part E vertical hooks to part F connector ports
- Connect part F vertical hooks to part G connector ports
- Connect part D (star) vertical hooks to the vertical connector ports on the front of parts C & E

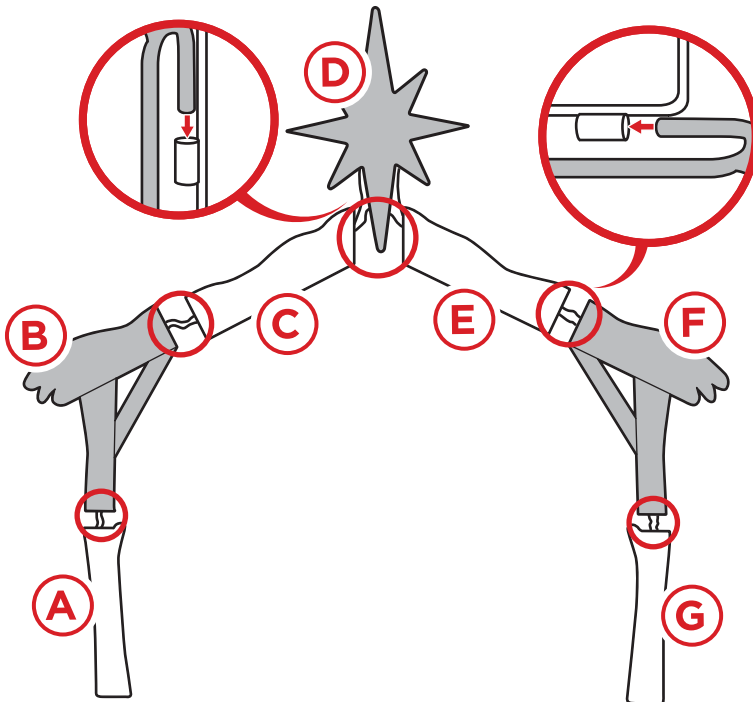

MANGER ASSEMBLY


3

Locate the zip-tie loops between parts A & B, B & C, C & E, E&F, and F&G. Secure each loop with one part 5 zip tie.

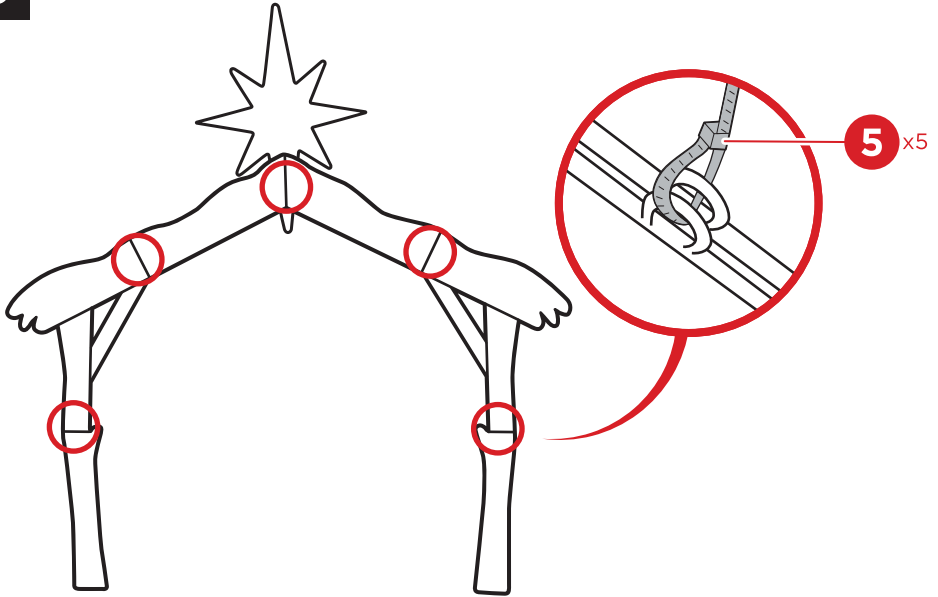

4


Locate two part 1 stabilizing stand tops and connect to two part 2 stabilizing stand bottoms. Locate the zip tie loops on each stand and secure with two part 5 zip ties.

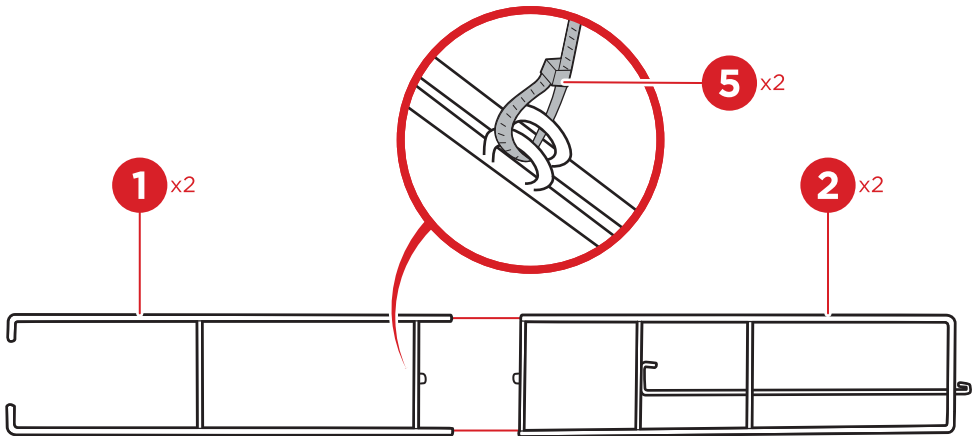

MANGER ASSEMBLY


5

- Locate the horizontal connector ports on parts B and F and attach the two stabilizing stands. Locate the central hook on each stand and connect to the manger assembly.

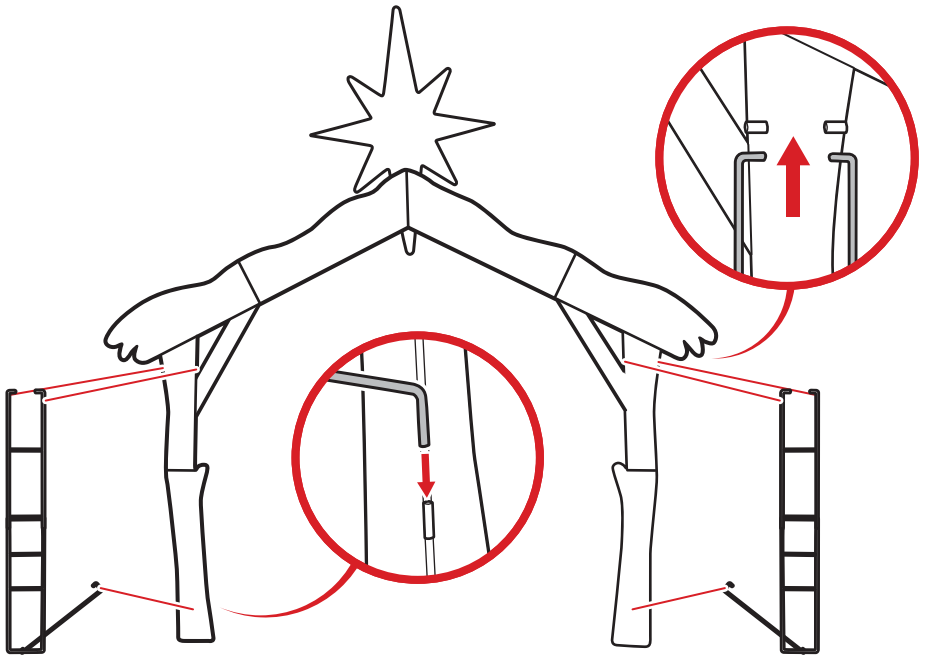

6

- Locate part 3 central stand top and connect to part 4 central stand bottom. Secure together with one part 5 zip tie.

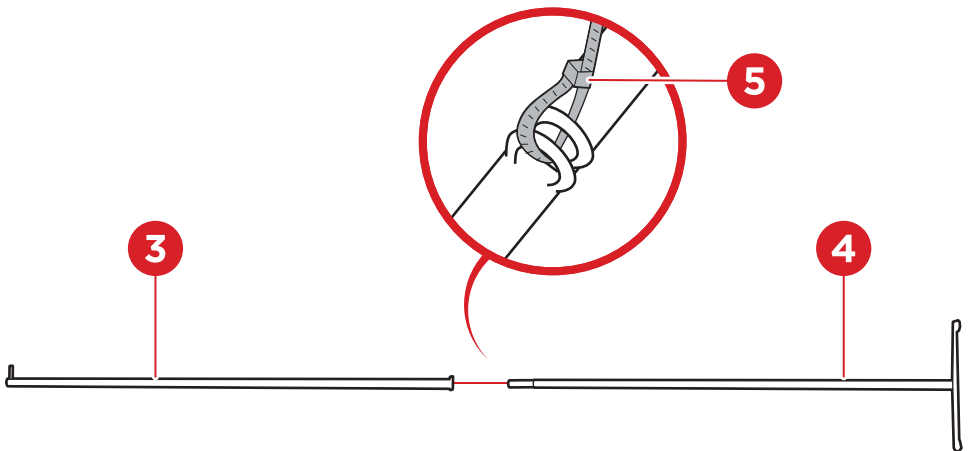

MANGER ASSEMBLY

7

Attach the part 3 central stand assembly to the horizontal connector ports on the back of parts C & E and secure with the part 10 cotter pin.

Extend the support stands and adjust the manger to an upright position. The manger is now assembled.

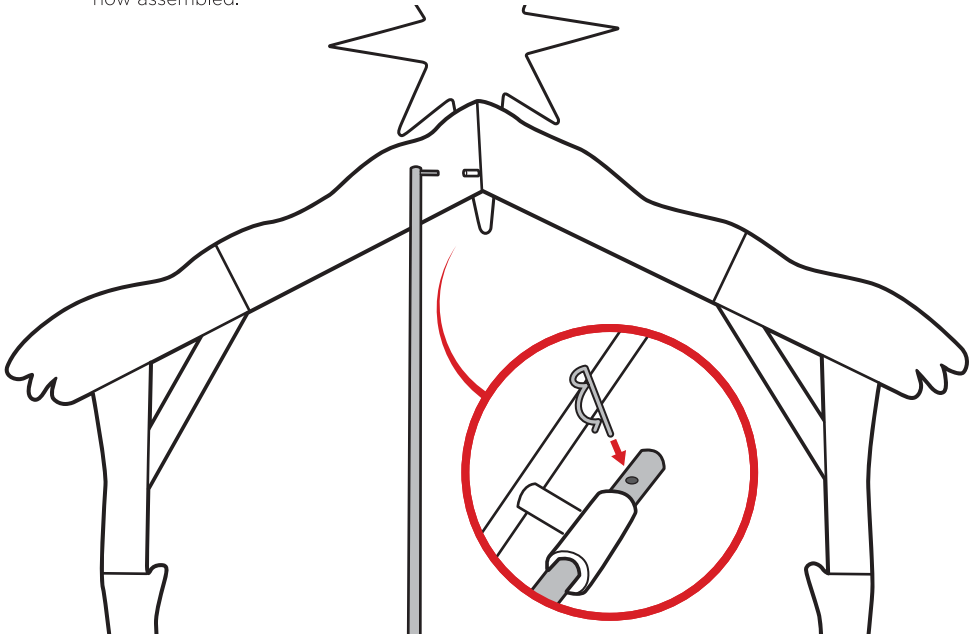


FIGURE ASSEMBLY

1

Locate the part H Jesus figure and attach one part 6 figure stand. Connect the central hook on the figure stand and set aside.


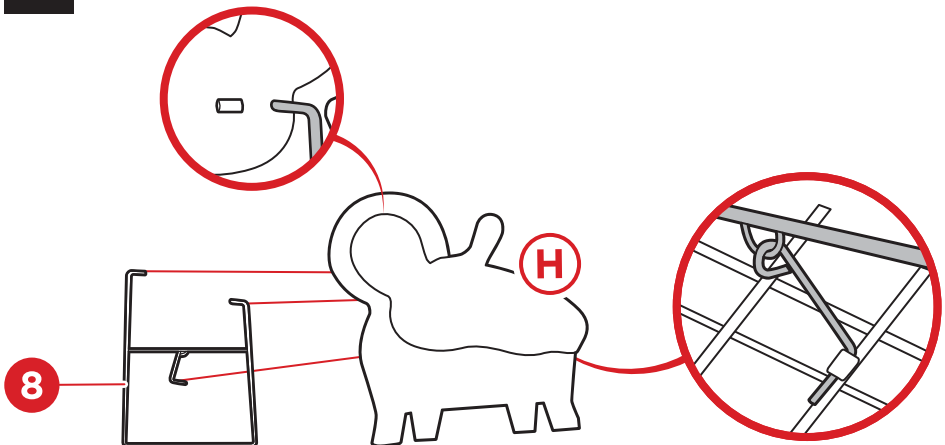


FIGURE ASSEMBLY

2

Locate the part I Mary figure top and attach to the part J bottom. Locate the loops between parts I & J and secure with one part 5 zip tie.

Attach the part 7 figure stand, connect the central hook, and set aside.

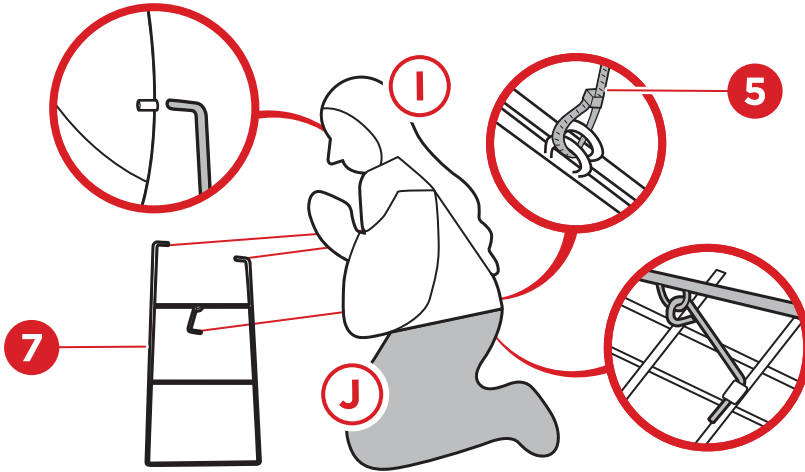

3

Locate the part K Joseph figure top and attach to the part L bottom. Locate the loops between parts K & L and secure with one part 5 zip tie.

Attach the part 8 figure stand, connect the central hook, and set aside.


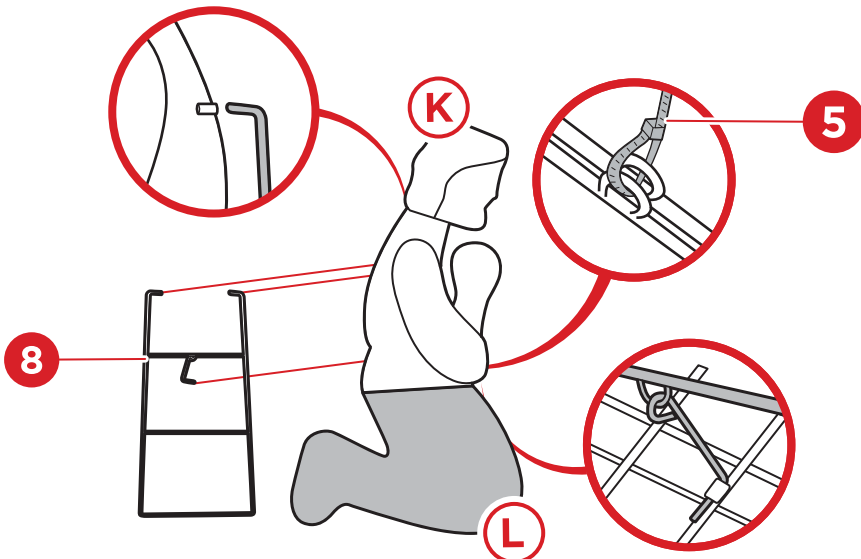


FIGURE ASSEMBLY

4

Arrange the figures beneath the assembled manger and secure their place with the part 9 ground stakes

Plug the four pieces into a grounded electrical outlet and enjoy.

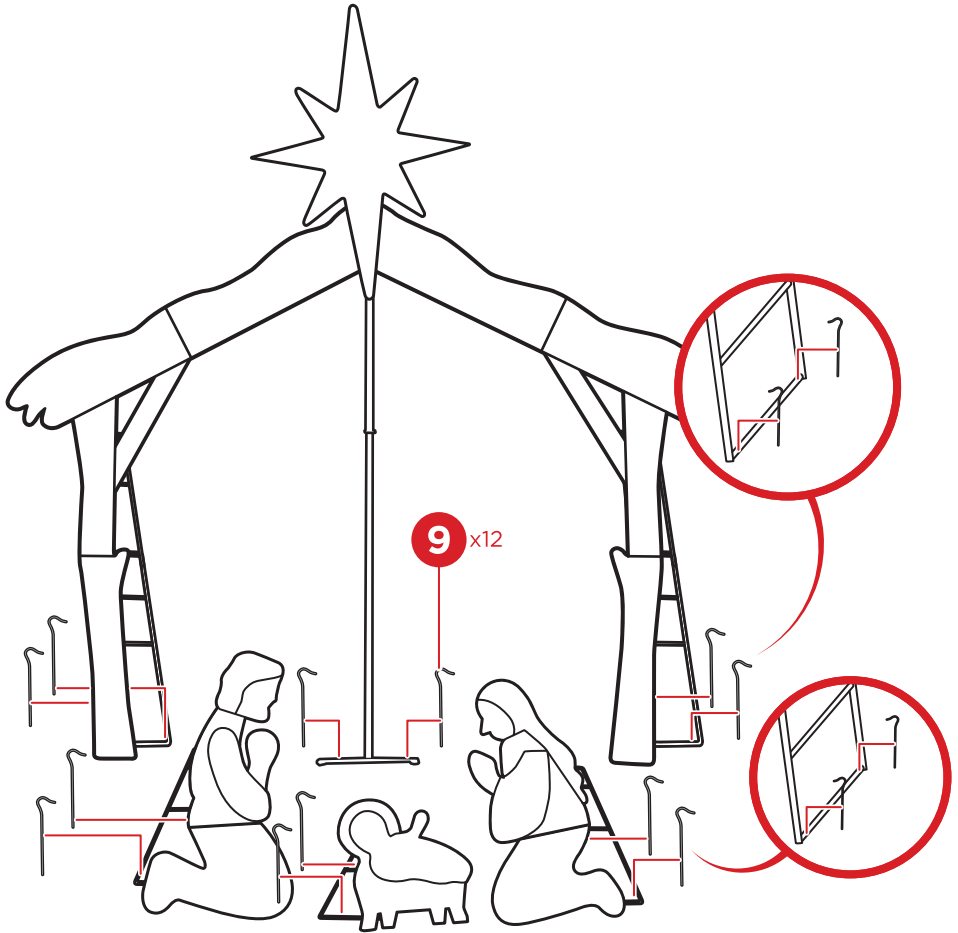

TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
One section does not light	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
Lights do not work	Not plugged in	Firmly plug into wall outlet
	Extension cord does not have power	Plug in/turn on extension cord
	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
	Blown fuse	Replace fuse on plug



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.