

#### NOTICE

- Firmly secure all screws before use.
- Product is intended for outdoor use.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with manufacturer's instructions as this could void the product warranty.


#### CAUTION DURING USE

- Place the hammock stand on flat ground for proper balance.
- Do not leave children unattended while on the hammock.
- The hammock should not be used as a swing.
- Always enter the hammock from the middle.
- Do not sit past the base legs of the hammock stand.
- Regularly check to ensure the hook and wingnuts are tight.
- Regularly inspect the hammock and frame for deterioration or damage. Do not use if worn or damaged.

## DOUBLE HAMMOCK STAND

**HARDWARE:** ① Hook, wingnut, washer set (2) ② Knob screw (5)


**PARTS:** ① Base (2) ② Crossbar ③ Hammock frame bar (2)  
④ Carrying bag ⑤ Hammock

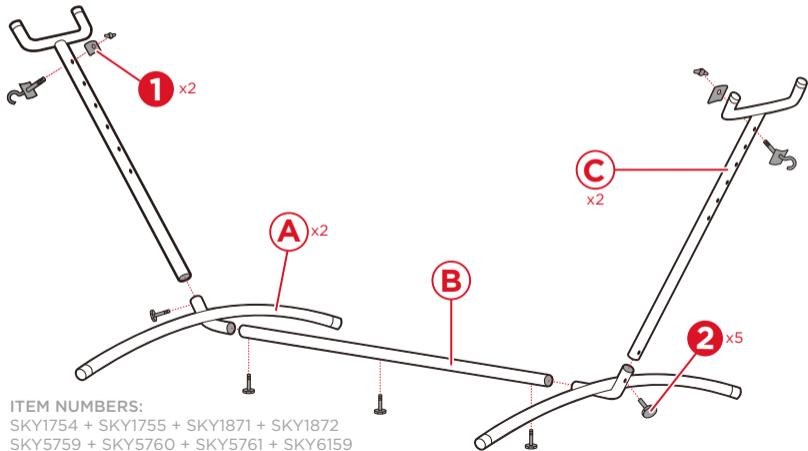

#### ITEM NUMBERS:

SKY1754 + SKY1755 + SKY1871 + SKY1872  
SKY5759 + SKY5760 + SKY5761 + SKY6159  
SKY6160 + SKY6161 + SKY6162 + SKY6163

## CALIFORNIA PROPOSITION 65

 **WARNING:** This product can expose you to chemicals including Di(2-ethylhexyl) phthalate (DEHP), which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)