

 
ASSEMBLY AND INSTALLATION INSTRUCTIONS

W0577 / W0578

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Hardware Package (included):



Mounting Plate Unit (A)



 
Mounting Screw (B)



Wire Connector (C)




Bolt Nut (D)




Max. 60W Medium Base Bulb (not included)




Socket Ring

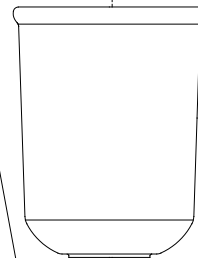

Glass Shade

 

Socket

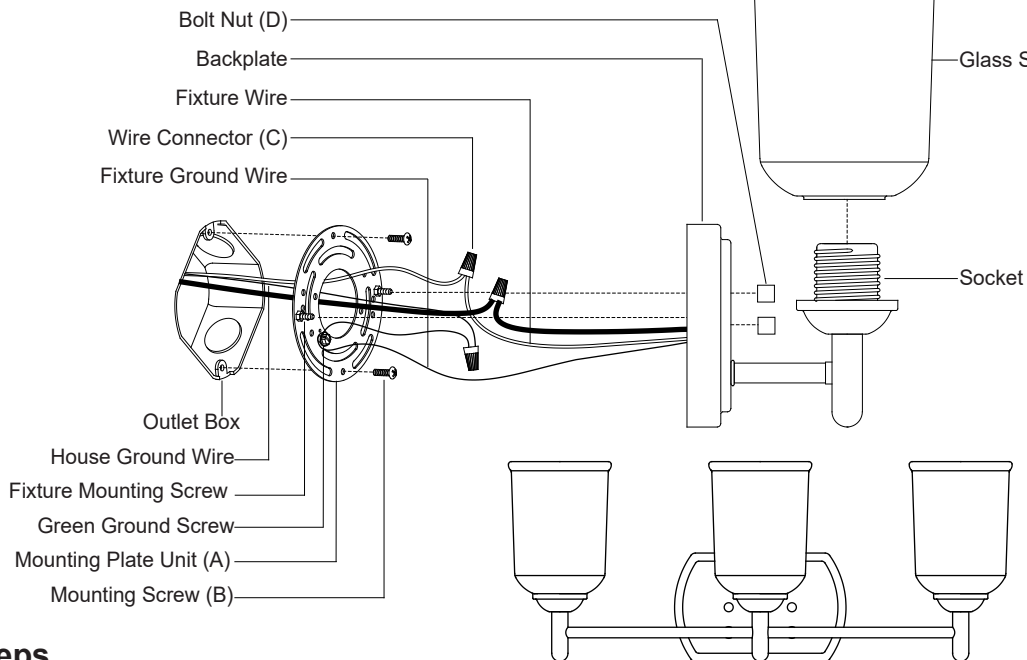


Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew two bolt nuts (D), and then remove the mounting plate unit (A) from the backplate.
2. Attach the mounting plate unit (A) to the outlet box by using two mounting screws (B). Adjust the length of the preinstalled fixture mounting screws if necessary.
Note: Make sure that two fixture mounting screws are lined up horizontally make the fixture level.
3. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw, then connect it to the house ground wire with the wire connector (C).Carefully put all of the wires back into the outlet box.
4. Attach the backplate to the mounting plate unit (A) by inserting two fixture mounting screws, and then secure it with two bolt nuts (D).


5. Attach the glass shades to the sockets, secure them with socket rings.
6. Install 3 x 60W Max. medium base bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.
7. This fixture can be mounted with lights pointed up or down.
(See Fig.1)

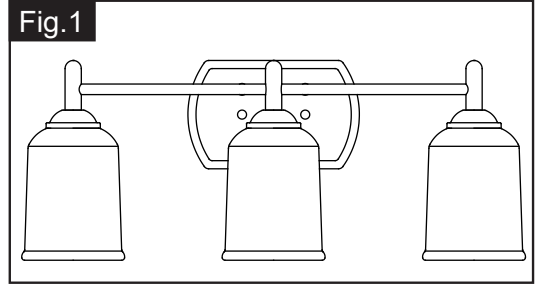


Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.


Spare Parts List:

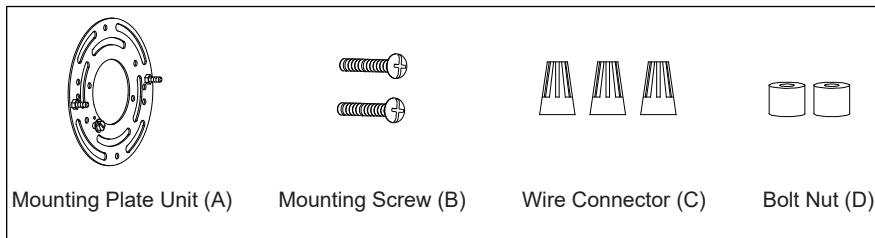

Assembly Kit
7190MM (1 SET) for W0577
7191MM (1 SET) for W0578

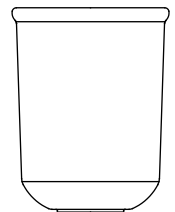

Glass Shade
10611WM for W0577
10594FO for W0578

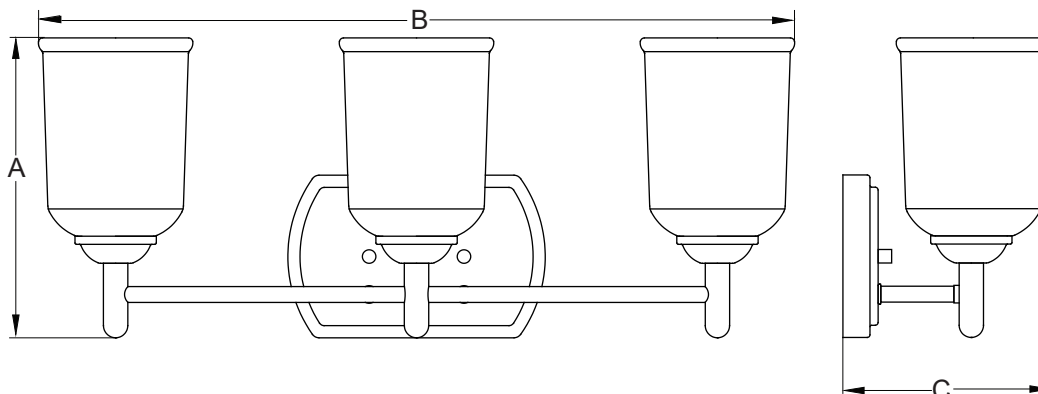

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com

1-800-482-9235