
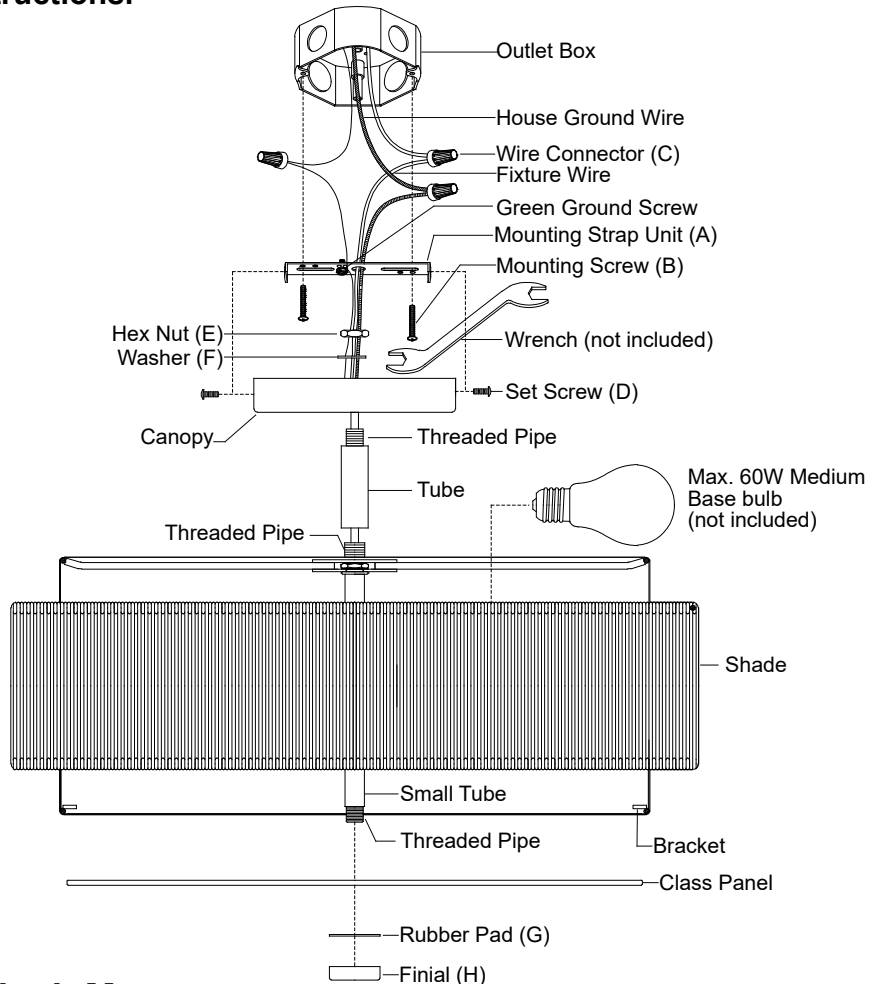


ASSEMBLY AND INSTALLATION INSTRUCTIONS

C0375 / P0475 / C0376 / P0476

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

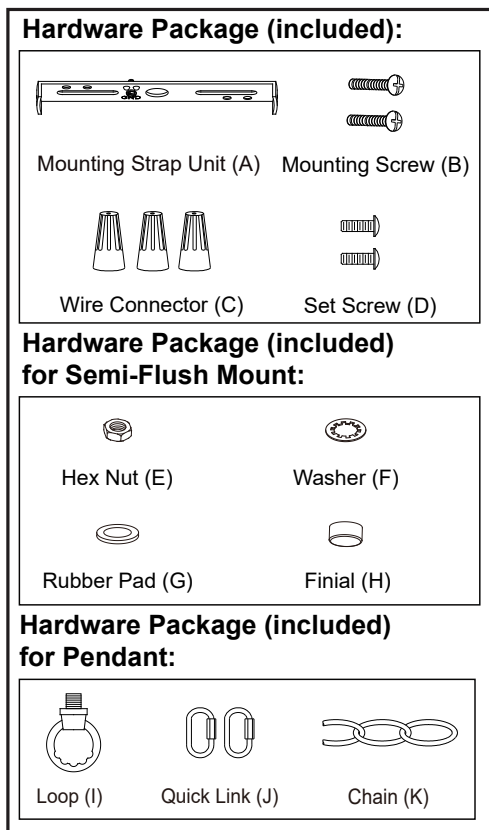

Installation Steps for Semi-Flush Mount:

Turn off the power at fuse or circuit box

1. Unscrew the two set screws (D) and separate the mounting strap unit (A) from the canopy.
2. Attach the mounting strap unit (A) to the outlet box by using two mounting screws (B).
3. Lock one end of the tube to the threaded pipe of the shade, and lock the other end of the tube to canopy, washer (F) and hex nut (E) using a wrench (not included).
4. Install 2 x 60W max. medium base bulbs (not included).
See relamping label at socket area or packaging for maximum wattage allowed.
5. Slip the glass panel and rubber pad (G) up through the threaded pipe of the small tube, then secure them with the finial (H).

NOTE: The glass panel should be flatly laid flat on the three brackets.

6. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).
 Carefully put the wires back into the outlet box.
Excess wires should be cut by the customer.

7. Attach the canopy to the mounting strap unit (A), and then secure it with two set screws (D).

Turn off the power at fuse or circuit box

Installation Steps for Pendant:

Turn off the power at fuse or circuit box

1. Unscrew the two set screws (D) and separate the mounting strap unit (A) from the fixture.
2. Attach the mounting strap unit (A) to the outlet box by using two mounting screws (B).
3. Lock one end of the tube to the threaded pipe of the shade, and lock the other end of the tube to bottom loop.
4. Pass loop (I) through the canopy, washer (F) and hex nut (E), then tighten using a wrench (not included).
5. Choose the length of the chain (K) you need, then weave the fixture wire and the fixture ground wire through the chain (K), loop (I) and canopy.
6. Connect the chain (K) to the canopy and bottom loop with two quick links (J).
7. Install 2 x 60W max. medium base bulbs (not included).

See relamping label at socket area or packaging for maximum wattage allowed.


8. Slip the glass panel and rubber pad (G) up through the threaded pipe of the small tube, then secure them with the finial (H).

NOTE: The glass panel should be flatly laid flat on the three brackets.

9. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.
 - Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).
 Carefully put the wires back into the outlet box.

10. Attach the canopy to the mounting strap unit (A), and then secure it with two set screws (D).

Turn on the power at fuse or circuit box

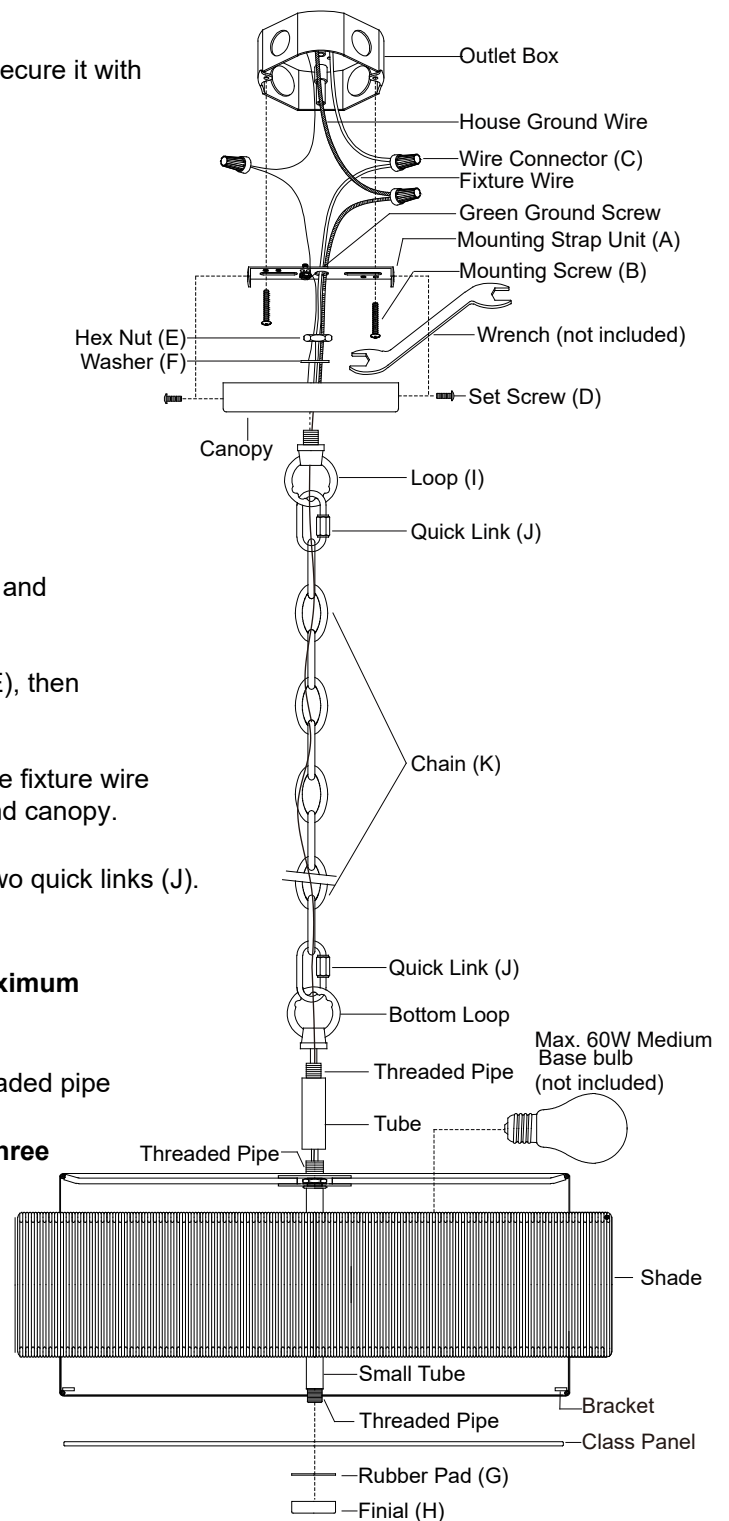

The following parts are available for reorder if damaged or missing.

 
Spare Parts List:



Mounting plate Unit (A)



Mounting Screw (B)

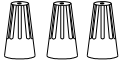

Wire Connector (C)



Set Screw (D)



Hex Nut (E)



Washer (F)



Loop (I)



Quick Link (J)



Chain (K)



Rubber Pad (G)



Finial (H)

Mounting Hardware

7219MM (1SET) for C0375 / P0475

7222MM (1SET) for P0376 / P0476


Mounting Hardware

7221MM (1SET) for C0375 / P0475

7224MM (1SET) for C0376 / P0476

Glass Panel

7218PP

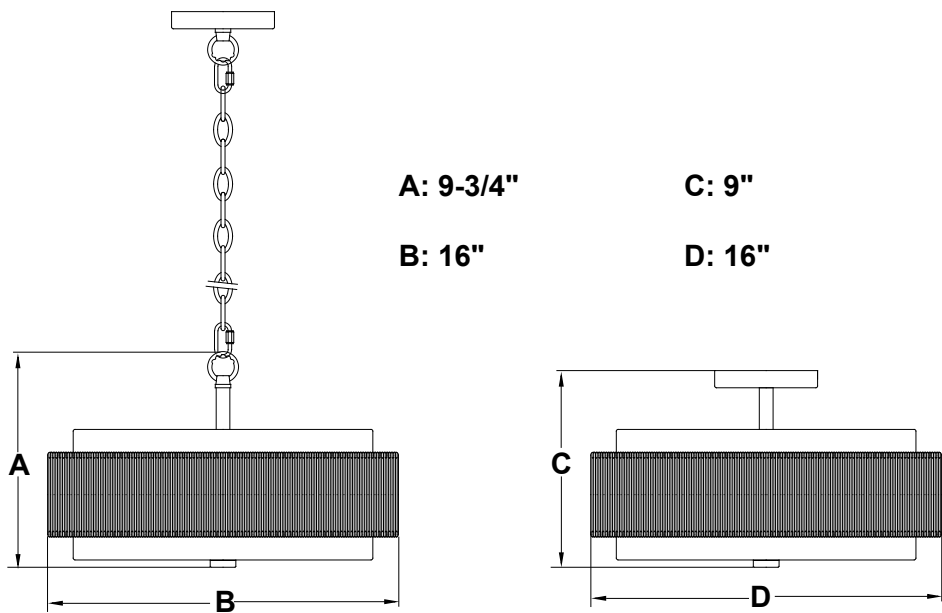

The diagram illustrates the dimensions of a hanging unit. It shows two views: a side view and a top view. The side view shows a vertical chain (K) with a loop (I) at the top, connected to a rectangular unit. Dimension A is the height of the unit, and dimension B is the width. The top view shows the unit from above, with dimension C being the height of the unit and dimension D being the width. The dimensions are specified as follows:

- A: 9-3/4"
- B: 16"
- C: 9"
- D: 16"

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
 info@vaxcel.com
 1-800-482-9235

Page 3 / 3



VAXCEL

260421