


ASSEMBLY AND INSTALLATION INSTRUCTIONS

P0446 / P0447

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instructions.


Hardware Package (included):

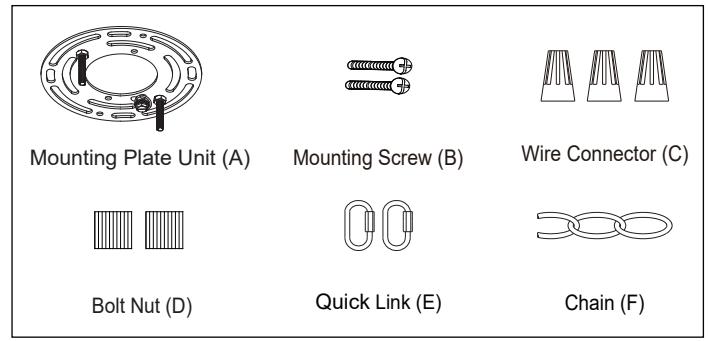

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the bolt nuts (D), take out the mounting plate unit (A), then attach it to the outlet box by using two mounting screws (B).
2. Attach the center rod to the socket and the fixture by using the threaded pipe.
3. Choose the length of the chain (F) you needed, then weave the fixture wire and the fixture ground wire through the chain (F), and canopy kit.
4. Connect the chain (F) to the loop and the top loop on canopy kit with two quick links (E).
5. Thread the fixture wire and fixture ground wire through the canopy kit.
6. Pull out the source wires from the outlet box, make wire connections using wire connectors (C) as follows:
 - Connect the smooth-coated (marked) wire from the fixture to the black (hot) wire from the power source.
 - Connect the ribbed-coated (unmarked) wire from the fixture to the white (neutral) wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate unit (A) with the green ground screw, then connect the fixture ground wire to the house ground wire with a wire connector (C).Carefully put all of the wires back into the outlet box.
7. Attach the canopy kit to the mounting plate unit (A) by inserting the fixture mounting screws, then secure it with two bolt nuts (D).
8. Install 1 X 60W Max. medium base bulb (not included).
See relamping label at socket area or packaging for maximum wattage allowed.

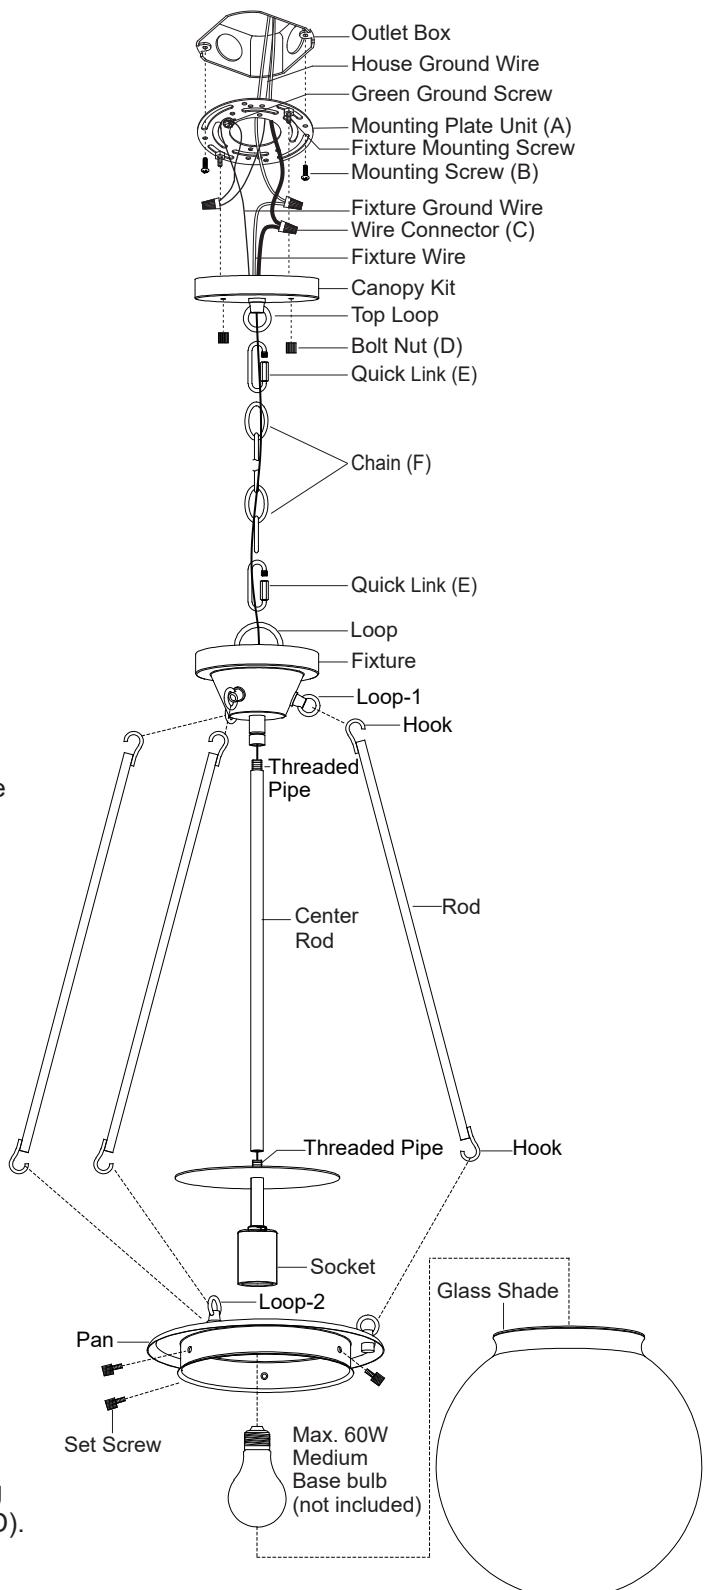


9. Attach the glass shade to the pan, then secure it with three set screws.

10. Hook one end of the rod onto the loop-1 of the fixture, and the other end onto the loop-2 of the pan.
Repeat with the other two rods.


Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

 
Spare Parts List:



Assembly Kit
7117MM (1 SET) for P0446
7118MM (1 SET) for P0447

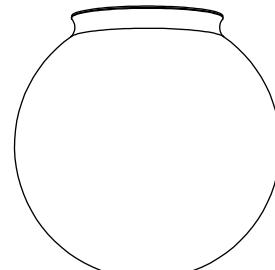

Glass Shade
10543FO

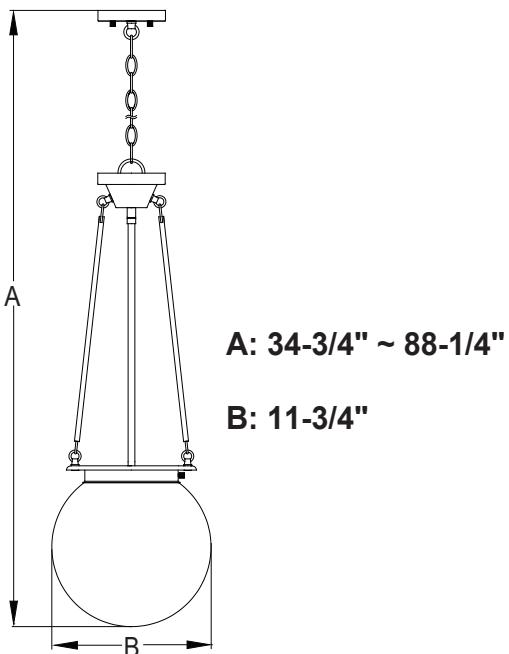

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?

info@vaxcel.com
1-800-482-9235

 **VAXCEL**
251107